



LCD TV | PLASMA TV | OWNER'S MANUAL

## LCD TV | PLASMA TV OWNER'S MANUAL

LCD TV MODELS

42LB1DR  
42LB1DRA

PLASMA TV MODELS

50PC1DR  
50PC1DRA

Please read this manual carefully before operating your set. Retain it for future reference. Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service.

**LG Electronics Inc.**  
www.lge.com

LG Electronics Inc.

ENERGY STAR is a set of power-saving guidelines issued by the U.S. Environmental Protection Agency (EPA).




As an ENERGY STAR Partner LGE U.S.A., Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

P/NO: 38289U0512E**Ⓟ**


www.lge.com / www.lg.ca

# WARNING / CAUTION




**WARNING / CAUTION**

RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**TO REDUCE THE RISK OF ELECTRIC SHOCK  
DO NOT REMOVE COVER (OR BACK). NO  
USER SERVICEABLE PARTS INSIDE. REFER TO  
QUALIFIED SERVICE PERSONNEL.**

---



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

---



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**! WARNING/CAUTION**

**TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

## WARNING / CAUTION

To prevent fire or shock hazards, do not expose this product to rain or moisture.

### FCC NOTICE

#### Class B digital device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.**

### CAUTION

Do not attempt to modify this product in any way without written authorization from LG Electronics. Unauthorized modification could void the user’s authority to operate this product

WARNING / CAUTION

# SAFETY INSTRUCTION

## IMPORTANT SAFETY INSTRUCTIONS

SAFETY INSTRUCTION

Important safety instructions shall be provided with each apparatus. This information shall be given in a separate booklet or sheet, or be located before any operating instructions in an instruction for installation for use and supplied with the apparatus.


This information shall be given in a language acceptable to the country where the apparatus is intended to be used.

The important safety instructions shall be entitled "Important Safety Instructions". The following safety instructions shall be included where applicable, and, when used, shall be verbatim as follows. Additional safety information may be included by adding statements after the end of the following safety instruction list. At the manufacturer's option, a picture or drawing that illustrates the intent of a specific safety instruction may be placed immediately adjacent to that safety instruction :

- Read these instructions.**
- Keep these instructions.**
- Heed all warnings.**
- Follow all instructions.**




- 1** Do not use this apparatus near water

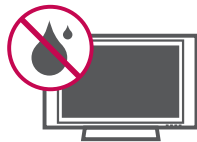

- 2** Clean only with dry cloth.



- 3** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

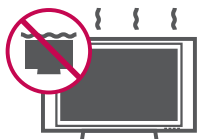

- 4** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



- 5** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- 6** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.




- 7** Only use attachments/accessories specified by the manufacturer.



- 8** Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 9** Unplug this apparatus during lightning storms or when unused for long periods of time.

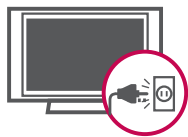

- 10** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has exposed to rain or moisture, does not operate normally, or has been dropped.



- 11** CAUTION concerning the Power Cord : Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of

your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.



- 12** Outdoor Use Marking :  
WARNING - To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Appliance To Rain Or Moisture



- 13** Wet Location Marking : Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on or over apparatus.



# CONTENTS

**WARNING / CAUTION** ..... 1

**SAFETY INSTRUCTIONS** ..... 2-3

## INTRODUCTION

Benefits ..... 6

TV Guide On Screen™ Notices for U.S.A/ Digital Cable Compatibility ..... 7

Accessories ..... 8

Controls (Model Name: 50PC1DR/50PC1DRA) ... 10

Connection Options (Model Name: 50PC1DR/50PC1DRA) ..... 11

Controls (Model Name: 42LB1DR/42LB1DRA) .. 12

Connection Options (Model Name: 42LB1DR/42LB1DRA) ..... 13

Remote Control Key Functions ..... 14-15

## INSTALLATION

Attaching the TV to a Wall ..... 16

Wire Arrangement ..... 17-18

Desktop Pedestal Installation ..... 19

## CONNECTIONS & SETUP

Antenna or Cable Connection ..... 20-21

CableCARD™ Setup ..... 21

HDSTB Setup ..... 22-24

VCR Setup ..... 25-26

External A/V Source Setup ..... 27

AV Out Setup ..... 28

Digital Audio Output ..... 29

DVD Setup ..... 30-31

PC Setup ..... 32-35

## BASIC OPERATION

Turning the TV on ..... 36

On-screen Menus Language Selection ..... 37

Initial Channel Search (EZ Scan) ..... 38

Channel Selection ..... 39

Volume Adjustment ..... 39

## TV GUIDE ON SCREEN™ SYSTEM

TV Guide On Screen™ Setup ..... 40-43

TV Guide On Screen™ Feature ..... 44-64

- Overview
- Screen Components
- Panel Menu
- Main Services
  - Listings / Search / Recordings*
  - Schedule / Setup*
- Record And Remind Features
  - Record / Remind*

## SPECIAL FUNCTIONS

### DVR (Digital Video Recorder)

Timeshift ..... 65-67

Recording ..... 68-70

Manual Recording ..... 71

Recorded TV ..... 72-77

### PIP/POP/Twin Picture (Multiple Screen)

Watching PIP/POP/Twin Picture ..... 78

Selecting an Input Signal Source for PIP/Twin Picture 79

TV Program Selection for PIP ..... 79

Moving the PIP sub picture ..... 79

Swapping PIP/Twin Picture ..... 80

Adjusting Main and Sub Picture Sizes for Twin Picture 80

POP (Picture-out-of-Picture: Channel Scan) ..... 81

## TV MENU

On Screen Menus Selection and Adjustment .. 82

### Setup(Channel)

Auto Channel Search (EZ Scan) ..... 83  
 Manual Channel Search (Manual Scan) ..... 84  
 Channel Edit .....85  
 DTV Signal Strength ..... 86  
 Main Input Source Selection ..... 87  
 Auto Link ..... 88  
 Input Label ..... 89

### Video Adjustment

Auto Picture Control (EZ Picture) ..... 90  
 Adaptive Picture Mode (APM). .....91  
 Manual Picture Control (EZ Picture-User Option) ..92  
 Color Temperature Control ..... 93-94  
 XD ..... 95  
 Advanced - Cinema 3:2 Mode .....96  
 Advanced - Black Level .....97  
 Video Reset .....98

### Audio Adjustment

Audio Language ..... 99  
 Auto Volume Leveler (EZ SoundRite) ..... 100  
 Auto Sound Control (EZ Sound) ..... 101  
 Manual Sound Control (EZ Sound-user Option) .. 102-103  
 Balance .....104  
 TV Speakers On/Off Setup ..... 105  
 BBE ..... 106  
 Stereo/SAP Broadcast Setup ..... 107

### Time Setting

Auto Clock Setup ..... 108  
 Manual Clock Setup .....109  
 On/Off Timer Setup ..... 110  
 Sleep Timer .....111  
 Auto Off ..... 112

### Optional Features

Aspect Ratio Control .....113  
 Caption / Text ..... 114-115  
 Caption Option ..... 116  
 ISM Method (50PC1DR/50PC1DRA only) .. 117  
 Low Power (50PC1DR/50PC1DRA only) ... 118  
 HDD Format .....119  
 Bried Info. ....120

### Lock Adjustment

Setting up your password ..... 121  
 Lock System ..... 122  
 Set Password ..... 122  
 Block Channel ..... 123  
 Movie Rating (MPAA) (for USA only) ..... 124  
 TV Rating Children (for USA only) ..... 125  
 TV Rating General (for USA only) ..... 125  
 TV Rating English (for Canada only) ..... 126  
 TV Rating French (for Canada only) ..... 126  
 Input Block ..... 127

### CableCARD™ Function

Cable menu options .....128  
 Scrambled channel ..... 129  
 Cable Channel List .....130  
 Emergency Message Alert ..... 130

## APPENDIX

External Control Device Setup .....131-137  
 IR Codes .....138-139  
 Programming the Remote Control ..... 140  
 Remote Control Codes ..... 141-143  
 Troubleshooting Checklist ..... 144-146  
 Maintenance ..... 147  
 Product Specifications ..... 147

# INTRODUCTION

## BENEFITS

### What is a Plasma TV ?

Using plasma is the best way to achieve flat panel displays with excellent image quality and large screen sizes that are easily viewable. The Plasma TV can be thought of as a descendant of the neon lamp and or a series of fluorescent lamps.

### How does it work?

Plasma TV is an array of cells, known as pixels, which are comprised of three sub-pixels, corresponding to the colors red, green, and blue. Gas in a plasma state is used to react with phosphors in each sub-pixel to produce colored light (red, green, or blue). These phosphors are the same types used in Cathode Ray Tube (CRT) devices such as televisions and common computer monitors.

Plasma TV offers a rich, dynamic display because each sub-pixel is individually controlled by advanced electronics to produce over 16 million different colors. This means that you get perfect images that are easily viewable in a display that is fewer than five inches thick.

### 160° - Wide angle range of vision

Your flat panel plasma screen offers an exceptionally broad viewing angle of over 160 degrees. This means that the display is clear and visible to viewers anywhere in the room.

### Wide Screen

The wide screen offers a theater-like experience in your own home.

### Multimedia

Connect your plasma display to a PC and use it for conferencing, games, and Internet browsing. The Picture-in-Picture feature allows you to view your PC and video images simultaneously.

### Versatile

The light weight and thin size makes it easy to install your plasma display in a variety of locations where conventional TVs do not fit.

### The Plasma TV Manufacturing Process: a few minute colored dots may be present on the Plasma TV screen

The Plasma TV is composed of 0.9 to 2.2 million

cells. A few cell defects will normally occur in the Plasma TV manufacturing process. Several tiny, minute colored dots visible on the screen should be acceptable. This also occurs in other Plasma TV manufacturers' products. The tiny dots appearing does not mean that this Plasma TV is defective. Thus a few cell defects are not sufficient cause for the Plasma TV to be exchanged or returned. Our production technology minimizes these cell defects during the manufacture and operation of this product.

### Cooling Fan Noise

In the same way that a fan is used in a PC computer to keep the CPU (Central Processing Unit) cool, the Plasma TV is equipped with cooling fans to cool the Monitor and improve its reliability. Therefore, a certain level of noise could occur while the fans are operating and cooling the Plasma TV.

The fan noise doesn't have any negative effect on the Plasma TV's efficiency or reliability. The noise from these fans is normal during the operation of this product. We hope you understand that a certain level of noise from the cooling fans is acceptable and is not sufficient cause for the Plasma TV to be exchanged or returned.

### FOR LCD TV

 
If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.

Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the monitor's performance.

Avoid touching the LCD screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

### On Disposal

- a. The fluorescent lamp used in this product contains a small amount of mercury.
- b. Do not dispose of this product with general household waste.
- c. Disposal of this product must be carried out in accordance to the regulations of your local authority.



Official term for an HDTV that conforms to the plug-and-play digital cable TV standard using POD (Point of Deployment) access cards, also called CableCARDS, that allow users to plug the cable directly into an HDTV set and enjoy HDTV and digital cable without having to use a separate set-top box.



SRS is a trademark of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.



Manufactured under license from BBE Sound, Inc.



A Digital Video Recorder (DVR) is a device that empowers you to control what you watch, when you watch it. It allows you to store and access TV programs - functioning like a VCR, but with no videotape. With a DVR, you can also pause live TV and choose the shows you want to record through an electronic program guide.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



High-definition television. High-resolution digital television broadcast and playback system composed of roughly a million or more pixels, 16:9 aspect-ratio screens, and AC3 digital audio. A subset of digital television, HDTV formats include 1080i and 720p resolutions.



HDMI™, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing."



LG's own special digital image generator, consisting of a full digital image processor, APM mode & six different main picture quality factors.



## TV GUIDE ON SCREEN™ NOTICES FOR U.S.A.



### Trademark Notice

In the United States, TV GUIDE and other related marks are registered marks of Gemstar-TV Guide International, Inc. and/or one of its affiliates. In Canada, TV GUIDE is a registered mark of Transcontinental Inc., and is used under license by Gemstar-TV Guide International, Inc.

### License Notice

The TV Guide On Screen™ system is manufactured under license from Gemstar-TV Guide International, Inc. and/or one of its affiliates.

### Patent Notice

 
 
 
The TV Guide On Screen™ system is protected by one or more of the following issued United States patents 6,498,895, 6,418,556, 6,331,877; 6,239,794; 6,154,203; 5,940,073; 4,908,713; 4,751,578; 4,706,121.

Use of the CableCARD™ TradeMark.

"CableCARD™ is a trademark of Cable Television Laboratories, Inc."

## DIGITAL CABLE COMPATIBILITY

This digital television is capable of receiving basic analog, digital basic and digital premium cable television programming by direct connection to a cable system providing such programming. A security card provided by your cable operator is required to view encrypted digital programming. Cable operator enhanced program (For example, electronic program guide provided by the cable operator), and data enhanced television service may require the use of a set top box. For more information contact your local cable operator.






# INTRODUCTION


## ACCESSORIES

Ensure that the following accessories are included with your plasma display. If an accessory is missing, please contact the dealer where you purchased the product.

INTRODUCTION

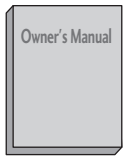

Owner's Manual

 


Batteries



Remote Control




Power Cord

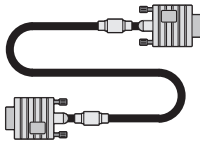

D-sub 15 pin Cable



 
75Ω Round Cable




Polishing Cloth  
Polish the screen with the cloth.

**For 50PC1DR / 50PC1DRA**




 2-Wall brackets




2-eye-bolts


**For 42LB1DR / 42LB1DRA**

 


2-TV Bracket Bolts



 
2-TV Brackets, 2-Wall Brackets



Cable Management





Twister Holder  
Arrange the wires with the twister holder.



# HOME MENU

This menu is a contents guide.

In HOME Menu, you can enter the recorded list of DVR, TV Guide, Schedule of the TV Guide, Manual Record of DVR or TV Menu.

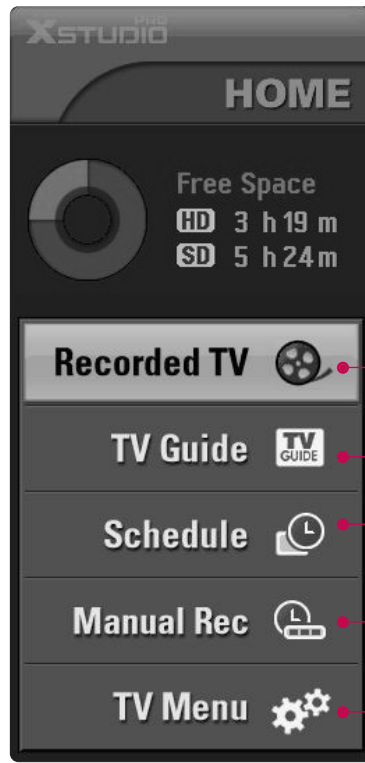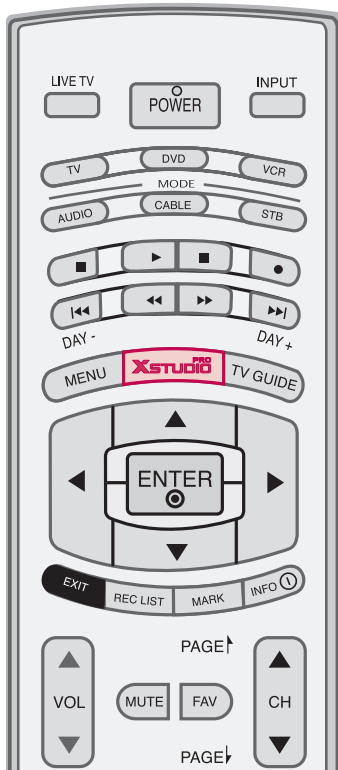

DVR  
▶ p.65

TV Guide  
▶ p.40

TV Menu  
▶ p.82

# INTRODUCTION

## CONTROLS


This is a representation of the front panel of models **50PC1DR, 50PC1DRA** series TVs.

- Here shown may be somewhat different from your TV.



INTRODUCTION

### Front Panel Controls

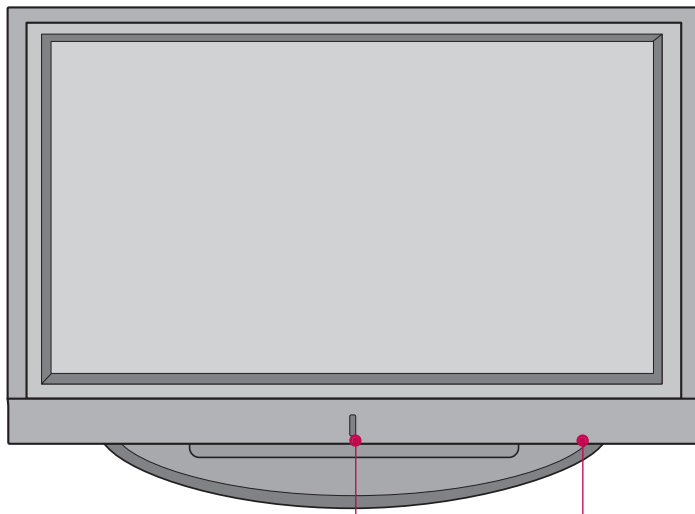


**Remote Control Sensor**

**Power Standby Indicator**  
Illuminates red in standby mode.  
When the TV is turned on, the indicator blinks white and then illuminates white before the picture is displayed.

A detailed diagram of the front panel controls. From left to right, the controls are:
 

 
- POWER Button**: Labeled with a power symbol (⏻) and a vertical bar (|).
- TV GUIDE Button**: Labeled with "TV GUIDE".
- INPUT Button**: Labeled with "INPUT" and a circle containing a dot (●).
- MENU Button**: Labeled with "MENU".
- VOLUME (◀,▶)Buttons**: Labeled with "VOLUME" and left and right arrow symbols (◀▶).
- CHANNEL (▼,▲)Buttons**: Labeled with "CHANNEL" and up and down arrow symbols (▼▲).



# CONNECTION OPTIONS

This is the back panel of models **50PC1DR**, **50PC1DRA** series TVs.

## Back Connection Panel

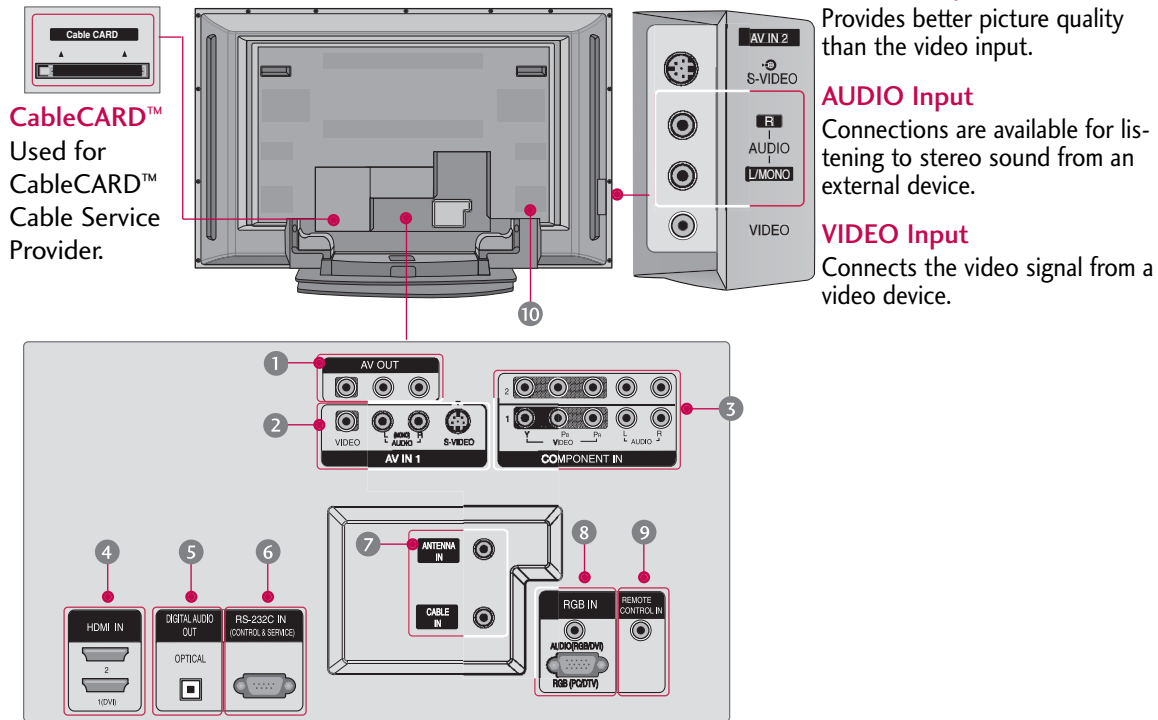



**S-VIDEO Input**  
Provides better picture quality than the video input.

**AUDIO Input**  
Connections are available for listening to stereo sound from an external device.

**VIDEO Input**  
Connects the video signal from a video device.

- 1 AV OUT**  
Connect a second TV or monitor.
- 2 AV (Audio/Video) IN 1**  
Connect audio/video output from an external device to these jacks.  
**S-VIDEO**  
Connect S-Video out from an S-VIDEO device.
- 3 COMPONENT IN**  
Connect a component video/audio device to these jacks.
- 4 HDMI IN**  
Connect a HDMI signal to 1 (DVI) or 2.  
Or DVI(VIDEO)signal to the 1 (DVI) port with a DVI to HDMI cable.
- 5 DIGITAL AUDIO OUT**  
Connect digital audio from various types of equipment.  
Note: In standby mode, these ports do not work.
- 6 RS-232C IN (CONTROL & SERVICE) PORT**  
Connect to the RS-232C port on a PC.
- 7 ANTENNA IN**  
Connect over-the air signals to this jack.  
**CABLE IN**  
Connect cable signals to this jack.
- 8 RGB/AUDIO IN**  
Connect the monitor output from a PC to the appropriate input port.
- 9 Remote Control Port**  
Connect your wired remote control.
- 10 Power Cord Socket**  
For operation with AC power.  
Caution :  
Never attempt to operate the TV on DC power.

  INTRODUCTION



# INTRODUCTION


## CONTROLS

 
This is a representation of the front panel of models **42LB1DR, 42LB1DRA** series TVs.

- Here shown may be somewhat different from your TV.

INTRODUCTION

### Front Panel Controls


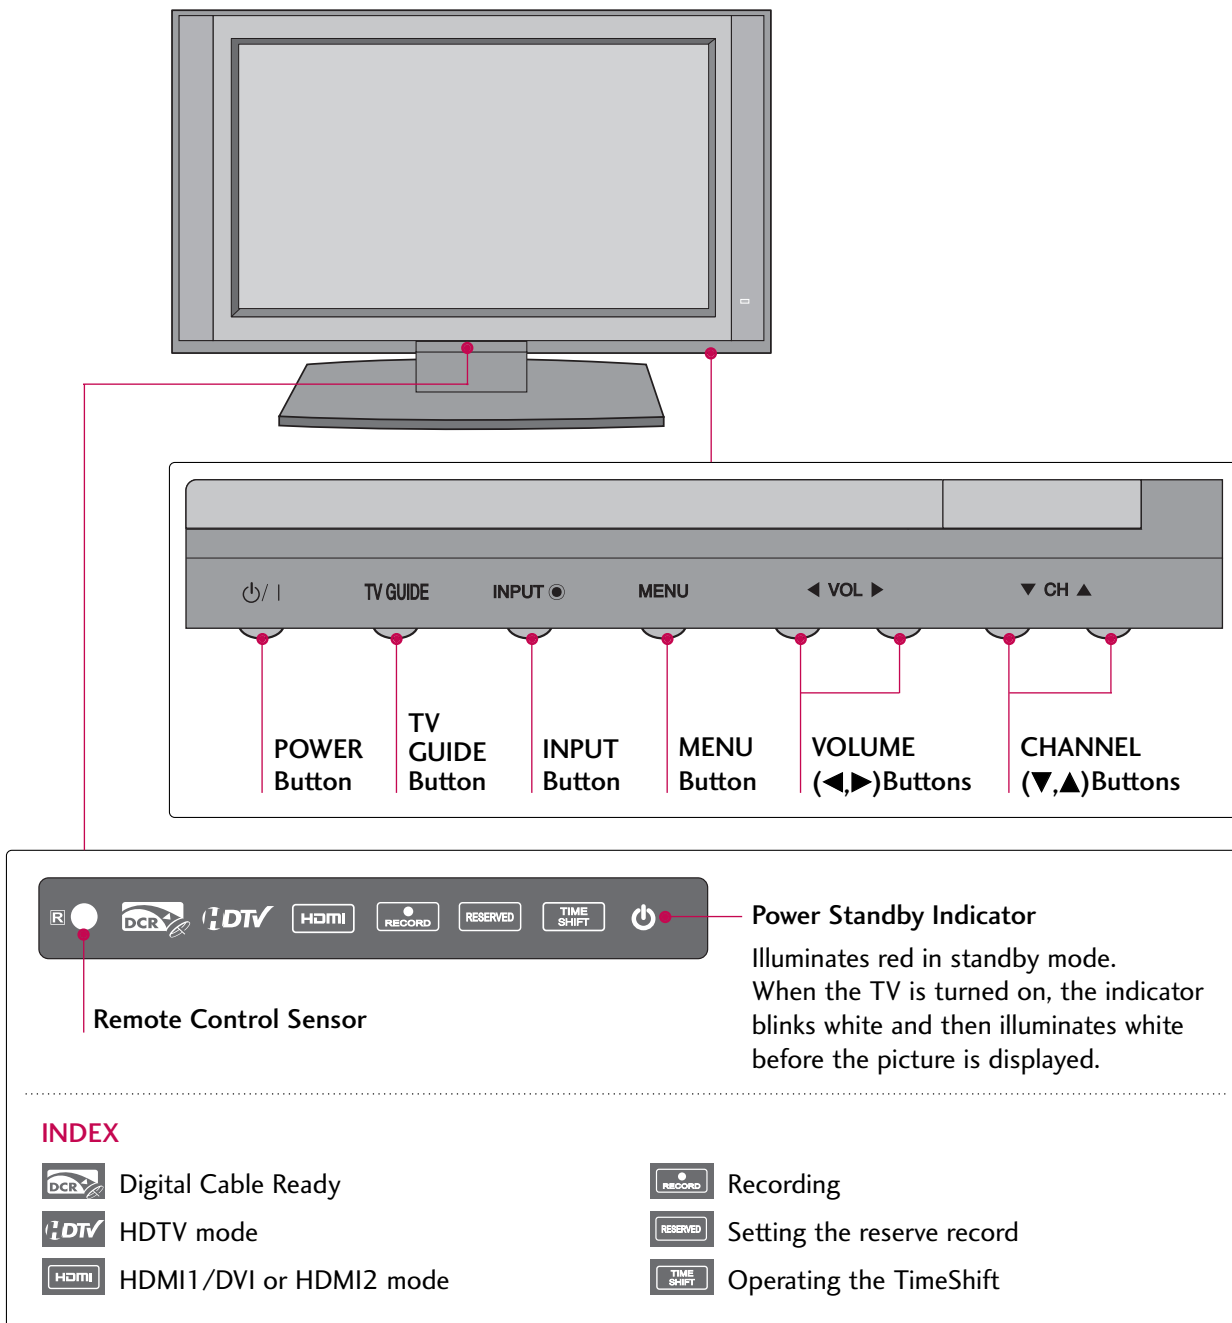




# CONNECTION OPTIONS




This is the back panel of models **42LB1DR, 42LB1DRA** series TVs.

## Back Connection Panel

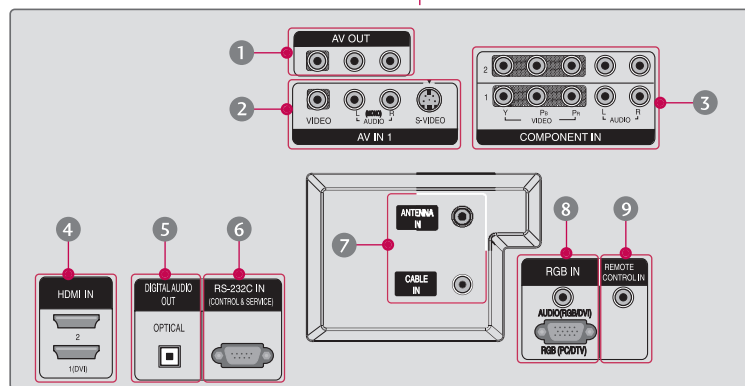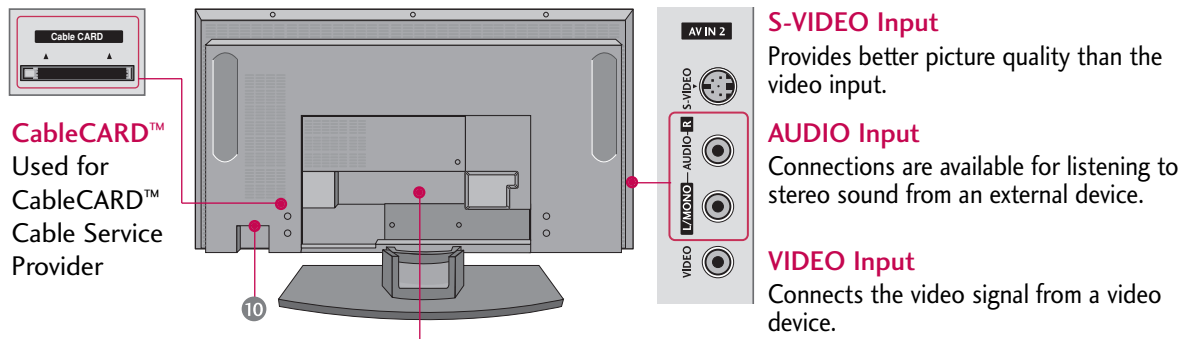

- 1 AV OUT**  
Connect a second TV or monitor.
- 2 AV (Audio/Video) IN 1**  
Connect audio/video output from an external device to these jacks.  
**S-VIDEO**  
Connect S-Video out from an S-VIDEO device.
- 3 COMPONENT IN**  
Connect a component video/audio device to these jacks.
- 4 HDMI IN**  
Connect a HDMI signal to 1 (DVI) or 2.  
Or DVI(VIDEO)signal to the 1 (DVI) port with a DVI to HDMI cable.
- 5 DIGITAL AUDIO OUT**  
Connect digital audio from various types of equipment.  
Note: In standby mode, these ports do not work.
- 6 RS-232C IN (CONTROL & SERVICE) PORT**  
Connect to the RS-232C port on a PC.
- 7 ANTENNA IN**  
Connect over-the air signals to this jack.  
**CABLE IN**  
Connect cable signals to this jack.
- 8 RGB/AUDIO IN**  
Connect the monitor output from a PC to the appropriate input port.
- 9 Remote Control Port**  
Connect your wired remote control.
- 10 Power Cord Socket**  
For operation with AC power.  
Caution :  
Never attempt to operate the TV on DC power.

   INTRODUCTION



# INTRODUCTION

## REMOTE CONTROL KEY FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.

INTRODUCTION

**MODE** Select the remote operating mode: TV, DVD, VCR, AUDIO, CABLE or STB.

**XSTUDIO<sup>PRO</sup> mode control buttons**

- Use for DVR record or trick play. ▶ p.67,75
- Controls the XSTUDIO<sup>PRO</sup> mode.
- For further details, see the **DVR** section.

**VCR/DVD buttons** Control video cassette recorders or DVD players.

**DAY+/DAY-** Move the Listings Grid forward or backward in 24 hour increments.

**MENU** Displays the main menu. Enters or exits a Panel Menu in the TV Guide On Screen system.

**TV GUIDE** Displays the TV Guide On Screen system. ▶ p.40

**XSTUDIO<sup>PRO</sup> ENTER** Enter to the XSTUDIO<sup>PRO</sup> mode.

**THUMBSTICK (Up/Down/Left Right/ENTER)** Navigate the on-screen menus and adjust the system settings to your preference.

**EXIT** Clear all on-screen displays and return to TV viewing from any menu.

**REC LIST** Display the thumbnail recorded list. ▶ p.72

**MARK** Enter the selected functions. ▶ p.73

**INFO** Display information at the top of the screen. ▶ p.120

**VOLUME UP/DOWN** Increase/decrease the sound level.

**MUTE** Switch the sound on or off. ▶ p.39

**FAV** Scroll through the programmed Favorite channels.


**CHANNEL UP/DOWN** Select available channels.

 
**PAGE UP/PAGE DOWN** Move from one full set of screen information to the next one.

**NUMBER button**

**FLASHBK** Tune to the last channel viewed.

**— (DASH)** Used to enter a program number for multiple program channels such as 2-1, 2-2, etc.

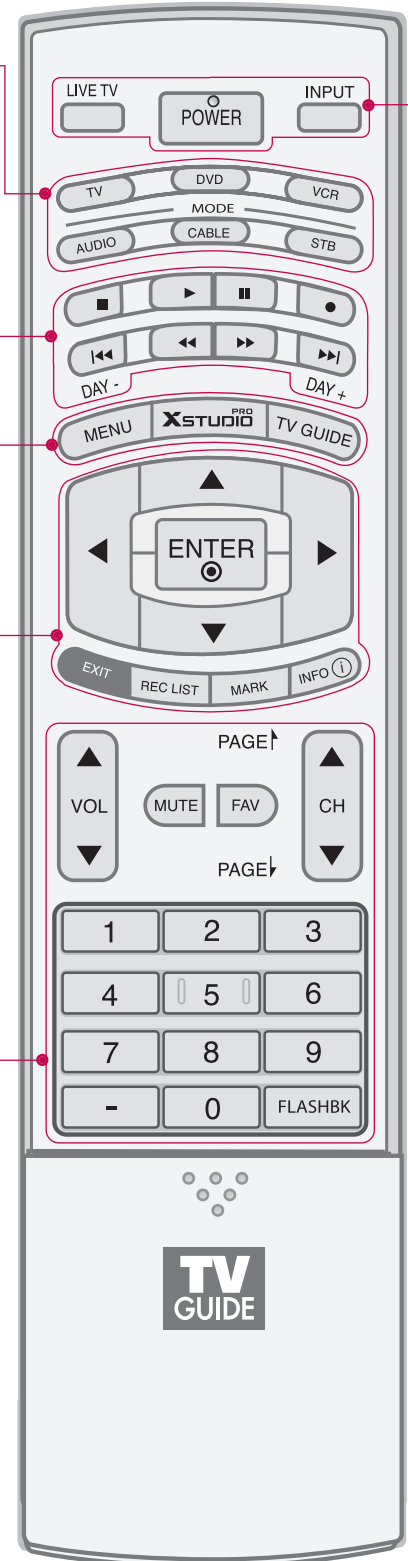




- POWER** Turns your TV or any other programmed equipment on or off, depending on the mode.
- LIVE TV** In AV 1-2, Component 1-2, RGB-DTV (or RGB-PC), HDMI1/DVI, and HDMI2 input sources, screen returns to the last TV channel.
- INPUT** External input modes rotate in regular sequence: Antenna, Cable, AV1-2, Component 1-2, RGB-DTV (or RGB-PC), HDMI1/DVI and HDMI2 (AV 1-2, Component 1-2, RGB-DTV (or RGB-PC), HDMI1/DVI, and HDMI2 input sources are linked automatically, only if these are connected).

## Inside the Sliding Cover

- PIP** Switches the sub picture PIP, POP, Twin picture or off mode. ▶ p. 78
- PIPCH-/PIPCH+** Changes the PIP channel. ▶ p. 79
- PIP INPUT** Select the connected input source for the sub-picture. ▶ p. 79
- SWAP** Exchange the main/sub images. ▶ p. 80
- SAP** Select MTS sound: Mono, Stereo, and SAP analog mode. Change the audio language DTV mode.
- EZ PIC** Adjust the factory preset picture depend on the viewing environment.
- APM** Compare the Daylight, Normal, Night Time and User1 (or2) on the screen. ▶ p. 91
- EZ SOUND** Select the appropriate type of sound for type of program.
- CC** Select closed caption. ▶ p. 114  
(\*In DTV/CADTV modes ▶ p. 115)


- TIMER** Select the amount of time before your TV turns off automatically. ▶ p.111
- RATIO** Change the aspect ratio. ▶ p.113
- ADJUST** Adjust the screen position, size, and phase in PC mode. ▶ p.35

### Installing Batteries

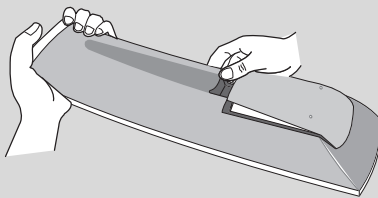


- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AA batteries. Don't mix old or used batteries with new ones.
- Close cover.

### Remote control effective range

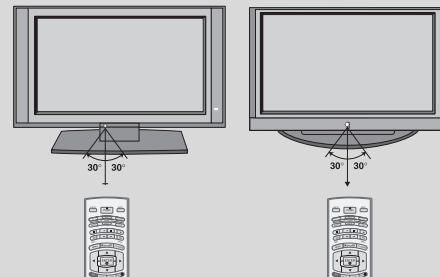

 - Use a remote control up to 7 meters distance and 30 degree (left/right) within the receiving unit scope.
- Dispose of used batteries in a recycle bin to preserve environment.






# INSTALLATION

## ATTACHING THE TV TO A WALL


We recommend that you set up the TV close to a wall so it cannot fall over if pushed backwards. Additionally, we recommend that the TV be attached to a wall so it cannot be pulled in a forward direction, potentially causing injury or damaging the product.  
 Caution: Please make sure that children don't climb on or hang from the TV.

INSTALLATION


### 50PC1DR/50PC1DRA

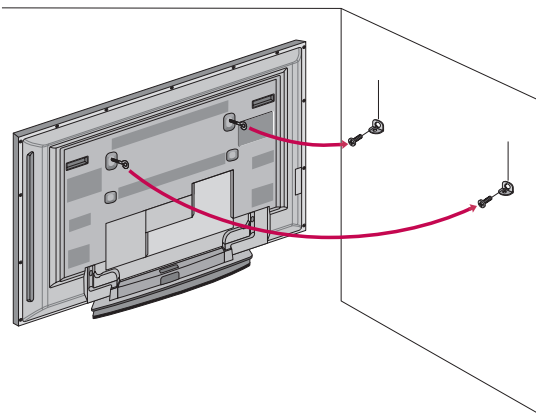


### 42LB1DR/42LB1DRA

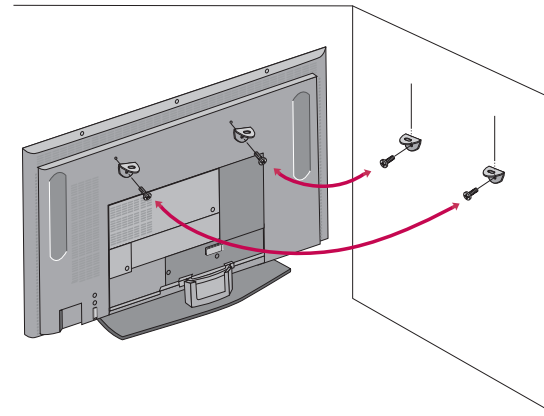

- Insert the eye-bolts (or TV brackets and bolts) to tighten the product to the wall as shown in the picture.  
 \*Insert the eye-bolts and tighten them securely in the upper holes.  
 Secure the wall brackets with the bolts (not provided as parts of the product, must purchase separately) on the wall. Match the height of the bracket that is mounted on the wall to the holes in the product.  
 Ensure the eye-bolts or brackets are tightened securely.

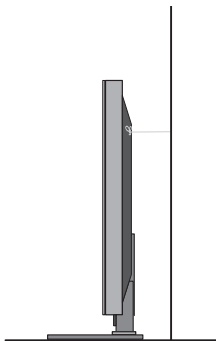

- Use a sturdy rope (not provided as parts of the product, must purchase separately) to tie the product. It is safer to tie the rope so it becomes horizontal between the wall and the product.

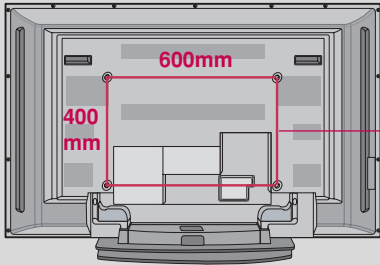


**VESA Mounting**

These 4 threaded holes are available for attaching the bracket provided with the accessory wall-mount installation kit.


## WIRE ARRANGEMENT

### 50PC1DR/50PC1DRA


- 1 Hold the **CABLE MANAGEMENT** with both hands and pull it backward as shown.

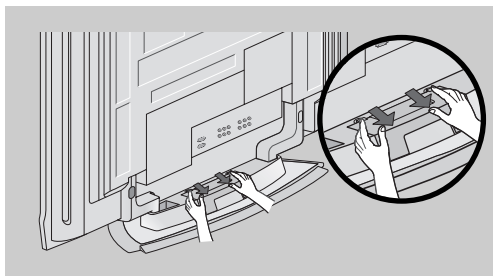

- 2 Connect the cables as necessary.  
To connect an additional equipment, see the **External equipment Connections** section.

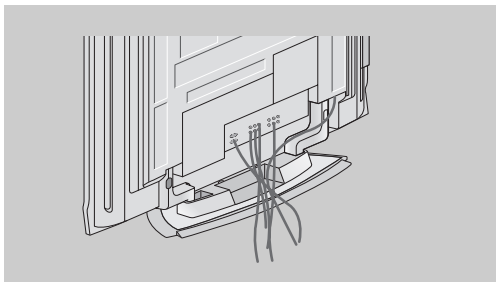

- 3 Install the **CABLE MANAGEMENT** as shown.

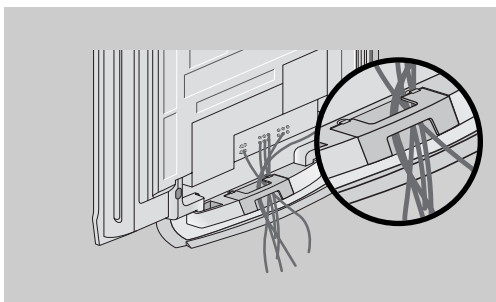


# INSTALLATION

## WIRE ARRANGEMENT


### 42LB1DR/42LB1DRA

- 1** Connect the cables as necessary.  
 After connecting the cables neatly, arrange the cables to the Cable Holder.  
 To connect an additional equipment, see the **External equipment Connections** section.
- 2** Install the **CABLE MANAGEMENT** as shown.

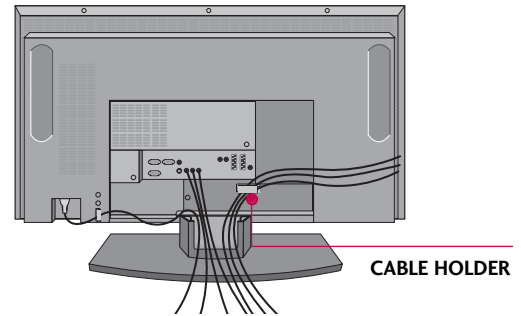


INSTALLATION

CABLE MANAGEMENT

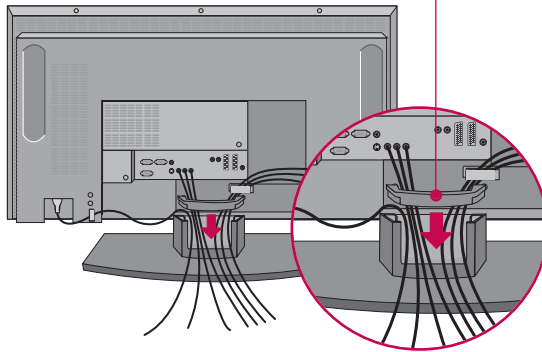

- 3** Bundle the cables using the supplied twister holder.

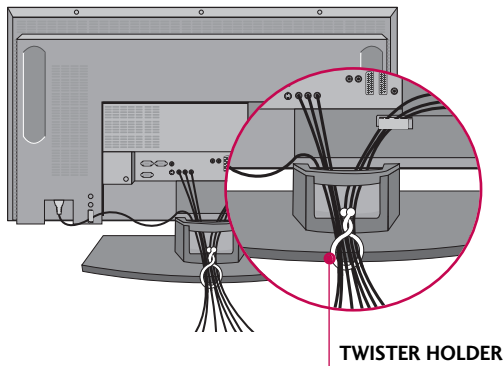

TWISTER HOLDER

### How to remove the CABLE MANAGEMENT


- ▶ Hold the **CABLE MANAGEMENT** with both hands and pull it backward.




### ! NOTE

- ▶ Do not hold the **CABLE MANAGEMENT** when moving the product.  
 - If the product is dropped, you may be injured or the product may be broken.


### Swivel Stand (Only 42LB1DR/42LB1DRA)

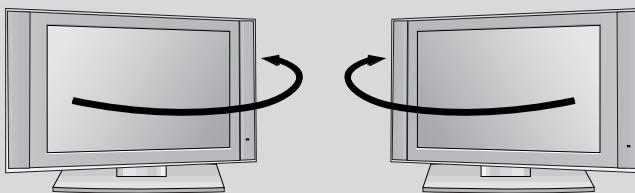

 The TV can be conveniently swiveled on its stand 30° to the left or right to provide the optimum viewing angle.



- This manual explains the features available on the 50PC1DR, 50PC1DRA series TVs.
- Here shown may be somewhat different from your TV.

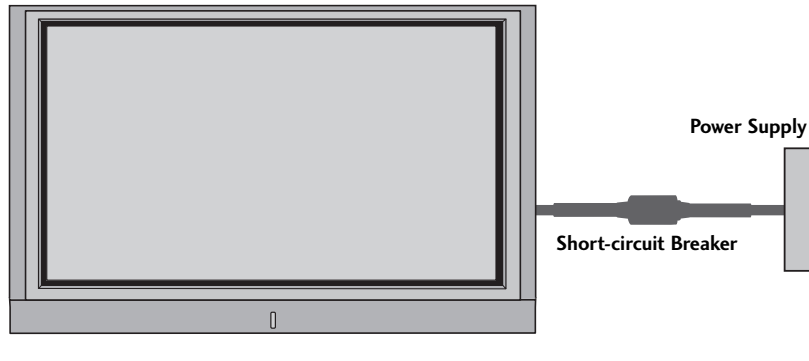

INSTALLATION


### GROUNDING

Ensure that you connect the earth ground wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.


## DESKTOP PEDESTAL INSTALLATION

For proper ventilation, allow a clearance of 4 in. on each side and the top, 2.36 in. on the bottom, and 4 in. from the wall.

### 50PC1DR/50PC1DRA

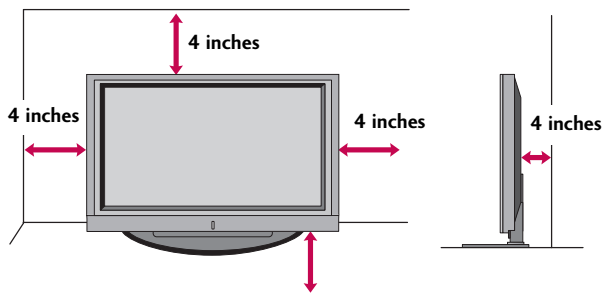


### 42LB1DR/42LB1DRA

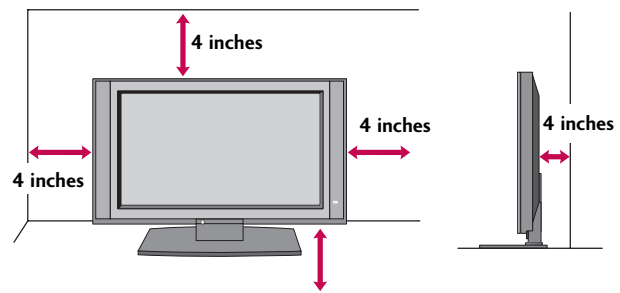

### ⚠ CAUTION

 - ▶ Ensure adequate ventilation by following the clearance recommendations.





# CONNECTIONS & SETUP

## ANTENNA OR CABLE CONNECTION


### 1. Antenna (analog or digital)

Wall Antenna Socket or Outdoor Antenna without a Cable Box Connections. For optimum picture quality, adjust antenna direction if needed.

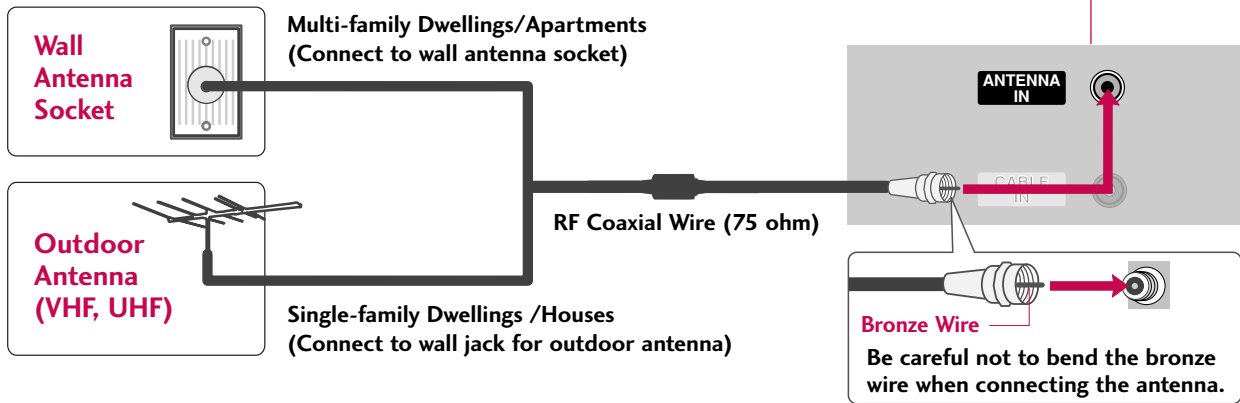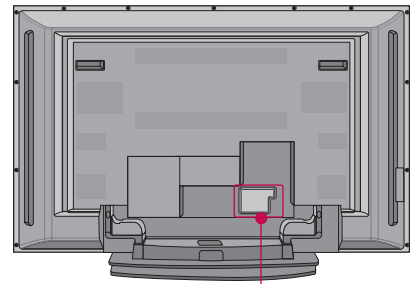



CONNECTIONS & SETUP

### 2. Cable

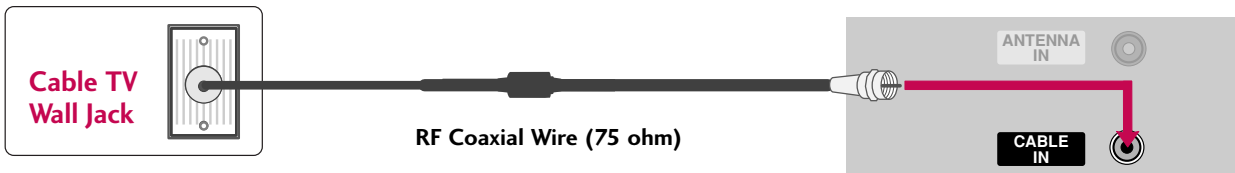

### 3. Using both cable and antenna

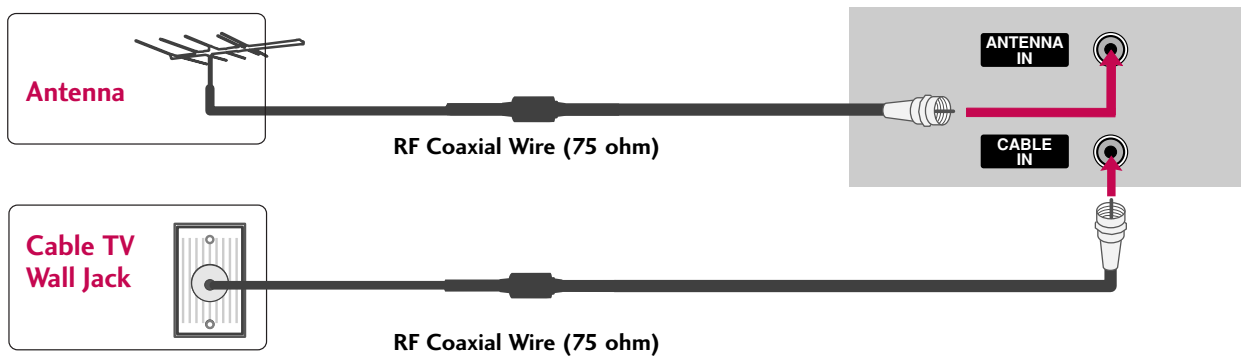

 

- To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- If the antenna needs to be split for two TV's, install a 2-Way Signal Splitter.
- If the antenna is not installed properly, contact your dealer for assistance.


**! NOTE**

- ▶ The TV will let you know when the analog, cable, and digital channel scans are complete.

## CABLECARD™ SETUP

### 1. How to use

Insert the CableCARD™ from your cable service provider into the CableCARD™ slot on the back of your TV. If pairing information about this TV and the CableCARD is displayed on the screen, contact your cable service provider.

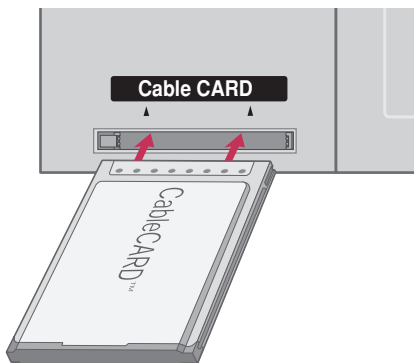


**! NOTE**

- ▶ This TV supports CableCARD™ technology from Motorola, Scientific Atlanta, and SCM.

**! CAUTION**

 - ▶ When removing, do not drop it as this may cause damage to the CableCARD™.



# CONNECTIONS & SETUP

## HDSTB SETUP

This TV can receive Digital Over-the-air/Cable signals without an external digital set-top box. However, if you do receive digital signals from a digital set-top box or other digital external device, refer to the figure as shown below.

This TV supports HDCP (High-bandwidth Digital Contents Protection) protocol for Digital Contents (480p,720p,1080i).


### When connecting Component cable

#### 1. How to connect

- 1 Connect the video outputs (Y, PB, PR) of the digital set top box to the **COMPONENT IN VIDEO 1** jacks on the set. Match the jack colors (Y = green, PB = blue, and PR = red).
- 2 Connect the audio output of the digital set-top box to the **COMPONENT IN AUDIO 1** jacks on the set.

#### 2. How to use

- Turn on the digital set-top box.  
(Refer to the owner's manual for the digital set-top box.)
- Select **COMPONENT 1** input source with using the **INPUT** button on the remote control.
- If connected to **COMPONENT IN 2** input, select **COMPONENT 2** input source.

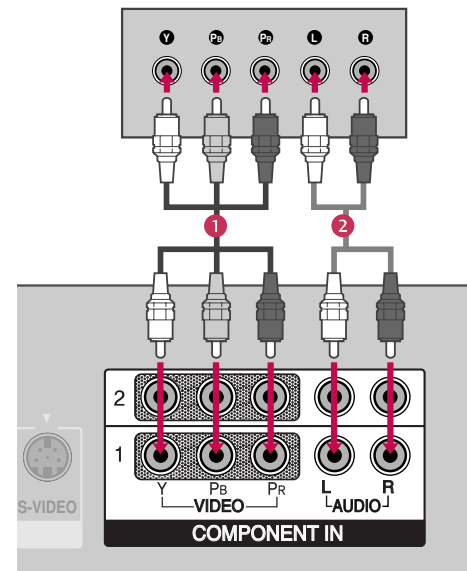

Signal	Component 1/2	RGB-DTV, HDMI1/DVI, HDMI2
480i	Yes	No
480p	Yes	Yes
720p	Yes	Yes
1080i	Yes	Yes


## When connecting D-sub 15pin cable

### 1. How to connect

- 1 Connect the RGB output of the digital set-top box to the **RGB (PC/DTV)** jack on the set.
- 2 Connect the audio outputs of the set-top box to the **AUDIO (RGB/DVI)** jack on the set.

### 2. How to use

- Turn on the digital set-top box.  
(Refer to the owner's manual for the digital set-top box.)
- Select **RGB-DTV** input source with using the **INPUT** button on the remote control.

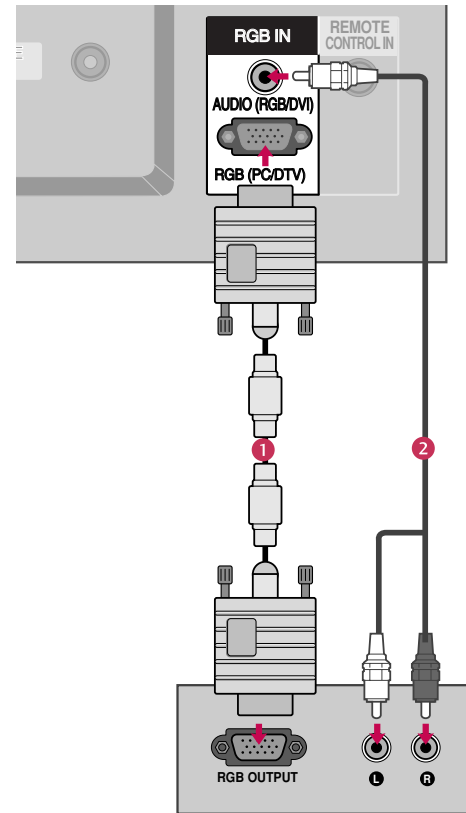


## When connecting HDMI cable

### 1. How to connect

- 1 Connect the digital set-top box to **HDMI IN 1 (DVI)** or **2** jack on the set.
- 2 No separated audio connection is necessary.

### 2. How to use


- Turn on the digital set-top box.  
(Refer to the owner's manual for the digital set-top box.)
- Select **HDMI1/DVI** or **HDMI2** input source with using the **INPUT** button on the remote control.
- If the digital set-top box supports Auto HDMI function, the output resolution of the source device will be automatically set to 1280x720p.
- If the digital set-top box player does not support Auto HDMI, you need to set the output resolution appropriately.  
To get the best picture quality, adjust the output resolution of the source device to 1280x720p.

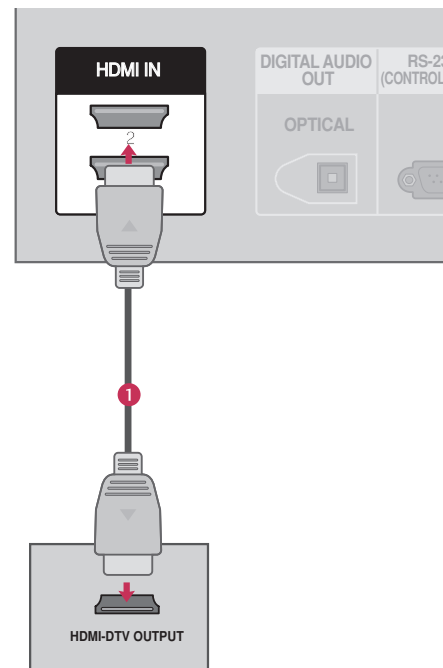



# CONNECTIONS & SETUP

## When connecting HDMI to DVI cable

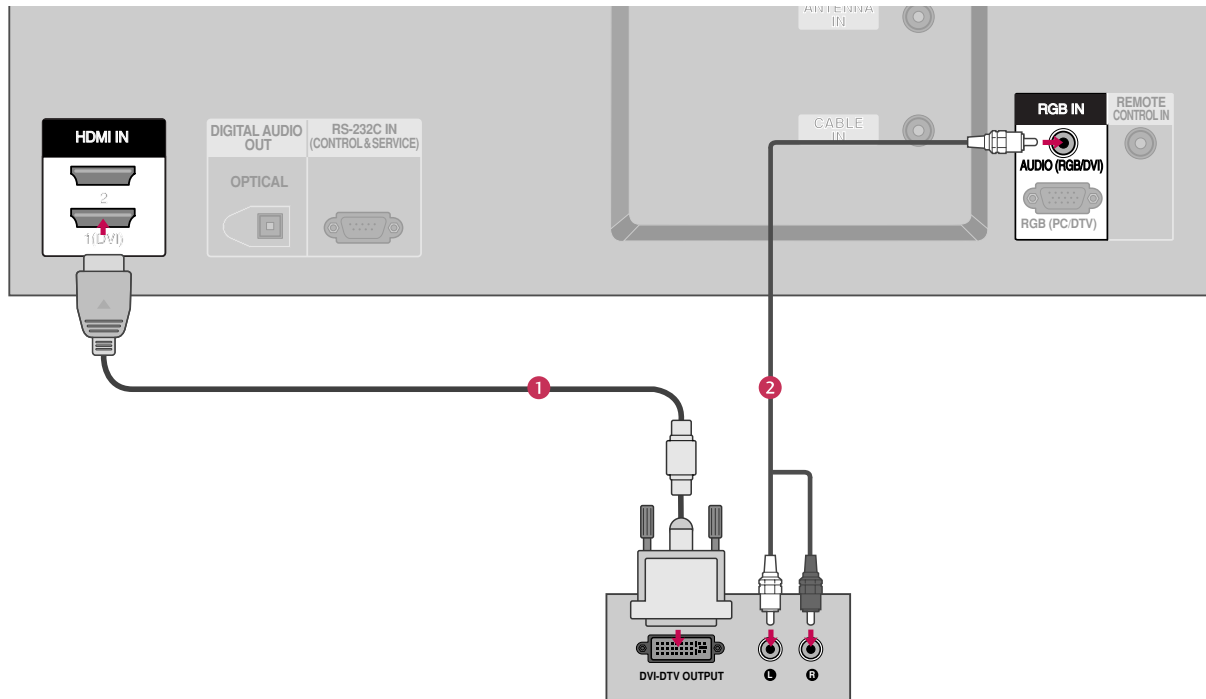

CONNECTIONS & SETUP

### 1. How to connect

- 1 Connect the DVI output of the digital set-top box to the **HDMI IN 1 (DVI)** jack on the set.
- 2 Connect the audio output of the digital set-top box to the **AUDIO (RGB/DVI)** jack on the set.


### 2. How to use

- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- Select **HDMI1/DVI** input source with using the **INPUT** button on the remote control.

## VCR SETUP

- To avoid picture noise (interference), leave an adequate distance between the VCR and TV
- Use the ISM feature in the Option menu to avoid having a fixed image remain on the screen for a long period of time. If the 4:3 picture format is used; the fixed images on the sides of the screen may remain visible on the screen.

### When connecting with an antenna

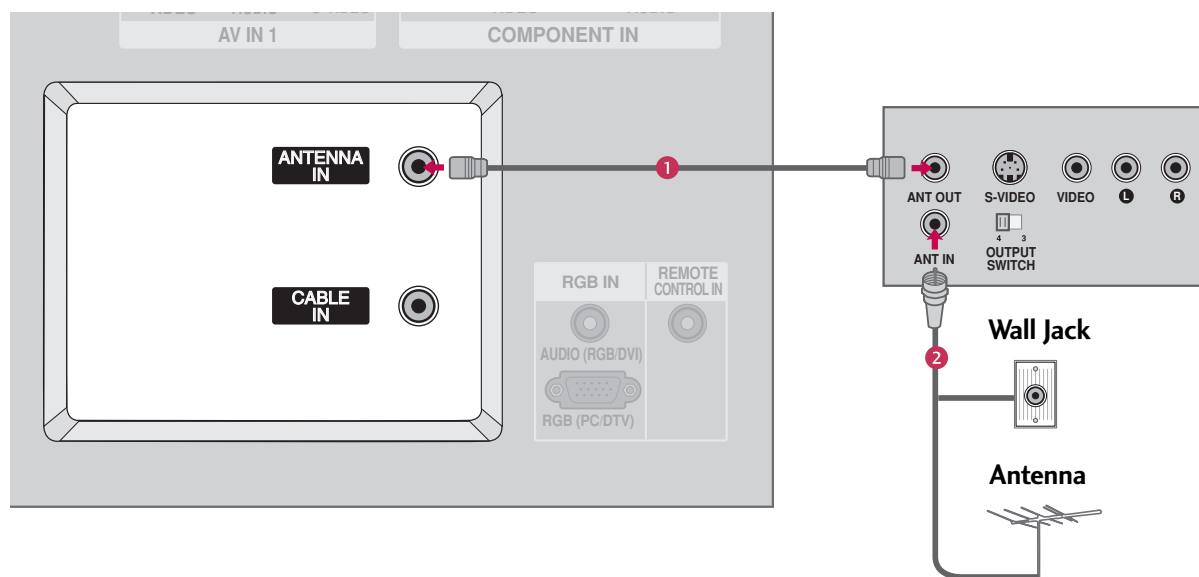


### 1. How to connect

- 1 Connect the RF antenna out socket of the VCR to the **Antenna** socket on the set.
- 2 Connect the antenna cable to the RF antenna in socket of the VCR.

### 2. How to use

 - Set VCR output switch to 3 or 4 and then tune TV to the same channel number.
- Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)



# CONNECTIONS & SETUP


## When connecting with a RCA cable

### 1. How to connect

- 1 Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red)

### 2. How to use

- Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
- Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV IN 2**, select **AV2** input source.

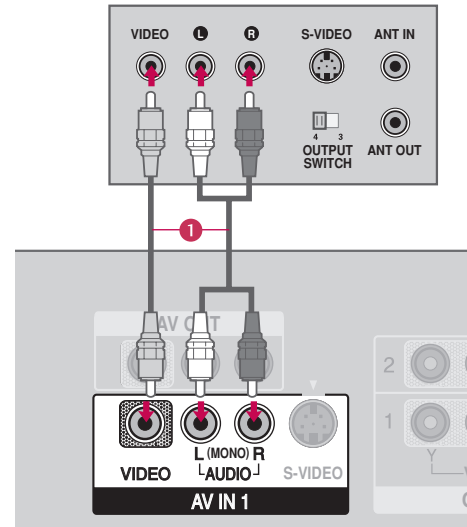

### ! NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the set.


## When connecting with an S-Video

### 1. How to connect

- 1 Connect the S-VIDEO output of the VCR to the **S-VIDEO** input on the set. The picture quality is improved; compared to normal composite (RCA cable) input.
- 2 Connect the audio outputs of the VCR to the **AUDIO** input jacks on the set.


### 2. How to use

- Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
- Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV IN 2**, select **AV2** input source.

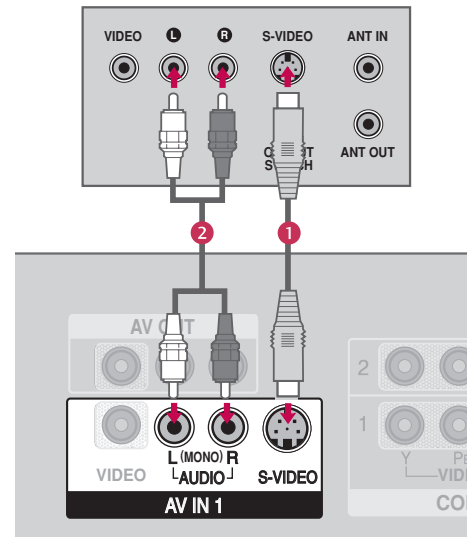


### ! CAUTION

 - ▶ Do not connect to both Video and S-Video at the same time.



## EXTERNAL A/V SOURCE SETUP

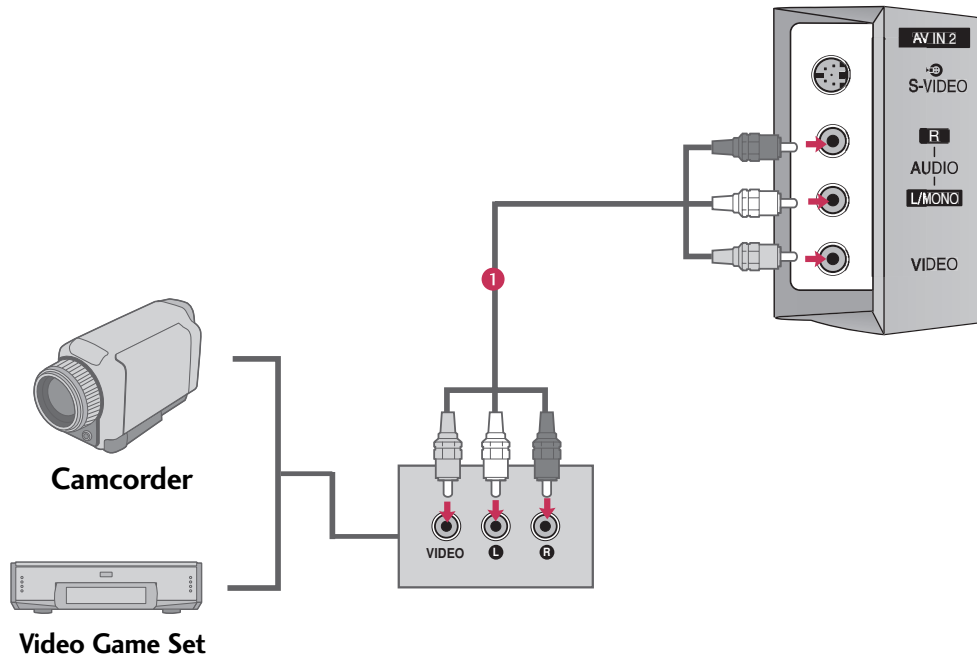

### 1. How to connect

- 1 Connect the **AUDIO/VIDEO** jacks between TV and external equipment. Match the jack colors.  
(Video = yellow, Audio Left = white, and Audio Right = red)

### 2. How to use

- Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV IN 2** input, select **AV2** input source.
- Operate the corresponding external equipment.

# CONNECTIONS & SETUP

## AV OUT SETUP


The TV has a special signal output capability which allows you to hook up the second TV or monitor.

### 1. How to connect

- 1 Connect the second TV or monitor to the TV's **AV OUT** jacks.
- 2 See the Operating Manual of the second TV or monitor for further details regarding that device's input settings.

#### NOTE

- ▶ Component 1-2, RGB-PC/RGB-DTV, HDMI1/DVI, HDMI2, DTV input sources cannot be used for AV out.
- ▶ We recommend to use the AV OUT jacks for VCR recording.

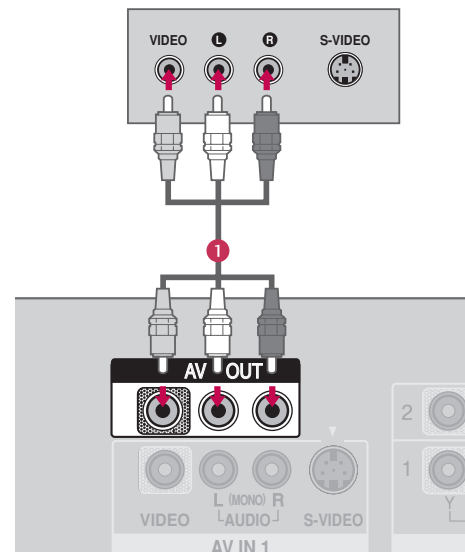

## DIGITAL AUDIO OUTPUT

Send the TV's audio to external audio equipment via the Digital Audio Output (Optical) port.

### 1. How to connect


- 1 Connect one end of an optical cable to the TV Digital Audio (Optical) Output port.
- 2 Connect the other end of the optical cable to the digital audio (optical) input on the audio equipment.
- 3 Set the "TV Speaker option - Off" in the AUDIO menu. (▶ p.105). See the external audio equipment instruction manual for operation.

#### ! NOTE

- ▶ When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off. (▶ p.105)

#### ! CAUTION

- ▶ Do not look into the optical output port. Looking at the laser beam may damage your vision.

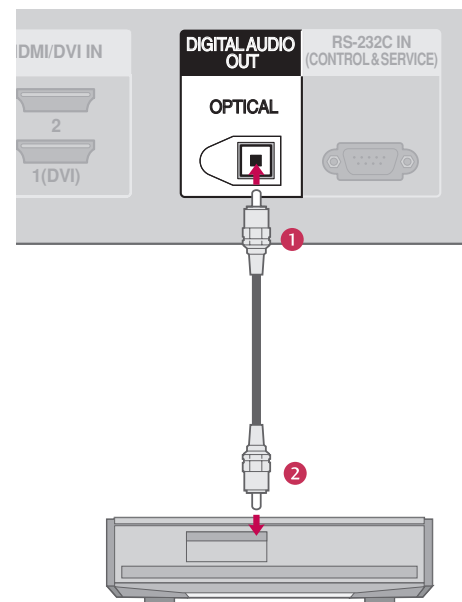

# CONNECTIONS & SETUP

## DVD SETUP


### When connecting Component cable

#### 1. How to connect

- 1 Connect the video outputs (Y, PB, PR) of the DVD to the **COMPONENT IN VIDEO1** jacks on the set. Match the jack colors (Y = green, PB = blue, and PR = red).
- 2 Connect the audio outputs of the DVD to the **COMPONENT IN AUDIO1** jacks on the set.

#### 2. How to use


- Turn on the DVD player, insert a DVD.
- Select **COMPONENT 1** input source with using the **INPUT** button on the remote control.
- If connected to **COMPONENT IN 2** input, select **COMPONENT 2** input source.
- Refer to the DVD player's manual for operating instructions.

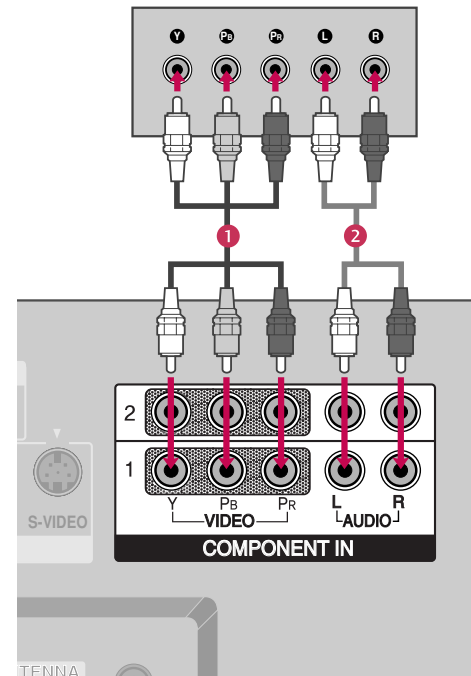

#### Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

 Component ports on the TV	Y	P <sub>B</sub>	P <sub>R</sub>
Video output ports on DVD player	Y	P <sub>B</sub>	P <sub>R</sub>
	Y	P <sub>b</sub>	P <sub>r</sub>
	Y	B-Y	R-Y
	Y	C <sub>b</sub>	C <sub>r</sub>




## When connecting with an S-Video cable

### 1. How to connect

- 1 Connect the S-VIDEO output of the DVD to the **S-VIDEO** input on the set.
- 2 Connect the audio outputs of the DVD to the **AUDIO** input jacks on the set.

### 2. How to use

- Turn on the DVD player, insert a DVD.
- Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV IN 2**, select **AV2** input source.
- Refer to the DVD player's manual for operating instructions.

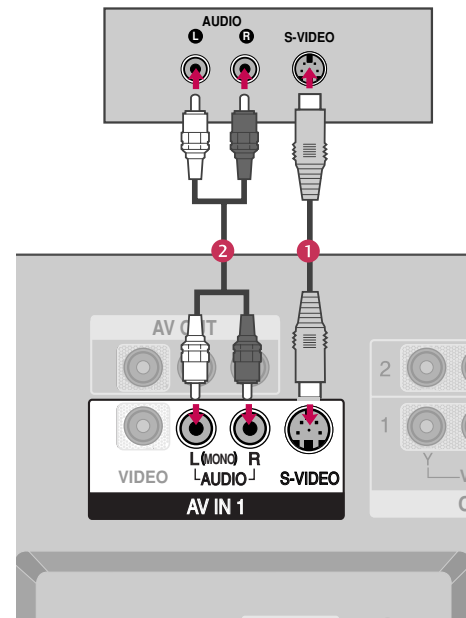



## When connecting HDMI cable

### 1. How to connect

- 1 Connect the HDMI output of the DVD to the **HDMI IN 1 (DVI)** or **2** jack on the set.
- 2 No separated audio connection is necessary.

### 2. How to use

 - Select **HDMI1/DVI** or **HDMI2** input source with using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.
- If the DVD supports Auto HDMI function, the DVD output resolution will be automatically set to 1280x720p.
- If the DVD does not support Auto HDMI, you need to set the output resolution appropriately.  
To get the best picture quality, adjust the output resolution of the DVD to 1280x720p.

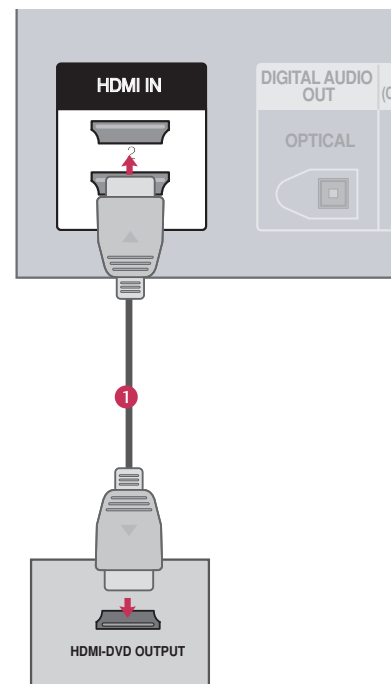



# CONNECTIONS & SETUP

## PC SETUP

This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings. The TV perceives 640x480, 60Hz as DTV 480p based on the PC graphic card. If necessary, change the screen scanning rate for the graphic card accordingly.

### When connecting D-sub 15 pin cable

#### 1. How to connect


- 1 Connect the RGB output of the PC to the **RGB (PC/DTV)** jack on the set.
- 2 Connect the PC audio output to the **AUDIO (RGB/DVI)** jack on the set.

#### 2. How to use


- Turn on the PC and the set.
- Select **RGB-PC** input source in main input option of **SETUP** menu. (▶ p.87)
- Once you select **RGB-PC** in main input option of **SETUP** menu, **INPUT** button is also available for this purpose.

#### ! NOTE

- ▶ Check the image on your TV. There may be noise associated with the resolution, vertical pattern, contrast or brightness in PC mode. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the **VIDEO** menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.

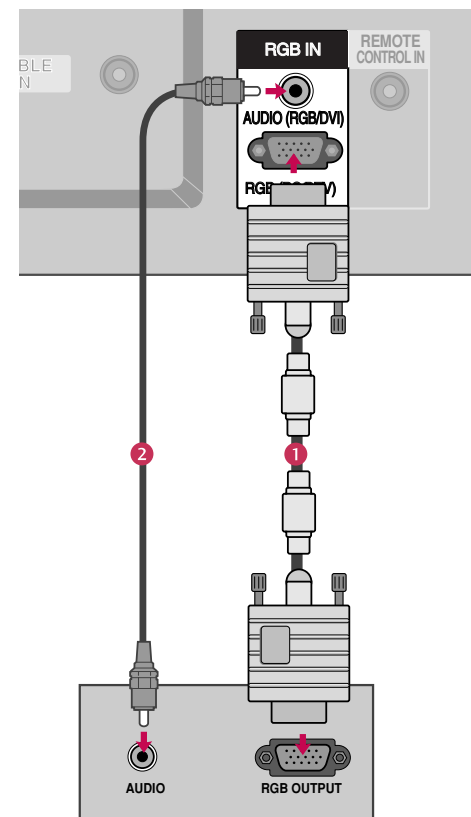

## When connecting HDMI to DVI cable

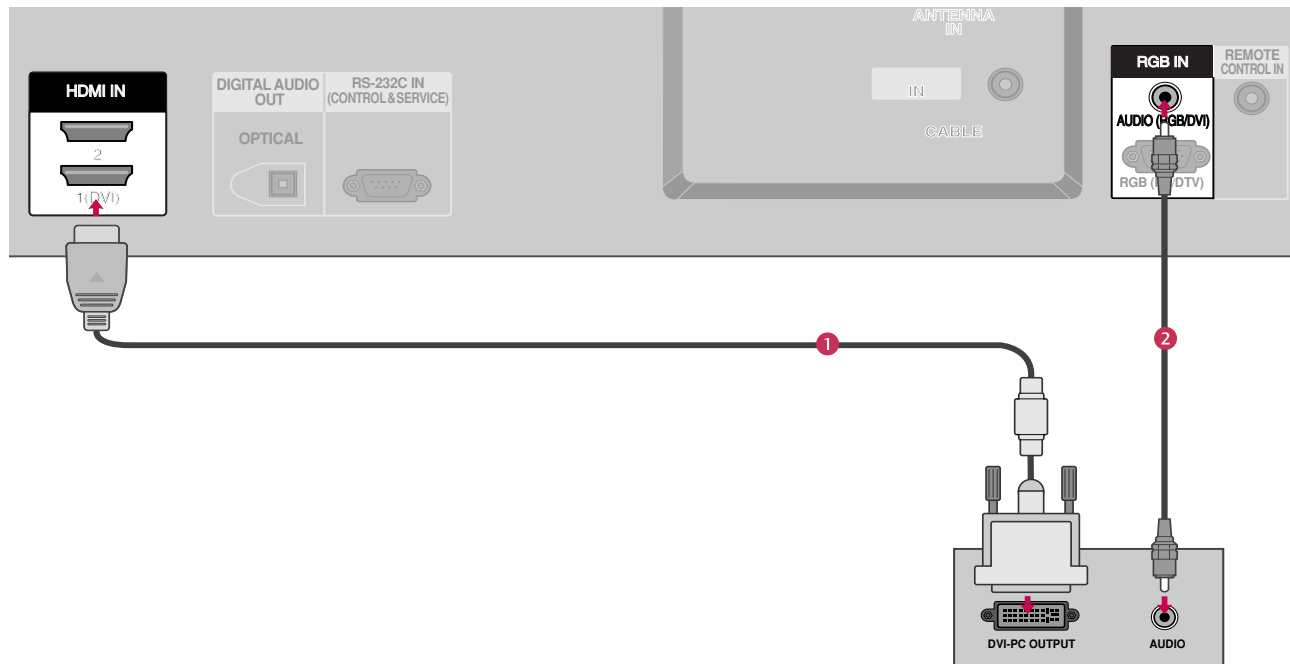

### 1. How to connect

- 1 Connect the DVI output of the PC to the **HDMI IN 1 (DVI)** jack on the set.
- 2 Connect the PC audio output to the **AUDIO(RGB/DVI)** jack on the set.

### 2. How to use

- Turn on the PC and the set
- Select **HDMI1/DVI** input source with using the **INPUT** button on the remote control.

#### ! NOTE

- ▶ HDMI2 source does not support DVI source.
- ▶ If the PC has a DVI output and no HDMI output, a separated audio connection is necessary.
- ▶ If the PC does not support Auto DVI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of PC graphics card's output resolution to 1024x768, 60Hz.

# CONNECTIONS & SETUP

## NOTES

- ▶ To get the the best picture quality, adjust the PC graphics card to 1024x768, 60Hz.
- ▶ Depending on the graphics card, DOS mode may not work if a HDMI to DVI Cable is in use.
- ▶ When Source Devices are connected with HDMI/DVI Input, the output PC Resolution(VGA, SVGA, XGA), Position and Size may not fit on the Screen. As shown in the picture, press the ADJUST button to adjust the screen Position of the TV SET and contact a PC graphics card service center.
- ▶ When Source Devices connected with HDMI/DVI Input, output TV SET Resolution (480p, 720p, 1080i) and TV SET Display fit EIA/CEA-861 -B Specification to Screen. If not, refer to the Manual of HDMI/DVI Source Devices or contact your service center.
- ▶ If the HDMI/DVI Source Device is not connected to the Cable or if there is a poor cable connection, "No signal" is displayed in the HDMI/DVI Input. In this case, that Video Resolution is not supported. If "Invalid Format" is displayed, refer to the Source Device manual or contact your service center.
- ▶ Avoid keeping a fixed image on the screen for a long period of time. The fixed image may become permanently imprinted on the screen.
- ▶ The synchronization input form for Horizontal and Vertical frequencies is separate.

 
Supported Display Specifications (RGB/HDMI-PC)

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
640x350	31.468	70.09
720x400	31.469	70.08
640x480	31.469	59.94
	37.861	72.80
	37.500	75.00
800x600	35.156	56.25
	37.879	60.31
	48.077	72.18
	46.875	75.00
1024x768	48.363	60.00
	56.476	70.06
	60.023	75.02
1280x768	47.776	59.870
1360x768	47.720	59.799

\* RGB-PC mode only: 640x350, 720X400  
 \* HDMI-PC mode only: 1280x768

Supported Display Specifications (RGB/HDMI-DTV)

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
720x480	31.47	60
	31.47	59.94
1280x720	45.00	60.00
	44.96	59.94
1920x1080	33.75	60.00
	33.72	59.94



## Screen Setup for PC mode

### Overview

When RGB connect to PC output and select the RGB-PC in Main Input, this function is used.

When HDMI IN 1(DVI) connect to PC output and select HDMI1/DVI input, this function is used.

In RGB-DTV mode, SIZE and PHASE is not available.

### Adjustment for screen Position, Size, Phase, Reset

- 1 Press the **ADJUST** button and then use ▲ or ▼ button to select **Position, Size, or Phase**.

---

- 2 Press the **ENTER** button and then use ▲ / ▼ or ◀ / ▶ button to make appropriate adjustments.
  - The **Phase** adjustment range is **-16 ~ +16**.
  - The **Size** adjustment range is **-30 ~ +30**.

---

- 3 Press the **ENTER** button.

### Initializing (Reset to original factory values)

To initialize the adjusted values.



- 1 Press the **ADJUST** button and then use ▲ or ▼ button to select **Reset**.

---

- 2 Press the **ENTER** button and then use ◀ or ▶ button to select **Yes**.

---





- 3 Press the **ENTER** button.

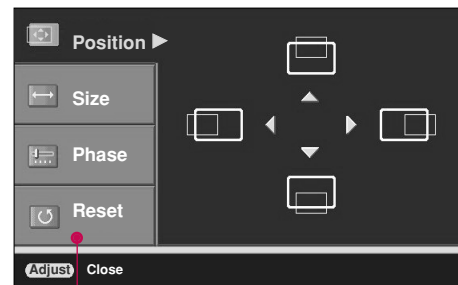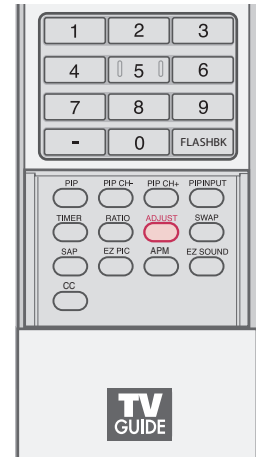

**Position** This function is to adjust picture to left/right and up/down as you prefer.


**Size** This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

   **Phase** This function allows you to remove any horizontal noise and clear or sharpen the image of characters. In HDMI/DVI-PC mode, PHASE is not available.

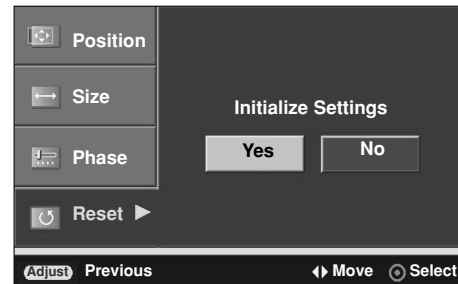

# BASIC OPERATION

## TURNING THE TV ON

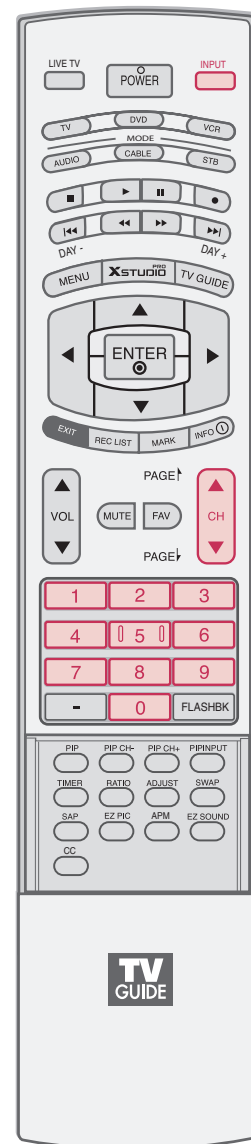

- 1** First, connect power cord correctly.  
At this moment, the TV switches to standby mode.

  - In standby mode, press the  $\text{⏻}$  (or ON/OFF), **INPUT**  $\text{⊙}$ , **CH** ( $\blacktriangle$  or  $\blacktriangledown$ ) button on the TV or press the **POWER**, **INPUT**, **LIVE TV**, **CH** ( $\blacktriangle$  or  $\blacktriangledown$ ), **Number (0-9)** button on the remote control.
- 2** Select the viewing source by using the **INPUT** button on the remote control.


  - This TV is programmed to remember which mode it was last set to, even if you turn the TV off.
- 3** When finished using the TV, press the **POWER** button on the remote control. The TV reverts to standby mode.

### ! NOTE

- ▶ If you intend to be away on vacation, disconnect the power plug from the wall power outlet.
- ▶ After turning on the TV, it could take up to a week for the TV Guide On Screen system to receive full listings data.
- ▶ When the TV is turned on, the indicator will blink red for 15 seconds before the picture is seen.

## ON-SCREEN MENUS LANGUAGE SELECTION

The menus can be shown on the screen in the selected language. First select your language.

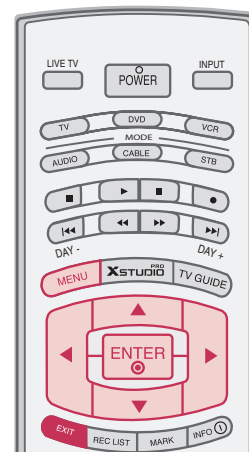


**1** Press the **MENU** button and then use **▲** or **▼** button to select the **OPTION** menu.


**2** Press the **▶** button and then use **▲** or **▼** button to select **Language**.

**3** Press the **▶** button and then use **▲** or **▼** button to select your desired language.  
From this point on, the on-screen menus will be shown in the selected language.

**4** Press the **EXIT** button to return to TV viewing or press **MENU** to return to the previous menu.

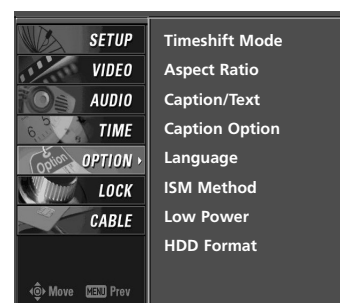

**1**

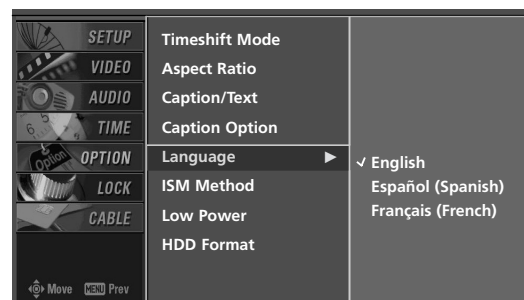

**2 3**


# BASIC OPERATION

## INITIAL CHANNEL SEARCH (EZ SCAN)

This feature automatically finds all channels available through the antenna or cable input and stores them in memory on the channel list.

Run EZ Scan again after any Antenna/Cable connection changes.

Note: A password is required to gain access to EZ Scan menu if the Lock System is turned on.

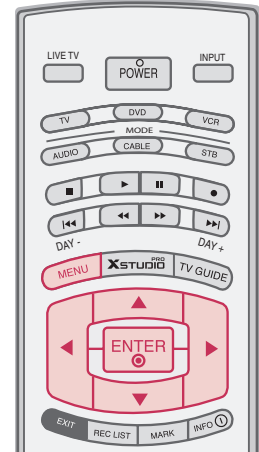


**1** Press the **MENU** button and then use **▲** or **▼** button to select the **SETUP** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **EZ Scan**.

**3** Press the **ENTER** button to begin the channel search. Allow EZ Scan to complete the channel search cycle for ANTENNA, and CABLE.




**2**

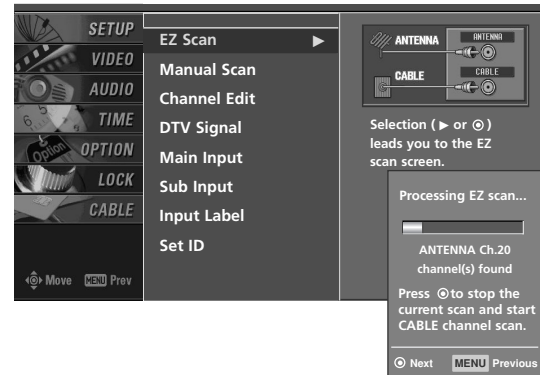

**3**

## CHANNEL SELECTION


- 1 Press the **CH ▲** or **▼** or **NUMBER** buttons to select a channel number.

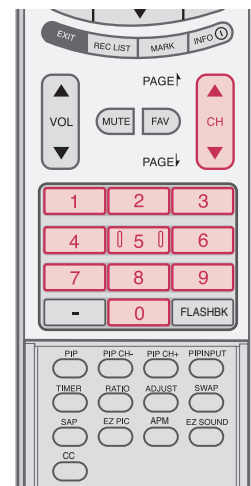

## VOLUME ADJUSTMENT

Adjust the volume to suit your personal preference.

- 1 Press the **VOL ▲** or **▼** button to adjust the volume.
- 2 If you want to switch the sound off, press the **MUTE** button.
- 3 You can cancel the Mute function by pressing the **MUTE** or **VOL ▲** or **▼** button.

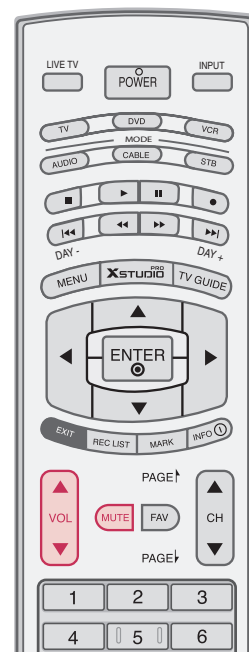



# TV GUIDE ON SCREEN™ SYSTEM


## TV GUIDE ON SCREEN™ SETUP

The TV Guide On Screen system uses Setup information to provide you with show listings and lineups in your area—which are updated several times a day.

Once you set up the TV according to manufacturer's instructions, you are ready to set up the TV Guide On Screen system.

### ! NOTE

- ▶ The TV Guide On Screen system provides listings for cable-ready, and digital cable services as well as over-the-air broadcast. It does not provide listings for satellite services.

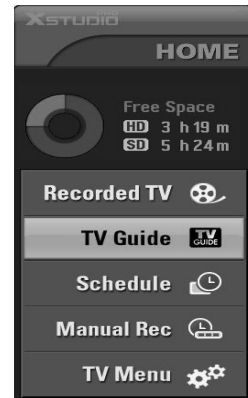

## Ready to setup

### 1 Welcome Screen

The TV Guide On Screen system's Welcome Screen appears:

- By pressing the **TV Guide** button
- When you power On your TV if you previously skipped "Set up TV Guide On Screen now" on the Reminder Screen.

The Welcome Screen highlights features of the TV Guide On Screen system.

Press **ENTER** to begin Setup.



1


### 2 Reminder Screen

The TV Guide On Screen system's Reminder Screen appears:

- After initial TV set up.
- If you power Off the TV and then power it back On.

To make a selection, use the ▲ or ▼ button to highlight an option, and press **ENTER**.

- "Set up TV Guide On Screen now", displays the Welcome Screen. Press **ENTER** button to begin Setup.
- "Remind me to set up later" returns you to watching TV.
- "Don't remind me again" returns you to watching TV and stops the reminder screen from appearing upon power On.

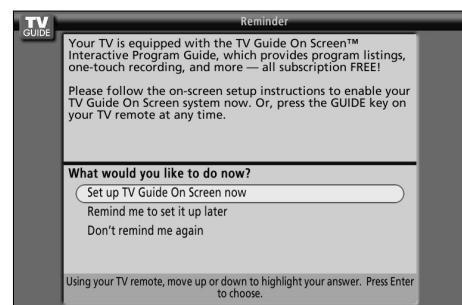

2

# TV GUIDE ON SCREEN™ SYSTEM

## Using TV Guide

### 1 Screen 1: Country

- This screen asks you the location of your TV.
- Use the ▲ or ▼ button to highlight a country.
- Press **ENTER** button to display Screen 2.

### 2 Screen 2: Enter ZIP or Postal Code

#### Option 1


- If you selected USA in Screen 1, you see the ZIP Code screen.
- You input numbers by either pressing the number keys on the remote or using the ▲ or ▼ button to display a number, and then the ◀ or ▶ button to move to another field.
- Press **ENTER** button to display Screen 3.

#### Option 2

- If you selected Canada in Screen 1, you can see the Postal Code screen.
- You input characters by using the ▲ or ▼ button, and then the ◀ or ▶ button to move to another field.
- Press **ENTER** button to display Screen 3.

### 3 Screen 3: Do you have Cable Service connected?


- If you select Yes, you see Screen 4.
- If you select No, you see Screen 4.

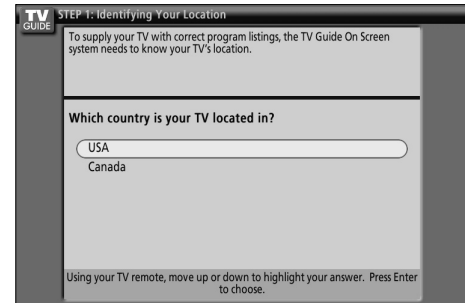


1



2

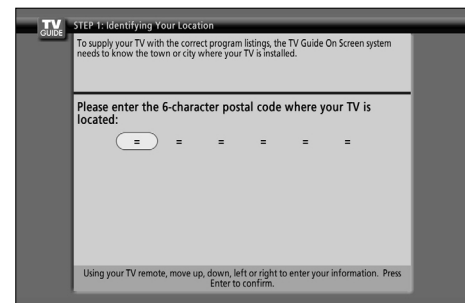

2

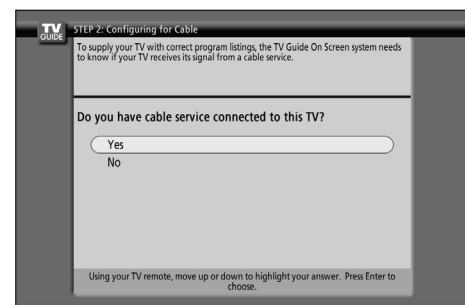


3

#### 4 Screen 4: Do you have an antenna connected?

- If you select Yes, you see Screen 5.
- If you select No, you see Screen 5.

#### ! NOTE


- ▶ If you selected No in Screen 3 then you must select Yes in this screen to receive a channel lineup and listings.

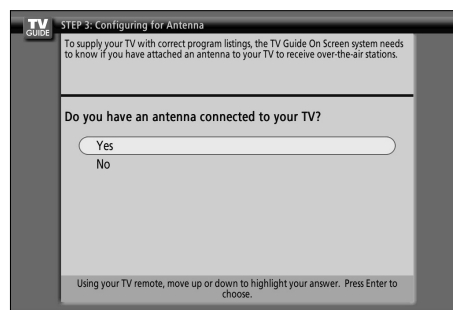

4

#### 5 Screen 5: Are your basic settings correct?


- If you select Yes, you see Screen 6.
- If you select No, you see Screen 1.

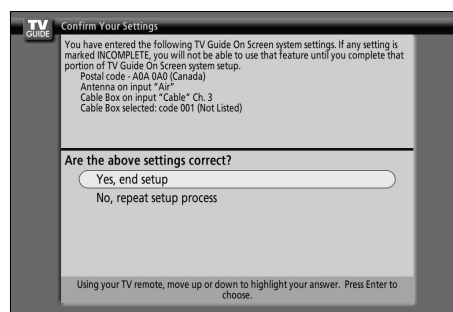

5

#### 6 Screen 6: Congratulations

- Press **ENTER** button to display Screen 7.

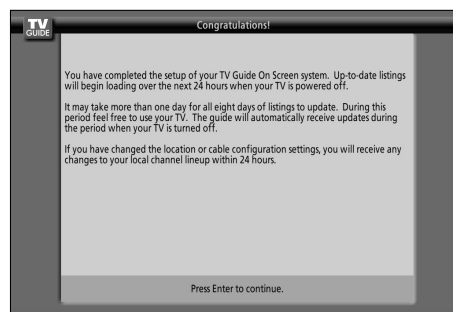


6

#### 7 Screen 7: Helpful Information

- This screen tells you valuable information on using your Guide.
- Press **ENTER** button to watch TV.

#### ! NOTE

- ▶ The TV Guide On Screen system receives program listings data through your cable or over-the-air video signal. In order to receive regular program listings, please remember to do the following:
  1. Turn OFF your TV when it is not in use. (Do not unplug the power cord.)
  2. If you have more than one Cable system in your area, you may be prompted to select which Cable system's program data to download. If so prompted, please follow the on-screen instructions.
- ▶ Program listings are updated several times a day. It may take up to 24 hours to begin to receive any TV program listings. It may take up to one week to receive all eight days of TV program listings.

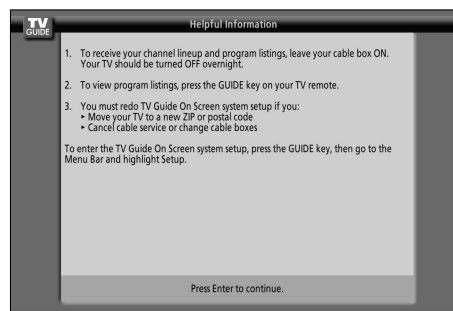

7

# TV GUIDE ON SCREEN™ SYSTEM

## TV GUIDE ON SCREEN™ FEATURE

### Overview

Your new TV contains the TV Guide On Screen Interactive Program Guide.

The TV Guide On Screen system has features that help you get the most out of your viewing experience.


### TV Guide On Screen Overview

The TV Guide On Screen system has the following features:

- Eight days of show listings (today plus seven days).
- Icons that indicate show rating, stereo, HDTV, new episode, etc.
- Intuitive up/down/left/right navigation using your remote control.
- Set shows to Record.
- Schedule show Reminders.
- Search shows by category (e.g., Movies, Sports, Children, etc.).
- Search for shows based on keywords or alphabetically by title.
- Direct tuning to a channel.
- Streamlined System Setup and default setting options.
- Channel lineup customization.
- Help screens while in the TV Guide On Screen system.

## Screen Components

The screens displayed in the TV Guide On Screen system share many of the same components, as shown in the following figure:

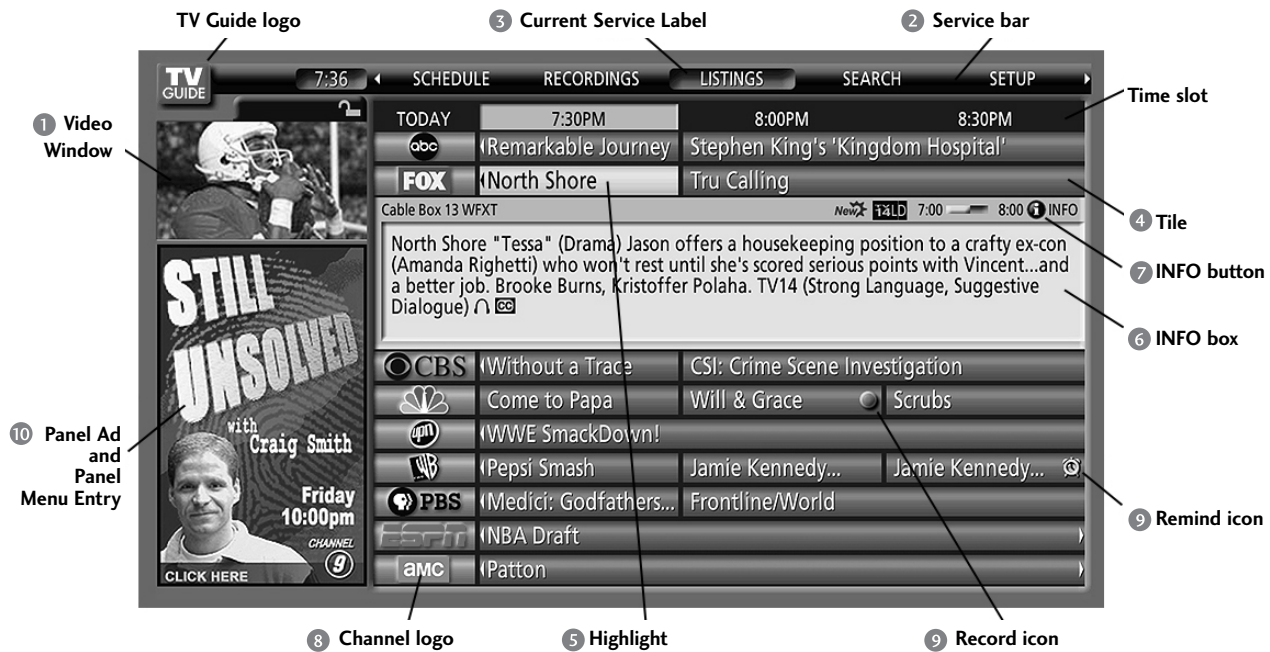

- 1 Video Window - Displays TV video while The TV Guide On Screen system is displayed.
- 2 Service Bar - Provides access to the 5 main Guide Services.
- 3 Current Service Label - Indented to indicate current Service displayed.
- 4 Tile - Displays show title.
- 5 Highlight - Indicates an active tile.
- 6 INFO Box - Provides information for a highlighted item.
- 7 INFO Button - Indicates you can cycle through the various Info Box sizes.
- 8 Channel Logo - Identifies network.
- 9 Record/Remind Icons - Indicates a show is set to Record or set as a Reminder.
- 10 Panel Ad - Location where show- or product-specific information appears (and also where Panel Menu appears).

# TV GUIDE ON SCREEN™ SYSTEM

## Panel Menu



- A Panel Menu appears when the **MENU** button is pressed on a highlighted tile and additional options are available. It also appears when you press **ENTER** button on a show starting in the future.
- When a Panel Menu appears, the highlighted tile changes color to indicate the Panel Menu relates to this tile.
- The Panel Menu displays below the Video Window.
- Help is available for a displayed Panel Menu by pressing the **INFO** button.
- The **▲** or **▼** button move between the options within the Panel Menu.
- The left and right arrows move to adjacent options unless the highlight is on an odometer, where these arrows change the odometer choice.
- Pressing **ENTER** button from an odometer or number entry box moves the highlight to the default command button of that Panel Menu, for example, Schedule Recording.
- Pressing **ENTER** button from a highlighted command button executes the action and closes the Panel Menu (e.g., Schedule Recording, Cancel).
- Select Cancel to cancel any changes and press **ENTER** button to close the menu.
- Pressing Menu is a shortcut to Cancel. Press **MENU** button to cancel any changes and close the menu.
- If a Panel Menu contains more menu options than can be displayed on a single screen, the more **▼** text appears at the bottom of the menu. Simply scroll down to access additional options.

## Main Services

### Listings

Access Listings by pressing the **TV GUIDE** button on your remote or on the front panel of your TV.

Listings is always the first Service displayed in the Guide.

With Listings highlighted, press the **INFO** button to display a Help screen. Press the **INFO** button again to close the screen.

1 Use the **▲ ▼ ◀ ▶** button to move the highlight within Listings to:


- View 8 days of show listings
- Read show descriptions
- Tune directly to a show currently airing
- Set a show to Remind
- Set a show to Record
- Lock and Unlock the Video Window
- Access Panel and Channel Ads

#### NOTE

- ▶ There may be times when the TV Guide On Screen system could display partial or no program listings. The reasons for this include:
  - Program schedule information was not provided to TV Guide On Screen.
  - The transmission of the program listings was interrupted.
  - The phrase “No Listings” will be replaced with program information during the next transmission, which should occur within the next 24 hours.
  - Please remember to turn off your TV when not in use in order to receive program listings.



1

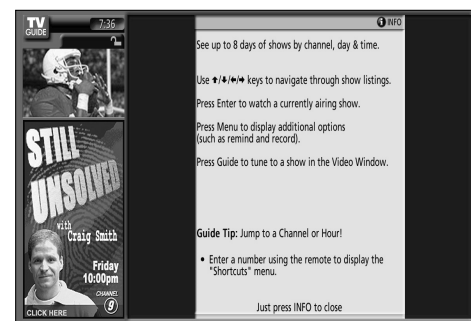

1



1

TV GUIDE ON SCREEN™ SYSTEM



# TV GUIDE ON SCREEN™ SYSTEM

## Search

Search lets you find shows alphabetically, by category (Movies, Sports, Children, Educational, News, Variety, Series, HDTV) or by keyword.


With Search highlighted, press the **INFO** button to display a Help screen. Press the **INFO** button again to close the screen.

### Category Search Example: Movies

- 1 From Search, use the ▼ button to highlight Movies.



1

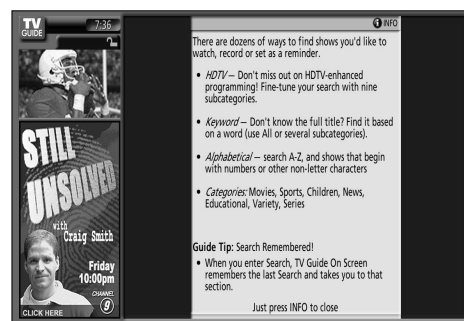

1



1

**2** Use the ▼ button to highlight a subcategory (for example, All).

**3** Press **ENTER** button to display a list of all Movies, organized by date and time.

**4** Highlight a show and press **ENTER** button to watch (if on now) or the **MENU** button to display the Episode Options menu.


**5** You can choose to set a recording, a reminder, or tune to the channel.

- ▶ Go to Service Bar - Closes the menu, changes no information, and returns to the Search Service Bar.
- ▶ Tune to Channel - Exits the Guide and tunes to the channel of the highlighted show (show airs in the future).

**NOTE**

This option reads Watch Now if the show is currently airing.

- ▶ Set Recording - Displays the Record Options menu, from which you can set frequency, start and end time, etc.
- ▶ Set Reminder - Displays the Remind Options menu, from which you can set frequency, when, automatically power On, and auto-tune the TV.
- ▶ Cancel - Closes the menu, changes no information, and returns to the highlighted show.

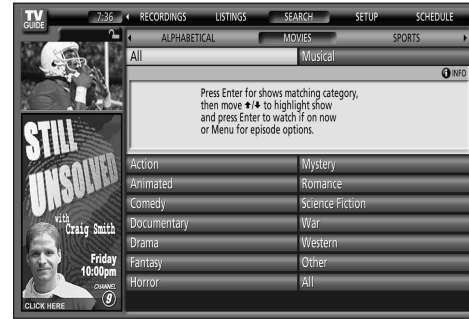

**2 3**



**4**



**5**



# TV GUIDE ON SCREEN™ SYSTEM

## Keyword Search

Keyword search lets you enter a word(s) to look for a particular show by category or for every show title that matches.

- 1 Highlight the Keyword navigation label, and press **ENTER** button to display the Keyword Search menu.
- 2 Highlight New Search, and press **ENTER** button.
- 3 The Search Options menu is displayed.
- 4 Highlight Category, and use the ◀ or ▶ button to select a category to search (e.g. All, HDTV, Children, Sports, etc.). When finished, use the ▼ button to highlight Enter Keyword.
- 5 Highlight Enter Keyword, and press **ENTER** button. The keyboard is displayed.
- 6 Use the ▲ ▼ ◀ ▶ button to highlight a character, and press **ENTER** button to display it. When complete, highlight Done and press **ENTER** button.




- 7** A list of all matching shows for that keyword is displayed.

You can highlight a show, and press **ENTER** button to display all airings. You can then highlight a specific listing and press **ENTER** to watch (if On now) or the **MENU** button to display the Episode Options menu.

From the Episode Options menu, choose to set a recording, a reminder, or tune to the channel, as previously described.

The TV Guide On Screen system stores all the keywords you create. To edit or delete a keyword, highlight the keyword and press the **MENU** button. A Search Options menu is displayed.

- ▶ Go to Service Bar - Closes the menu, changes no information, and returns to the Search Service Bar.
- ▶ Edit Search - Displays the keyboard, where you can change the keyword.
- ▶ Delete Search - A Confirm menu is displayed.
  - Yes - Deletes the Search.
  - No - Closes the panel menu.
- ▶ Cancel - Closes the menu, changes no information, and returns to the highlighted show.

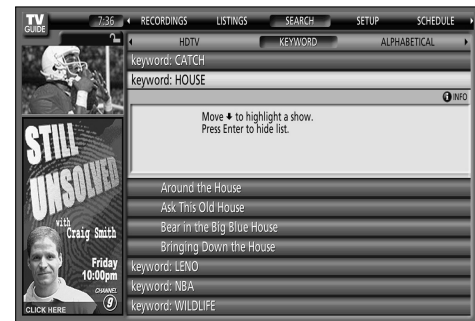

# TV GUIDE ON SCREEN™ SYSTEM

## Recordings


Recordings displays a list of previously recorded or currently recording shows on a DVR.

**1** With Recordings highlighted, press the **INFO** button to display a Help screen. Press the **INFO** button again to close the screen.

**2** Choose the way Recordings are displayed by highlighting Recordings on the Service Bar and then press the **MENU** button to display the Recordings Options menu. Use the **▲** or **▼** buttons to choose between the following:

- In View As, use the **◀** or **▶** buttons to choose between
  - ▶ Group - Recorded shows are listed without listing every recorded episode (see example in Screen A).
  - ▶ List - Displays a complete list of every recorded episode for a show(see example in Screen B).
- In Sort By, use the **◀** or **▶** buttons to choose between
  - ▶ Title - Shows are displayed in alphabetical order (see example in Screen A).
  - ▶ Date - Shows are displayed by date and time, with most recent date and time first (see example in Screen B).

**3** When finished, press **ENTER** button to highlight Done. Press **ENTER** button again to close the menu and display the Recordings with the selected options.

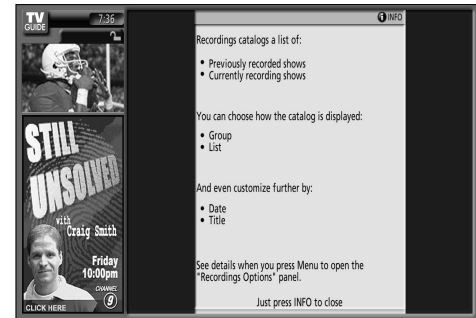

1



Screen A



Screen B

2 3 4 5

4 In List View, highlight an episode and an Info box provides show information. Press the **MENU** button to display the Episode Options menu.


5 In Group View, highlight a show and press **ENTER** button to view a summary for the all the recorded shows along with the episode list (Press **ENTER** button again to collapse the episode list).

6 Highlight a specific episode and press the **MENU** button to display the Episode Options menu.


To view an episode, you can do one of the following:

- Highlight an episode, and press **ENTER** button to view it now.

- ▶ Go to Service Bar - Close the menu, changes no information, and returns to the Recordings Service Bar.
- ▶ Play from beginning - View the episode from the beginning in TV Mode.
- ▶ Delete Episode - Deletes the episode from the Recordings, A Confirm menu is displayed.
  - Yes - Deletes the episode.
  - No - Closes the panel menu.
- ▶ Cancel - Closes the menu, changes no information, and returns to the highlighted show.

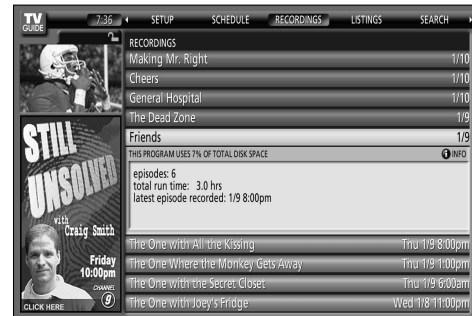

6

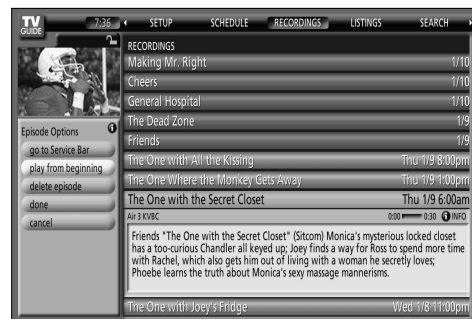

6



6

# TV GUIDE ON SCREEN™ SYSTEM





## Schedule

Schedule lets you review, edit, or delete Record and Remind events that you set previously.





With Schedule highlighted, press the **INFO** button to display a Help screen. Press the **INFO** button again to close the screen.

An icon identifies the event type:

## Record

-  Once - Records the show one time.
-  Regularly - Records the show every time the show airs on the same channel and starts at the same time.
-  Weekly - Records the show each time the show airs on the same day of the week, on the same channel and starts at the same time.
-  Off - Keeps the show in the list but will not record the show until the frequency is changed.



## Remind

-  Once - Sets a show reminder one time.
-  Regularly - Sets a show reminder every time the show airs on the same channel and starts at the same time.
-  Weekly - Sets a show reminder each time the show airs on the same day of the week, on the same channel and starts at the same time.
-  Off - Keeps the show in the list but will not remind the show until the frequency is changed.

Highlight an event, and press the **MENU** button for options.

(Note options vary depending on the type of event you select.)

- ▶ Go to Service Bar - Closes the menu, changes no information, and returns to the Schedule Service Bar.
- ▶ Tune to channel - Exits the TV Guide On Screen system and tunes to the highlighted show.
- ▶ Set Recording- Opens a menu from which you can set a recording for the show. (Remind is not cancelled)
- ▶ Set Reminder- Opens a menu from which you can set a Reminder for the show. (Record is not cancelled)
- ▶ Delete Recording- Removes the recording from the Schedule after a Confirm screen.
- ▶ Delete Reminder- Removes the reminder from the Schedule after a Confirm screen.
- ▶ Edit Recording- Opens a menu from which you can change existing recording information.
- ▶ Edit Reminder- Opens a menu from which you can change existing reminder information.
- ▶ Cancel- Closes the menu, changes no information, and returns to the highlighted show.

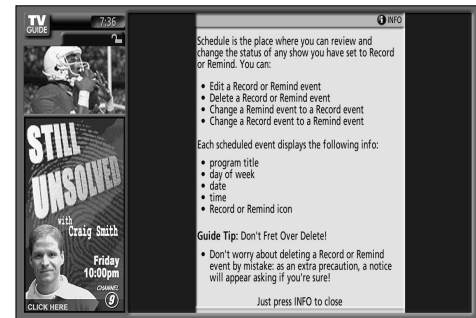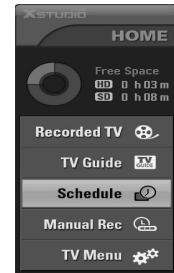

## Setup

After you initially complete Guide Setup, you can make changes to Guide settings in the following areas:

- Change System Settings
- Change Channel Display
- Change Default Options

**1** Highlight a choice, press **ENTER** button, and follow the on-screen instructions.


**2** With Setup highlighted, press the **INFO** button to display a Help screen. Press the **INFO** button again to close the screen.

### Change System Settings


**3** This option appears after you have completed the initial Guide Setup process.

Press **ENTER** button to display the Confirming Your Settings screen. You can see your current settings.


**4** Choose one of the options, press **ENTER** button, and follow the on-screen instructions.

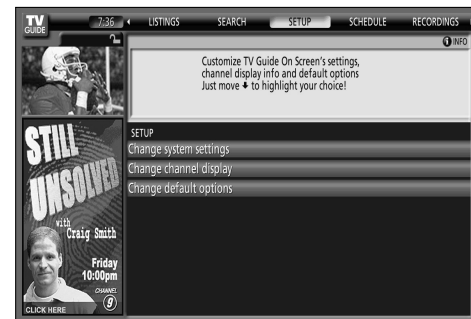


**1**

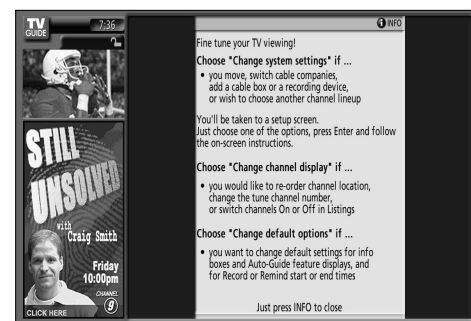

**2**

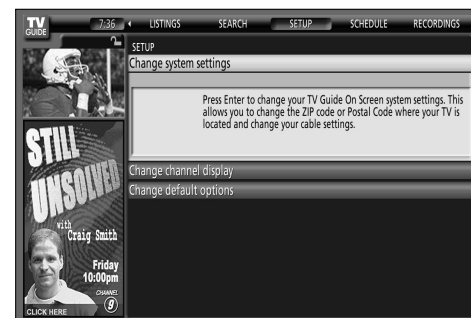

**3**

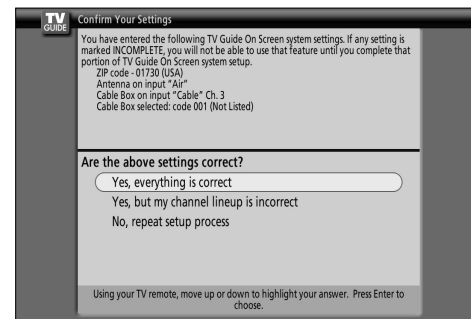

**4**

TV GUIDE ON SCREEN™ SYSTEM



# TV GUIDE ON SCREEN™ SYSTEM

## Change Channel Display

- 1 Change Channel Display lets you edit channel information that appears in Listings. With Change Channel Display you can :
  - Re-order the position of the channel in Listings.
  - Change the tune channel number.
  - Switch a channel.


- ▶ On - The channel is always displayed.
- ▶ Off - The channel is never displayed.
- ▶ Auto-Hide - The channel is only displayed when program information is available.

- 2 Press **ENTER** button to display the Channel Editor screen. Then, highlight a channel and press **MENU** button. A Grid Options menu is displayed.


Highlight Go Back to Setup to close the menu, change no information, and return to the Setup Service Bar.

Or make changes and when finished, press **ENTER** button to highlight Done. Press ENTER button again to close the menu and accept the changes.

Highlight Cancel to close the menu, change no information, and return to the highlighted channel.

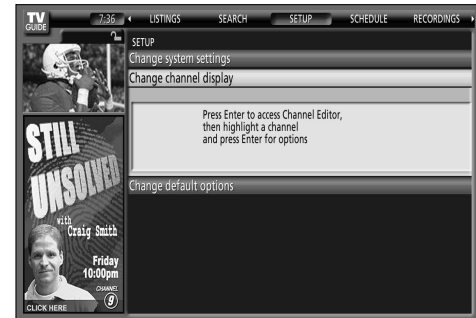

1

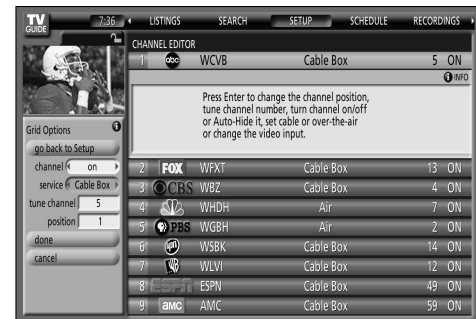


2

## Change Default Options

Change Default Options lets you change default settings in the following categories:

- General Defaults
- Record Defaults
- Remind Defaults

Highlight Change Default Options, and press **ENTER** button.

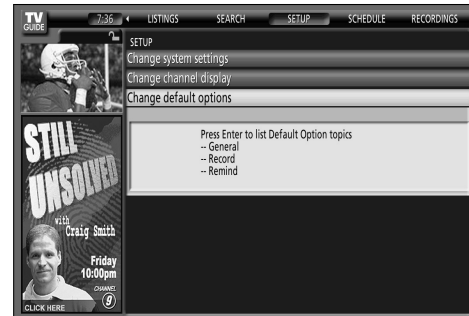

### 1 General Default Options

General Defaults lets you set defaults for the following:


- The initial Info Box size when the TV Guide On Screen system is entered. Choices are No, Small, Large, and Last Used. (Default = Last Used)
- The Info Box size rotation when the **INFO** button is pressed while in the TV Guide On Screen system. Choices are No only, Small only, Large only, No & Small, No & Large, Small & Large, All. (Default = All)
- Automatic entry into the TV Guide On Screen system (Auto-Guide) when the TV is powered On. Choices are On and Off. (Default = Off)

Highlight General Defaults, and press the **MENU** button to display the General Defaults menu.

Highlight Go to Service Bar to close the menu, change no information, and return to the Setup Service Bar.

When finished, press **ENTER** button to highlight Done. Press **ENTER** button again to close the menu and accept the changes.

Highlight Cancel to close the menu, change no information, and return to the highlighted option.

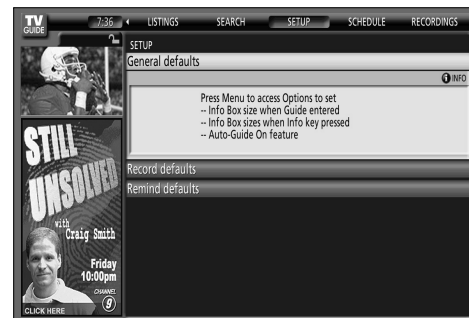

1



1

# TV GUIDE ON SCREEN™ SYSTEM

## 2 Record Defaults

Record Defaults lets you set defaults for the following:

- When to start the record event. Choices are 120 minutes early to 120 minutes late, to On time. (Default = On time)
- When to end the record event. Choices are 120 minutes early to 120 minutes late, to On time. (Default = On time)
- Recorder choice: Please choose HDD only. This TV does not support other recording devices.

Highlight Record Defaults, and press the **MENU** button to display the Record Defaults menu.

Highlight Go to Service Bar to close the menu, change no information, and return to the Setup Service Bar.



## 3 Remind Defaults

Remind Defaults lets you set defaults for the following:


- Power On the TV, if Off, when a Reminder is scheduled. Choices are Yes and No. (Default = No)
- Automatically tune the TV to the channel (TV must be On), when a Reminder is scheduled. Choices are Yes and No. (Default = No)
- When to display the reminder screen, choices are 30 seconds to 15 minutes early, to 30 seconds to 15 minutes late, to On time. (Default = 1 min early)

Highlight Remind Defaults, and press the **MENU** button to display the Remind Defaults menu.

Highlight Go to Service Bar to close the menu, change no information, and return to the Setup Service Bar.

When finished, press **ENTER** button to highlight Done. Press **ENTER** button again to close the menu and accept the changes.

Highlight Cancel to close the menu, change no information, and return to the highlighted option.

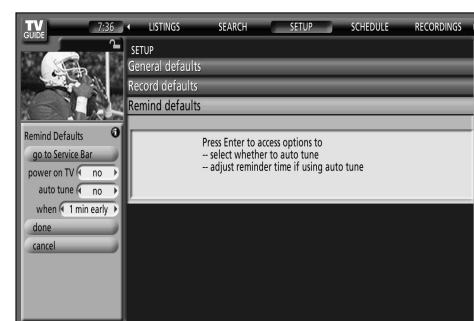

## Record And Remind Features

### Record

You can set a show to Record in Listings, Search, and Schedule or change Record settings for a show in Schedule.

There are 3 ways to set a show to Record:

#### Using the Record Button on the Remote

- Press the **Record** button on the remote to record the show Once with current default settings (Start and End recording On Time). Each time you press the **Record** button, you can change the record frequency (but not the default settings) among Once (default), Regularly, Weekly and then Cancel.

#### NOTE

- The proper Record icon appears on the show tile, as the **Record** button is pressed.

- Once** - Records the show one time.
- Regularly** - Records the show every time the show airs on the same channel and starts at the same time.
- Weekly** - Records the show each time the show airs on the same day of the week, on the same channel and starts at the same time.
- Cancel** (no icon displayed) - Does not record.



TV GUIDE ON SCREEN™ SYSTEM

#### From a Panel Menu

- Highlight a show, and press **MENU** button to display the Episode Options menu.
- Highlight Set Recording, and press **ENTER** button to display the Record Options menu.



1 2

# TV GUIDE ON SCREEN™ SYSTEM

- Highlight the Frequency option, and use the left and right arrows to choose among Once, Regularly, Weekly, and Off, as previously described.

Recorder choice: Please choose HDD only. This TV does not support other recording devices.

- When finished, press **ENTER** button to highlight Schedule Recording.

Press **ENTER** button again to close the menu. You can see a Record icon for the selected frequency next to the show title.

Highlight Cancel to close the menu, change no information, and return to the highlighted show.

## NOTE

- In Listings, use the **PIP** button to change the status of the Video Window (locked or unlocked).

## Manual Recording

- Highlight the Schedule Service label, and press **MENU** button to display the Schedule Options menu.
- Highlight New Manual Recording and press **ENTER** button to display the Record Options menu.
- Current information (i.e., date, start and end times, channel, input) is displayed.
- Use the **▲▼◀▶** button to move through the options. Use the number or the **▲▼◀▶** button to change the information, as necessary.
- Recorder choice: Please choose HDD only. This TV does not support other recording devices.




3



4



1 2

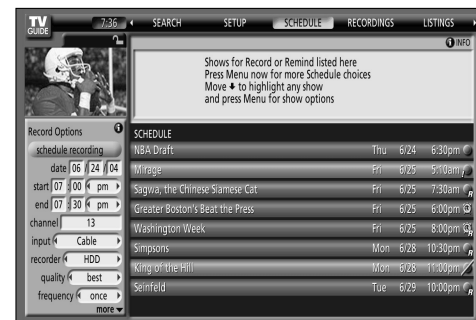

3 4 5

**6** Highlight the Frequency option, and use the ◀ or ▶ button to choose between Once, Daily, Weekly, and Off, as follows :

- Once - Records the time, channel, input, recorder combination one time.
- Daily - Records the time, channel, input, recorder combination Monday through Friday.
- Weekly - Records the time, channel, input, recorder combination once a week on this selected day of the week.
- Off (not cancel) - Keeps the time, channel, input, recorder combination in the list without recording until the frequency is changed.

**7** When finished, press **ENTER** button to highlight Schedule Recording.

Press **ENTER** button again to close the menu. You can see a Record icon for the selected frequency next to the input and channel number.

Highlight Cancel to close the menu, change no information, and return to the highlighted show.

**8** Before a recording begins, a notification screen appears if your TV is On. At that time, you can choose to start or cancel recording. If the TV is not On, the recording occurs as scheduled. If there is no activity for 3 minutes, the notification screen automatically closes and completes the highlighted item.



### Record Conflict

A conflict message appears for the following reasons:

- A show set to Record overlaps with any part of another show previously set to Record.
- A show set to Record overlaps with a show previously set to auto tune.

Select one of these options:

- Record anyway - This show will override an existing show set to Record or auto-tune.
- Don't record this show - Cancel the Recording.

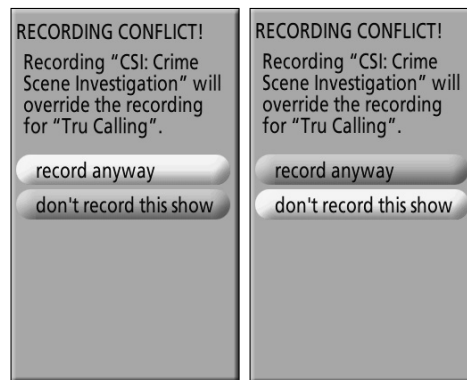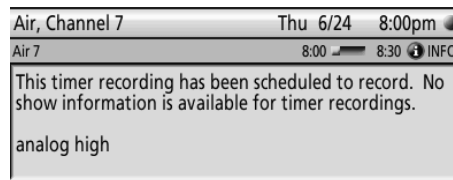

# TV GUIDE ON SCREEN™ SYSTEM

## Remind

You can set a show Reminder in Listings, Search, and Schedule or change Reminder settings for a show in Schedule.

There are 2 ways to set a show Reminder:

### From a Panel Menu

- 1 Highlight a show, and press Menu button to display the Episode Options menu.
- 2 Highlight Set Reminder, and press **ENTER** button to display the Remind Options menu.
- 3 Highlight the Frequency option, and use the left and right arrows to choose between:

- Once - Sets a show reminder one time.
- Regularly - Sets a show reminder every time the show airs on the same channel and starts at the same time.
- Weekly - Sets a show reminder each time the show airs on the same day of the week, on the same channel and starts at the same time.
- Off - Keeps the show in the list but will not remind until the frequency is changed.

- 4 Power On the TV, if Off, when a Reminder is scheduled. Choices are Yes and No. (Default = No)
- 5 Automatically tune the TV to the channel (TV must be On), when a Reminder is scheduled. Choices are Yes and No. (Default =No)
- 6 When to display the reminder screen. Choices are 30 seconds to 15 minutes early, to 30 seconds to 15 minutes late, to On time. (Default = 1 min early)
- 7 When finished, press **ENTER** button to highlight Schedule Reminder. Press **ENTER** button again to close the menu. You can see a Remind icon for the selected frequency next to the show title. Highlight Cancel to close the menu, change no information, and return to the highlighted show.



1 2







3 4 5 6



7

## Manual Reminder


- 1 Highlight the Schedule Service label, and press **MENU** button to display the Schedule Options menu.
- 2 Highlight New Manual Reminder and press **ENTER** button to display the Remind Options menu.
- 3 Current information (i.e., date, start and end times, channel, input) is displayed.
- 4 Use the **▲▼◀▶** button to move through the options. Use the number or the **▲▼◀▶** button to change the information, as necessary.
- 5 Highlight the Frequency option, and use the **◀▶** button to choose among Once, Daily, Weekly, and Off, as follows :

-  **Once** - Sets a show reminder for the time, channel, input combination one time.
-  **Daily** - Reminds for the time, channel, input combination Monday through Friday.
-  **Weekly** - Sets a show reminder for the time, channel, input combination once a week on this selected day of the week.
-  **Off (not cancel)** - Keeps the time, channel, input combination in the list without reminding until the frequency is changed.

- 6 Power On the TV, if the TV is Off, when a Reminder is scheduled. Choices are Yes and No.(Default =No)
- 7 Automatically tune the TV to the channel (TV must be On), when a Reminder is scheduled. Choices are Yes and No.(Default = No)



1 2

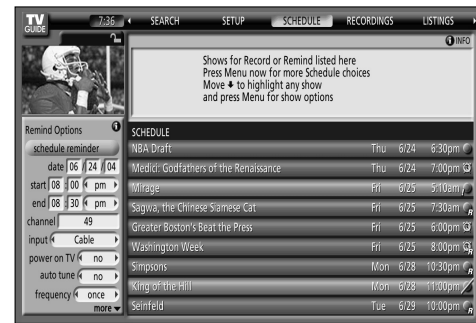


3 4 5 6 7



# TV GUIDE ON SCREEN™ SYSTEM

- When finished, press **ENTER** button to highlight Schedule Reminder. Press **ENTER** button again to close the menu. You can see a Remind icon for the selected frequency next to the input and channel number.


Highlight Cancel to close the menu, change no information, and return to the highlighted show.

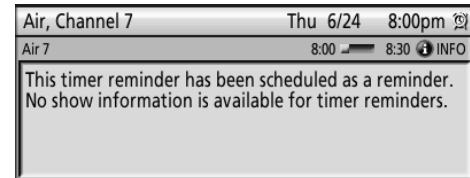

8

- Based on your option settings, a notification screen will appear, if your TV is On at the reminder time. Then you can choose to hide the reminder, or highlight the show, and press **ENTER** button to tune to the show. If there is no activity for 3 minutes, the notification screen automatically closes and completes the highlighted item (hide reminders).

 If you choose Hide Reminders, the window closes for the show or shows, but does not affect other Reminders you set.



9



9

## NOTE

- If more than 2 reminders are set for the same time, arrows appear on the Reminder screen. Use the **▲** or **▼** button to view the shows.



## 10 Remind Conflict

A conflict message appears for the following reasons:

- A show set with an Auto-Tune Reminder has the same start time as an existing Auto-Tune Reminder.
- A show set with an Auto-Tune Reminder overlaps with a Recording already scheduled.

Select one of these options:

- Auto-tune anyway - This show will override an existing show set to auto-tune.
- Proceed, no auto-tune - Set the show as a Reminder but do not auto-tune.
- Don't set this reminder - Cancel the Reminder.

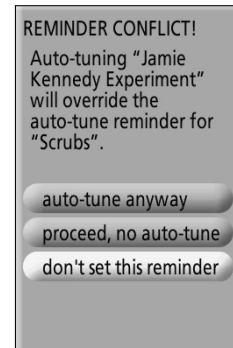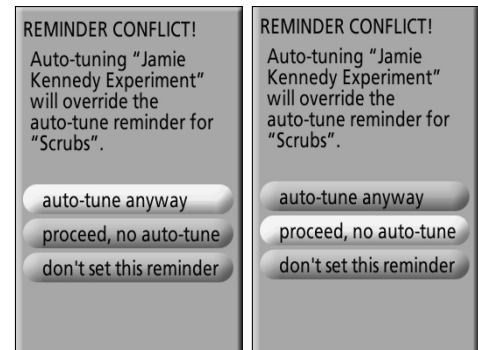


10

# SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

## TIMESHIFT


This function allows the unit to automatically record live TV and make it available for reviewing at any time. With Timeshift turned on, you may pause and rewind normal TV viewing at any time without missing any of the live broadcast.

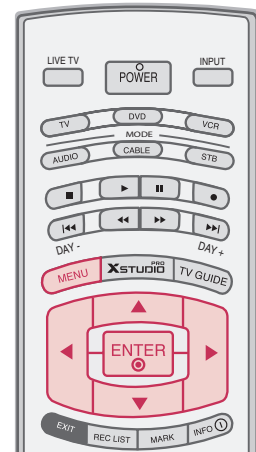

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select the **Timeshift Mode**.
- 3 Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.




1

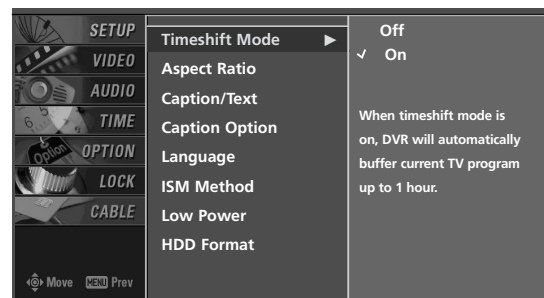

2 3

# SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

## Progressing the Timeshift function

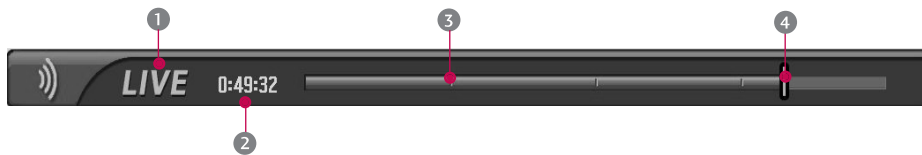

- 1 After selecting the **Timeshift Mode On**, press the **ENTER** button.
  - As soon as Timeshift starts, a progress bar indicating the current recording status is displayed in the bottom of the screen.
  - Press the **EXIT** button to hide the 'Progress Bar' or press the **ENTER** button to display the 'Progress Bar'.
  - This function is preserved even change a channel on progressing the Timeshift.

### The 'Progress Bar'?

 
This function indicates a possible DVR reshowing section, a current on-screen and real on-broadcasting position, a section of section-recording.

- 1 Status of current displayed video.
- 2 Current save time.
- 3 15 minute intervals from Timeshift start time. (Total - one hour).
- 4 Indicates current Timeshift position.

- 2 When finishing the Timeshift function, enter the option menu and turn **Timeshift Mode Off**.



### NOTE

- ▶ DVR (Digital Video Recorder) : A device which records and plays broadcast program contents onto a hard disk in TV or SET TOP BOX.
- ▶ If available hard-disk space is low when Timeshift is initiated, the oldest information is deleted.
- ▶ In order to save hard-disk space, nothing is saved when there is no signal.
- ▶ The total storage space of the hard-disk is 160 GB. 10 GB minimum is reserved for Timeshift.
- ▶ When turning power on, it may take up to 3 minutes to initialize the HDD.
- ▶ The Timeshift function will not initiate for a copy-protected program.
- ▶ Because an analog broadcast is transferred to a digital signal, video that contains rapid movement may show "cross stripes". This happens when the analog signal is compressed and then restored in the digital signal. The unit will attempt to reduce this excessive picture noise.
- ▶ When using the PIP/POP mode, Timeshift is stopped.
- ▶ Timeshift is available in AV1, AV2, Antenna, Cable mode.
- ▶ Timeshift is not available for Audio only channels.



## Progressing the Timeshift function, play


On progressing Timeshift, It can do a diversified playing.

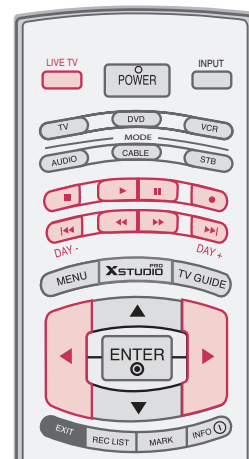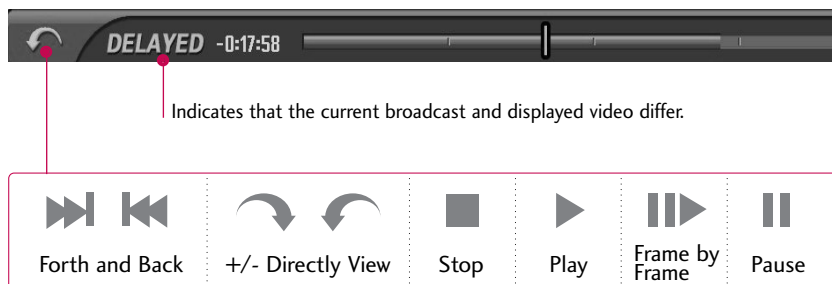

## Using the remote control

You can shift playback to any point within playing the recorded program.

 	<p>When playing, press the <b>REW</b> (◀◀) or <b>FF</b> (▶▶) button.</p> <ul style="list-style-type: none"> <li>Press ◀◀ -&gt; ◀◀◀ -&gt; ◀◀◀◀ -&gt; ◀◀◀◀◀ to speed up.</li> <li>Pressing these buttons repeatedly increases the fast forward/reverse speed.</li> </ul>
	<p>Press the ◀◀◀ or ▶▶▶ button to move back and forth within the current program.</p> <ul style="list-style-type: none"> <li>Press the ▶▶▶ button to jump about 20 seconds forward.</li> <li>Pressing the ◀◀◀ button to jump about 8 seconds backward.</li> </ul>
	<p>During playback, press the <b>Pause</b> (⏸) button.</p> <ul style="list-style-type: none"> <li>Still screen is displayed.</li> <li>Repeatedly press the <b>Pause</b> (⏸) button to advance frame by frame.</li> <li>Press the <b>Pause</b> (⏸) button and then the <b>FF</b> (▶▶) button for slow motion (as showing the ▶▶.)</li> </ul>
	<ul style="list-style-type: none"> <li>When using the ◀ or ▶ button during playback the cursor can be viewed on the screen.</li> </ul>
	<p>Press the <b>PLAY</b> (▶) button to return to normal playback.</p>
	<p>If you want to return to the live broadcast, press the <b>LIVE TV</b> button.</p>





# SPECIAL FUNCTIONS | DVR (Digital Video Recorder)


## RECORDING


Use this function to record the program you are watching on the main screen (Analog or Digital broadcast.)


### Instant Record

This function records the currently displayed channel.

- 1 Select the desired channel to record and then press the  button. During recording  is displayed. Use this feature to record up to 2 hours of programming.


 

 
 
- 2 If you want to stop recording, press the  button. And then recording will stop.



- While recording, if you press the  button fewer than 10 seconds, this message is displayed.

 Recording failed.  
Length is less than 10 seconds.

- If you press the  button more than 10 seconds, this message is displayed.

 Recording completed.

- 3 You can add/subtract recording time by pressing the  button while recording. Press the  or  button repeatedly to add/subtract to the recording time. Each time you press  or  button the recording duration changes as shown below.


 +10min → +20min → +30min → +40min → +50min → +1 hr  
**No Change**  
 -10min → -20min → -30min → -40min → -50min → -1 hr

- Do not subtract more than the current recorded time or you will receive the following error message.  
( For example, if you have recorded for 35 minutes, you cannot subtract 40 minutes. )

 Reached possible minimum recording duration.

The extra recording time added to the existing setting equals the final recording time.


- 4 After adjusting the recording time, select **OK**. The progress bar will be displayed.

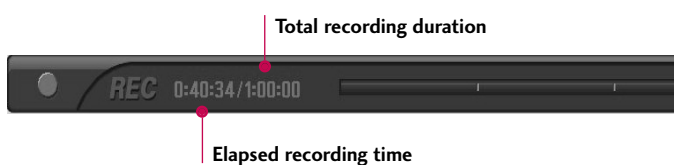

- Press the **EXIT** button to hide the Progress Bar. Press the **ENTER** button to display the progress bar.

- 5 Recording stops when the selected duration is reached or when you press the **STOP** button.


Note: Although recording has stopped, the Timeshift feature remains active.

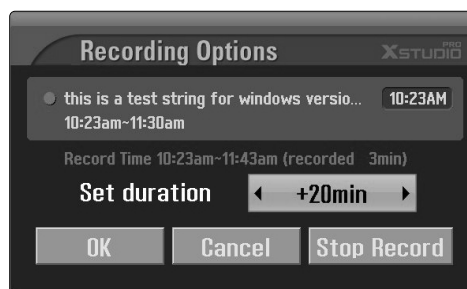

### ! NOTE

- ▶ When recording, if the available storage space becomes low, the recording will be automatically stopped.
- ▶ Recordings of less than 10 seconds will not be saved.
- ▶ To save disk space while recording analog or digital broadcasts, no data is saved if there is no signal.
- ▶ The recording function will not initiate for a copy-protected program.
- ▶ The displayed time slightly differ from the actual time.
- ▶ In no signal or film source, the displayed time slightly differ from the actual time.

- ▶ The recording can not be used with content-protected programs on progressing Timeshift .

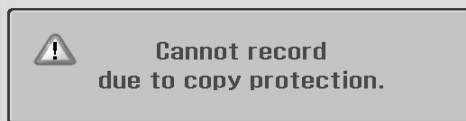


If you press Record while watching a broadcast (with content-protected program) using the Timeshift function, recording begins from that point.

- ▶ If you record for a long time, in a state of the Analog signal is weak, remained recording time may be short.

# SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

## Watching & Record

While recording, you can change channels or inputs without disturbing the recording. The broadcast being recorded can be shown in the lower-right corner of the main screen.

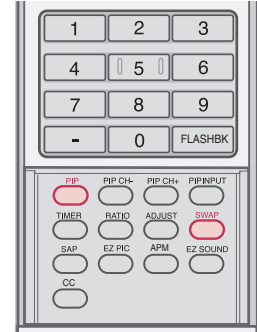

- 1 After starting an Instant Record or Reserved Record, change the channel or input.
  - You can check the show being recorded in the lower-right corner the main screen (as shown below).
  - Press the **PIP** button to cancel or show the program being recorded.
  - Press the **SWAP** button to return to the program being recorded in Watch & Record.
  - When changing to the channel being recorded in Watch & Record, the screen is changed to Instant Record state or Reserved Record state.



screen being recorded

Record	Digital	Analog	AV1	AV2
Digital	X	0	0	0
Analog	0	0	0	0
AV1	0	0	0	0
AV2	0	0	0	0
Component1	0	0	0	0
Component2	0	0	0	0
RGB-PC/DTV	0	0	0	0
HDMI1/DVI	0	0	0	0
HDMI2	0	0	0	0

Watch & Record Input

### NOTE

- ▶ When a digital broadcast is being recorded, another digital broadcast cannot be watched.

### CAUTION

- ▶ if you turn the power off on recording, this message is displayed as shown below.




- ▶ If you selects Yes, recording stops and then power is off.
- ▶ If you selects No, recording continues and the power is turned off.

## Manual Recording

This function is easy to register to reserved recording.

- In order to use this feature, you must first setup the TV Guide On Screen system.

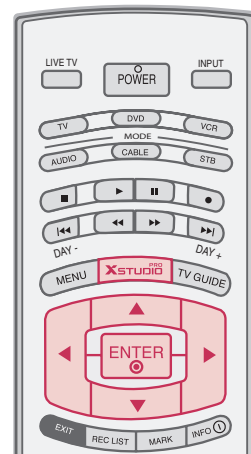

- 1 Press the **XSTUDIO** button to display **HOME** menu. Use the **▲** or **▼** button to select the **Manual Rec** and then use the **ENTER** or **▶** button.


- 2 **Manual Rec** screen is displayed as shown below. Use the **▲▼◀▶** button to set the **Input, Channel, Date, Start Time, End Time, Frequency**.

- ▶ **Input** : Select the input source from the available options (TV, DTV, CATV, CADTV, AV1, AV2).

Note: If the TV Guide On Screen is Setup only for antenna : CATV and CADTV are not available, and if the TV Guide On Screen is Setup only for cable : TV and DTV are not available.

- ▶ **Channel** : Select either the current channel or a scanned channel.
- ▶ **Date** : You can select a date up to one month in the future.
- ▶ **Start Time /End Time** : Ensure you have set AM or PM correctly.
- ▶ **Frequency** : Choose among Once, Daily and Weekly.

- 3 After setting the **Manual Rec**, press the **ENTER** button.

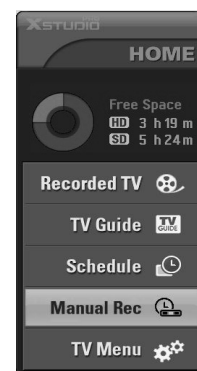

### ! NOTE

- ▶ You can see scheduled detail information on the SCHEDULE menu of the TV Guide On Screen.
- You can also set the manual recording in the Schedule Options panel menu of the SCHEDULE. (▶ p.60)




# SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

## RECORDED TV

You can watch the recorded program list at a glance.


- 1 Press the **XSTUDIO** button to display **HOME** menu. Use the **▲** or **▼** button to select the **Recorded TV** and then use the **ENTER** or **▶** button.

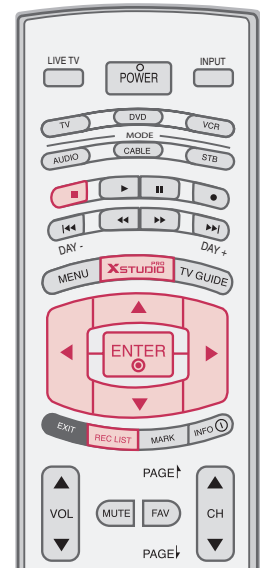

- 2 Or press the **REC LIST** button to view the recording list directly. (From here, you can view the recorded program list.)

## Screen Components

- 1 Usable HDD

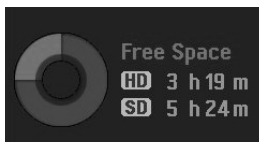

- 2 Folder List
- 3 Current page/Total pages
- 4 Marked thumbnail photo number
- 5 Direct Buttons



## Folder List


Select a desired folder in the folder list and then press the **ENTER** button to view the detailed menu.

- ▶ Create: Create new folder.
  - ▶ Delete: Delete folder (except 'My TV').
  - ▶ Rename: Edit folder name (except 'MyTV').
- Use the **▲▼◀▶** and **ENTER** button to edit folder name.
- Move the cursor to OK and press the **ENTER** button to save.
- ▶ Cancel: Close the detailed menu.



## Recorded program Selection and PopUp Menu

The thumbnail recorded list is shown above.

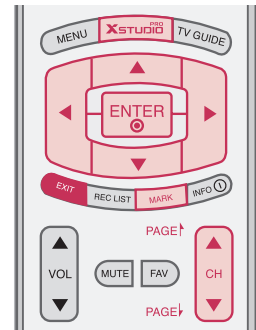

**1** Use the **CH ▲** or **▼** button for page up/down navigation.

**2** Use the **MARK** button to move or delete from the list. A  is displayed next to the thumbnail photo if an item is marked.



SPECIAL FUNCTIONS / DVR (DIGITAL VIDEO RECORDER)

## SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

3 Use ▲▼◀▶ button to navigate the appropriate thumbnail photo, then press the **ENTER** button to open the pop-up menu.

 
 
- ▶ **Play** : Begin playback of selected recorded program.
- ▶ **Mark All** : mark all recorded programs on the screen.
- ▶ **Unmark All** : Change marked recorded programs to unmarked recorded programs.
- ▶ **Move** : Move recorded program saved in HDD to a different folder.
- ▶ **Delete** : Delete the selected recorded programs.
- ▶ **Rename** : Edit recorded program title.
- ▶ **Cancel** : Close the Pop-up menu.




3

4 Repeatedly, press **EXIT** button to return to TV viewing or press **EXIT** button to return to the **HOME** menu.

- If the HDD has a problem performing a function (Recording) related to the DVR, select **Yes** or **No** to initialize HDD.  
If you select **Yes**, the Recorded List (Recording) will be deleted. If you select **No**, the DVR may not function properly.
- If the temperature is below zero (0°), a warning message is displayed and you need to initialize the HDD.



4

 


## Playing recorded programs

You can play the selected program in the recorded program list.

**1** Play a recorded program.

**2** While playing, You can see a diversified playback screen as shown below.

 - At first, an icon showing current playback mode is displayed as marking . Then press the **ENTER** button to display the progress bar.
- To stop displaying the recorded programs icon, press the **EXIT** button.



### The 'Progress Bar'?

This function indicates a possible DVR reshoving section, a current on-screen and real on-broadcasting position, a section of section-recording.

- 1 Indicates movement of recorded program.
- 2 Indicates status of recorded program.
- 3 Indicates elapsed playback time.
- 4 Indicates total playback time.
- 5 Indicates a quarter of program run-time.
- 6 Indicates current playback position.

## Using the remote control


You can shift playback to any point within the recorded program.




	<p>When playing, press the <b>REW</b> (  ) or <b>FF</b> (  ) button.</p> <ul style="list-style-type: none"> <li>Press  -&gt;  -&gt;  -&gt;  to speed up.</li> <li>Pressing these buttons repeatedly increases the fast forward/reverse speed.</li> </ul>
	<p>Press the  or  button to move back and forth within the current program.</p> <ul style="list-style-type: none"> <li>Press the  button to jump about 20 seconds forward.</li> <li>Pressing the  button to jump about 8 seconds backward.</li> </ul>
	<p>During playback, press the <b>Pause</b> (  ) button.</p> <ul style="list-style-type: none"> <li>Still screen is displayed.</li> <li>Repeatedly press the <b>Pause</b> (  ) button to advance frame by frame.</li> <li>Press the <b>Pause</b> (  ) button and then the <b>FF</b> (  ) button for slow motion (as showing the ).</li> </ul>
	<ul style="list-style-type: none"> <li>After using  to rewind while playing, press the  button to return to the prior screen.</li> </ul>
	<p>Press the <b>PLAY</b> (  ) button to return to a normal playback.</p>
	<ul style="list-style-type: none"> <li>If you want to return to the live broadcast, press the <b>LIVE TV</b> button.</li> </ul>
	<ul style="list-style-type: none"> <li>If you press the <b>STOP</b> (  ) button, you can watch TV.</li> </ul>


# SPECIAL FUNCTIONS | XSTUDIO PRO

## Editing a section

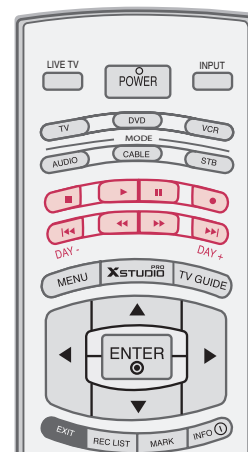You can save the desired screen in the recorded program list after editing the recorded program.





- 1 At the point you wish to start editing, press the  button.
  - The progress bar will show the edited section as red.
  - It is possible to search ( or ) , and pause while editing the section.

- 2 When you wish to stop, press the  button.
  - Stop editing the section.

- 3 If you repeat steps 1,2, it is possible to edit more programs.




- 4 If you press the  button to stop the recorded program playback, this message is displayed as shown below.

 Do you want to save changes before playback stops?

Save Undo Cancel

- ▶ **Save** : Save contents of the edited section and finish the playback of the recorded program.
- ▶ **Undo** : Don't save contents of the edited section and finish the playback of the recorded program.
- ▶ **Cancel** : The screen returns to playback.

### NOTE

- ▶ It is possible to play the recording / reserved recording.
- ▶ You may hear noise from the hard-disk during playback of the recorded program. This is normal and does not indicate a problem.
- ▶ When saving the content of the edited section, delete the portion not selected.
- ▶ When power fails during editing, the program may not be saved or edited. Press the **STOP** () button after checking the recording list.
- ▶ You can edit up to 10 programs.
- ▶ You must select at least 10 seconds for the edited portion to be saved.

## On playing the recorded program, repeat a section

You can set the recording to repeat the same section.

- 1 At the point you wish to start, press the **MARK** button.



- The following symbol will appear:


- 2 At the point you wish to finish, press the **MARK** button.

- The following symbol appears:
- Repeatedly play the marked section.
- You can not make sections of less than 5 seconds.
- The progress bar for the repeated section will be shown in blue.

- 3 Press the **MARK** button to stop playing the repeat section.

### ! NOTE


- ▶ It is possible to search using ( / ).
- Pause to edit a section while repeating.

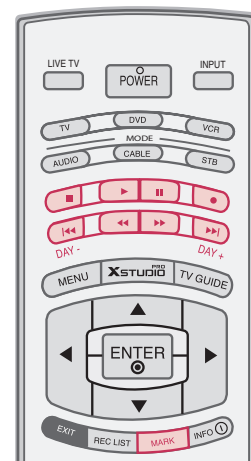

# SPECIAL FUNCTIONS | PIP / POP / Twin Picture


PIP lets you view 2 different inputs (sources) on your TV screen at the same time. One source will be large, and the other source will show a smaller inset image.

Twin Picture mode splits the screen into two images, allowing two picture sources to be shown on the TV screen at the same time. Each source is given half the screen.

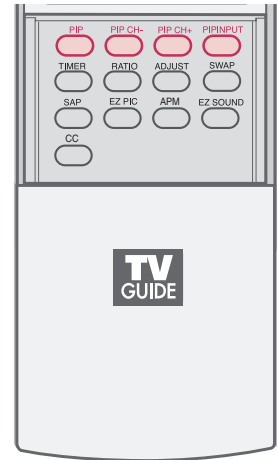

## Watching PIP/POP/Twin Picture

Press the PIP button to access the sub picture.  
Each press of PIP changes the PIP options as shown below.

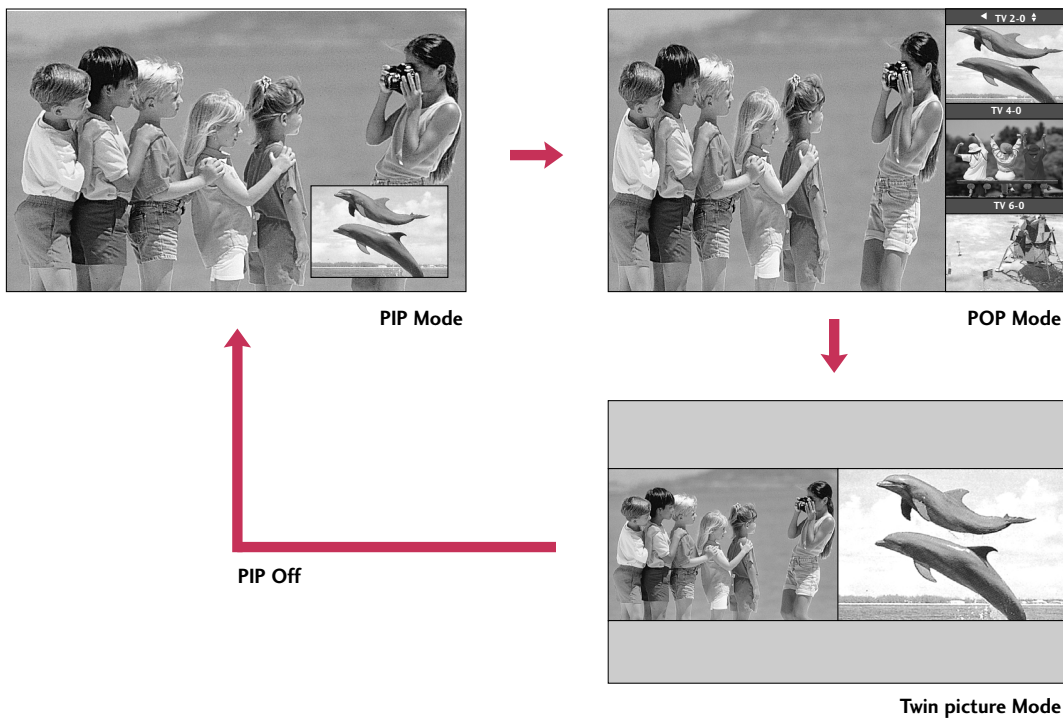

SPECIAL FUNCTIONS / PIP / POP / TWIN PICTURE

## Selecting an Input Signal Source for PIP/Twin Picture

Use the **PIP INPUT** button to select the input source for the sub picture. Each press of **PIP INPUT** button changes the PIP source. You can also select sources for the **Sub Input** in the **SETUP** menu.


Main Picture Source	Available Sub Picture Sources
DTV/CADTV	Analog(TV/CATV), AV1, and AV2
TV/CATV, AV1, AV2, Component1, Component2, RGB-PC/RGB-DTV, HDMI1/DVI, HDMI2	DTV/CADTV, Analog(TV/CATV), AV1, and AV2

## TV Program selection for PIP

- 1 Press the **PIP** button.
- 2 Select the Antenna or Cable option on the Sub input menu or with the **PIP INPUT** button.  
Use the **PIPCH+** / **PIPCH-** button to select a channel for the sub picture.  
(You can't select DTV for main and sub picture simultaneously).

## Moving the PIP sub picture

- 1 In PIP mode, press the **▲▼◀▶** button to move the sub picture to a different location on the screen.

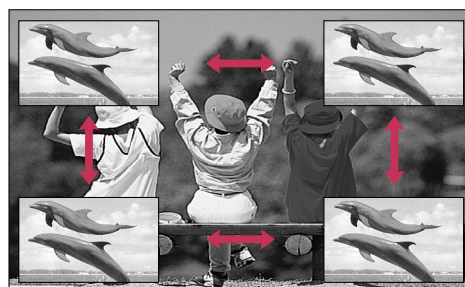




# SPECIAL FUNCTIONS | PIP / POP / TWIN PICTURE

## Swapping the PIP/Twin Picture

1 Repeatedly, use the **SWAP** button to switch the main and sub pictures.


- Component 1, Component 2, RGB-PC (or RGB-DTV), HDMI1/DVI, HDMI2 input sources for the main picture can't be used to swap the main and sub pictures.

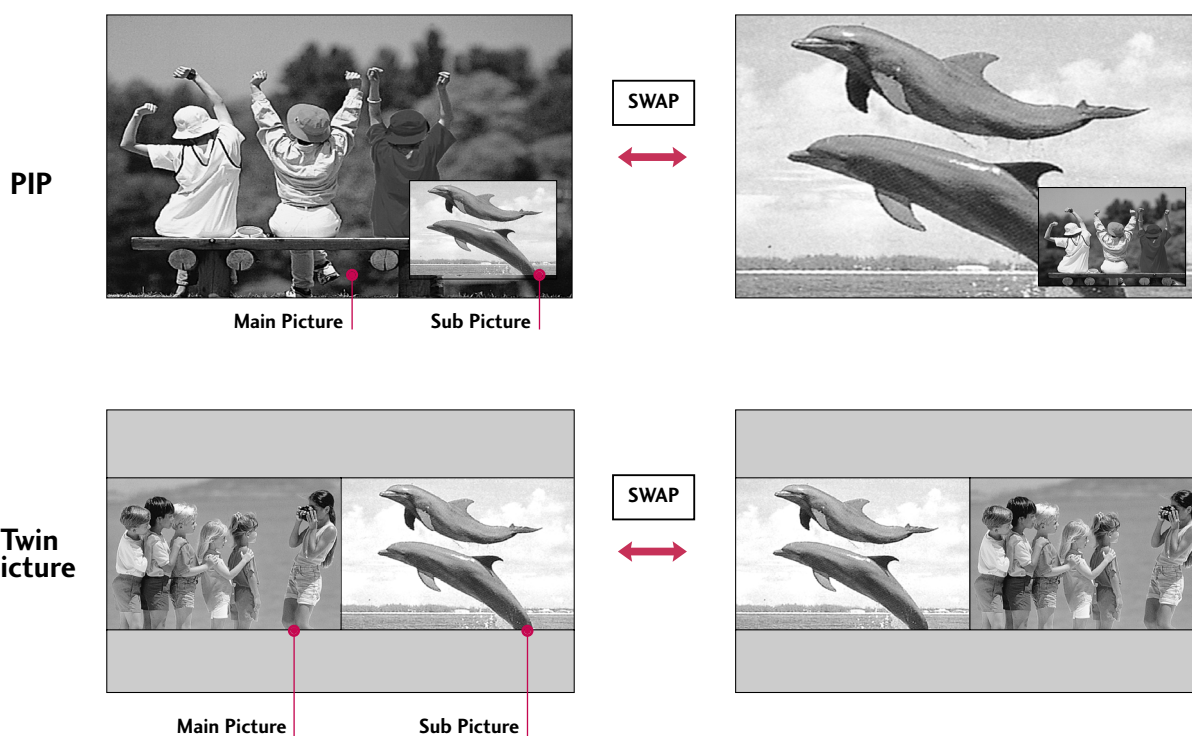

## Adjusting Main and Sub Picture Sizes for Twin Picture

1 Use the ▲▼◀▶ button to change main and sub picture sizes in Twin Picture mode.

- If screen is adjusted to the maximum size, the large screen is filled with entire screen vertically as shown.

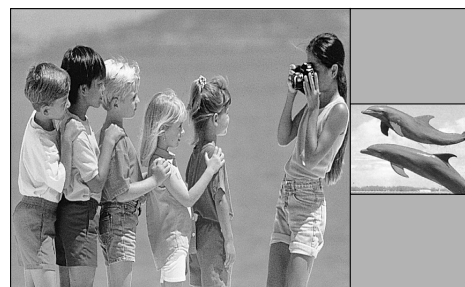

## POP (Picture-out-of-Picture : Channel Scan)

Use POP to search the programs of all the memorized channels one-by-one on the 3 PIP screen display, (while the main picture source remains the current channel). The pictures of all the programmed channels are searched with the 3 POP screens.

- 1 Press the **PIP** button to activate the **POP mode** while in **PIP mode**.
  - **Channel selection** : Use ◀ button to Enlarge the selected channel being searched on the PIP screen to shift it for viewing on the Main screen.
  - **PIP selection** : Use ▲ or ▼ button to select one of 3 PIP screen pictures in **POP** mode.
  - When watching TV/CATV, TV/DTV or CATV/CADTV Sub pictures are scanned. However, when watching DTV/CADTV , only TV/CATV Sub pictures are scanned.



- 2 Press the **EXIT** button to cancel POP mode.

### ! NOTE

- ▶ Run EZ Scan channel search before using POP mode.
- ▶ When Sub pictures are changed from the TV/DTV to CATV/CADTV in POP mode, you may hear a noise from the Tuner switch.

# TV MENU | SETUP(Channel)

## ON SCREEN MENUS SELECTION AND ADJUSTMENT


Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

- 1 Press the **MENU** button and then use **▲** or **▼** button to select each menu.
- 2 Press the **▶** button and then use **▲▼◀▶** button to display the available menus.


### SETUP



### VIDEO

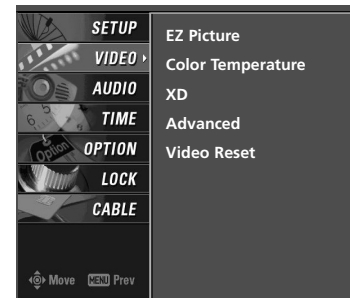


### CABLE

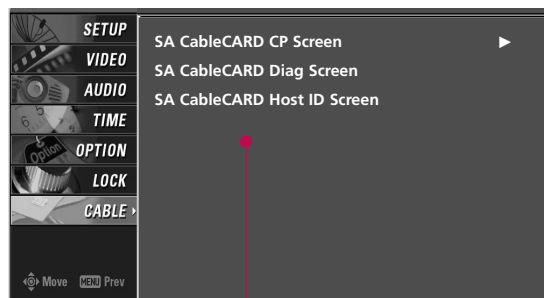


In case of Scientific Atlanta CableCARD™


### AUDIO

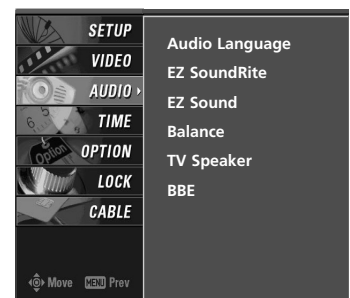


### LOCK

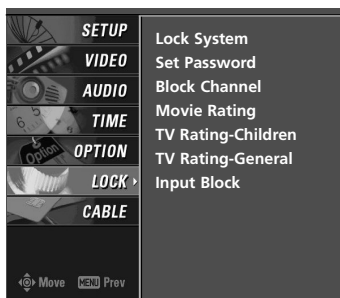

### OPTION

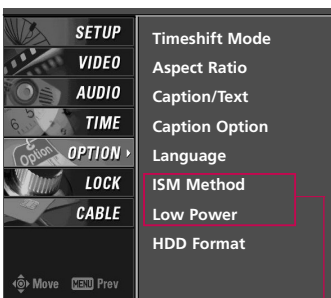

### TIME

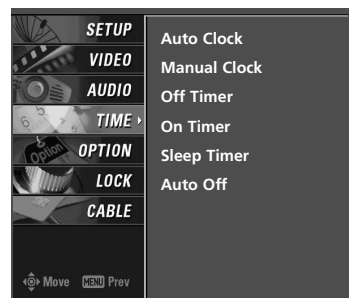


Only 50PC1DR / 50PC1DRA models

## Auto Channel Search (EZ Scan)

Automatically finds all channels available through antenna or cable inputs, and stores them in memory on the channel list. Run EZ Scan again after any Antenna/Cable connection changes.


A password is required to gain access to EZ Scan menu if the Lock System is turned on.

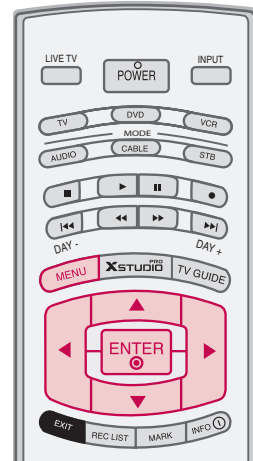


**1** Press the **MENU** button and then use **▲** or **▼** button to select the **SETUP** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **EZ Scan**.


**3** Press the **ENTER** button to begin the channel search. Allow **EZ Scan** to complete the channel search cycle for **ANTENNA** and **CABLE**.

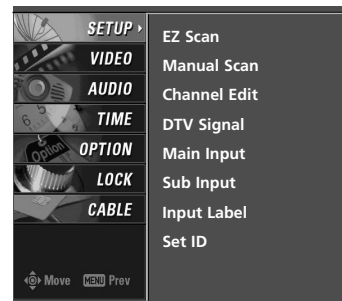


1

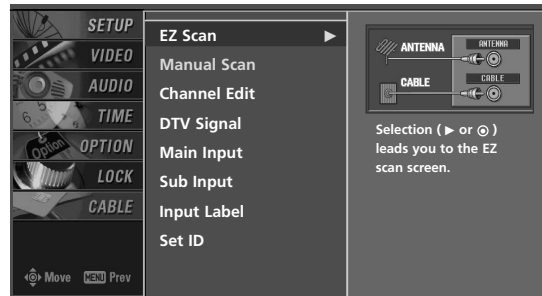

2

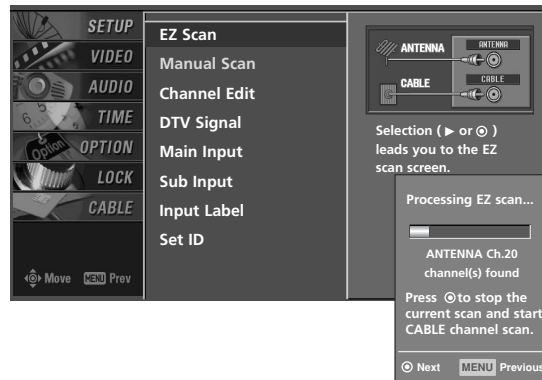

3

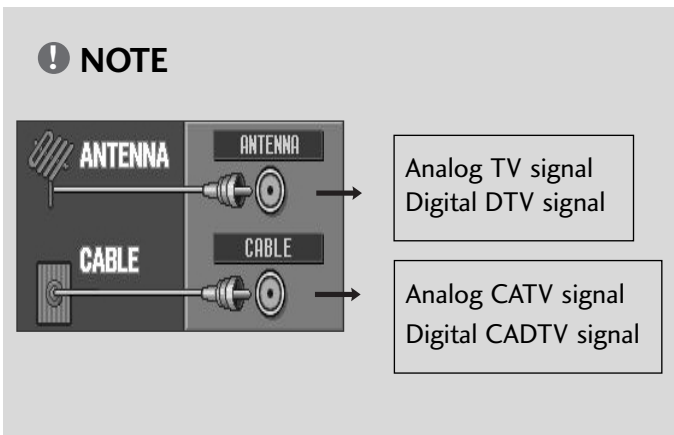


# TV MENU | SETUP(Channel)

## Manual Channel Search (Manual Scan)

A password is required to gain access to Manual Scan menu if the Lock System is turned on.

While using the CableCARD™, CATV, CADTV is not working in Manual Scan.

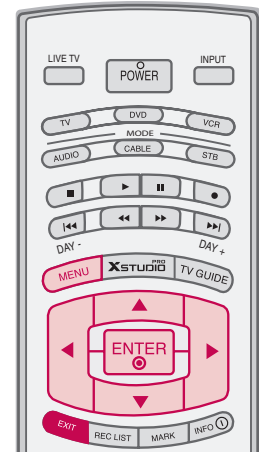

**1** Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.




**2** Press the ► button and then use ▲ or ▼ button to select **Manual Scan**.

**3** Press the ► button and then use ▲ or ▼ button to select TV, DTV, CATV, and CADTV.

**4** Press the ► button and then use ▲ or ▼ button to select channel number you want to add or delete.

**5** Press the **ENTER** button to add or delete for the channel number.

**6** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

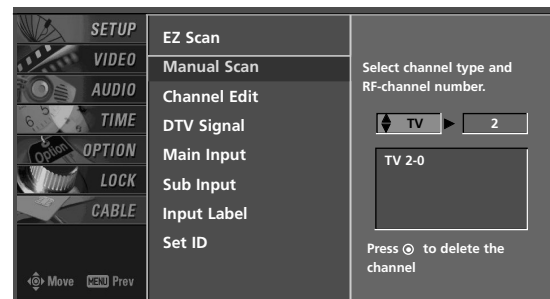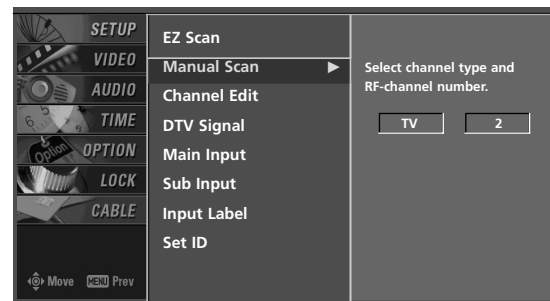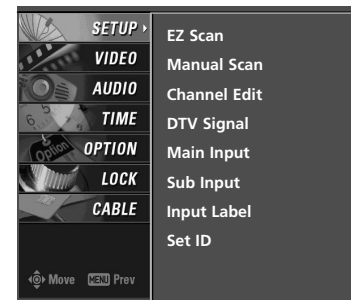

### NOTE


- ▶ This digital channel number is a physical channel number, which is different from the normal channel number shown in Channel Edit.

# CHANNEL EDIT


From the default channel list created from the EZ Scan channel search, you can create two different types of channel lists in memory: “custom list” and “favorite channel list”.

A custom list can be created by toggling each channel on or off with ENTER button. The channels in the Custom List are displayed in black and the channels deleted from the Custom List are displayed in gray. Once a channel is highlighted you can add or delete the channel by referring to the small window at the top-left corner of the screen.


You can create your own Favorite List. Use the **FAV** button on the remote control when a channel is highlighted and then add or delete the channel to/from your Favorite List.

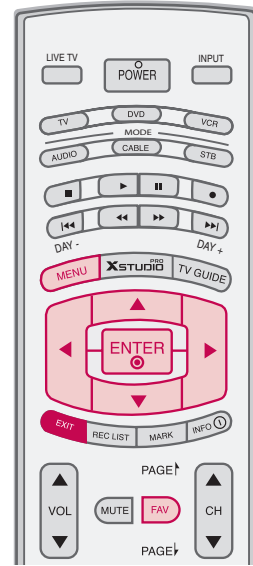


- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **Channel Edit**.
- 3 Press the ► button. You will now see a screen filled with channel numbers and a preview picture.
- 4 Use ▲▼◀▶ button to select a channel and then use the **ENTER** button to add or delete it. Press **FAV** button to add the channel to the Favorite List. The surfing icon will appear in front of that channel number.
- 5 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

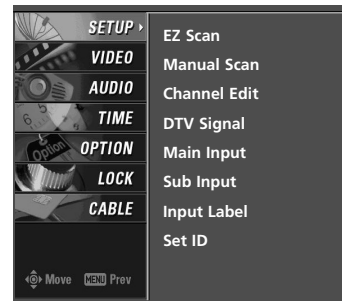

1

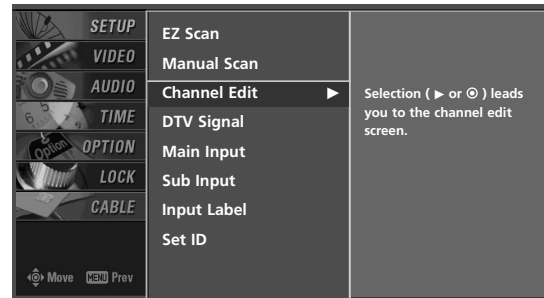

2

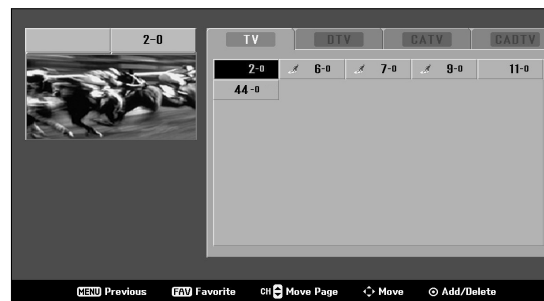

3 4


TV MENU / SETUP (CHANNEL)

# TV MENU | SETUP(Channel)

## DTV SIGNAL STRENGTH

This feature displays the DTV signal levels being received and indicates whether you need to adjust your antenna or digital cable input. The higher the signal strength, the less likely you are to experience picture degradation.

**DTV Signal:** This function is only available when the input signal is DTV or CADTV.


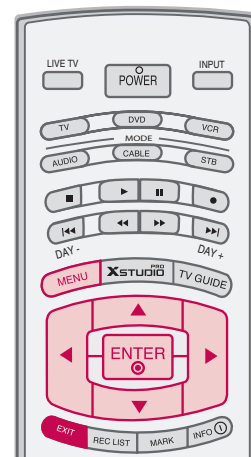


**1** Press the **MENU** button and then use **▲** or **▼** button to select the **SETUP** menu.

**2** Press the **▶** button and then use **▲** or **▼** button select **DTV Signal**.


**3** View the on-screen signal strength monitor to see the quality of the signal being received.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

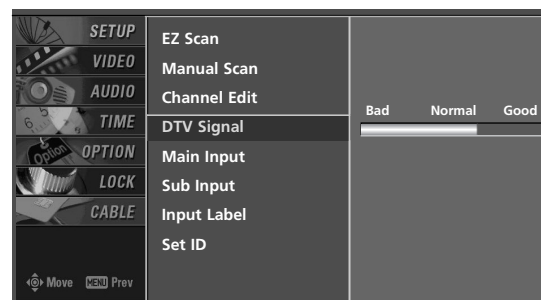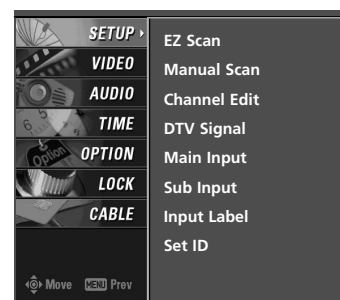

## MAIN INPUT SOURCE SELECTION

Changes the picture source so you can watch your off-air TV, cable TV, VCR, DVD, or any other devices that are connected to your TV.

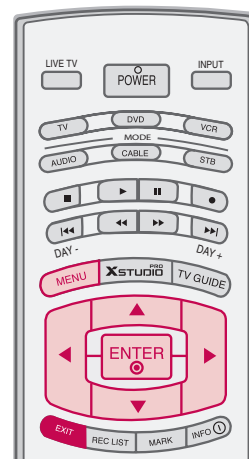

1 Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Main Input**.


3 Press the ► button and then use ▲ or ▼ button to select the source: Antenna, Cable, AV1, AV2, Component1, Component2, RGB-DTV (or RGB-PC), HDMI1/DVI, HDMI2.

- To toggle RGB-DTV and RGB-PC, select RGB-DTV(or RGB-PC) and press ► button.

4 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.



1

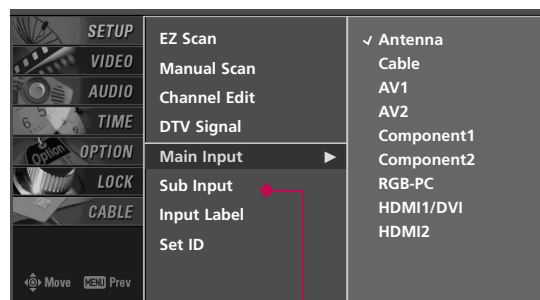

2 3

### Sub Picture Source Selection

Select sources for the **Sub Input** in the **SETUP** menu.

See Page 79 for selecting the input source for the sub picture by pressing the **PIP INPUT** button.





# TV MENU | SETUP(Channel)


## AUTO LINK

Press the **INPUT** button and then displays the connected external equipment list on the screen.

Press the **ENTER** button to change the main input to the active external equipment. Use the **▲** or **▼** button to select the main input source.

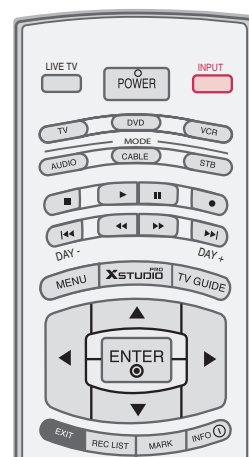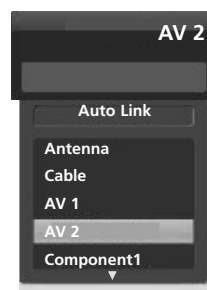


**1** When every external equipment is connected:

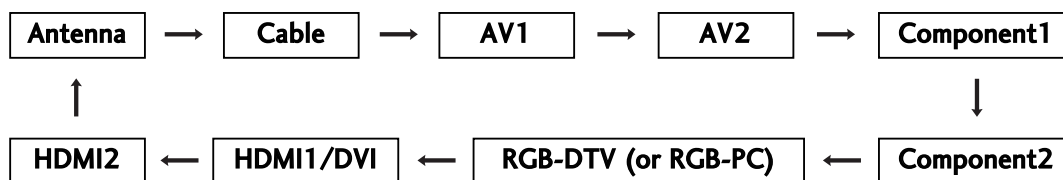

**2** When any external equipment is not connected:



 **3** When some External Equipment is connected:  
(ex: When connected only to AV 2)




- You can also select **Main Input** in the **Setup** menu.

**Antenna** : Select it when watching the TV/DTV.  
**Cable**: Select it when watching the CATV/CADTV.  
**AV 1, AV 2** : Select it when watching the VCR or external equipment.  
**Component 1-2** : Select it when using the DVD or the Digital set-top box depend on connector.  
**RGB-PC /RGB-DTV** : Select it when using PC or Digital set-top box depend on connector.  
**HDMI1 /DVI, HDMI2** : Select it when using DVD, PC or Digital set-top box depend on connector.

# INPUT LABEL

Sets a label to each input source which is not in use when you press INPUT button.

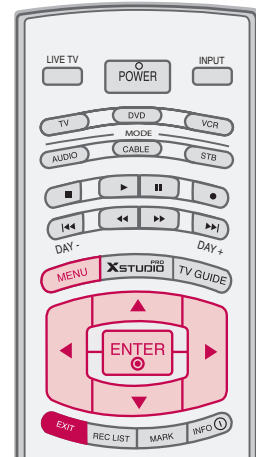



**1** Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **Input Label**.

**3** Press the ► button and then use ▲ or ▼ button to select the source: AV1, AV2, Component1, Component2, RGB, HDMI1/DVI or HDMI2.

**4** Press the ◀ or ▶ button to select the label.

**5** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

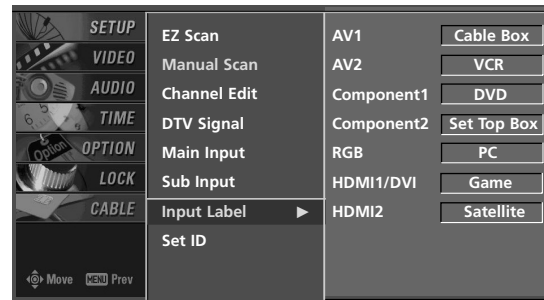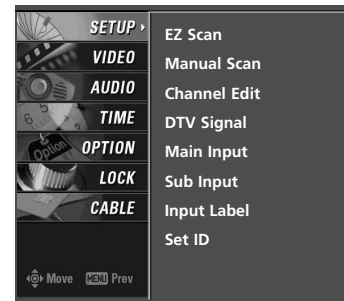

TV MENU / SETUP(CHANNEL)


# TV MENU | VIDEO ADJUSTMENT

## Auto Picture Control (EZ Picture)

EZ Picture adjusts the TV for the best picture appearance. Select the preset value in the EZ Picture menu based on the program category.

**Daylight, Normal, Night Time** Settings are preset for optimum picture quality at the factory and are not adjustable.


In the **User 1**, and **User 2** modes only, user can directly adjust the contrast, brightness, color, sharpness, tint.

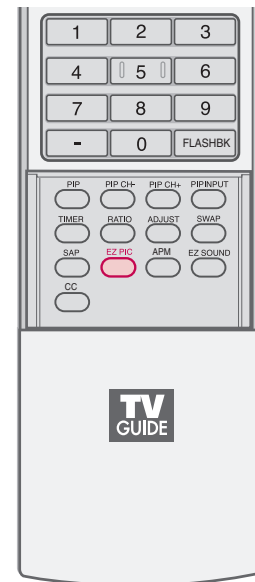

- 1 Press the **EZ PIC** button repeatedly to select the picture appearance setup option as shown below :  
**Daylight, Normal, Night Time, User1**, and **User2**(your own settings).


- 2 Press the **EXIT** button to save and return to TV viewing.

■ You can also use the **VIDEO** menu to adjust EZ Picture.

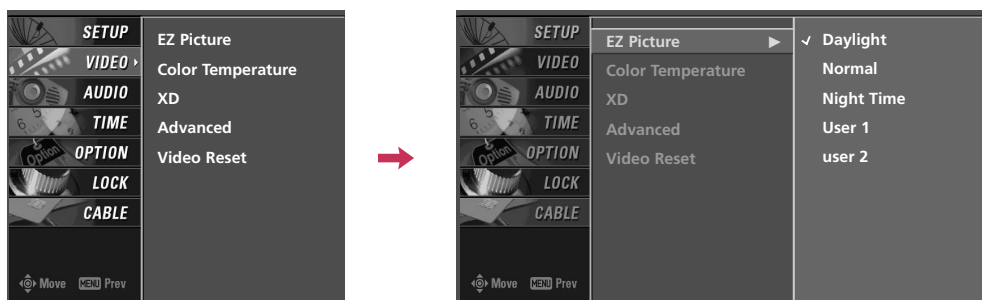

## Adaptive Picture Mode (APM)

Allows you to select your preferred picture mode after comparing the four different picture (Daylight, Normal, Night Time, User 1 and User 2) settings.

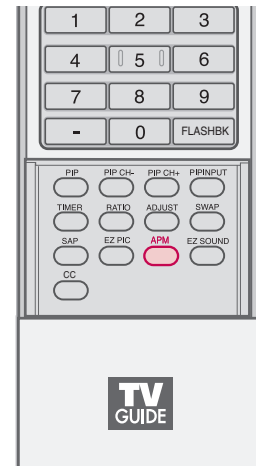


**1** Press the **APM** button at once. As shown below, the screen is divided to 4-split.


**2** Use the **▲▼◀▶** button to navigate 4 EZ Pictures. By pressing the **ENTER** button, you can select the desired mode.

**3** Press the **APM** button twice times. The 4-same screens are displayed. You can easily compare with 4 modes.

**4** Use the **▲▼◀▶** button to navigate 4 EZ Pictures. By pressing the **ENTER** button, you can select the desired mode.

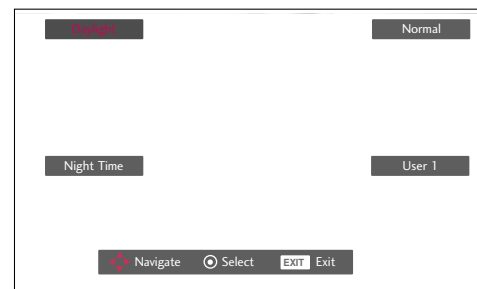

1 2 3

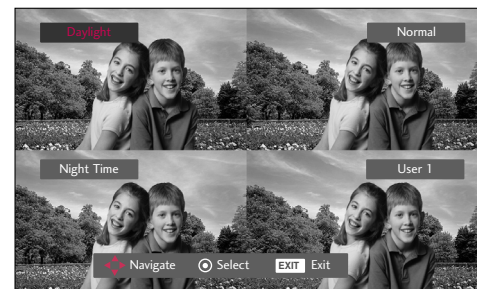

4 5 6


### ! NOTE

- ▶ While operating the 4-split, any button except **APM, ENTER, EXIT, VOLUME ▲ or ▼, MUTE** or **▲▼◀▶** button on the remote control are not usable.

# TV MENU | VIDEO ADJUSTMENT

## MANUAL PICTURE CONTROL (EZ Picture-User option)

Adjust the picture appearance to suit your preference and viewing situations.

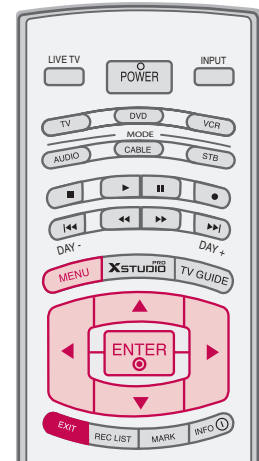

**1** Press the **MENU** button and then use ▲ or ▼ button to select the **VIDEO** menu.


**2** Press the ► button and then use ▲ or ▼ button to select **EZ Picture**.

**3** Press the ► button and then use ▲ or ▼ button to select **User 1** or **User 2**.


**4** Press the ► button and then use ▲ or ▼ button to select the desired picture option (**Contrast, Brightness, Color, Sharpness, or Tint**).

**5** Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

**6** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

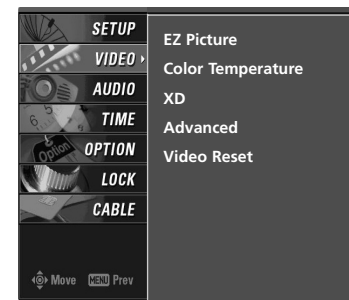

**1**

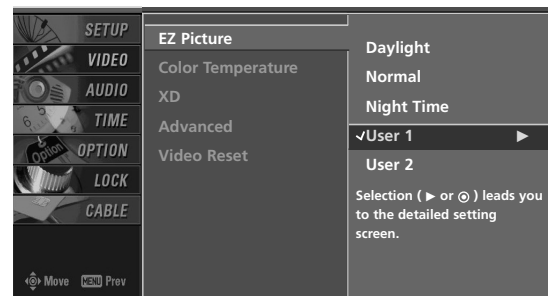

**2 3**



**4**




**5**

# COLOR TEMPERATURE CONTROL

## Auto Color Temperature Control

Choose one of three automatic color adjustments. Set to warm to enhance hotter colors such as red, or set to cool to see less intense colors with more blue.


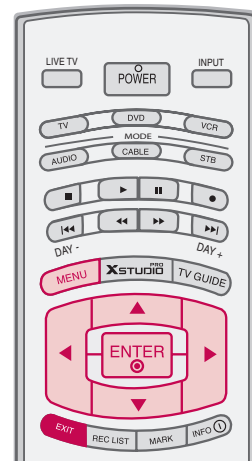


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **VIDEO** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **Color Temperature**.

**3** Press the ► button and then use ▲ or ▼ button to select either **Cool, Medium, Warm** or **User**.


**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

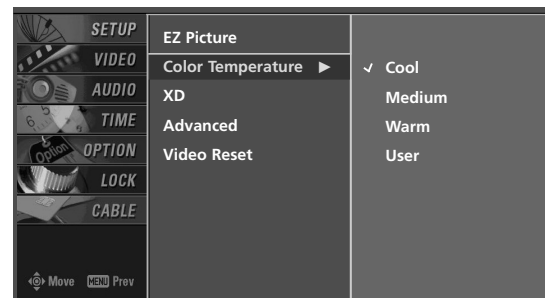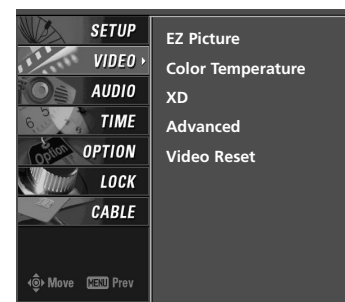

# TV MENU | VIDEO ADJUSTMENT

## Manual Color Temperature Control

You can also adjust the detailed settings (Red, Green, Blue) by selecting the **User** menu.

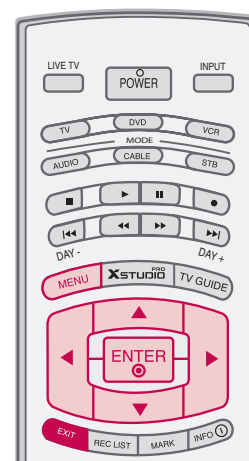

**1** Press the **MENU** button and then use ▲ or ▼ button to select the **VIDEO** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **Color Temperature**.


**3** Press the ► button and then use ▲ or ▼ button to select **User**.

**4** Press the ► button and then use ▲ or ▼ button to select **Red, Green, or Blue**.


**5** Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

- The adjustment range of **RGB, Green, or Blue** is -20~ +20.


**6** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

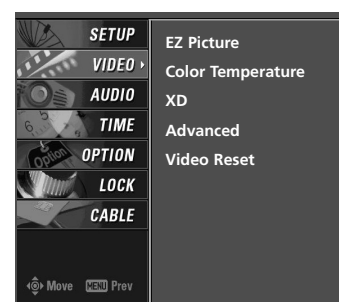

**1**

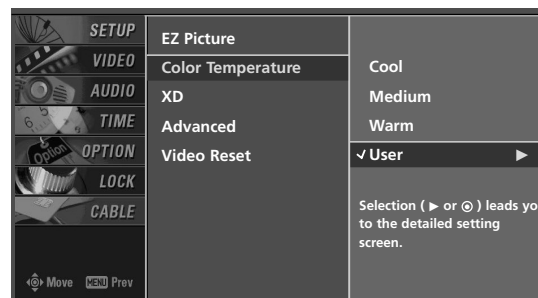

**2 3**

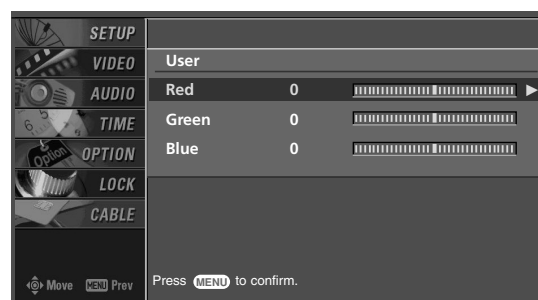

**4**




**5**

## XD

XD is LG Electronic's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.

When selecting EZ Picture options (Daylight, Normal and Night time), XD is automatically change to Auto.


When selecting EZ Picture options (User 1 and User 2), you can choose the Auto / Manual and when selecting Manual, you can adjust the XD Contrast, XD color and XD Noise.

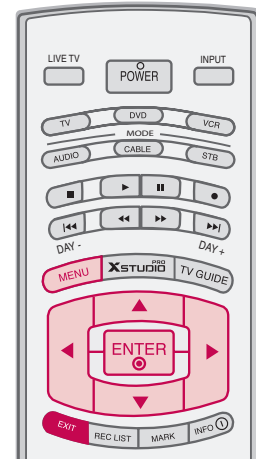

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **VIDEO** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **XD**.

**3** Press the **▶** button and then use **▲** or **▼** button to select **Auto** or **Manual**.

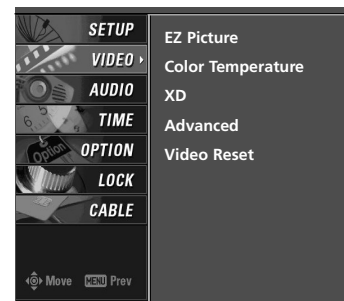


**1**

### \* Selecting the Manual

1. Press the **▶** button and then use **◀** or **▶** button to select **XD Contrast**, **XD Color** or **XD Noise**.

- **XD Contrast** : Optimizing the contrast automatically according to the brightness of the reflection.
- **XD Color** : Adjusting the colors of the reflection automatically to reproduce as closely as possible to the natural colors.
- **XD Noise** : Removing the noise up to the point where it does not damage the original picture.

2. Use the **▲** or **▼** button to select **On** or **Off**.

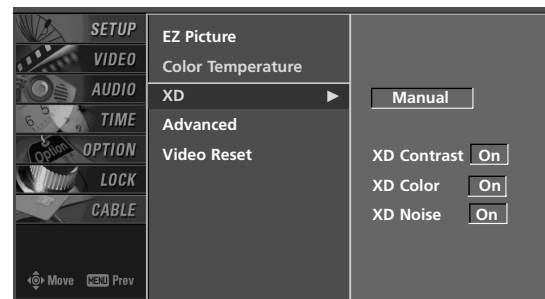

**2 3 4**

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.




# TV MENU | VIDEO ADJUSTMENT

## ADVANCED-CINEMA 3:2 MODE

Set up the TV for the best picture appearance for viewing movies.

When you operate Cinema (3:2 Pull-Down Mode or Cinema Correction Mode), the TV will adjust 24 fps video from movies to 30 fps video for display (This function is only available in Analog, AV1, AV2, Component 480i mode.)

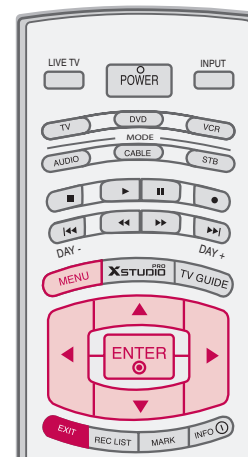

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **VIDEO** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **Advanced**.


**3** Press the **▶** button and then use **▲** or **▼** button to select **Cinema 3:2 Mode**.

**4** Press the **▶** button and then use **▲** or **▼** button to select **On** or **Off**.

**5** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.



**1**

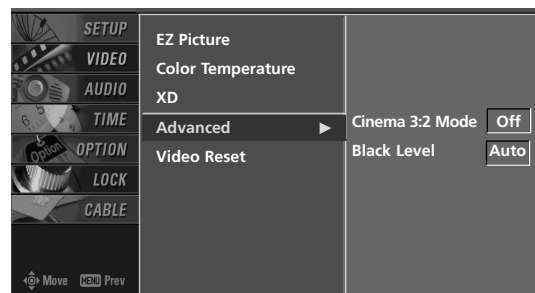


**2 3 4**

## ADVANCED-BLACK LEVEL

Adjusting the contrast and the brightness of the screen using the black level of the screen.

This feature operates only in HDMI1/DVI, HDMI2 or AV1, AV2 mode.

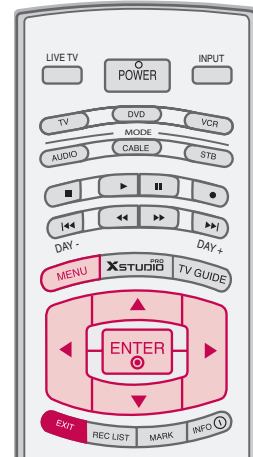

1 Press the **MENU** button and then use ▲ or ▼ button to select the **VIDEO** menu.



2 Press the ► button and then use ▲ or ▼ button to select **Advanced**.

3 Press the ► button and then use ▲ or ▼ button to select **Black level**.

4 Press the ► button and then use ▲ or ▼ button to select **Auto, Low, or High**.

- **Auto**  
Realizing the black level of the screen and set it to High or Low automatically.
- **Low**  
The reflection of the screen gets darker.
- **High**  
The reflection of the screen gets brighter.


5 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

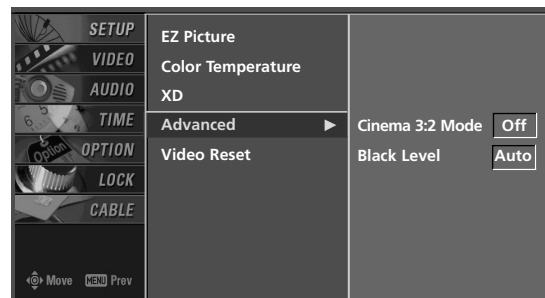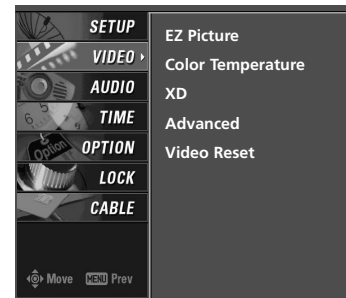



# TV MENU | VIDEO ADJUSTMENT

## VIDEO RESET

Use to quickly reset all the Video menu options to their original factory preset values.

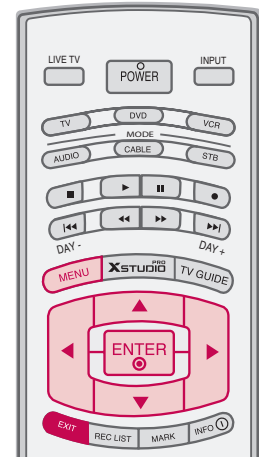

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **VIDEO** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **Video Reset**.
- 3 Press the ► button to reset the Video menu options to original values.

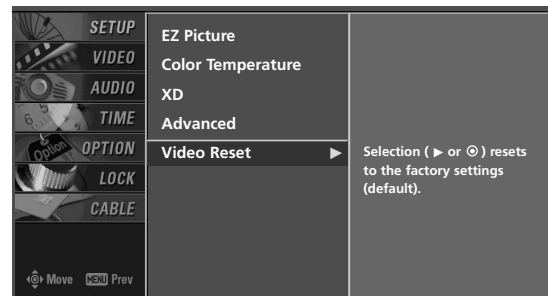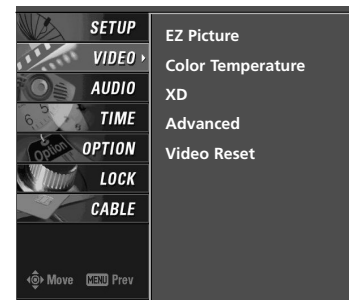


# TV MENU | AUDIO ADJUSTMENT

## AUDIO LANGUAGE

Other languages may be available if a digital signal is provided by the broadcasting station.

This feature operate only in DTV/CADTV mode.

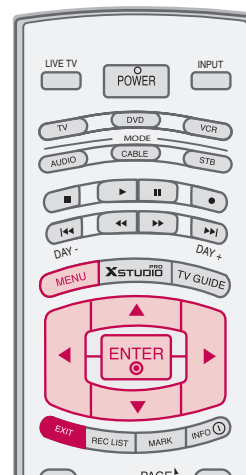


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **Audio Language**.

**3** Press the ► button and then use ▲ or ▼ button to select : English, Spanish, or French.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

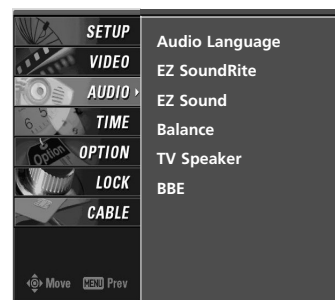

**1**




**2 3**

# TV MENU | AUDIO ADJUSTMENT

## Auto Volume Leveler(EZ SOUNDRITE )

Scans for changes in sound levels during commercials, then adjusts the sound to match the specified audio level. SoundRite makes sure that the volume level remains consistent whether you are watching a commercial or a regular TV program.

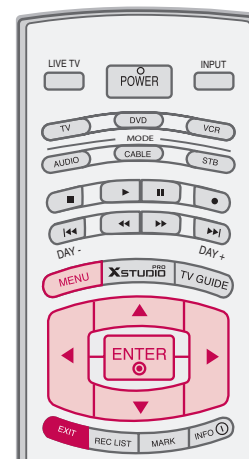


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.


**2** Press the ► button and then use ▲ or ▼ button to select **EZ SoundRite**.

**3** Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

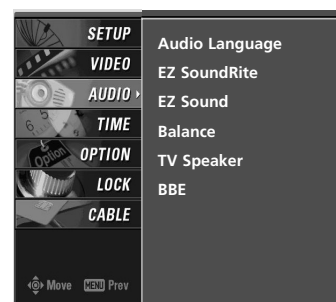

**1**

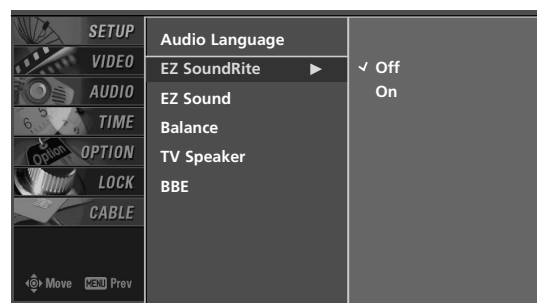


**2 3**

## Auto Sound Control (EZ SOUND)

EZ Sound lets you enjoy the best sound without any special adjustment because the TV sets the appropriate sound options based on the program content.


Normal, Stadium, News, Music and Theater are preset for good sound quality at the factory and are not adjustable.

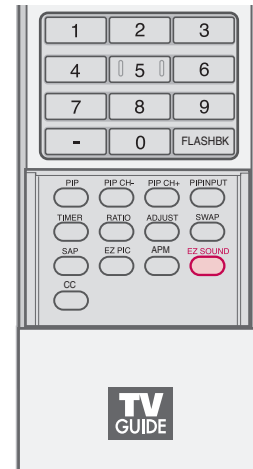

- 1 Press the **EZ SOUND** button repeatedly to select the appropriate sound setup as shown below :  
**Normal, Stadium, News, Music, Theater** and **User** (your own settings).

- 2 Press **EXIT** button to return to TV viewing .


■ You can also adjust EZ Sound in the **AUDIO** menu.

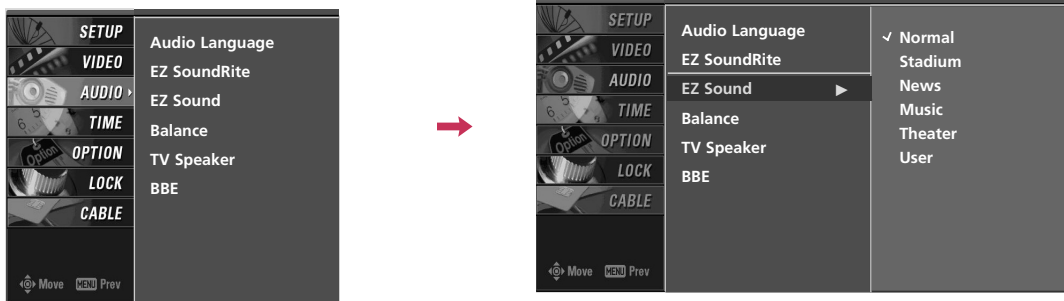

# TV MENU | AUDIO ADJUSTMENT

## MANUAL SOUND CONTROL (EZ SOUND-User option)

Adjust the sound to suit your taste and room situations.

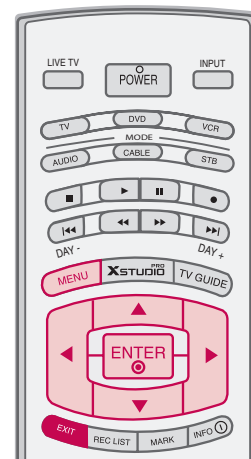


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.


**2** Press the ► button and then use ▲ or ▼ button to select **EZ Sound**.

**3** Press the ► button and then use ▲ or ▼ button to select **User**.

**4** Press the ► button and then use ▲ or ▼ button to select the desired sound option ( **Treble**, **Bass** , or **Front Surround** ).

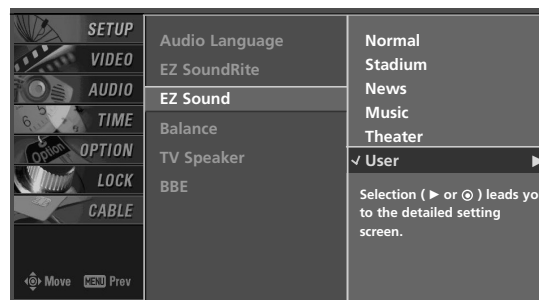

1 2 3

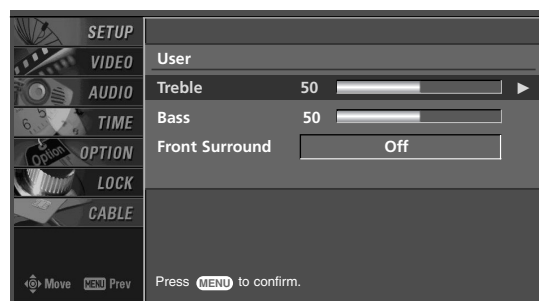


4

- 5 Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

**\* Selecting the Front Surround**

Press the ► button and then use ◀ or ▶ button to select **Off**, **3D EchoSound System** or **SRS**(Sound Retrieval System)**TruSurround XT**.

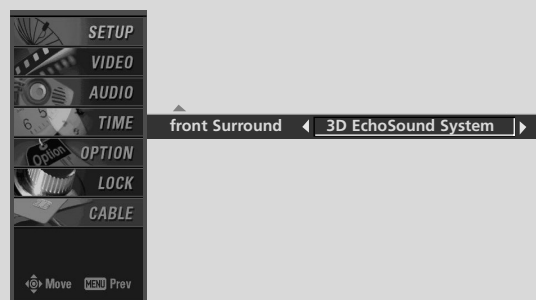

- 6 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

**SRS TruSurround XT**

Takes advantage of any multi-channel format without needing to add extra speakers or equipment. Dialog clarity, bass enrichment, and the addition of stereo audio enhancement produces an immersive sound experience from standard stereo material.

**3D EchoSound System**


Creates a stunning simulated stereo effect from any mono sound and a realistic three-dimensional sound with a very wide and deep sound stage.



# TV MENU | AUDIO ADJUSTMENT

## BALANCE

Adjust the left/right sound of speaker to suit your taste and room situations.



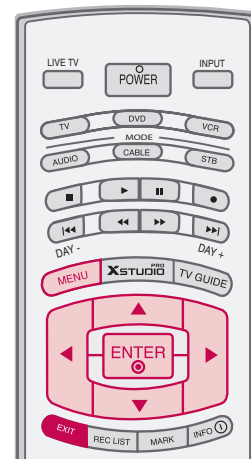


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **Balance**.


**3** Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

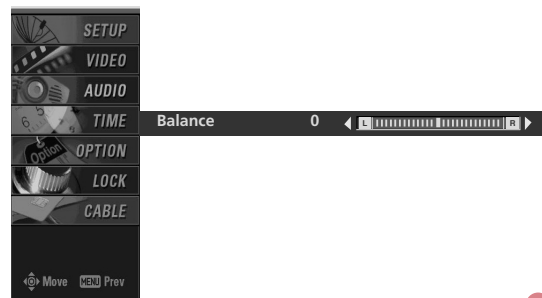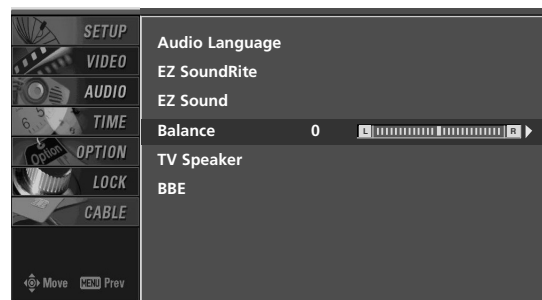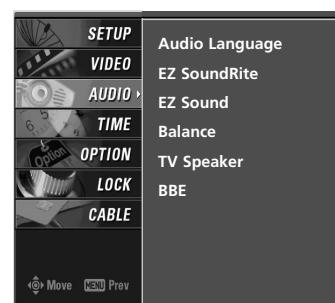

## TV SPEAKERS ON/OFF SETUP

Turn the TV speakers off if using external audio equipment. Feature turns the TV Speakers option On or Off.


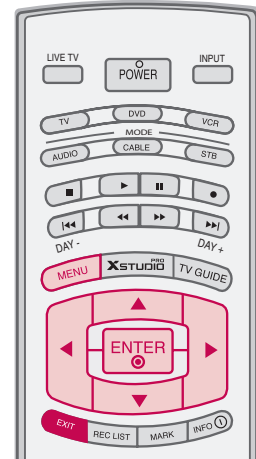


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **TV Speaker**.

**3** Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

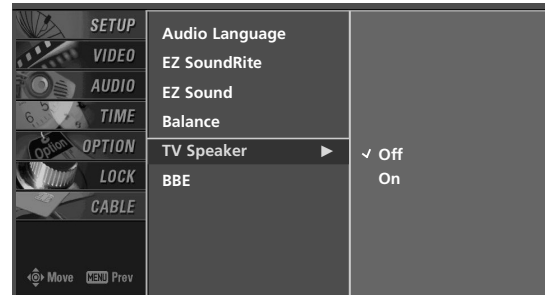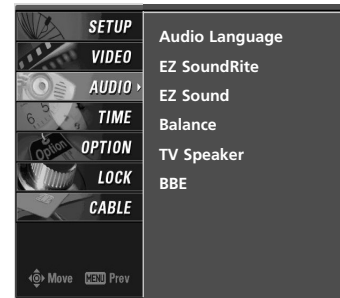


TV MENU / AUDIO ADJUSTMENT

# TV MENU | AUDIO ADJUSTMENT

## BBE

BBE High Definition Sound restores clarity for better speech intelligibility and musical realism.


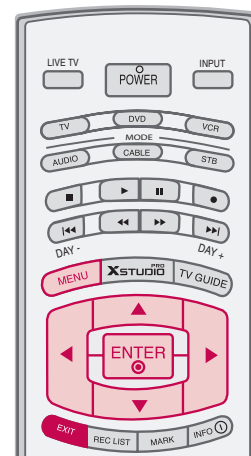


**1** Press the **MENU** button and then use **▲** or **▼** button to select the **AUDIO** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **BBE**.

**3** Press the **▶** button and then use **▲** or **▼** button to select **On** or **Off**.

**4** Press **EXIT** button to return to TV viewing or press **ENTER** button to return to the previous menu.

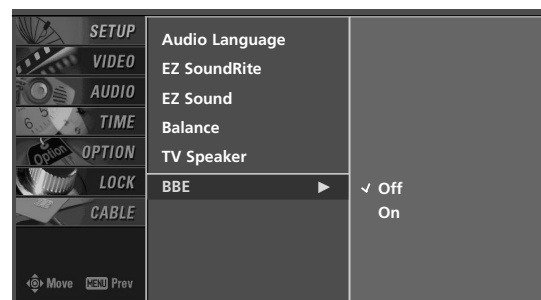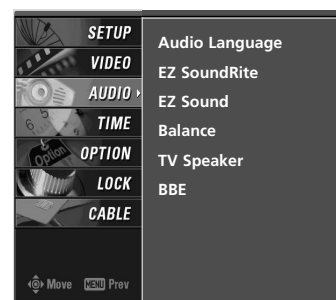


## STEREO/SAP BROADCAST SETUP

This TV can receive MTS stereo programs and any SAP (Secondary Audio Program) that accompanies the stereo program if the station transmits an additional sound signal as well as the original one and when you select Stereo or SAP on the remote control.

Mono sound is automatically received if the broadcast is only in Mono; even though Stereo or SAP has been selected.

Select Mono if you want to listen to the mono sound in remote areas during stereo/SAP broadcasting.

Stereo or SAP can be received in Analog channel.

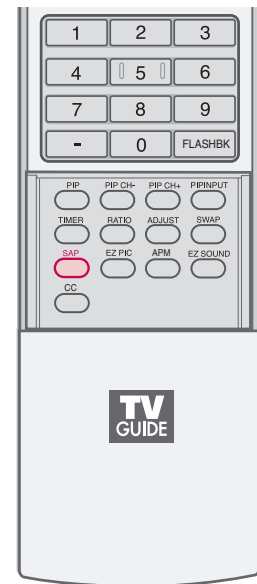

- 1 Use the **SAP** button to select your desired MTS mode in analog signal. Each time you press the **SAP** button, Mono, Stereo, or SAP appear in turn.
  - If other languages available on the digital signal, select them with the **SAP** button.
- 2 Press **EXIT** button to save and return to TV viewing.


# TV MENU | TIME SETTING

## AUTO CLOCK SETUP

The time is set automatically from a digital channel signal. The digital channel signal includes information for the current time provided by the broadcasting station.

Set the clock manually if the current time is set incorrectly by the auto clock function.

Note: When you set up the TV Guide On Screen system, Auto Clock menu is not available.

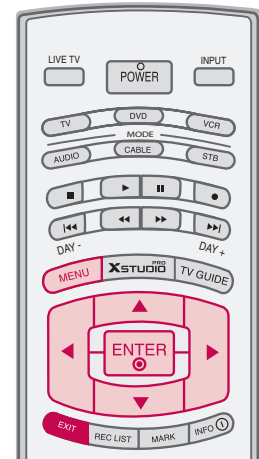

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **TIME** menu.



**2** Press the **▶** button and then use **▲** or **▼** button to select **Auto Clock**

**3** Press the **▶** button and then use **▲** or **▼** button to select **On**.

**4** Press the **▶** button and then use **▲** or **▼** button to select your viewing area time zone :  
 U.S.A : **Eastern, Central, Mountain, Pacific, Alaska** or **Hawaii**.  
 Canada : **Eastern, Central, Mountain, Pacific, New F.land** or **Atlantic**.


**5** Press the **▶** button and then use **▲** or **▼** button to select **Auto, Off, On**, depending on whether or not your viewing area observes Daylight Saving time.

**6** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

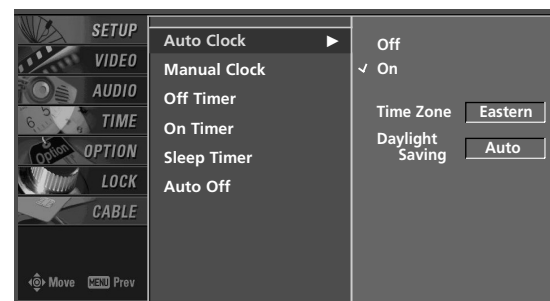
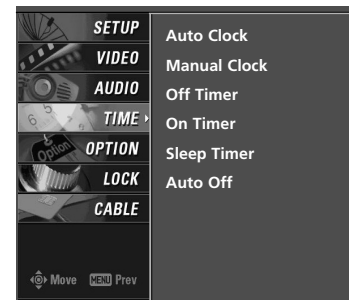


## MANUAL CLOCK SETUP

If the current time setting is wrong, reset the clock manually. When you set up the TV Guide On Screen system, the Manual Clock menu is not available.

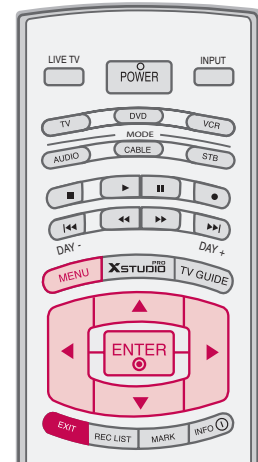

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **TIME** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **Manual Clock**.
- 3 Press the ► button and then use ◀ or ▶ button to select either the year, date, or time option. Once selected, use the ▲ or ▼ button to set the year, date, and time options.
- 4 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

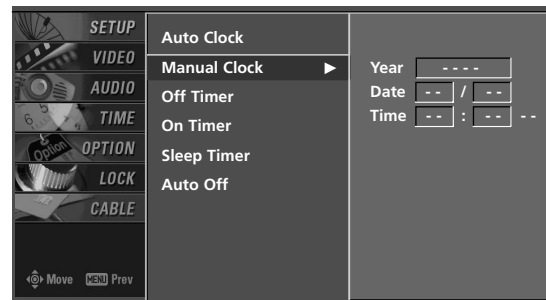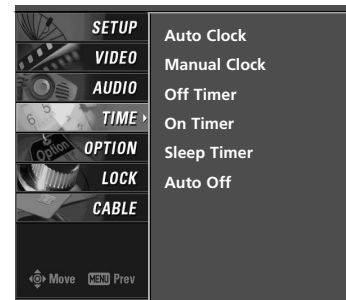


# TV MENU | TIME SETTING

## ON/OFF TIMER SETUP

The timer function operates only if the current time has been set.  
 The Off-Timer function overrides the On-Timer function if they are both set to the same time.

The TV must be in standby mode for the On-Timer to work.

If you do not press any button within 2 hours after the TV turns on with the On Timer function, the TV will automatically revert to standby mode.

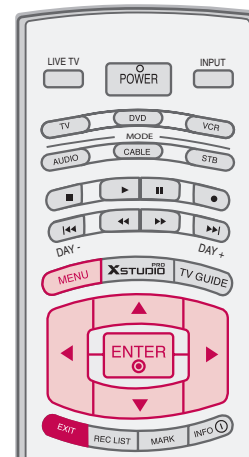

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **TIME** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **Off Timer** or **On Timer**.

**3** Press the **▶** button and then use **▲** or **▼** button to select **On**.  
 ■ To cancel **On/Off timer** function, select **Off**.



**4** Press the **▶** button and then use **▲** or **▼** button to set the hour.

**5** Press the **▶** button and then use **▲** or **▼** button to set the minutes.

**6 Only On timer**  
 Press the **▶** button and then use **▲** or **▼** button to select the channel at turn-on.

Press the **▶** button and then use **▲** or **▼** button to set the sound level at turn-on.

**7** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

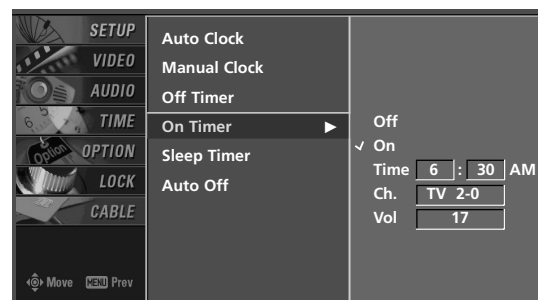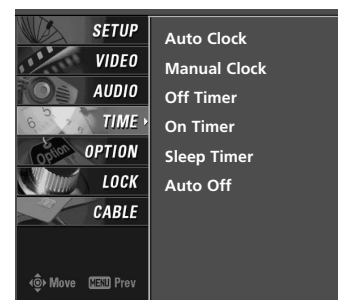


**2 3 4 5 6**

## SLEEP TIMER


The Sleep Timer turns the TV off at the preset time.  
 Note that this setting is cleared when the TV is turned off.

You can also set up the Sleep Timer in the TIME menu.

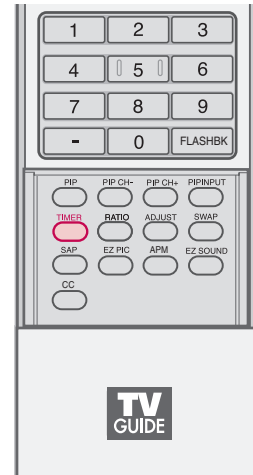

- 1 Press the **TIMER** button repeatedly to select the number of minutes. First the **Off** option appears on the screen, followed by the following sleep timer options : 10, 20, 30, 60, 90, 120, 180, and 240 minutes.
- 2 When the number of minutes you want is displayed on the screen, press the **ENTER** button. The timer begins to count down from the number of minutes selected.
- 3 To check the remaining minutes before the TV turns off, press the **TIMER** button once.
- 4 To cancel the Sleep Timer, press the **TIMER** button repeatedly to select **Off**.

■ You can also set up the Sleep Timer in the TIME menu.

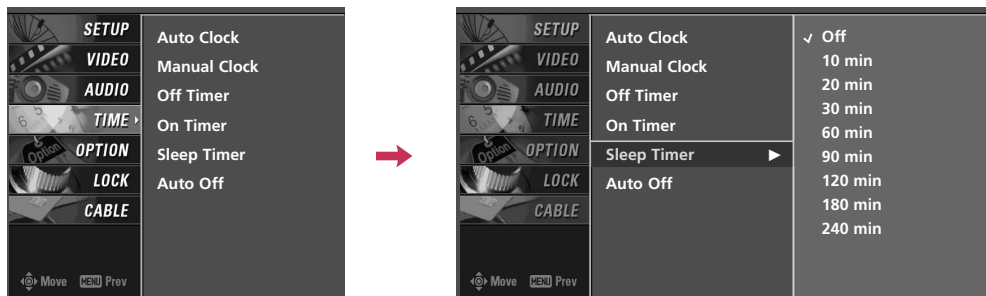




# TV MENU | TIME SETTING

## AUTO OFF

If set to on and there is no input signal, the TV turns off automatically after 10 minutes.

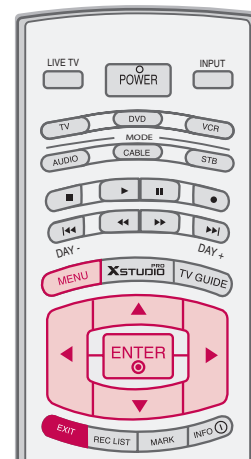


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **TIME** menu.


**2** Press the ► button and then use ▲ or ▼ button to select **Auto Off**.

**3** Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

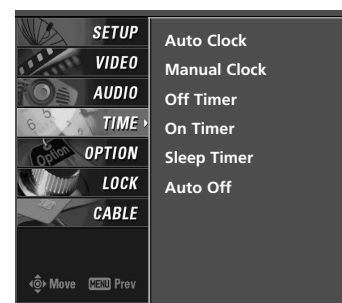

**1**

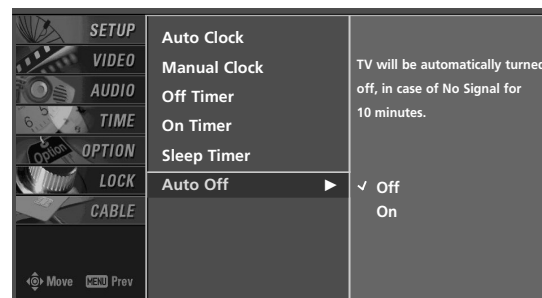

**2 3**

# TV MENU | OPTIONAL FEATURES

## TIMESHIFT MODE


See Page 65~67 for Timeshift functions.

## ASPECT RATIO CONTROL

This feature lets you choose the way an analog picture with a 4:3 aspect ratio is displayed on your TV. When you receive an analog picture with a 4:3 aspect ratio on your 16:9 TV, you need to specify how the picture is to be displayed.

- RGB-PC/DVI-PC input source use 4:3 or 16:9 aspect ratio.


- 1 Press the **RATIO** button repeatedly to select the desired picture format. You can also adjust **Aspect Ratio** in the **OPTION** menu.

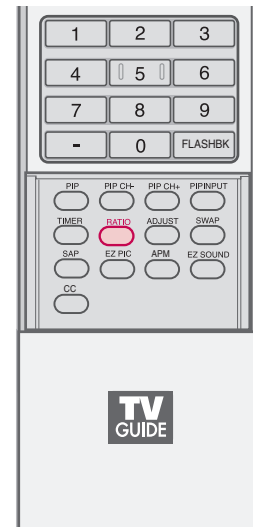


### Set by program

Selects the proper picture proportion to match the source's image.

(4:3 → 4:3)

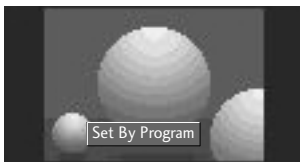


(16:9 → 16:9)

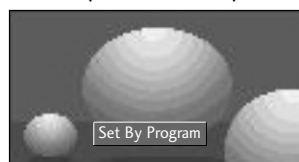

### 4:3

Choose 4:3 when you want to view a picture with an original 4:3 aspect ratio.

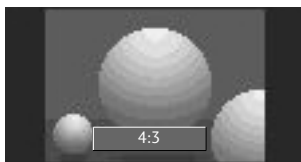


### 16:9

Adjust the picture horizontally, in a linear proportion to fill the entire screen.




### Horizon

The screen size is, more enlarged at both sides, to create a spectacular view.

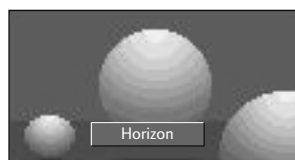


### Zoom 1

Choose Zoom 1 when you want to view the picture without any alteration. However, the top and bottom portions of the picture will be cropped.

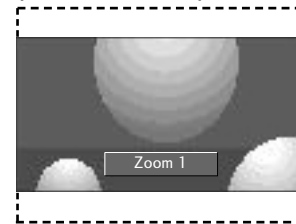


### Zoom 2

Choose Zoom 2 when you want the picture to be altered, both vertically extended and cropped. The picture taking a halfway trade off between alteration and screen coverage.

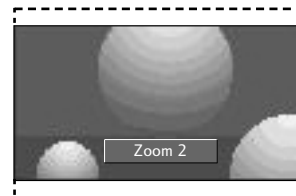

### Cinema Zoom

Choose Cinema Zoom when you want to enlarge the picture in correct proportion. Note: When enlarging or reducing the picture, the image may become distorted.

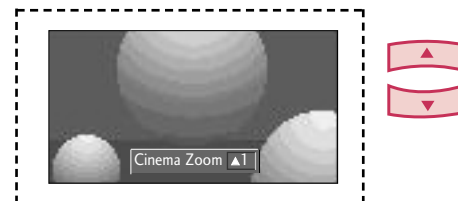

- The adjustment range is 1-16.

# TV MENU | OPTIONAL FEATURES


## CAPTION / TEXT

### Analog Broadcasting System Captions

Select a caption mode for displaying captioning information if provided on a program. Analog caption displays information at any position on the screen and is usually the program's dialog.

Text displays information, usually at the bottom position and is used for a data service, generally not program related. Caption/Text, if provided by the broadcaster, would be available for both digital and analog channels on the Antenna/Cable.

This TV is programmed to memorize the caption/text mode which was last set when you turn the power off.

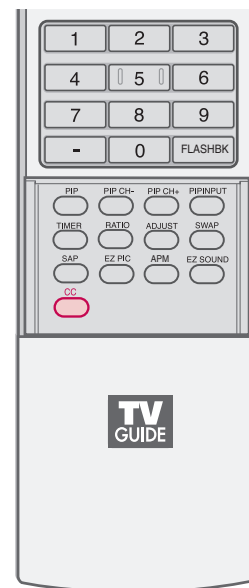

**1** Use the **CC** button repeatedly to select Caption **Off**, **CC1**, **CC2**, **CC3**, **CC4**, **Text1**, **Text2**, **Text3** or **Text4**.

■ **CAPTION**


The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired.

■ **TEXT**

The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster.

**2** Press **EXIT** button to save and return to TV viewing.


■ You can also use the **OPTION** menu to select **Caption/Text**

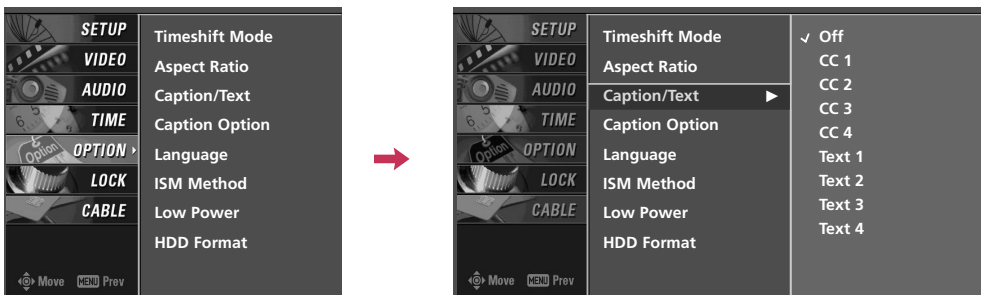

## Digital Broadcasting System Captions

Choose the language you want the DTV/CADTV Captions to appear in.

Languages can be chosen for digital sources only if they are included on the program.

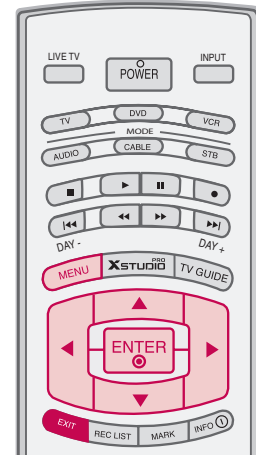


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.


**2** Press the ► button and then use ▲ or ▼ button to select **Caption/Text**

**3** Press the ► button and then use ▲ or ▼ button to select available caption languages : **English, Spanish** or **French**.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

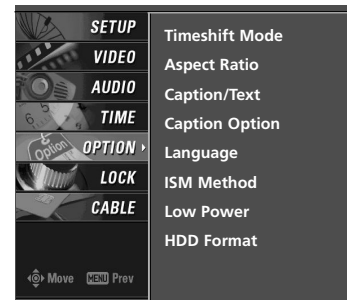

1

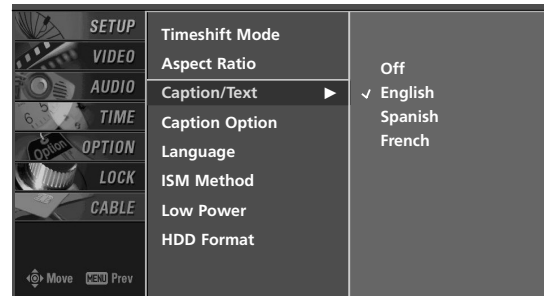


2 3

# TV MENU | OPTIONAL FEATURES

## CAPTION OPTION

Customize the DTV/CADTV captions that appear on your screen.

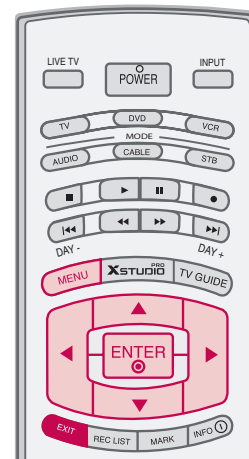

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **OPTION** menu.



**2** Press the **▶** button and then use **▲** or **▼** button to select **Caption Option**.

**3** Press the **▶** button and then use **◀** or **▶** button to select **Custom**.

**4** Use **▲** or **▼** button to customize the Style, Font, etc., to your preference. A preview icon is provided at the bottom of the screen, use it to see the caption language.

- ▶ **Size** : Set the word size.
- ▶ **Font** : Select a typeface for the text.
- ▶ **Text Color** : Choose a color for the text.
- ▶ **Text Opacity** : Specify the opacity for the text color.
- ▶ **Bg (Background) Color** : Select a background color.
- ▶ **Bg (Background) Opacity** : Select the opacity for the background color.
- ▶ **Edge Type** : Select an edge type.
- ▶ **Edge Color** : Select a color for the edges.

**5** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

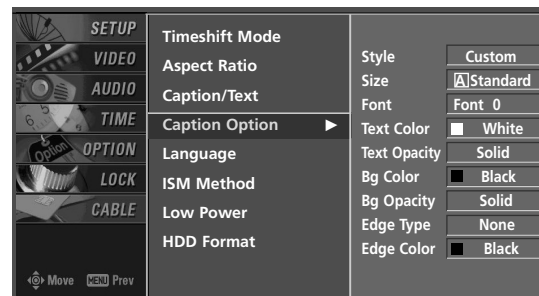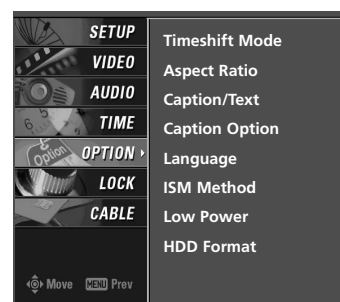

**3** **4**

# ISM (Image Sticking Minimization) Method

- 50PC1DR/50PC1DRA only

A frozen still picture from a PC/video game displayed on the screen for prolonged periods will result in a ghost image. Use our unique method to minimize any fixed image on the screen.

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **OPTION** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **ISM Method**.

**3** Press the **▶** button and then use **▲** or **▼** button to select either **Normal**, **White wash**, **Orbiter** or **Inversion**.

■ **Normal**

If image sticking is never a problem, ISM is not necessary set to Normal.

■ **White wash**

White Wash removes permanent images from the screen.

**! NOTE**

▶ An excessive permanent image may be impossible to clear entirely with White Wash. To return to normal viewing, press any button.




■ **Orbiter**

Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the image will move once per 2 minutes : Left → Right → Upside → Downside → Right → Left → Downside → Upside.

■ **Inversion**

Inversion will automatically invert the plasma display panel color every 30 minutes.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

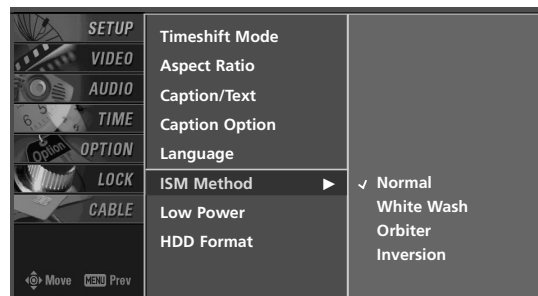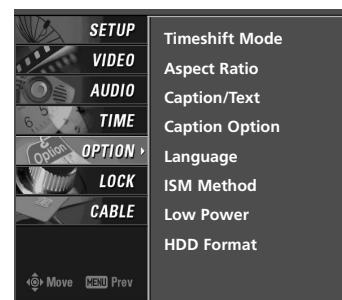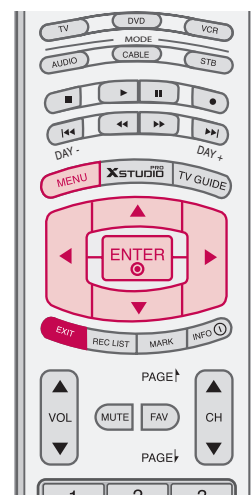


# TV MENU | OPTIONAL FEATURES

## LOW POWER

- 50PC1DR/50PC1DRA only

Low power reduces the plasma display power consumption.

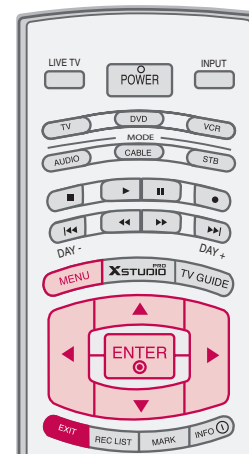


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

**2** Press the ► button and then use ▲ or ▼ button to select **Low power**.


**3** Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

- When you select On, the screen darkens.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

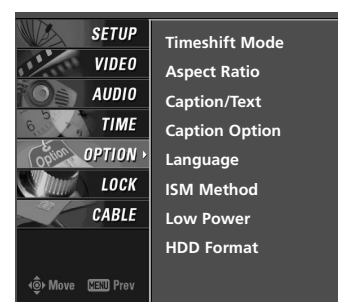


1

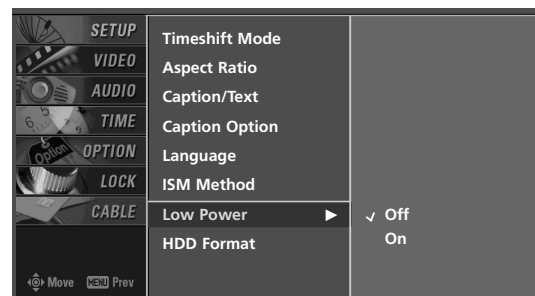

2 3

# HDD FORMAT

Erases all programs and initializes the hard drive.

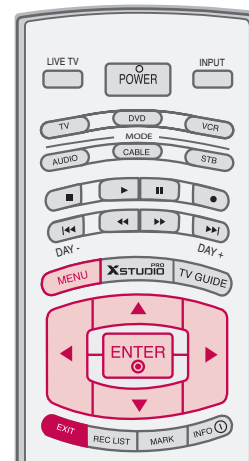

**1** Press the **MENU** button and then use **▲** or **▼** button to select the **OPTION** menu.

**2** Press the **▶** button and then use **▲** or **▼** button to select **HDD Format**

**3** Press the **ENTER** or **▶** button.  
Select **Yes** or **No** to format HDD as shown below.


**i** Do you want to format HDD?  
'Yes' will delete all recorded programs

- If you select **Yes**, the Recorded List (Recording) will be deleted. Even if you selects **No**, the DVR may not function if there are problems with the hard drive.

**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.



**1**

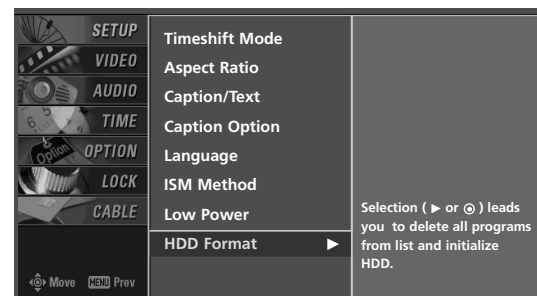

**2 3**



# TV MENU | OPTIONAL FEATURES



## BRIEF INFO.

### What is Brief Info.?

- : Brief Info shows the present screen information.
- : On Watching with the upper Input signal, press the **INFO** button.

### How To Use?

1. Press the **INFO** button to show the Brief Info on the screen.
2. Press the **INFO** button or **EXIT** button to exit.

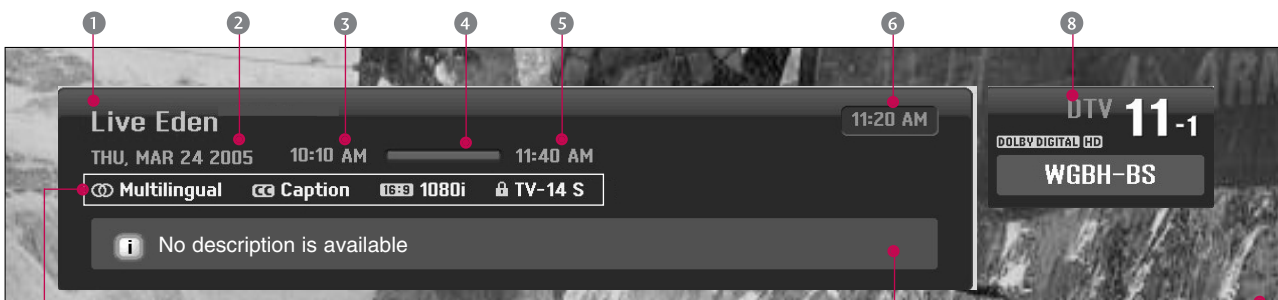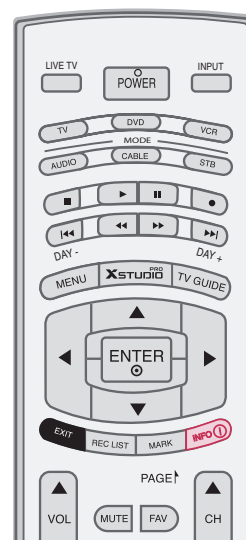

	<b>Multilingual</b> : Press the SAP button to select your choice.
	<b>Caption</b> : Press the CC button to select wanted Closed caption.
	Screen Ratio of Input Signal 4:3
	Screen Ratio of Input Signal 16:9
	Resolution of Input Signal 720x480i
	Resolution of Input Signal 720x480p
	Resolution of Input Signal 1280x720p
	Resolution of Input Signal 1920x1080i
	Input Signal have rating information. Refer to the <Lock Menu>. D(Dialogue), L(Language), S(Sex), V(Violence), FV(Fantasy Violence)

- ① Program title
- ② Day, Month, Year
- ③ Program start time
- ④ Program progress bar
- ⑤ Program finish time
- ⑥ Present time
- ⑦ Program information
- ⑧ Banner information

TV MENU / OPTIONAL FEATURES

# TV MENU | LOCK ADJUSTMENT

Parental Control can be used to block specific channels, ratings and other viewing sources.

The Parental Control Function (V-Chip) is used to block program viewing based on the ratings sent by the broadcasting station. The default setting is to allow all programs to be viewed. Viewing can be blocked by choosing the type of the program and the categories. It is also possible to block all program viewing for a time period. To use this function, the following must be done :

1. Set ratings and categories to be blocked.
2. Specify a password
3. Enable the lock

## V-Chip rating and categories

Rating guidelines are provided by broadcasting stations. Most television programs and television movies can be blocked by TV Rating and/or Individual Categories. Movies that have been shown at the theaters or direct-to-video movies use the Movie Rating System (MPAA) only.

## Ratings for Television programs including made-for-TV movies :

- TV-G (General audience)
- TV-MA (Mature audience only)
- TV-PG (Parental guidance suggested)
- TV-Y (All children)
- TV-14 (Parents strongly cautioned)
- TV-Y7 (Children 7 years older)


 
## SETTING UP YOUR PASSWORD

Set up blocking schemes to block specific channels, ratings, and external viewing sources.

A password is required to gain access to this menu.

- 1 Press the **MENU** button and then use the ▲ or ▼ button to select the **LOCK** menu. Then, press the ► button.


- Enter the password as requested.
- The TV is set up with the initial password "0-0-0-0".

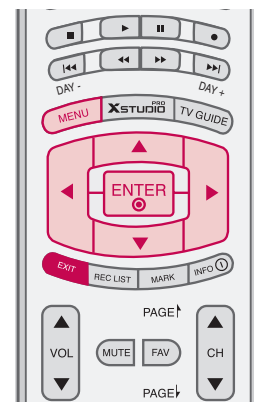


# TV MENU | LOCK ADJUSTMENT

## LOCK SYSTEM

Enables or disables the blocking scheme you set up previously.

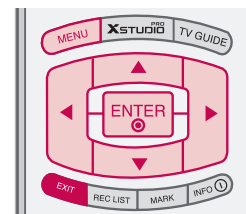


- 1 After inputting the password, use the ▲ or ▼ button to choose **Lock System**.
- 2 Press the ► button and then use the ▲ or ▼ to select **On** or **Off**.
  - When you select, the Lock System is enable.

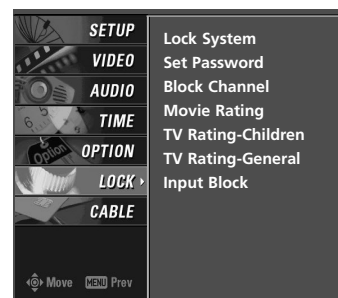

1

- 3 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

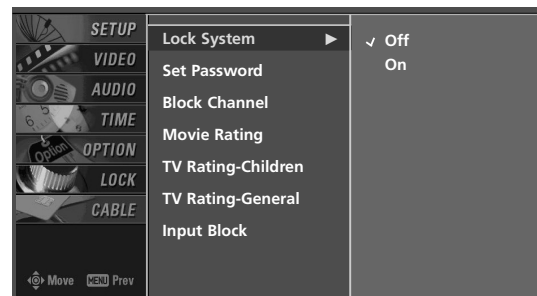


2

## SET PASSWORD


Change the password by inputting a new password twice.

- 1 After inputting the password, use the ▲ or ▼ button to choose **Set password**.
- 2 Press the ► button and then choose any 4 digits for your new password and enter the them on the **new**.  
  
As soon as the 4 digits are entered, re-enter the same 4 digits on the **Confirm**.  
Then your changed password has been memorized.

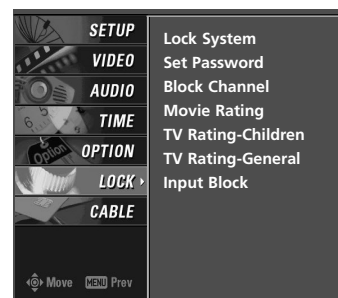

1

- 3 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

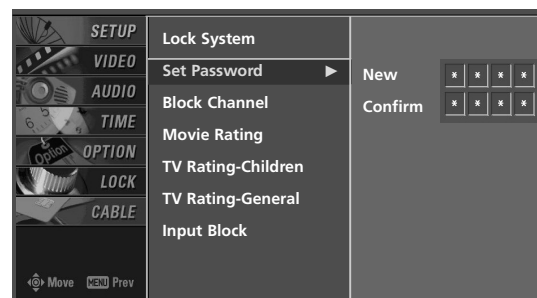

2

# BLOCK CHANNEL


Blocks any channels that you do not want to watch or that you do not want your children to watch.

**1** After inputting the password, use the ▲ or ▼ button to choose **Block Channel**.


**2** Press the ► button. You will now see a screen filled with channel numbers and a preview picture.

**3** Use ▲ ▼ ◀ ▶ button to select a channel and then use the **ENTER** button to block or unblock it.


**4** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

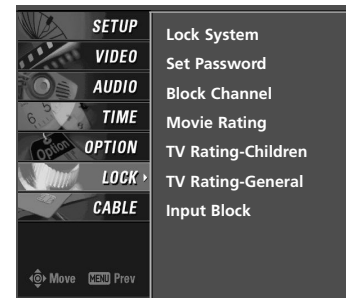

1

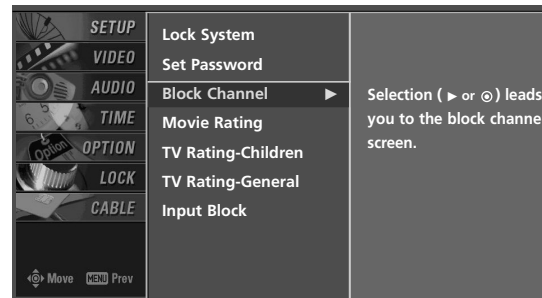

2

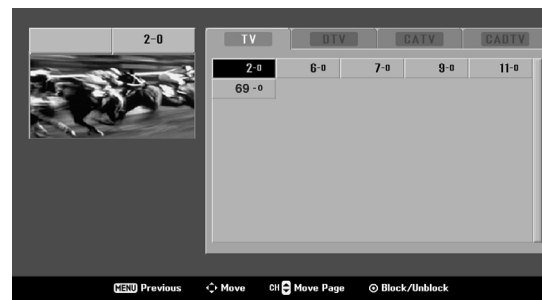

3

## TV MENU | LOCK ADJUSTMENT

### MOVIE RATING (MPAA) - for USA only

Blocks movies according to the movie ratings limits specified, so children cannot view certain movies. You can set the ratings limit by blocking out all the movies with the ratings above a specified level. Keep in mind that the movie ratings limit only applies to movies shown on TV, not TV programs, such as soap operas.


**1** After inputting the password, use the ▲ or ▼ button to choose **Movie Rating**.

**2** Press the ► button and then use the ▲ or ▼ to select **G, PG, PG-13, R, NC-17** or **X**.


- G (General audience)
- PG (Parental guidance suggested)
- PG-13 (Parents strongly cautioned)
- R (Restricted)
- NC-17 (No one 17 and under admitted)
- X (Adult only)
- Blocking Off (Permits all programs)

► If you set PG-13 : G and PG movies will be available, PG-13, R, NC-17 and X will be blocked.

**3** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

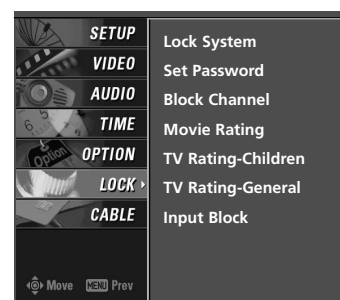

**1**

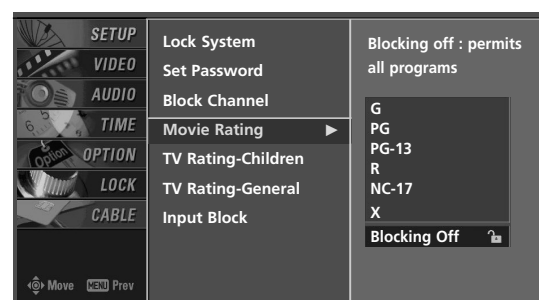

**2**

## TV RATING CHILDREN - for USA only


Prevents children from watching certain children’s TV programs, according to the ratings limit set. The children rating does not apply to other TV programs. Unless you block certain TV programs intended for mature audiences in the TV Rating - sub menu, your children can view those programs.

**1** After inputting the password, use the ▲ or ▼ button to choose **TV Rating-Children**.


**2** Press the ► button and then use the ▲ or ▼ to select **Age**, or **Fantasy Violence**.  
Press the ► button and then use the ▲ or ▼ button to select block options.

- Age (applies to TV-Y, TV-Y7)
- Fantasy Violence (applies to TV-Y7)

**3** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

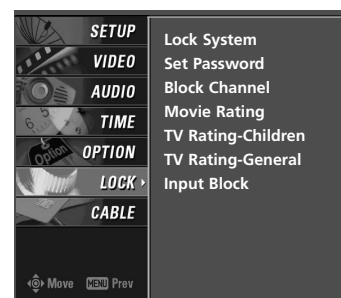

1

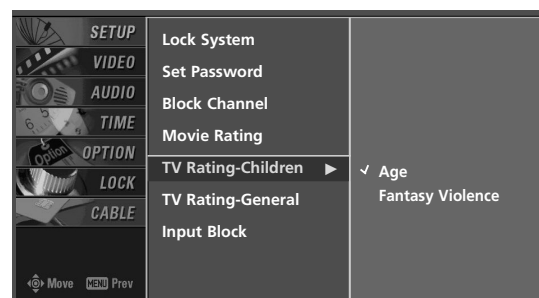

2

## TV RATING GENERAL \*for USA only


Based on the ratings, blocks certain TV programs that you and your family do not want to view.

**1** After inputting the password, use the ▲ or ▼ button to choose **TV Rating-General**.


**2** Press the ► button and then use the ▲ or ▼ button to select **Age**, **Dialogue**, **Language**, **Sex** or **Violence**.  
Press the ► button and then use the ▲ or ▼ button to select block options.

- Age (applies to TV-G, TV-PG, TV-14, TV-MA)
- Dialogue-sexual dialogue (applies to TV-PG, TV-14)
- Language-adult language (applies to TV-PG, TV-14, TV-MA)
- Sex-sexual situations (applies to TV-PG, TV-14, TV-MA)
- Violence (applies to TV-PG, TV-14, TV-MA)

**3** Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

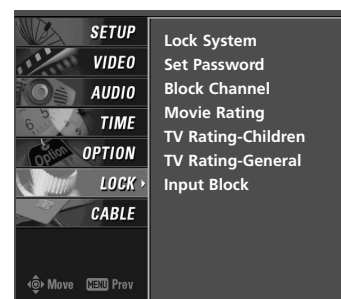

1

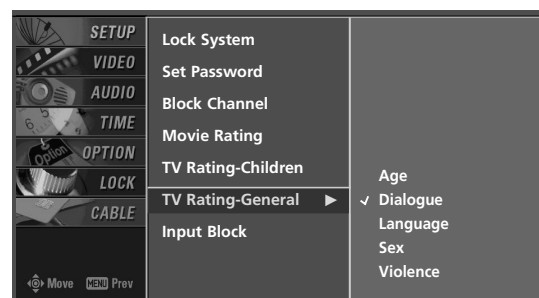

2


## TV MENU | LOCK ADJUSTMENT

### TV RATING ENGLISH - for CANADA only


Selecting canadian english language rating system.

- 1 After inputting the password, use the ▲ or ▼ button to choose **TV Rating-English**.
- 2 Press the ► button and then use the ▲ or ▼ button to select **E, C, C8+, G, PG, 14+, 18+,** or **Blocking Off**.
  - E(Exempt)
  - C(Children)
  - C8+(Children eight years and older)
  - G(General programming, suitable for all audiences)
  - PG(Parental Guidance )
  - 14+(Viewers 14 years and older)
  - 18+(Adult programming)
  - Blocking Off(Permits all programs)

- 3 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

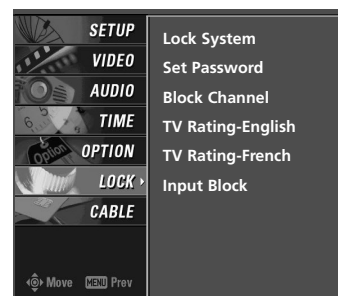

1

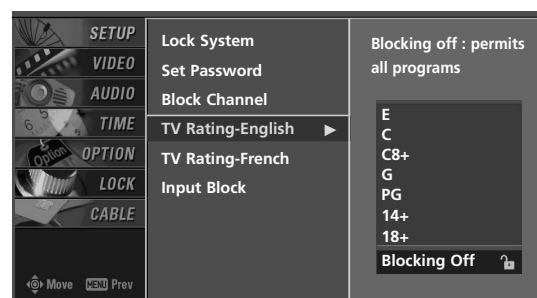


2

### TV RATING FRENCH - for CANADA only


Selecting canadian french language rating system.

- 1 After inputting the password, use the ▲ or ▼ button to choose **TV Rating-French**.
- 2 Press the ► button and then use the ▲ or ▼ button to select **E, G, 8 ans+, 13 ans+, 16 ans+, 18 ans+,** or **Blocking Off**.
  - E(Exempt)
  - G(General)
  - 8 ans+(General-Not convenient for little children)
  - 13 ans+(Not convenient for children of 13 years and younger)
  - 16 ans+(Not convenient for children of 16 years and younger)
  - 18 ans+(This programs is only for adults)
  - Blocking Off(Permits all programs)

- 3 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

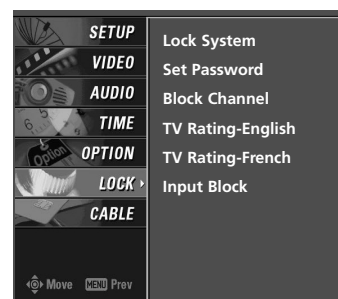

1

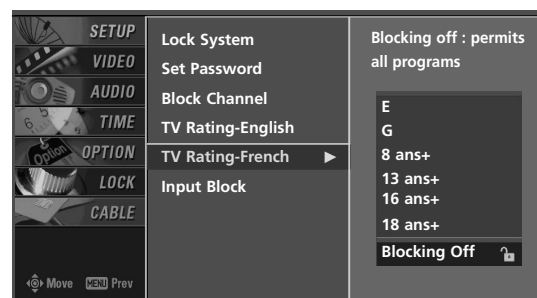


2


## INPUT BLOCK

Enables you to select a source to block from the external source devices you have hooked up.

- 1 After inputting the password, use the ▲ or ▼ button to choose **Input Block**
- 2 Press the ► button and then use the ◀ or ▶ to select a source.
- 3 Press the ► button and then use the ▲ or ▼ to select **On** or **Off** on the each source.
- 4 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

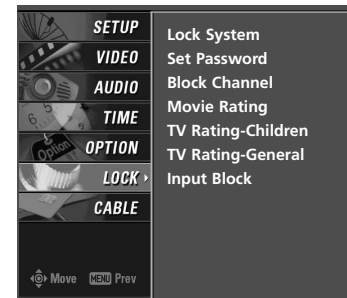

1

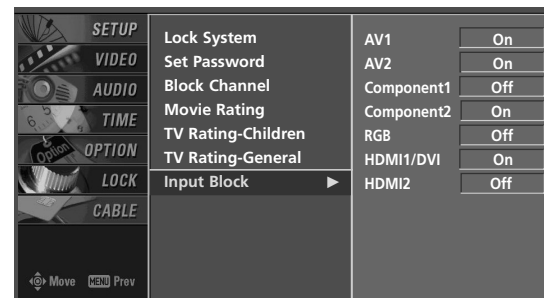

2

### ! NOTE

- ▶ If you ever forget your password, key in '7', '7', '7', '7' on the remote control.




# TV MENU | CableCARD™ FUNCTION

In this manual, the OSD (On Screen Display) may be different from your TV's because it is just example to help the TV operation.

## CABLE MENU OPTIONS

The Cable sub menu displays when inserting the CableCARD™ to the TV.

The CableCARD™ type is Motorola, Scientific Atlanta (SA), or SCM etc. The OSD (On screen display) is different from your TV according to your CableCARD™ type.

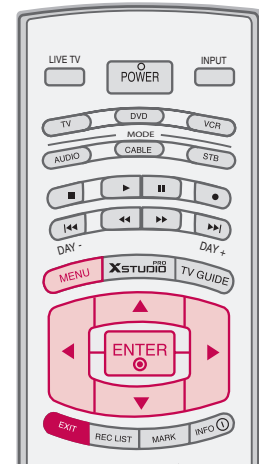


**1** Press the **MENU** button and then use ▲ or ▼ button to select the **CABLE** menu.

**2** Press the ► button and then use ▲ or ▼ button to select your desired item.

**3** Press the ► button.

**4** Press **EXIT** button to return to TV viewing.

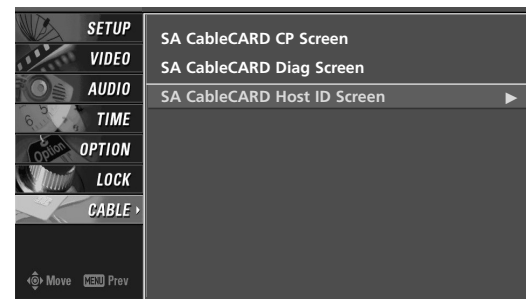


In case of Scientific Atlanta CableCARD™



**CableCARD™/ Host ID Screen**  
 As shown, the pairing number means your TV and CableCARD™ ID. For further information regarding cable TV service, contact your local cable TV service provider(s).

## SCRAMBLED CHANNEL

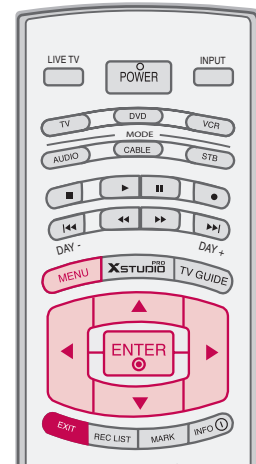

**1** Insert the CableCARD™. It takes about 1 minute to exchange data between the TV and the CableCARD™. The screen displays information as shown to the right.




1 2 3 4

**2** Let your cable TV service provider know the CableCARD™ ID and Host ID.

**3** If your cable TV service provider registers the CableCARD™ ID and Host ID, you can watch premium or high value channel. If you are subscribed to them.

**4** If you registered with the cable TV service provider, you can watch premium or high value channel without a message.

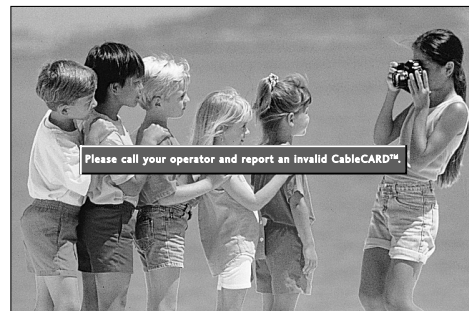


5


**5** If the certificates don't match between the TV and the CableCARD™, the OSD (On screen display) displays as shown right.

## CABLE CHANNEL LIST


- 1 If you select **Channel Edit** after running the EZ Scan without a CableCARD™, the cable channel list displays, as in the picture below.
- 2 Insert the CableCARD™. After a few minutes (about 2~3 minutes), the TV receives a new cable channel list. (Occasionally more time will be needed)

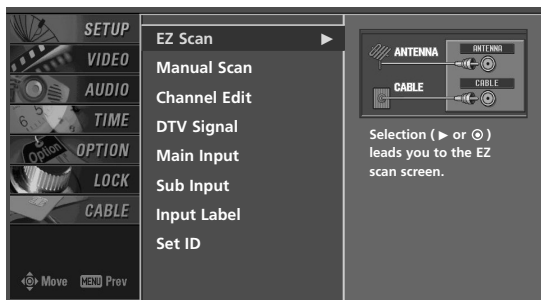


1

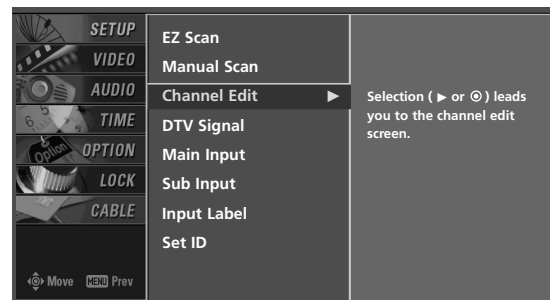

1

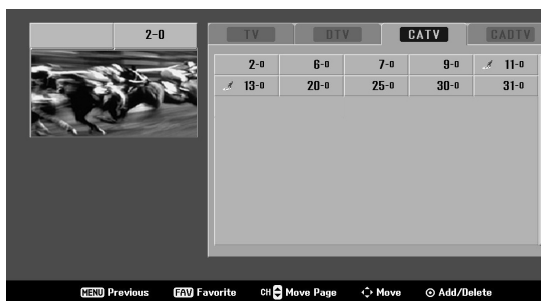

1

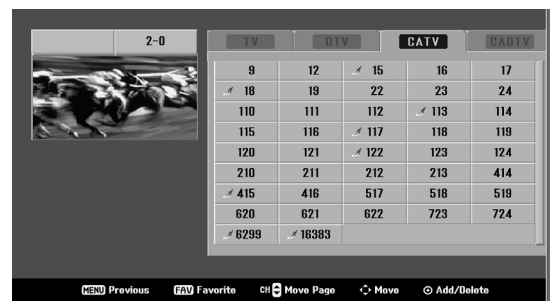

2

TV MENU / CableCARD™ FUNCTION

## EMERGENCY MESSAGE ALERT

- 1 If an emergency situation occurs while you are watching the TV/DTV/CATV/CADTV, you may receive a message from your cable TV service provider(s).
- 2 When receiving an emergency message, the message is displayed on the screen as shown or the channel is changed to one that maintains the emergency message. When the broadcast is complete the TV returns to the channel you were viewing.



1 2

# APPENDIX


## EXTERNAL CONTROL DEVICE SETUP

Connect the RS-232C (serial port) input jack to an external control device (such as a computer or an A/V control system) to control the product's functions externally.

Connect the serial port of the control device to the RS-232C jack on the product back panel.


Note: RS-232C connection cables are not supplied with the product.

### RS-232C Setup

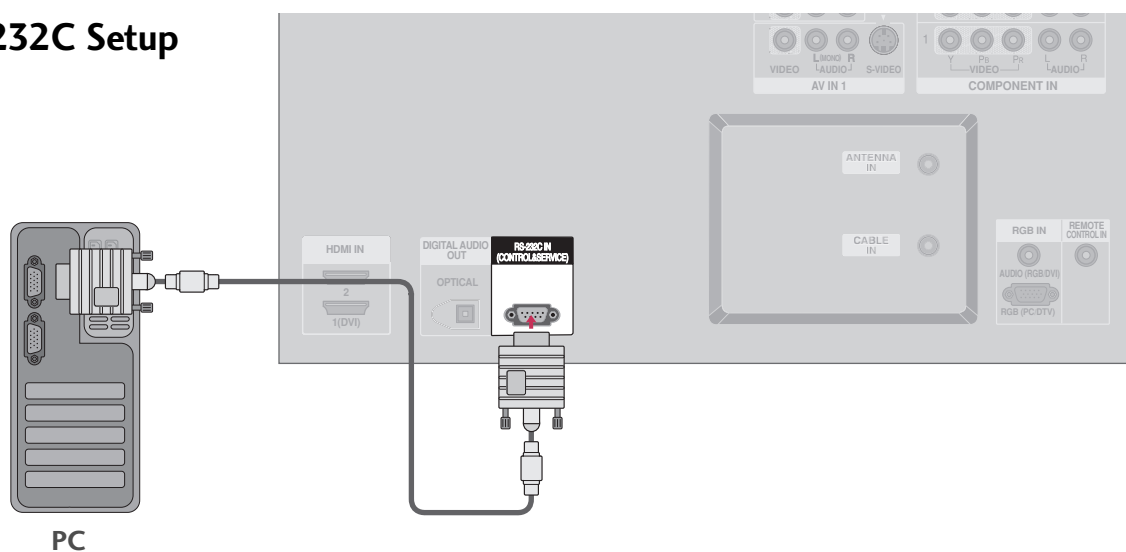

### Type of Connector; D-Sub 9-Pin Male


No.	Pin Name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

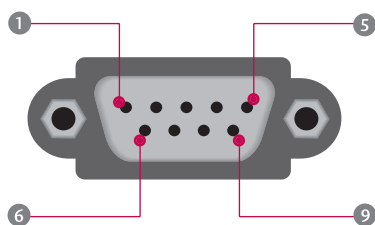


# APPENDIX

## RS-232C Configurations

### 7-Wire Configurations (Standard RS-232C cable)

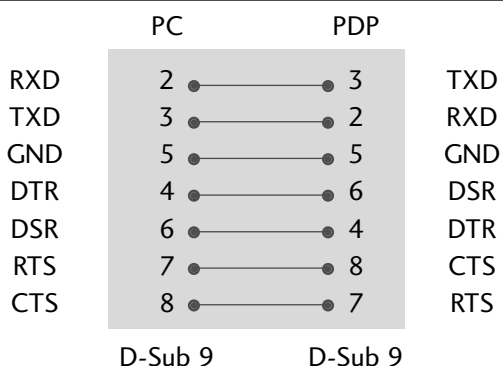


### 3-Wire Configurations (Not standard)

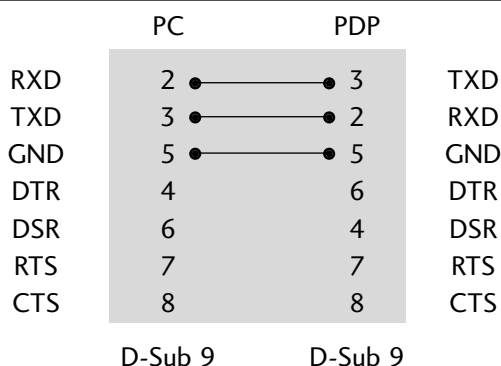


## Set ID


Use this function to specify a TV ID number.  
Refer to 'Real Data Mapping 1'. ▶ p.134

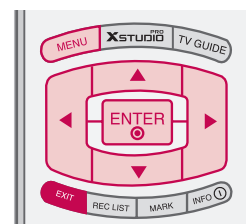

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **SET ID**.
- 3 Press the ► button and then use ▲ or ▼ button to adjust **SET ID** to choose the desired TV ID number. The adjustment range of SET ID is 1~99.
- 4 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

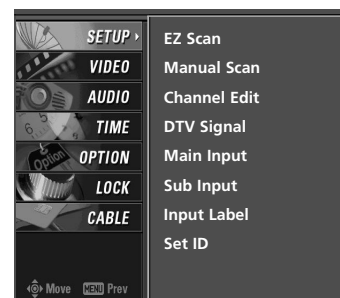

1

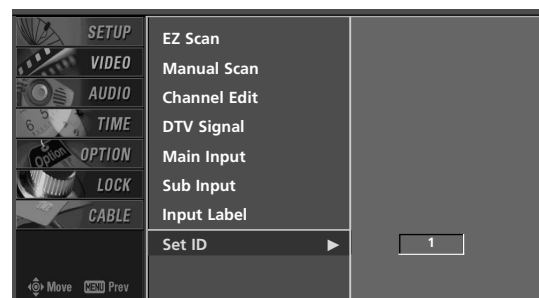

2 3

## Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

## Command Reference List

	COMMAND1	COMMAND2	DATA (Hexadecimal)		COMMAND1	COMMAND2	DATA (Hexadecimal)
01. Power	k	a	0 ~ 1	15. PIP Position	k	q	0 ~ 3
02. Input Select	k	b	0 ~ 9	16. Treble	k	r	0 ~ 64
03. Aspect Ratio	k	c	*	17. Bass	k	s	0 ~ 64
04. Screen Mute	k	d	0 ~ 1	18. Balance	k	t	0 ~ 64
05. Volume Mute	k	e	0 ~ 1	19. Color Temperature	k	u	0 ~ 3
06. Volume Control	k	f	0 ~ 64	20. Red adjustment	k	v	0 ~ C8
07. Contrast	k	g	0 ~ 64	21. Green adjustment	k	w	0 ~ C8
08. Brightness	k	h	0 ~ 64	22. Blue adjustment	k	\$	0 ~ C8
09. Color	k	i	0 ~ 64	23. PIP Input Source	k	y	0 ~ 3
10. Tint	k	j	0 ~ 64	24. ISM Method	j	p	*
11. Sharpness	k	k	0 ~ 64	25. Low Power	j	q	0 ~ 1
12. OSD Select	k	l	0 ~ 1	26. Orbiter Time Setting	j	r	1 ~ FE
13. Remote Control/ Key Lock	k	m	0 ~ 1	27. Orbiter Pixel Setting	j	s	1 ~ 3
14. PIP/Twin	k	n	0,1,2,5				

↳ Only 50PC1DR/50PC1DRA models

	COMMAND1	COMMAND2	DATA0 (Hexadecimal)	DATA1 (Hexadecimal)	DATA2 (Hexadecimal)	DATA3 (Hexadecimal)	DATA4 (Hexadecimal)	DATA5 (Hexadecimal)
28. Channel Tuning	m	a	physical program high	major program low	major low	minor high	minor low	attribute
29. Channel Add/Del	m	b	0 ~ 1					
30. Key	m	c	key code					
31. Input Select	x	b	*					
32. PIP Input Select	x	y	*					

## Transmission / Receiving Protocol

### Transmission

**[Command1][Command2][ ][Set ID][ ][Data][Cr]**

[Command 1] : First command to control the set.(j, k, m or x)

[Command 2] : Second command to control the set.

[Set ID] : You can adjust the set ID to choose desired TV ID number in Setup menu. Adjustment range is 1 ~ 99. When selecting Set ID '0', every connected the TV is controlled. Set ID is indicated as decimal (1 ~ 99) on menu and as Hexa decimal (0x0~ 0x63) on transmission/receiving protocol.

[DATA] : To transmit command data.

Transmit 'FF' data to read status of command.

[Cr] : Carriage Return

ASCII code '0x0D'

[ ] : ASCII code 'space (0x20)'

### OK Acknowledgement

**[Command2][ ][Set ID][ ][OK][Data][x]**

The TV transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

### Error Acknowledgement

**[Command2][ ][Set ID][ ][NG][Data][x]**

The TV transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

Data1: Illegal Code

Data2: Not supported function

Data3: Wait more time

# APPENDIX

## 01. Power (Command2:a)

To control Power On/Off of the TV.

**Transmission** [k][a][ ][Set ID][ ][Data][Cr]

Data 0 : Power Off      Data 1 : Power On

**Acknowledgement** [a][ ][Set ID][ ][OK/NG][Data][x]

\* In a like manner, if other functions transmit 'FF' data based on this format, Acknowledgement data feedback presents status about each function.

## 02. Input Select (Command2:b) (Main Picture Input)

To select input source for the TV.

**Transmission** [k][b][ ][Set ID][ ][Data][Cr]

Data 0: DTV                  Data 1: Analog

Data 2: AV1                  Data 3: AV2

Data 4: Component 1      Data 5: Component 2

Data 6: RGB-DTV          Data 7: RGB-PC

Data 8: HDMI1/DVI        Data 9: HDMI2

**Acknowledgement** [b][ ][Set ID][ ][OK/NG][Data][x]

## 03. Aspect Ratio (Command2:c) (Main picture format)

To adjust the screen format.

You can also adjust the screen format using the RATIO button on remote control or in the Option menu.

**Transmission** [k][c][ ][Set ID][ ][Data][Cr]

Data 1: 4:3                  5: Zoom 2

2: 16:9                      6: Set by program

3: Horizon                  10: Cinema Zoom (1)

4: Zoom 1

⋮

1F: Cinema Zoom (16)

**Acknowledgement** [c][ ][Set ID][ ][OK/NG][Data][x]

## 04. Screen Mute (Command2:d)

To select screen mute on/off.

**Transmission** [k][d][ ][Set ID][ ][Data][Cr]

Data 0 : Screen mute off (Picture on)

Data 1 : Screen mute on (Picture off)

**Acknowledgement** [d][ ][Set ID][ ][OK/NG][Data][x]

## 05. Volume Mute (Command2:e)

To control volume mute on/off.

You can also adjust mute using the MUTE button on remote control.

**Transmission** [k][e][ ][Set ID][ ][Data][Cr]

Data 0 : Volume mute off (Volume on)

Data 1 : Volume mute on (Volume off)

**Acknowledgement** [e][ ][Set ID][ ][OK/NG][Data][x]

## 06. Volume Control (Command2:f)

To adjust volume.

You can also adjust volume with the volume buttons on remote control.

**Transmission** [k][f][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64

Refer to 'Real data mapping 1' as shown below.

**Acknowledgement** [f][ ][Set ID][ ][OK/NG][Data][x]

## 07. Contrast (Command2:g)

To adjust screen contrast.

You can also adjust contrast in the Video menu.

**Transmission** [k][g][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64

\*Refer to 'Real data mapping 1' as shown below.

**Acknowledgement** [g][ ][Set ID][ ][OK/NG][Data][x]

## 08. Brightness (Command2:h)

To adjust screen brightness.

You can also adjust brightness in the Video menu.

**Transmission** [k][h][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64 (\*transmit by Hexadecimal code)

\*Refer to 'Real data mapping 1' as shown below.

**Acknowledgement** [h][ ][Set ID][ ][OK/NG][Data][x]

\*Real data mapping 1

0 : Step 0

⋮

A : Step 10 (SET ID 10)

⋮

F : Step 15 (SET ID 15)

10 : Step 16 (SET ID 16)

⋮

63 : Step 99 (SET ID 99)

64 : Step 100

## 09. Color (Command2:i)

To adjust the screen color.

You can also adjust color in the Video menu.

**Transmission** [k][i][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64

\*Refer to 'Real data mapping 1'. See page 134.

**Acknowledgement** [i][ ][Set ID][ ][OK/NG][Data][x]

**10. Tint (Command2:j)**

To adjust the screen tint.

You can also adjust tint in the Video menu.

**Transmission** [k][j][ ][Set ID][ ][Data][Cr]

Data Red : 0 ~ Green : 64

\*Refer to 'Real data mapping 1'. See page 134.

**Acknowledgement** [j][ ][Set ID][ ][OK/NG][Data][x]

**11. Sharpness (Command2:k)**

To adjust the screen sharpness.

You can also adjust sharpness in the Video menu.

**Transmission** [k][k][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

\*Refer to 'Real data mapping 1'. See page 134.

**Acknowledgement** [k][ ][Set ID][ ][OK/NG][Data][x]

**12. OSD Select (Command2:l)**

To select OSD (On Screen Display) on/off.

**Transmission** [k][l][ ][Set ID][ ][Data][Cr]

Data 0: OSD off                      Data 1: OSD on

**Acknowledgement** [l][ ][Set ID][ ][OK/NG][Data][x]

**13. Remote Control Lock Mode (Command2:m)**

To lock the remote control and the front panel controls on the set.

**Transmission** [k][m][ ][Set ID][ ][Data][Cr]

Data 0: Lock off                      Data 1: Lock on

**Acknowledgement** [m][ ][Set ID][ ][OK/NG][Data][x]

If you're not using the remote control and front panel controls on the TV, use this mode. When main power is on/off, remote control lock is released.

**14. PIP / POP / Twin Picture (Command2:n)**

To control the PIP (Picture-in-Picture)/POP/Twin picture. You can also control the PIP/POP/Twin picture using the PIP button on the remote control.

**Transmission** [k][n][ ][Set ID][ ][Data][Cr]

Data 0:Off                              2: Twin Picture  
1: PIP                                      5: POP4(POP Scan)

**Acknowledgement** [n][ ][Set ID][ ][OK/NG][Data][x]

**15. PIP Position (Command2:q)**

To select sub picture position for PIP.

**Transmission** [k][q][ ][Set ID][ ][Data][Cr]

Data 0: Right down on screen

Data 1: Left down on screen

Data 2: Left up on screen

Data 3: Right up on screen

**Acknowledgement** [q][ ][Set ID][ ][OK/NG][Data][x]

**16. Treble (Command2:r)**

To adjust treble.

You can also adjust treble in the Audio menu.

**Transmission** [k][r][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64(\*transmit by Hexadecimal code)

\*Refer to 'Real data mapping 1'. See page 134.

**Acknowledgement** [r][ ][Set ID][ ][OK/NG][Data][x]

**17. Bass (Command2:s)**

To adjust bass.

You can also adjust bass in the Audio menu.

**Transmission** [k][s][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64(\*transmit by Hexadecimal code)

\*Refer to 'Real data mapping 1'. See page 134.

**Acknowledgement** [s][ ][Set ID][ ][OK/NG][Data][x]

**18. Balance (Command2:t)**

To adjust balance.

You can also adjust balance in the Audio menu.

**Transmission** [k][t][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64(\*transmit by Hexadecimal code)

\*Refer to 'Real data mapping 1'. See page 134.

**Acknowledgement** [t][ ][Set ID][ ][OK/NG][Data][x]

**19. Color Temperature (Command2:u)**

To adjust color temperature.

You can also adjust color temperature in the Video menu.

**Transmission** [k][u][ ][Set ID][ ][Data][Cr]

Data 0: Medium    1: Cool    2: Warm    3: User

**Acknowledgement** [u][ ][Set ID][ ][OK/NG][Data][x]

**20. Red adjustment(Command:v)**

To adjust red in color temperature

**Transmission** [k][v][ ][Set ID][ ][Data][Cr]

Data Min:0 ~ Max:C8

\*Refer to "Real data mapping 2". See page 136.

**Acknowledgement** [v][ ][Set ID][ ][OK/NG][Data][x]



# APPENDIX

## 21. Green adjustment(Command:w)

To adjust green in color temperature.

**Transmission** [k][w][ ][Set ID][ ][Data][Cr]

Max:C8

\*Refer to "Real data mapping 2". See page 136.

**Acknowledgement** [w][ ][Set ID][ ][OK/NG][Data][x]

## 22. Blue adjustment(Command:\$)

To adjust blue in color temperature.

**Transmission** [k][\$][ ][Set ID][ ][Data][Cr]

Data Min:0 ~ Max:C8

\*Refer to "Real data mapping 2". See page 136.

**Acknowledgement** [\$][ ][Set ID][ ][OK/NG][Data][x]

\*Real data mapping 2

0 : -20

5 : -19

A : -18

⋮

5F: -1

64: 0

69: +1

⋮

C3 : +19

C8 : +20

## 23. PIP Input Select (Command2:y)

To select input source for sub picture in PIP/Twin picture mode.

**Transmission** [k][y][ ][Set ID][ ][Data][Cr]

Data 0: DTV 1: Analog

2: AV1 3: AV2

**Acknowledgement** [y][ ][Set ID][ ][OK/NG][Data][x]

## 24. ISM Method/Orbiter (Command2:p)

(Only 50PC1DR/50PC1DRA models)

To avoid having a fixed image remain on screen.

**Transmission** [j][p][ ][Set ID][ ][Data][Cr]

Data 1: Inversion 2: Orbiter

4: White Wash 8: Normal

**Acknowledgement** [p][ ][Set ID][ ][OK/NG][Data][x]

## 25. Low Power (Command2:q)

(Only 50PC1DR/50PC1DRA models)

To control the low power function on/off.

**Transmission** [j][q][ ][Set ID][ ][Data][Cr]

Data 0: low power off

1: low power on

**Acknowledgement** [q][ ][Set ID][ ][OK/NG][Data][x]

## 26. Orbiter Time Setting (Command2:r)

(Only 50PC1DR/50PC1DRA models)

To adjust orbiter operation time term.

**Transmission** [j][r][ ][Set ID][ ][Data][Cr]

Data Min: 1 ~ Max: FE(\*transmit by Hexadecimal code)

Unit: Second

**Acknowledgement** [r][ ][Set ID][ ][OK/NG][Data][x]

## 27. Orbiter Pixel Setting (Command2:s)

(Only 50PC1DR/50PC1DRA models)

To adjust pixel number in orbiter function.

**Transmission** [j][s][ ][Set ID][ ][Data][Cr]

Data Min: 1 ~ Max: 3

**Acknowledgement** [s][ ][Set ID][ ][OK/NG][Data][x]

## 28. Tune Command (Command: m a)

To tune channel to following physical/major/minor number.

**Transmission** [m][a][ ][Set ID][ ][Data0][ ][Data1][ ][Data2][ ][Data3][ ][Data4][ ][Data5][Cr]

Data 0: Physical Channel Number(Transmit by Hexadecimal code)

NTSC air:02~45

NTSC cable: 01, 0E~7D

ATSC air:01~45

ATSC cable:01~87

Data 1,Data2: Major Channel Number (two part) / Channel Number (One part)

Data 1: High byte

Data 2: Low byte

Two part channel number:

Major number-Minor number

One part channel number:

If the channel band is ATSC digital cable, it can be used. In case of using one part channel number, minor channel does not need.

Data 3, Data 4: Minor Channel Number

Data 3: High byte , Data 4: Low byte

Data5:

7	Main/Sub Picture	6	Using Physical Channel	5	Two/One Part Channel	4	Reserved	3	2	1	0	Step
0	Main	0	Two	0	Use	x		0	0	0	0	NTSC Air
1	Sub	1	One	1	No Use	x		0	0	0	1	NTSC Cable
						x		0	0	1	0	ATSC Air
						x		0	0	1	1	ATSC Cable_std
						x		0	1	0	0	ATSC Cable_hrc
						x		0	1	0	1	ATSC Cable_irc
						x		0	1	1	0	ATSC cable_auto
						x		0	1	1	1	Reserved
						x		x	x	x	x	...
						x		1	1	1	1	Reserved

All data are transmitted by Hexadecimal code

\* Two/One part Channel: 6th bit

This bit is used in a cable-ready system.

\* Using physical channel: 5th bit

If the channel band is NTSC air or NTSC cable, channel tuning can be done by only physical channel. In this case, using physical channel bit must be low(0).

But if the channel band is ATSC air or ATSC cable, there are two cases that physical channel enable or disable.

If the physical channel sending is meaningful, you should set this bit low(0). If the physical channel sending is meaningless, you should set this bit high(1).

Example)

1. Analog channel: NTSC cable, channel number(35), main picture Command: ma 00 23 xx xx xx 01 attribute(0x01): main picture, two part(it's not mandatory), using physical channel, NTSC cable 'xx' data: don't care major and minor channel number in case analog channel tuning.
2. Digital channel: ATSC air, channel number(don't know physical channel, major(30), minor(3)), sub picture Command: ma 00 xx 00 1E 00 03 A2 attribute(0xA2): sub picture, two part, not using physical channel, ATSC air 'xx' data: don't care analog channel number in case digital channel tuning.
3. Digital channel: ATSC air, channel number(physical(20),major(20), minor(3)), sub picture Command: ma 00 14 00 14 00 03 82

attribute(0x82): sub picture, two part, using physical channel, ATSC air.

**Acknowledgement**[a][ ][Set ID][ ][OK][Data0][Data1][Data2][Data3][Data4][x][a][ ][Set ID][ ][NG][Data0][x]

### 29. Channel Add/Del (Command: m b)

To add and delete the channels

**Transmission** [m][b][ ][Set ID][ ][Data][Cr]

Data 0: Channel Delete      Data 1: Channel Add

**Acknowledgement** [b][ ][Set ID][ ][OK/NG][Data][x]

### 30. Key (Command: m c)

To send IR remote key code.

**Transmission** [m][c][ ][Set ID][ ][Data][Cr]s

Data Key code: Refer to page 139.

**Acknowledgement** [c][ ][Set ID][ ][OK/NG][Data][x]

### 31. Input select(Command: x b) (Main Picture Input)

To select input source for TV.

**Transmission** [x][b][ ][Set ID][ ][Data][Cr]

- |                            |                          |
|----------------------------|--------------------------|
| Data 00 : DTV (Antenna)    | Data 01 : DTV (Cable)    |
| Data 10 : Analog (Antenna) | Data 11 : Analog (Cable) |
| Data 20 : AV1              | Data 21 : AV2            |
| Data 40 : Component 1      | Data 41 : Component 2    |
| Data 50 : RGB DTV          | Data 60 : RGB PC         |
| Data 90 : HDMI1/DVI        | Data 91 : HDMI2          |

**Acknowledgement** [b][ ][Set ID][ ][OK/NG][Data][x]

### 32. PIP Input Select(Command: x y)

To adjust input source for sub picture in PIP mode.

**Transmission** [x][y][ ][Set ID][ ][Data][Cr]

- |                            |
|----------------------------|
| Data 00 : DTV (Antenna)    |
| Data 01 : DTV (Cable)      |
| Data 10 : Analog (Antenna) |
| Data 11 : Analog (Cable)   |
| Data 20 : AV1              |
| Data 21 : Av2              |

**Acknowledgement** [y][ ][Set ID][ ][OK/NG][Data][x]

# APPENDIX

## IR CODES


### 1. How to Connect

- Connect your wired remote control to the Remote Control port on the TV.

### 2. Remote Control IR Codes

#### ■ Output waveform


Single pulse, modulated with 37.917KHz signal at 455KHz

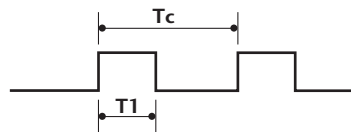


Carrier frequency  
 $FCAR = 1/TC = fOSC/12$   
 Duty ratio =  $T1/TC = 1/3$

#### ■ Configuration of frame

 
1st frame




Repeat frame

 



#### ■ Lead code

 

#### ■ Repeat code

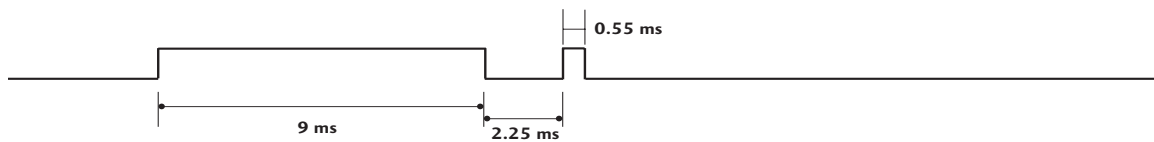


#### ■ Bit description

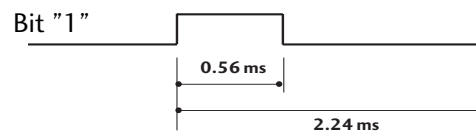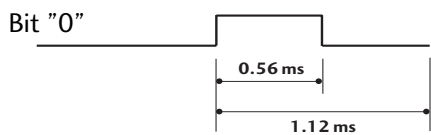

#### ■ Frame interval: Tf

 The waveform is transmitted as long as a key is depressed.



Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
9E	LIVE TV	R/C Button	BF	COMPONENT1	Discrete IR Code
0B	INPUT	R/C Button			(Component1 Input Selection)
08	POWER	R/C Button (Power On/Off)	D4	COMPONENT2	Discrete IR Code
79	RATIO	R/C Button			(Component2 Input Selection)
0E	TIMER	R/C Button	D5	RGB-PC	Discrete IR Code
10-19	Number Key 0-9	R/C Button			(RGB-PC Input Selection)
4C	- (Dash)	R/C Button	D7	RGB-DTV	Discrete IR Code
1A	FLASHBK	R/C Button			(RGB-DTV Input Selection)
09	MUTE	R/C Button	C6	HDMI1/DVI	Discrete IR Code
02	VOL ▲	R/C Button			(HDMI1/DVI Input Selection)
03	VOL ▼	R/C Button	CC	HDMI2	Discrete IR Code
00	CH ▲	R/C Button			(HDMI2 Input Selection)
01	CH ▼	R/C Button	76	Ratio 4:3	Discrete IR Code
1E	FAV	R/C Button			(Only 4:3 Mode)
AA	INFO	R/C Button	77	Ratio 16:9	Discrete IR Code
39	CC	R/C Button			(Only 16:9 Mode)
40	▲	R/C Button	AF	Ratio Zoom	Discrete IR Code
41	▼	R/C Button			(Only Zoom1 Mode)
07	◀	R/C Button	70	POP	Discrete IR Code
06	▶	R/C Button			(Channel Search)
44	ENTER	R/C Button	C4	POWER ON	Discrete IR Code
43	MENU	R/C Button			(Only Power On)
52	EZ SOUND	R/C Button	C5	POWER OFF	Discrete IR Code
4D	EZ PIC	R/C Button			(Only Power Off)
5B	EXIT	R/C Button	B0	PLAY	R/C Button
60	PIP	R/C Button	BA	PAUSE	R/C Button
72	PIPCH -	R/C Button	B1	STOP	R/C Button
71	PIPCH +	R/C Button	BD	REC	R/C Button
61	PIP INPUT	R/C Button	8F	REW	R/C Button
63	SWAP	R/C Button	8E	FF	R/C Button
0A	SAP	R/C Button	B2	GOTOPREV	R/C Button
CB	ADJUST	R/C Button	B3	GOTONEXT	R/C Button
D6	TV	Discrete IR Code (TV Input Selection)	A9	TV GUIDE	R/C Button
			92	APM	R/C Button
5A	AV1	Discrete IR Code (AV1 Input Selection)	7C	X STUDIO	R/C Button
			7D	MARK	R/C Button
D0	AV2	Discrete IR Code (AV2 Input Selection)	90	REC LIST	R/C Button

# APPENDIX

## PROGRAMMING THE REMOTE CONTROL

The provided universal remote control can be programmed to operate most remote-controllable devices. Note that the remote may not control all models of other brands.

### Programming a code into a remote mode

- 1** To find out whether your remote control can operate each device without programming, turn on the device (such as a VCR) and press the corresponding mode button on the remote. After that, press the **POWER** button. If the device is turned off and it responds properly the remote control need not be programmed. If not, the remote should be programmed to operate the device. The programming procedures are explained below.
- 2** Press the **MENU** and **MUTE** button continuously at the same time for two seconds; the currently selected device button is illuminated. If you don't press any button for 20 seconds, the light on the mode button will be turned off. In that case, you have to repeat from step 2.
- 3** Enter the appropriate code from the code table on the following pages. When pressing the button, the light blinks at a time. If the device turned off, the programming is successful.
- 4** Press the **MENU** button to store the code. After blinking twice, this code is stored.
- 5** Test the remote control functions to see if the device responds properly. If not, steps 2-5.

## REMOTE CONTROL CODES

### VCRs

Brand	Codes	Brand	Codes	Brand	Codes
AIWA	034	MAGNAVOX	031 033 034 041	SAMSUNG	032 040 102 104
AKAI	016 043 046 124 125 146		067 068 012 031 033 067		105 107 109 112 113 115 120 122 125
AMPRO	072	MARANTZ	069	SANSUI	022 043 048 135
ANAM	031 033 103	MARTA	101	SANYO	003 007 010 014 102 134
AUDIO DYNAMICS	012 023 039 043	MATSUI	027 030	SCOTT	017 037 112 129 131
BROKSONIC	035 037 129	MEI	031 033	SEARS	003 008 009 010 013 014 017 020 031 042 073 081 101
CANON	028 031 033	MEMOREX	003 010 014 031 033 034 053 072 101 102 134 139	SHARP	031 054 149
CAPEHART	108			SHINTOM	024
CRAIG	003 040 135	MGA	045 046 059	SONY	003 009 031 052 056 057 058 076 077 078 149
CURTIS MATHES	031 033 041	MINOLTA	013 020	SOUNDESIGN	034
DAEWOO	005 007 010 064 065 108 110 111 112 116 117 119	MITSUBISHI	013 020 045 046 049 051 059 061 151	STS	013
DAYTRON	108	MTC	034 040	SYLVANIA	031 033 034 059 067
DBX	012 023 039 043	MULTITECH	024 034	SYMPHONIC	034
DYNATECH	034 053	NEC	012 023 039 043 048	TANDY	010 034
ELECTROHOME	059	NORDMENDE	043	TATUNG	039 043
EMERSON	006 017 025 027 029 031 034 035 036 037 046 101 129 131 138 153	OPTONICA	053 054	TEAC	034 039 043
FISHER	003 008 009 010	PANASONIC	066 070 074 083 133 140 145	TECHNICS	031 033 070
FUNAI	034	PENTAX	013 020 031 033 063	TEKNIKA	019 031 033 034 101
GE	031 033 063 072 107 109 144 147	PHILCO	031 034 067	THOMAS	034
GO VIDEO	132 136	PHILIPS	031 033 034 054 067 071 101	TMK	006
HARMAN KARDON	012 045	PILOT	101	TOSHIBA	008 013 042 047 059 082 112 131
HITACHI	004 018 026 034 043 063 137 150	PIONEER	013 021 048	TOTEVISION	040 101
INSTANTREPLAY	031 033	PORTLAND	108	UNITECH	040
JCL	031 033	PULSAR	072	VECTOR RESEARCH	012
JCPENNY	012 013 015 033 040 066 101	QUARTZ	011 014	VICTOR	048
JENSEN	043	QUASAR	033 066 075 145	VIDEO CONCEPTS	012 034 046
JVC	012 031 033 043 048 050 055 060 130 150 152	RCA	013 020 033 034 040 041 062 063 107 109 140 144 145 147	VIDEOSONIC	040
KENWOOD	014 034 039 043 047 048	REALISTIC	003 008 010 014 031 033 034 040 053 054 101	WARDS	003 013 017 024 031 033 034 040 053 054 131
LG (GOLDSTAR)	001 012 013 020 101 106 114 123	RICO	058	YAMAHA	012 034 039 043
LLOYD	034	RUNCO	148	ZENITH	034 048 056 058 072 080 101
LXI	003 009 013 014 017 034 101 106	SALORA	014		
MAGIN	040				

# APPENDIX

## Cable Box

Brand	Codes	Brand	Codes	Brand	Codes
ABC	003 004 039 042 046 052 053	LG (GOLDSTAR)	074 001 106 101 005	REMBRANT	025
AJIN	112	M-NET	037	SAMSUNG	102 107 030 068
ANTRONIK	014	MACOM	033	SCIENTIFIC ATLANTA	003 011 041 042 043 045 046
ARCHER	005 007 014 024	MAGNAVOX	010 012 064 079	SHERITECH	022
CABLE STAR	026	MEMOREX	100	SIGNAL	030
CENTURION	092	MOVIE TIME	028 032	SIGNATURE	052
CENTURY	007	NSC	015 028 038 071 073	SL MARX	030
CITIZEN	007	OAK	016 031 037 053	SPRUCER	047 078
COLOUR VOICE	065 090	PANASONIC	044 047	STARCOM	002 004 008 009
COMBANO	080 081	PARAGON	100	STARGATE	008 030
COMTRONICS	019 030	PHILIPS	006 012 013 020 065 085 090	TADIRAN	030
DIAMOND	023	PIONEER	034 051 052 063 076	TAEKWANG	110
EAGLE	020 030 040	POST NEWS WEEK	016	TAIHAN	105
EASTERN	057 062 066	PRUCER	059	TANDY	017
ELECTRICORD	032	PTS	011 048 071 072 073 074	TEXSCAN	029
GE	072	PULSAR	100	TOCOM	039 040 056
GEMINI	008 022 025 054	RCA	047	TOSHIBA	100
GI	052 074	REGAL	049 050	UNIKA	007 014 024
GOLDEN CHANNEL	030	REGENCY	057	UNITED CABLE	004 053
HAMLIN	049 050 055			UNIVERSAL	005 007 014 024 026 027 032 035
HITACHI	052 055			VIEWSTAR	012 015 018 086
HOSPITALITY	070 077				087 088 089
JERROLD	002 003 004 008 009 010 052 069			ZENITH	100 114 060 093

## HDSTB

Brand	Codes	Brand	Codes	Brand	Codes
ALPHASTAR DSR	123	HOUSTON TRACKER	033 037 039 051 057 104	PROSAT	072
AMPLICA	050	HUGHES	068	RCA	066 106
BIRDVIEW	051 126 129	JANIEL	060 147	REALISTIC	043 074
CHANNEL MASTER	013 014 015 018 036 055	JERROLD	061	SAMSUNG	123
CHAPARRAL	008 009 012 077	KATHREIN	108	SATELLITE SERVICE CO	028 035 047 057 085
CITOH	054	LEGEND	057	SCIENTIFIC ATLANTA	032 138
CURTIS MATHES	050 145	LG	001	SONY	103
DRAKE	005 006 007 010 011 052 112 116 141	LUTRON	132	STARCAST	041
DX ANTENNA	024 046 056 076	LUXOR	062 144	SUPER GUIDE	020 124 125
ECHOSTAR	038 040 057 058 093 094 095 096 097 098 099 100 122	MACOM	010 059 063 064 065	TEECOM	023 026 075 087 088 090 107 130 137
ELECTRO HOME	089	MEMOREX	057	TOSHIBA	002 127
EUROPLUS	114	NEXTWAVE	028 124 125	UNIDEN	016 025 042 043 044 045 048 049 078 079 080 086 101 135 136
FUJITSU	017 021 022 027 133 134	NORSAT	069 070	VIEWSTAR	115
GENERAL INSTRUMENT	003 004 016 029 031 059 101	PACE SKY SATELLITE	143	WINEGARD	128 146
HITACHI	139 140	PANASONIC	060 142	ZENITH	081 082 083 084 091 120
		PANSAT	121		
		PERSONAL CABLE	117		
		PHILIPS	071		
		PICO	105		
		PRESIDENT	019 102		
		PRIMESTAR	030 110 111		

## Audio

Brand	Codes	Brand	Codes	Brand	Codes
AIWA	014 028 070 096 125 129 139 229 230		157 158 159 160 189 207 222 224 225 226 227 243 247	RCX	092
AKAI	163			REALISTIC	103 106
ANAM	003 014 017 023 059 106 189 216 217 235 236	LOTTE	014 016 036 098 100 172 173 174 175 176 177 178 179 180 181 183 201 202 208 213 214 219 223 232 238 240	SAMSUNG	124 145 146 182 193 194 195 203 204 244 245 246
BURMECTER	252			SANSUI	011 135 138 144
CARVER	086			SANYO	019 083 234
CLARION	199			SCOTT	106 186
DAEWOO	027 053 060 084 102 148 198 221	LXI	103	SHARP	031 032 051 052 072 082 117 119 156 184 199 200 206 209
DENON	015 075 130 143	MAGNAVOX	111	SHERWOOD	005 006 158
FANTASIA	071	MARANTZ	002 018 020 025 034 041 081 090 097 112	SONY	044 045 109 114 118 126 248 249
FINEARTS	022			TAEKWANG	012 020 073 074 076 077 105 161 162 163 164 165 166 167 168 169 205 231 233 242
FISHER	089 099	MCINTOSH	049		
LG(GOLDSTAR)	001 021 024 029 087 107 108 110 190 191 192 210 211 212 239	MCS	104		
		MEMOREX	107		
		NAD	046		
HAITAI	034 035 188 222	ONKYO	013 040 041 047 048 056 057 132 133 140	TEAC	010 085 106 136 185 187 237
HARMAN/KARDON	068			TECHNICS	101 113 128 134 147 218
JVC	004 013 141	OPTIMUS	158	TOSHIBA	137
KEC	185 186 187	PANASONIC	007 033 064 113 142 220 241 251	THE	061
KOHEL	030	PENNEY	104	VICTOR	088 131
NAD	045 046	PHILIPS	026 112 143	WARDS	089
KENWOOD	038 050 067 089 170 171 197 206 215 222	PIONEER	039 042 043 063 065 091 093 094 115 123 127 250	YAMAHA	054 055 066 092 199
INKEL	037 058 062 069 078 079 095 121 122 149 150 151 152 153 154 155	QUASAR	113		
		RCA	080		

## DVD

Brand	Codes	Brand	Codes	Brand	Codes
APEX DIGITAL	022	MITSUBISHI	002	RCA	005 006
DENON	020 014	NAD	023	SAMSUNG	011 015
GE	005 006	ONKYO	008 017	SONY	007
HARMAN KARDON	027	PANASONIC	003 009	THOMPSON	005 006
JVC	012	PHILIPS	013	TOSHIBA	019 008
LG	001 010 016 025	PIONEER	004 026	YAMAHA	009 018
MAGNAVOX	013	PROCEED	021	ZENITH	010 016 025
MARANTZ	024	PROSCAN	005 006		



# APPENDIX

## TROUBLESHOOTING CHECKLIST

### The operation does not work normally.

The remote control doesn't work	<ul style="list-style-type: none"> <li>■ Check to see if there is any object between the product and the remote control causing obstruction. Ensure you are pointing the remote control directly at the TV.</li> <li>■ Ensure that the batteries are installed with correct polarity (+ to +, - to -).</li> <li>■ Ensure that the correct remote operating mode is set: TV, VCR etc.</li> <li>■ Install new batteries.</li> </ul>
Power is suddenly turned off	<ul style="list-style-type: none"> <li>■ Is the sleep timer set?</li> <li>■ Check the power control settings. Power interrupted.</li> <li>■ No broadcast on station tuned with Auto off activated.</li> </ul>

### The video function does not work.

No picture & No sound	<ul style="list-style-type: none"> <li>■ Check whether the product is turned on.</li> <li>■ Try another channel. The problem may be with the broadcast.</li> <li>■ Is the power cord inserted into wall power outlet?</li> <li>■ Check your antenna direction and/or location.</li> <li>■ Test the wall power outlet, plug another product's power cord into the outlet where the product's power cord was plugged in.</li> </ul>
Picture appears slowly after switching on	<ul style="list-style-type: none"> <li>■ This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.</li> </ul>
No or poor color or poor picture	<ul style="list-style-type: none"> <li>■ Adjust Color in menu option.</li> <li>■ Keep a sufficient distance between the product and the VCR.</li> <li>■ Try another channel. The problem may be with the broadcast.</li> <li>■ Are the video cables installed properly?</li> <li>■ Activate any function to restore the brightness of the picture.</li> </ul>
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> <li>■ Check for local interference such as an electrical appliance or power tool.</li> </ul>
Poor reception on some channels	<ul style="list-style-type: none"> <li>■ Station or cable product experiencing problems, tune to another station.</li> <li>■ Station signal is weak, reorient antenna to receive weaker station.</li> <li>■ Check for sources of possible interference.</li> </ul>
Lines or streaks in pictures	<ul style="list-style-type: none"> <li>■ Check antenna (Change the direction of the antenna).</li> </ul>

### The audio function does not work.

Picture OK & No sound	<ul style="list-style-type: none"> <li>■ Press the VOL or VOLUME button.</li> <li>■ Sound muted? Press MUTE button.</li> <li>■ Try another channel. The problem may be with the broadcast.</li> <li>■ Are the audio cables installed properly?</li> </ul>
No output from one of the speakers	<ul style="list-style-type: none"> <li>■ Adjust Balance in menu option.</li> </ul>
Unusual sound from inside the product	<ul style="list-style-type: none"> <li>■ A change in ambient humidity or temperature may result in an unusual noise when the product is turned on or off and does not indicate a fault with the product.</li> </ul>

### There is a problem in PC mode. (Only PC mode applied)

The signal is out of range (Invalid format)	<ul style="list-style-type: none"> <li>■ Adjust resolution, horizontal frequency, or vertical frequency.</li> <li>■ Check the input source.</li> </ul>
Vertical bar or stripe on background & Horizontal Noise & Incorrect position	<ul style="list-style-type: none"> <li>■ Work the Auto configure or adjust clock, phase, or H/V position. (Option)</li> </ul>
Screen color is unstable or single color	<ul style="list-style-type: none"> <li>■ Check the signal cable.</li> <li>■ Reinstall the PC video card.</li> </ul>

# APPENDIX

There is a problem on the TV Guide On Screen™ function.	
My Guide listings disappeared after a power failure	<ul style="list-style-type: none"> <li>You should begin to receive listings again within 24 hours.</li> </ul>
Some channel numbers in the Guide are incorrect.	<ul style="list-style-type: none"> <li>You can correct them using Change Channel Display under the Setup menu.</li> </ul>
I have not received any Guide listings.	<ul style="list-style-type: none"> <li>Listings usually appear within 24 hours after a successful Setup.</li> <li>It may take up to a week to fill the Listings grid with the full 8 days of listings.</li> <li>If you see a Listings grid with the message "No Listings" displayed you should start to receive updated program listings within 24 hours.</li> <li>If the message "No data for this screen" is displayed:                             <ul style="list-style-type: none"> <li>Check the connections between the TV, cable, antenna.</li> <li>Verify Setup information under Change System Settings.</li> <li>If this message is still displayed after multiple days, please contact the LG®Brand Customer Support.</li> </ul> </li> </ul>
A show I set to Record did not occur	<ul style="list-style-type: none"> <li>Check the Schedule menu and verify that the show is listed before recording begins.</li> </ul>
I set a show to Auto-Tune and it did not.	<ul style="list-style-type: none"> <li>Check the Schedule menu and verify that the show is listed as a Reminder.</li> <li>Highlight the show under Listings and do the following:                             <ul style="list-style-type: none"> <li>Press the Menu key on the remote.</li> <li>Use the down arrow to highlight Edit Reminder, and press <b>ENTER</b>.</li> <li>Verify the Auto-Tune option reads Yes.</li> </ul> </li> <li>The TV must be On at the scheduled time for Auto-Tune.</li> </ul>
I set a show with the Power On TV option and it did not	<ul style="list-style-type: none"> <li>Check the Schedule menu and verify that the show is listed as a Reminder.</li> <li>Highlight the show under Listings and do the following:                             <ul style="list-style-type: none"> <li>Press the Menu key on the remote.</li> <li>Use the down arrow to highlight Edit Reminder, and press <b>ENTER</b>.</li> <li>Verify the Power On TV option reads Yes.</li> </ul> </li> </ul>

## MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you can enjoy your new TV.

**Caution:** Be sure to turn the power off and unplug the power cord before you begin any cleaning.

### Cleaning the Screen

- 1 Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- 2 Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

### Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Please be sure not to use a wet cloth.

### Extended Absence

#### ⚠ CAUTION

- ▶ If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

## PRODUCT SPECIFICATIONS

MODELS	50PC1DR / 50PC1DRA ( 50PC1DR-UA / 50PC1DRA-UA )	42LB1DR / 42LB1DRA ( 42LB1DR-UA / 42LB1DRA-UA )
With Stand:		
Width x Height x Depth (inches/mm)	(51.3/1302.6)x(34.3/872.0)x(14.0/355.8)	(46.3/1175.0)x(30.2/768.0)x(11.8/300.0)
Weight (pounds / kg)	(117.0 / 53.1)	(90.4 / 41.0)
Without Stand:		
Width x Height x Depth (inches/mm)	(51.3/1302.6)x(31.9/810.0)x(4.3/108.7)	(46.3/1175.0)x(26.4/670.0)x(5.7/143.8)
Weight (pounds / kg)	(97.7 / 44.3)	(71.4 / 32.4)
Resolution	1366 x 768 (Dot)	
Power requirement	AC100-240V~ 50/60Hz	
Television System	NTSC-M, ATSC, 64 & 256 QAM	
Program Coverage	VHF 2-13, UHF 14-69, CATV 1-135, DTV 2-69, CADTV 1-135	
External Antenna Impedance	75 Ω	
Operating Temperature Range	0 ~ 40°C	
Operating Humidity Range	Less than 80%	
Storage Temperature Range	-20 ~ 60°C	
Storage Humidity Range	Less than 85%	

- The specifications shown above may be changed without prior notice for quality improvement.