



E-MANUAL



imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

Model _____ Serial No. _____

Contents

Channel Menu

- Using the Channel Menu 1
- Using the Favorite Channels 19
- Memorizing Channels 23
- Other Features 27

Basic Features

- Changing the Preset Picture Mode 29
- Adjusting Picture Settings 30
- Changing the Picture Size 31
- Changing the Picture Options 37
- Using the TV with Your PC 47
- Changing the Preset Sound Modes 51
- Adjusting Sound Settings 52

Preference Features

- Wired Network Connection 61
- Wireless Network Connection 72
- Setting the Time 103
- Blocking Programs 112
- Economical Solutions 126
- Picture In Picture (PIP) 133
- Other Features 136
- Support Menu 147


Advanced Features

- **3D** 160
- Smart Hub 172
- Setting up Smart Hub 186
- Using Smart Hub 208
- **Videos** 218
- **Music** 225
- **Photos** 229
- Smart Hub - Additional Functions 232
- Using Samsung Apps 237
- **AllShare™** 251
- Anynet+(HDMI-CEC) 257

Other Information Menu

- Troubleshooting 267
- Anti-theft Kensington Lock 282
- License 284

□ Using the Channel Menu

To access the **Channel** Menu, press the **SMART HUB** button on your remote. After Smart Hub appears, use the arrow buttons on your remote to select **Channel**, and then press the **ENTER**  button.



- The displayed image may differ depending on the model.

■ Schedule Manager

 **SMART HUB** → **Schedule Manager** → **ENTER** 






Press the **SMART HUB** button on your remote, and then select **Schedule Manager** to access the **Timer Viewing** function. **Timer Viewing** lets you display the channel you want at the time of your choice.

Using the Timer Viewing

You can set the TV to display a desired channel automatically on a day and at a time of your choice.

- ✍ You must set the current time first using the **Time** → **Clock** function in the **System** menu to use this function.


To use Timer Viewing, follow these steps:


1. Press the **ENTER**  button to add manual booking.
2. Press the  /  /  /  buttons to set **Antenna**, **Channel**, **Repeat**, **Date**, and **Start Time**.
 - **Antenna**: Select the desired broadcast signal.
 - **Channel**: Select the desired channel.
 - ✍ You can only select memorized channels.

- **Repeat:** Select **Once**, **Manual**, **Sat~Sun**, **Mon~Fri** or **Everyday**. If you select **Manual**, you can set the day you want.
 - ☑ The ✓ mark indicates a day you selected.
- **Date:** You can set a desired date.
 - ☑ **Date** is available only when you select **Once** in **Repeat**.
- **Start Time:** You can set the start time you want.
 - ☑ On the **Schedule Manager** screen, Choose a schedule so you can change or cancel a schedule viewing.
- **Cancel Schedules:** Cancel a scheduled viewing.
- **Edit:** Change a scheduled viewing.
- **Return:** Return to the previous screen.

■ Channel List

The **Channel List** contains the channels your TV displays (**Added Channels**) when you press the **Channel** button on your remote. On the **Channel List**, you can view **Added Channels**, channel information, **Favorites**, and manage channels.

 When you press the **CH LIST** button on the remote control, **Channel List** screen is displayed immediately.

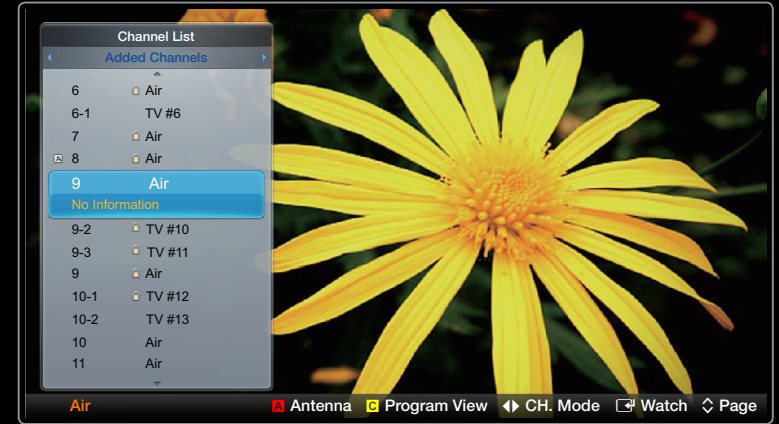



- The displayed image may differ depending on the model.

- **Added Channels:** Shows all added channels.
- **Favorites 1-5:** Shows all favorite channels, in up to five groups. Each group has a separate screen.
 - ☑ The TV displays **Favorites** only if you have added favorites using **Add to Favorites**.
 - ☑ If you want to view the list of favorite channels, press the **CH LIST** button, and then press the **▶ (CH Mode)** button to display **Favorites 1-5**. Press the **◀** button to return to the **Channel List**.

Using the colored and function buttons with the Channel List.

- **A** Red (**Antenna**): Switches the mode and display between **Air** or **Cable**.
- **C** Yellow (**Program View / Channel View**): For digital channels, switches the display between **Program View** and **Channel View**. When you select a digital channel in **Channel View**, press once to display a list of programs on that channel. Press again to re-display the **Channel List**.
- **◀ / ▶** (**CH Mode**): Toggles between the **Favorites** list (if you have added favorites using **Add to Favorites**) and the **Channel List**.
- **📺** (**Watch / Information**): Press to watch the channel you selected / Displays details of the selected program.
- **⏪ / ⏩** (**Page**): Scrolls the **Channel List** to the next or previous page.



Channel Status Display Icons

Icon	Operations
	An analog channel.
	A reserved program.

How to use Timer Viewing in Channel List (digital channels only)

You can use **Timer Viewing** in the **Channel List** to schedule a digital channel program for viewing. The TV will turn on and display the digital channel program when the program begins.

To schedule a digital program, follow these steps:

1. Press the **CH LIST** button, then select a desired digital channel.
2. Press the **C** (**Program View**) button.
3. Press the **▲** or **▼** buttons to select the desired program, and then press the **INFO** button.
4. Press the **◀** or **▶** buttons to select **Timer Viewing**, and then press the **ENTER**  button.
5. Press **RETURN**.
 -  If you want to cancel **Timer Viewing**, follow Steps 1 through 3, and then select **Cancel Schedules**.





■ Channel

 SMART HUB → Channel → ENTER 






Using the **Channel** function, you can add channels, delete Added channels, set Favorite channels, use the program guide for digital broadcasts and change between the **All Channels** and **Added Ch.** screen. You can also change the antenna or channel settings by selecting the icons in the top right corner of the screen.







- The displayed image may differ depending on the model.








-  **Antenna:** Toggle between **Air** or **Cable**. To access the **Antenna** function, use the arrow buttons to move the cursor to the **Antenna** icon on the top right corner of the screen.
 -  **Edit Mode:** Add channels to the **Favorites** list and delete channels from the **Channel List**.
-  To change between **All Channels** and **Added Ch.**, select **All Channels** or **Added Ch.** on the screen, and then press the **ENTER**  button.



- **Edit Mode:** Setting channels you watch frequently as favorites.
 1. Select the  **Edit Mode** on the upper right of your screen, and then press the **ENTER**  button.
 2. Press the arrow buttons to select a channel as a favorite, and then press **ENTER** . A check appears to the left of the channel.
 - You can select more than one channel.
 - Pressing **ENTER**  again deselects the channel.
 3. Select **Edit Favorites** at the bottom of your screen, and then press **ENTER** . The **Edit Favorites** pop-up appears.

4. Highlight a group on the Favorites list, and then press **ENTER** .
-  The **Edit Favorites** screen has five groups (Favorites 1, Favorites 2, etc.). You can add a favorite channel to any one of the groups. Select a group using the up and down arrows on your remote.
5. Select **OK**, press **ENTER** , and then press **ENTER**  again.







- Using **Edit Mode** to Delete a Channel from the Channel List
 1. Select the  **Edit Mode** on the upper right of your screen, and then press the **ENTER**  button.
 2. Press the ◀ / ▶ / ▲ / ▼ buttons to select a channel, and then press **ENTER** . A check appears to the left of the channel.
 - ☑ You can select more than one channel.
 - ☑ Pressing **ENTER**  again deselects the channel.
 3. Select **Delete** at the bottom of your screen, and then press **ENTER** . A pop-up appears asking if you want to delete the item.
 4. Select **OK**, press **ENTER** , and then press **ENTER**  again. The channel is deleted from the Channel List.
 - ☑ The Deselect function that appears with the Delete function lets you deselect all selected channels.

Using the **TOOLS** button with **Channel**





To use the **TOOLS** button functions, highlight a channel in the **Added Ch. List** or **All Channels** list, and then press the **TOOLS** button.

- **Add / Delete:** Add a channel to or delete a channel from the **Added Ch. List**. When you use the Channel button on your remote to change channels, your TV only displays the channels on the **Added Ch. List**.



To **Add** a channel using the **TOOLS** button in **Channel**, follow these steps:

1. Use the arrow buttons to select **All Channels**, and then press **ENTER** .
 **All Channels** will be at the very top or bottom of the screen.
2. On the **All Channels** screen, select a greyed out channel.
3. Press the **TOOLS** button.
4. Select **Add** on the **TOOLS** menu, press **ENTER** , and then press **ENTER**  again.

To **Delete** a channel using the **TOOLS** button in **Channel**, follow these steps:






1. Use the arrow buttons to select **Added Ch.**, and then press **ENTER** .
 **Added Ch.** will be at the very top or bottom of the screen.
2. On the **Added Ch.** screen, select a channel.
3. Press the **TOOLS** button.
4. Select **Delete** on the **TOOLS** menu, press **ENTER** , and then press **ENTER**  again.

NOTE

- Your TV lists all available channels, both Added and deleted, on the **All Channels** menu.
- A gray-colored channel indicates the channel has been deleted.
- **Add** only appears if you have selected a deleted channel on the **All Channel** list.
- **Delete** only appears if you have selected an Added channel on the **Added Ch.** or **All Channels** list.
- You can also delete a channel on the **All Channels** list. Added channels are bright. Deleted channels are dim. To delete an **Added** channel on the **All Channels** list, select a bright channel, press the **TOOLS** button, select **Delete**, press **ENTER** , then press **ENTER**  again.




- **Edit Favorites:** Removing a channel from list of favorites using the **TOOLS** button.

To remove a channel from the list of favorites, follow these steps:

1. Highlight a favorite channel in the **Added Ch.** or **All Channels** list, and then press the **TOOLS** button.
2. Select **Edit Favorites** in the **TOOLS** menu, and then press the **ENTER**  button. The **Edit Favorites** screen appears.
3. The group this favorite is assigned to has a  mark in front of it. Highlight that group on the **Edit Favorites** screen, press the **ENTER**  button.
4. Select **OK**, press the **ENTER**  button, and then press the **ENTER**  button again. The channel is removed from the list of favorites.

- **Channel Name Edit** (Appears only if you have selected an analog channel.): Assign a name of up to five characters to a channel. For example, Hist, Food, Golf, etc. This makes it easier to find and select the channel.
- **Program Schedule** (Appears only if you have selected a digital channel.): View details on the program being aired on the selected digital channel.

Channel Status Display Icons

Icon	Operations
	An analog channel.
	A selected channel.
	A favorite channel.



□ Using the Favorite Channels

■ Favorites


 **SMART HUB** → **Favorites** → **ENTER** 





View all of your favorite channels.



Your favorite channels are organized in up to five groups (**Favorites 1-5**). If you want to move from one favorite group to another, follow these steps:

1. Move the cursor to the group name displayed on the top of the screen, and then press the **ENTER**  button. A list of groups appears.
2. Use the up or down arrow key to select a group, and then press the **ENTER**  button. The group you select appears on the screen.












Functions on the Favorites Screen





To access the functions listed below, use the arrow buttons to move the cursor to the icon of your choice on the top right corner of the screen, and then press **ENTER** .

-  **View Mode:** Toggles between the **Text view** and **Thumbnail view** of your favorite channels. **Thumbnail view** displays a picture of the program currently on.
-  **Antenna:** Toggles between **Air** and **Cable**.
-  **Sorting:** Toggles between sorting favorites by **Category** and sorting by **Title**.
-  **Edit Mode:** Delete channels from the Favorites list. For instructions, see the next page.

To use **View Mode**, **Antenna**, or **Sorting**, select the appropriate icon as described above, and then press **ENTER** . Use the left or right arrow button to make your selection, and then press **ENTER** .

Using Edit Mode to Delete a Favorite

1. Select the  **Edit Mode** icon on the upper right of your screen, and then press the **ENTER**  button.
2. Press the  /  /  /  buttons to select a channel, and then press **ENTER** . A check appears to the left of the channel.
 -  You can select more than one channel.
 -  Press **ENTER**  again to deselect the channel.
3. Select **Delete** at the bottom of your screen, and then press **ENTER** . A pop-up appears asking if you want to delete the item.

4. Select **OK**, press **ENTER** , and then press **ENTER**  again. The channel is deleted from Favorites.
-  The Deselect function that appears with the Delete function lets you deselect all selected channels.
-  If you have assigned a channel to more than one favorite group (say Favorites 1 and Favorites 2), you must repeat this process in both groups to remove a channel entirely from your Favorites.







❑ Memorizing Channels

📖 MENU  → Channel → ENTER 

■ Antenna (Air / Cable)

Your TV memorizes channels and adds the memorized channels to the **Channel List**. Before your TV can memorize channels, you must specify the signal source, either **Air** or **Cable**. If you select **Cable**, when you start **Auto Program**, you must also specify the cable system type, **STD**, **HRC**, or **IRC**. If you don't know your cable system type, contact your local cable company for the information. Most cable companies use **STD**.

- To select **Air** or **Cable**, follow these steps:
 1. Push **MENU**  → **Channel** → **ENTER**  on your remote.
 2. Select **Antenna**, and then press **ENTER** .
 3. Select the source of your TV signal, **Air** or **Cable**, and then press the **RETURN** button.
-  You can select both if you have both connected.




■ Auto Program


Scans for channels automatically and stores them in the TV's memory.

- To start **Auto Program**, follow these steps:


1. Push **MENU**  → **Channel** → **ENTER**  on your remote.

2. Select **Auto Program**, and then press **ENTER** .

3. Select **Air** or **Cable** or both by highlighting and then pressing **ENTER** .

 If you selected **Air** or **Cable** or both on the Antenna screen, your choice will already be selected.

4. Select **Next**, and then press **ENTER** .


5. If you selected **Cable**, the Cable System screen appears. Select **Digital**, and then press **ENTER** .

 If you selected **Antenna** only, **Auto Program** starts.

6. Select **STD**, **HRC**, or **IRC**, and then press **ENTER** .

7. Repeat for Analog.

8. Select **NEXT**, and then press **ENTER** . **Auto Program** starts.

 After all the available channels are stored, **Auto Program** removes scrambled channels. When done, the **Auto Program** menu then reappears. This process can take up to 30 minutes.

❑ Other Features

 MENU  → Channel → ENTER 

■ Clear Scrambled Channel


This function filters out scrambled channels after **Auto Program** is completed. This process may take up to 30 minutes.

How to Stop the Clear Scrambled Channels function

1. Press the **ENTER**  button to select **Stop**.

2. Press the  button to select **Yes**.

3. Press the **ENTER**  button.

 This function is only available in **Cable** mode.

■ Fine Tune

(analog channels only)

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually. Scroll to the left or right until the image is clear.

📝 Settings are applied to the channel you're currently watching.


📝 Fine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner.

📝 To reset fine-tuning, select **Reset**.



❑ Changing the Preset Picture Mode

📄 MENU  → Picture → Picture Mode → ENTER 

■ Picture Mode

Picture modes apply preset adjustments to the picture. Select a mode using the up and down arrow keys, and then press the **ENTER**  button.



📝 When connecting a PC, you can only select **Entertain** and **Standard**.





- **Dynamic**: Suitable for a bright room.
- **Standard**: Suitable for a normal environment.
- **Natural**  / **Relax** : Suitable for reducing eye strain.
- **Movie**: Suitable for watching movies in a dark room.
- **Entertain** (When connecting a PC): Suitable for watching movies and games.

□ Adjusting Picture Settings

 MENU  → Picture → ENTER 

■ Backlight / Cell Light / Contrast / Brightness / Sharpness / Color / Tint (G/R)



Your television has several options for adjusting picture quality. Select an option using the up and down arrow keys, and then press **ENTER** . Use the arrow keys to adjust the option value or select an option setting. When done, press **ENTER** .

-  When you make changes to **Backlight** / **Cell Light**, **Contrast**, **Brightness**, **Sharpness**, **Color** or **Tint (G/R)**, the OSD will be adjusted accordingly.
-  When connecting a PC, you can only make changes to **Backlight** / **Cell Light**, **Contrast**, **Brightness**, and **Sharpness**.
-  You can adjust and store Settings for each external device connected to the TV.
-  Lowering picture brightness reduces power consumption.

❑ Changing the Picture Size

 MENU  → Picture → Screen Adjustment → ENTER 

■ Screen Adjustment

Screen Adjustment provides various picture size and aspect ratio options. Select an option using the ▲ and ▼ arrow keys, and then press **ENTER** . Use the arrow keys to select an option in the sub-menu, and then press **ENTER** .



- **Picture Size:** If you have a cable box or satellite receiver, it may have its own set of screen sizes as well. However, we highly recommend you use your TV's **16:9** mode most of the time.

16:9: Sets the picture to 16:9 wide mode.

Zoom1: Use for moderate magnification. Cuts off the top and sides.

Zoom2: Use for a stronger magnification.

Wide Fit: Enlarges the aspect ratio of the picture so it fits the entire screen.

◀ Available with HD 1080i / 720p signals in 16:9 mode. ▶

4:3: Sets the picture to basic (4:3) mode.


Do not set your TV to 4:3 format for a long time. The borders displayed on the left and right, or top and bottom of the screen may cause image retention (screen burn) which is not covered by the warranty.


Screen Fit: When your TV inputs HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals, displays the full image without any cut-off.

Smart View 1 **for LED TV:** Reduces the 16:9 picture by 50%.


Smart View 2 **for LED TV:** Reduces the 16:9 picture by 25%.








 **Smart View 1** is enabled only in HDMI mode.


 **Smart View 2** is enabled only in HDMI or DTV mode.










 The picture size can vary depending on the input resolution when you play content from **Videos** in **Smart Hub**.

- **Position:** Adjusts the picture position. **Position** is only available if **Picture size** is set to **Zoom1**, **Zoom2**, **Wide Fit**, or **Screen fit**.

 To use the **Position** function after selecting **Zoom1**, **Zoom2** or **Wide Fit**, follow these steps:

1. Press the  button to select **Position**.
2. Press the **ENTER**  button.
3. Press the  or  button to move the picture up or down.
4. Press the **ENTER**  button.
5. Select **Close** by pressing the  and  buttons sequentially. To reset the picture position, press **Reset**.

 To use the Position function after selecting **Screen Fit** in HDMI (1080i/1080p) or Component (1080i/1080p), follow these steps:

1. Press the  button to select **Position**.
2. Press the **ENTER**  button.
3. Press the , ,  or  button to move the picture.
4. Press the **ENTER**  button.
5. Select **Close** by pressing the  and  buttons sequentially.



- HD (High Definition): 16:9 - 1080i/1080p (1920x1080), 720p (1280x720)
- You can adjust and store settings for each external device you have connected to an input on the TV.
- Picture Sizes available by Input Source:



Input Source	Picture Size
ATV, AV, Component (480i, 480p)	16:9, Zoom1, Zoom2, 4:3
HDMI (720p, 1080i, 1080p)	Smart View 1
DTV(1080i), HDMI (720p, 1080i, 1080p)	Smart View 2
DTV(1080i), Component (1080i, 1080p), HDMI (720p, 1080i, 1080p)	16:9, 4:3, Wide Fit, Screen Fit
PC	16:9, 4:3


❑ Changing the Picture Options

■ Advanced Settings

👆 MENU  → Picture → Advanced Settings → ENTER 

All Advanced Settings are available in the **Standard** and **Movie** modes. When connecting a PC, you can only make changes to **Gamma** and **White Balance**.

To use, select an option using the up and down arrow keys, and then press **ENTER** . Use the arrow keys to change the value or setting, and then press **ENTER** .

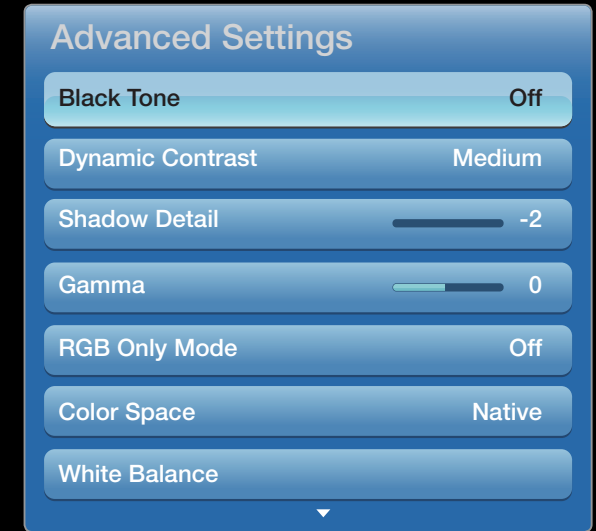

- The displayed image may differ depending on the model.

- **Black Tone (Off / Dark / Darker / Darkest)**: Select the black level to adjust the screen depth.
- **Dynamic Contrast (Off / Low / Medium / High)**: Adjusts the screen contrast.
- **Shadow Detail (-2 ~ +2)** for LED 5550 Series: Increases the brightness of dark images.
- **Gamma**: Adjusts the primary color intensity.
- **Expert Pattern (Off / Pattern1 / Pattern2)** for PDP 6900 Series and above: Use the **Expert Pattern** function to calibrate the picture. If the OSD menu disappears or a menu other than the Picture menu is opened, the TV saves the calibration and the **Expert Pattern** window disappears.

Off: Turns the **Expert Pattern** function off.

Pattern1: This test screen demonstrates the effect of the display settings on shades of grey and black.

Pattern2: This test screen demonstrates the effect of the display settings on colors.

☞ After selecting **Pattern1** or **Pattern2**, you can adjust any of the advanced settings for the desired effect.

☞ While the **Expert Pattern** is running, the TV does not output sound.

☞ Only enabled in DTV, Component, and HDMI modes.

- **RGB Only Mode (Off / Red / Green / Blue):** Displays the **Red**, **Green** and **Blue** colors so you can make fine adjustments to the hue and saturation.

- **Color Space (Auto / Native / Custom for PDP TV)**: Adjusts the range and variety of colors (the color space) available to create images.

☑ To adjust **Color**, **Red**, **Green**, **Blue** and **Reset**, set **Color Space** to **Custom**.

- **White Balance**: Adjusts the color temperature for a more natural picture.

R-Offset / G-Offset / B-Offset: Adjusts each color's (red, green, blue) darkness.

R-Gain / G-Gain / B-Gain: Adjusts each color's (red, green, blue) brightness.

Reset: Resets the White Balance to its default settings.

- **10p White Balance (Off / On)** **for PDP TV**: Controls the white balance in 10 point intervals by adjusting the red, green, and blue brightness.

☑ Available for all inputs when you set the picture mode to **Movie**.

☑ Some external devices may not support this function.

Interval: Select interval to adjust.

Red: Adjust the red level.

Green: Adjust the green level.



Blue: Adjust the blue level.


Reset: Resets the **10p White Balance** to its default settings.

- **Flesh Tone**: Emphasizes pink “Flesh Tone.”
- **Edge Enhancement (Off / On)**: Emphasizes object boundaries.
- **Motion Lighting (Off / On)**: Reduces power consumption by reducing screen brightness when the picture on the screen is in motion.
 - ☑ When you change the **Backlight** for LED TV / **Cell Light** for PDP TV, **Contrast** and **Brightness**, the TV sets **Motion Lighting** to **Off**.
- **xvYCC (Off / On)** for PDP TV: Setting **xvYCC** on increases picture detail and enlarges the color space when your are watching movies input from an external device (e.g. BD/DVD player) connected to the TV’s HDMI or Component IN jacks.
 - ☑ Available only when you set the picture mode to **Movie** and the external input to HDMI or Component.
 - ☑ Some external devices may not support this function.
- **LED Motion Plus (Off / On)** for LED 5550 Series: Removes blur and judder from scenes with a lot of fast movement to provide a clearer picture.


■ Picture Options


 **MENU**  → **Picture** → **Picture Options** → **ENTER** 


Select an option using the up and down arrow keys, and then press **ENTER** . Use the arrow keys to change the setting, and then press **ENTER** .

 When connecting a PC, you can only make changes to **Color Tone**.

- **Color Tone (Cool / Standard / Warm1 / Warm2)**

 **Warm1** or **Warm2** will be deactivated when the picture mode is **Dynamic**.

 You can adjust and store settings for each external device connected to an input on the TV.

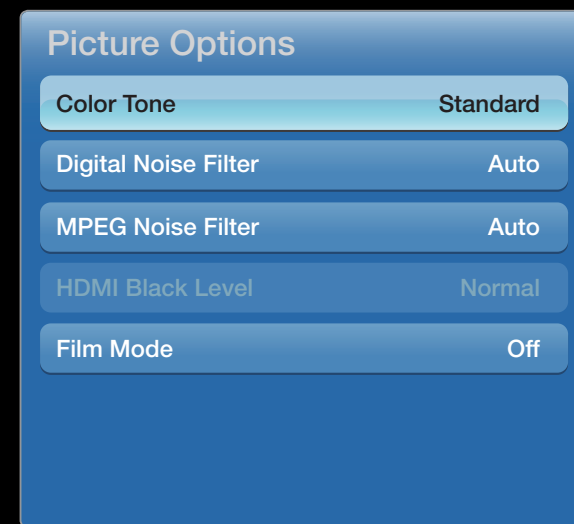

- The displayed image may differ depending on the model.

- **Digital Noise Filter (Off / Low / Medium / High / Auto / Auto Visualization):** If the broadcast signal received by your TV is weak, you can activate the **Digital Noise Filter** feature to reduce any static and ghosting that may appear on the screen.



☞ When the signal is weak, try all other options until the TV displays the best picture.

Auto Visualization: When changing analog channels, displays signal strength.

☞ Only available for analog channels.

☞ When the bar is green, you are receiving the best possible signal.

- **MPEG Noise Filter (Off / Low / Medium / High / Auto):** Reduces MPEG noise to provide improved picture quality.

- **HDMI Black Level (Low / Normal)**: Lets you adjust the screen depth by selecting a black level.
 Available only in HDMI mode.
- **Film Mode (Off / Auto1 / Auto2 / Cinema Smooth for PDP TV)**: Sets the TV so that it senses and then processes film signals from all sources automatically and adjusts the picture for optimum quality. The **Cinema Smooth** function is only active when the TV inputs an HDMI 24Hz signal.
 Available in TV, AV, COMPONENT (480i / 1080i) and HDMI (480i / 1080i).

- **Reset Picture (Yes / No)**

Resets your current picture mode to its default settings.



❑ Using the TV with Your PC

Set the input source to PC.

■ Auto Adjustment

 **MENU**  → **Picture** → **Auto Adjustment** → **ENTER** 

Automatically adjusts the picture's frequency, position, and fine tune settings in the **PC** mode.





 Available in **PC** mode only.

 Not available if you connect your PC with an HDMI to DVI cable.

■ PC Screen Adjustment

 MENU  → Picture → Screen Adjustment → PC Screen Adjustment → ENTER 

 Available in **PC** mode only.

- **Coarse / Fine**: Removes or reduces picture noise. If the noise is not removed by Fine-tuning alone, use the **Coarse** function to adjust the frequency as best as possible (**Coarse**) and Fine-tune again. After the noise has been reduced, re-adjust the picture so that it is aligned to the center of screen.
- **Position**: To adjust the PC's screen position if it is not centered or does not fit the TV screen. Press the  or  button to adjust the Vertical Position. Press the  or  button to adjust the Horizontal Position.
- **Image Reset**: Resets the image to the default settings.

Using Your TV as a Computer (PC) Display

Entering the Video Settings (Based on Windows XP)

For your TV to work properly as a computer display, you must enter the correct video settings.

- ☞ Depending on your version of Windows and your video card, the procedure on your PC will probably differ slightly from the procedure presented here. However, the same basic information will apply in most cases. (If not, contact your computer manufacturer or Samsung Dealer.)

1. Click “Control Panel” on the Windows start menu.
2. Click “Appearance and Themes” in the “Control Panel” window. A display dialog box appears.
3. Click “Display”. Another display dialog box appears.
4. Click the “Settings” tab on the display dialog-box.
 - On the Settings tab, set the correct resolution (screen size).
 - If a vertical-frequency option exists on your display settings dialog box, select “60” or “60 Hz”. Otherwise, just click “OK” and exit the dialog box.

❑ Changing the Preset Sound Modes

📄 MENU  → Sound → Sound Mode → ENTER 

■ Sound Mode

Use the up and down arrow keys to select an option, and then press **ENTER** .

- **Standard:** Selects the normal sound mode.
- **Music:** Emphasizes music over voices.
- **Movie:** Provides the best sound for movies.
- **Clear Voice:** Emphasizes voices over other sounds.
- **Amplify:** Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.

📄 If **Speaker Select** is set to **External Speaker**, **Sound Mode** is disabled.

□ Adjusting Sound Settings

📖 MENU  → Sound → ENTER 

■ Sound Effect

📖 If **Speaker Select** is set to **External Speaker**, **Sound Effect** is disabled.

📖 Available only when **Sound Mode** is set to **Standard**.

- **SRS TruSurround HD (Off / On)**

◀ This function provides a virtual 5.1 channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology. ▶

- **SRS TruDialog (Off / On)**


This function allows you to increase the intensity of a voice over background music or sound effects so that dialog can be heard more clearly.

- **Equalizer**

The **Equalizer** displays a series of sliders. Use the up and down arrow keys to select a slider. Use the left and right arrow keys to change the slider's value.

To **Reset** the **Equalizer**, select **Reset** and press **ENTER** , then press **ENTER**  again. To exit, select **Close**, and then press **ENTER** .

Equalizer is available in the standard sound mode only.

- **Balance L/R**: Adjusts the balance between the right and left speaker.
 - **100Hz / 300Hz / 1kHz / 3kHz / 10kHz** (Bandwidth Adjustment): Adjusts the volume level of specific bandwidth frequencies.
 - **Reset**: Resets the equalizer to its default settings.
-  If **Speaker Select** is set to **External Speaker**, **Equalizer** is disabled.



■ Broadcast Audio Options

- Preferred Language

(digital channels only)

Use the up and down arrow keys to select a language, and then press


ENTER .

Digital-TV broadcasts can simultaneously transmit many audio tracks (for example, simultaneous translations of the program into foreign languages).

 You can only select a language from among the ones being broadcasted.

- **Multi-Track Sound (MTS)** 


(analog channels only)

Select an option using the up and down arrow keys, and then press **ENTER** .

Mono: Choose for channels that are broadcasting in mono or if you are having difficulty receiving a stereo signal.


Stereo: Choose for channels that are broadcasting in stereo.

SAP: Choose to listen to the Separate Audio Program, which is usually a foreign-language translation.

 Depending on the program being broadcast, you can listen to **Mono**, **Stereo**, or **SAP**.

■ SPDIF Output

SPDIF (Sony Philips Digital Interface) provides digital audio output to speakers and various digital devices such as AV Receivers and Home Theaters which reduces interference and distortion.

- **Audio Format:** You can select the Digital Audio output (SPDIF) format.
 - ☑ The available Digital Audio output (SPDIF) format may differ depending on the input source.
- **Audio Delay:** Lets you correct timing mismatches between the audio track and the video when you are watching the TV and listening to digital audio output from the TV through an external device such as an AV receiver. When you select **Audio Delay**, a slider appears. Use the left and right arrow buttons to adjust the slider. Press **ENTER**  when done (0ms ~ 250ms).

■ Speaker Settings

- **Speaker Select (External Speaker / TV Speaker)**

If you are listening to the sound track of a broadcast or movie through an external receiver, you may hear a sound echo caused by the difference in decoding speed between the TV's speakers and the speakers attached to your audio receiver. If this occurs, set the TV to **External Speaker**.

☑ When you set **Speaker Select** to **External Speaker**, the TV's speakers are turned off. You will hear sound through the external speakers only. When you set **Speaker Select** to TV Speaker both the TV's speakers and the external speakers are on. You will hear sound through both.


☑ When **Speaker Select** is set to **External Speaker**, the **VOLUME** and **MUTE** buttons will not operate and the sound settings will be limited.

☑ If there is no video signal, both the TV's speakers and the external speakers will be mute.



- **Auto Volume (Off / Normal / Night)**

Normal equalizes the volume level on each channel, so that when you change channels, the volume level is the same.

Night equalizes and decrease the volume level on each channel, so each channel is quieter. **Night** is useful at night, when you may want to keep the volume low.

 To use the volume control of a connected source device, set **Auto Volume** to **Off**. A change to the volume control of the connected source device may not be applied if **Auto Volume** is set to **On**.

■ Reset Sound (OK / Cancel)

Reset all sound settings to the factory defaults. Select **Reset**, press **ENTER** , select **OK** in on the pop-up, and then press **ENTER**  again.




❑ Wired Network Connection


■ Connecting to a Wired Network

There are three ways to attach your TV to your LAN using cable:


- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a LAN cable. See the diagram below.

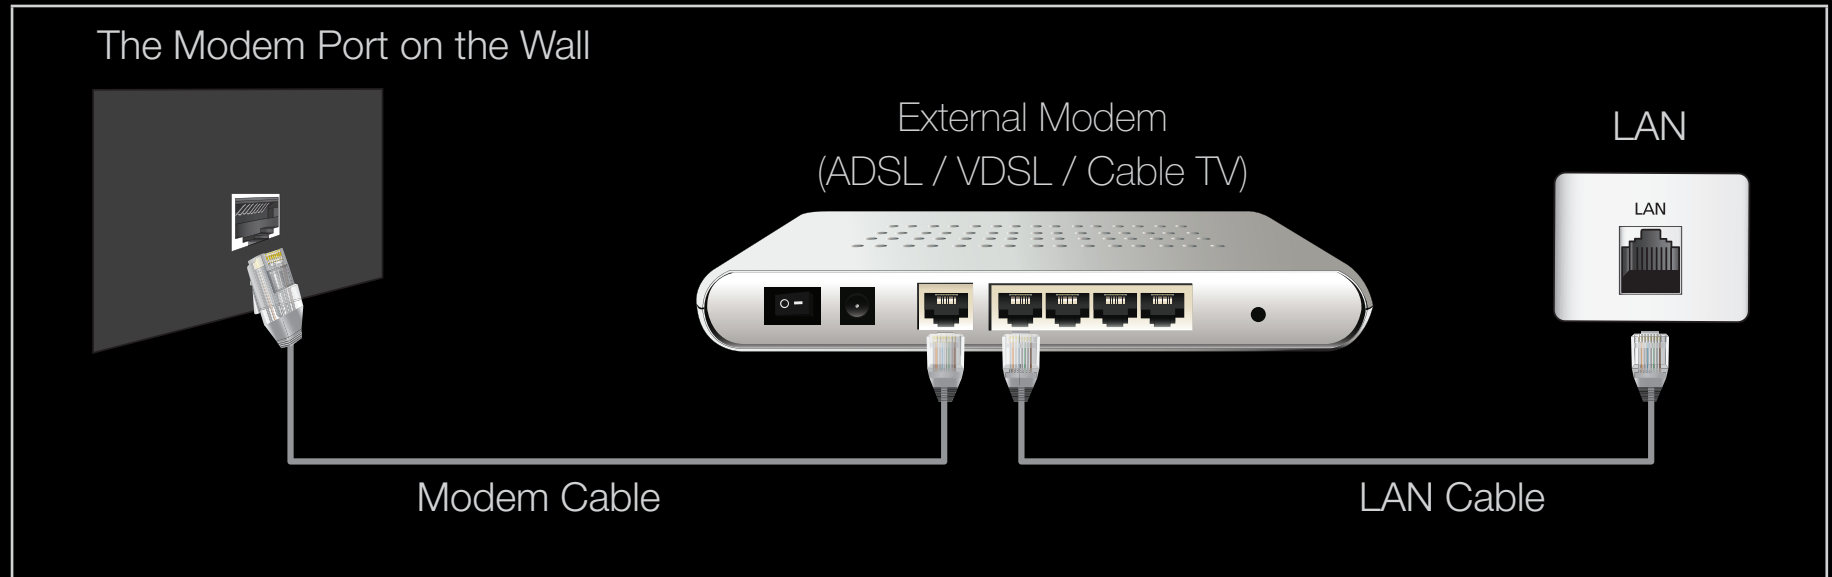

- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an IP Sharer which is connected to an external modem. Use LAN cable for the connection. See the diagram below.

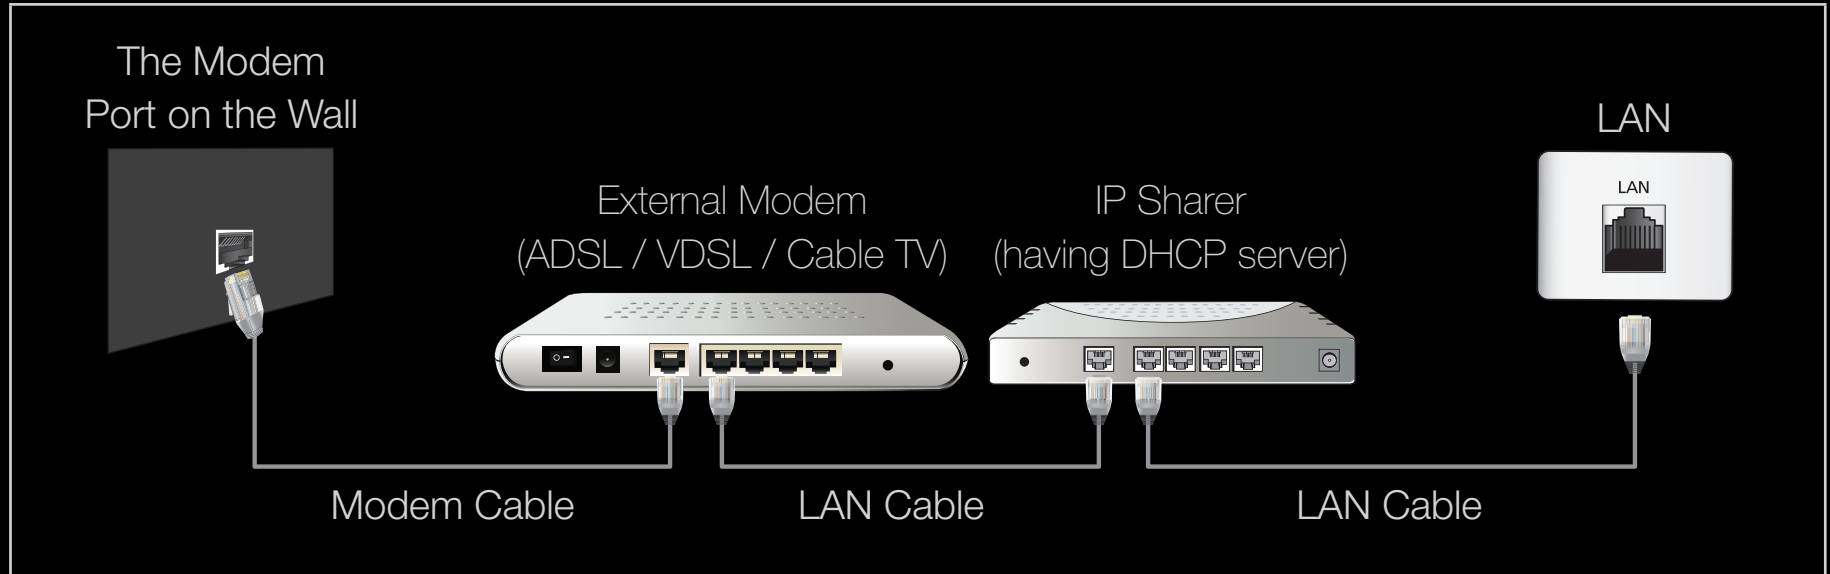

- Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet using a LAN cable. See the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house.

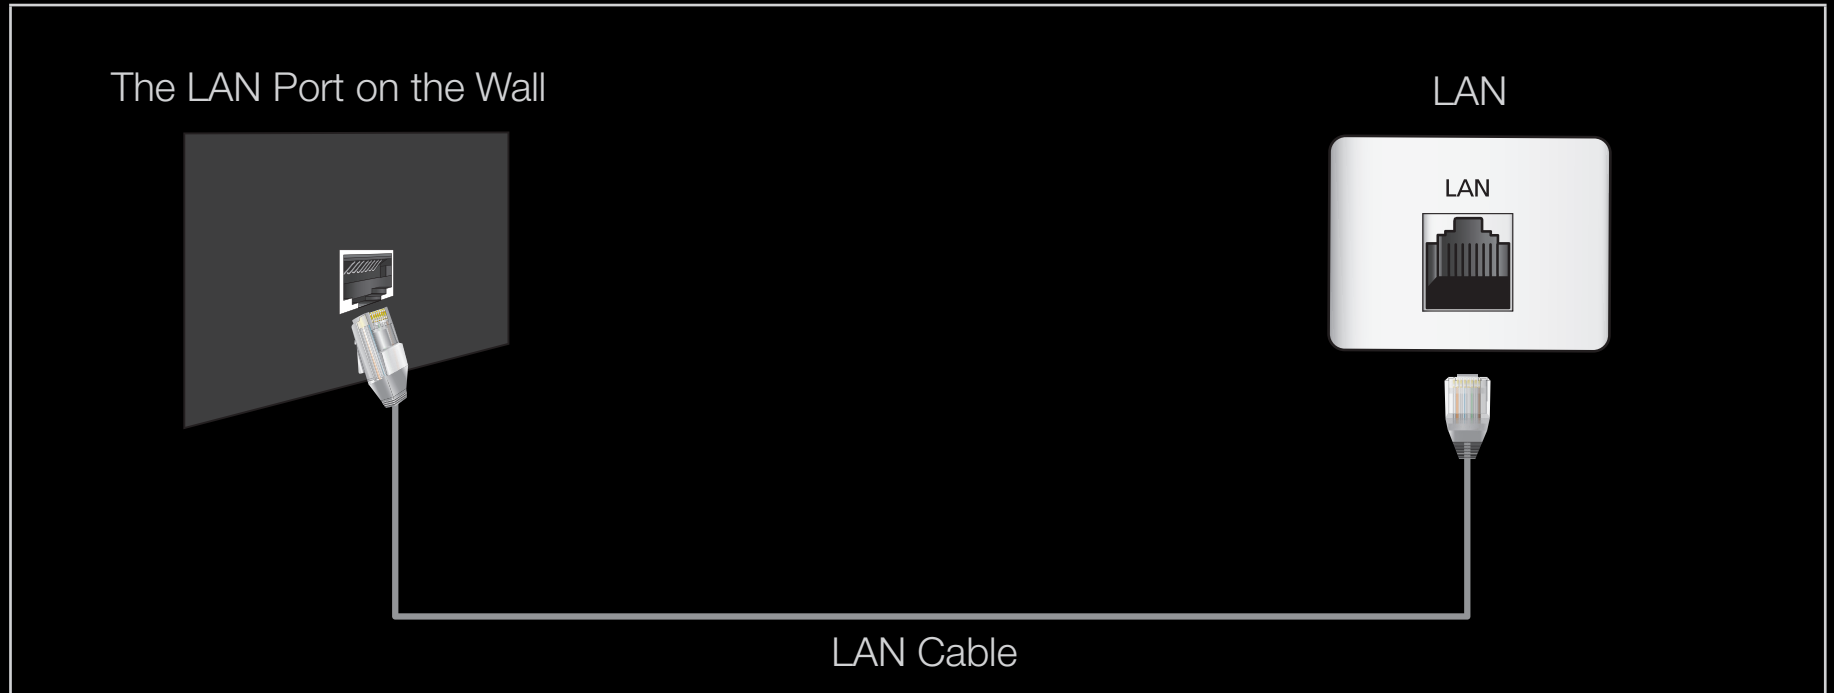

- If you have a Dynamic Network, you should use an ADSL modem or router that supports the Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you do not have to enter them manually. Most home networks are Dynamic Networks.

Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway, and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer.

- ☑ You can use ADSL modems that support DHCP if your network requires a Static IP address. ADSL modems that support DHCP also let you use Static IP addresses.

■ Network Settings

 MENU  → Network → Network Settings → ENTER 

Set the network connection to use various Internet services such as **Smart Hub**, **AllShare™** and perform software upgrades.

■ Network Status

 MENU  → Network → Network Status → ENTER 

You can check the current network and Internet status.

■ AllShare Settings





 MENU  → Network → AllShare Settings → ENTER 

Selects whether to use the call arrivals text message contents and schedules set on the network. For details on set up options, refer to the “AllShare™” instructions.

■ Automatic Network Setup

Use the Automatic **Network Setting** when connecting your TV to a network that supports DHCP. To set up your TV's cable network connection automatically, follow these steps:


How to set up automatically

1. Go to the **Network Settings** screen.
(**MENU**  → **Network** → **Network Settings** → **ENTER** )
2. Select **Wired**, press **ENTER** , and then press **ENTER**  again.
3. The network connection screen appears and verifies the network connection. When the connection has been verified, the “Internet connection successful.” message appears.



- The displayed image may differ depending on the model.

- ✎ If the connection process fails, check the LAN port connection.
- ✎ If the automatic process cannot find the network connection values or if you want to set the connection manually, go to the next section, **Manual Network Setup**.

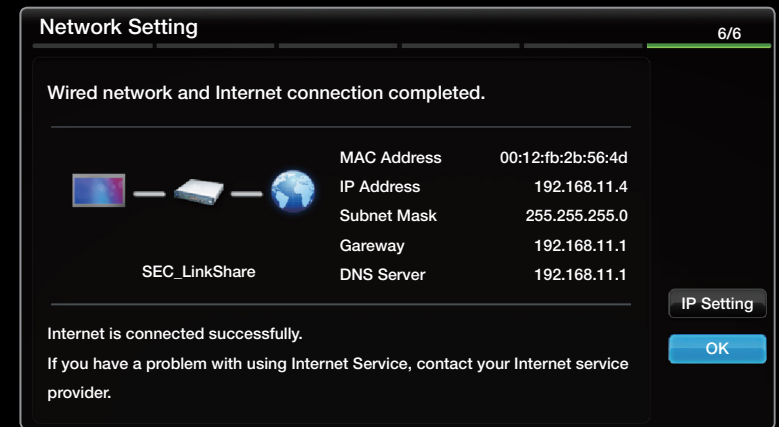

- The displayed image may differ depending on the model.

■ Manual Network Setup

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.






Getting the Network Connection Values


To view the Network connection values on most Windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.
3. On the dialog that appears, click the Support tab.
4. On the Support Tab, click the Details button. The Network connection values are displayed.





How to set up manually

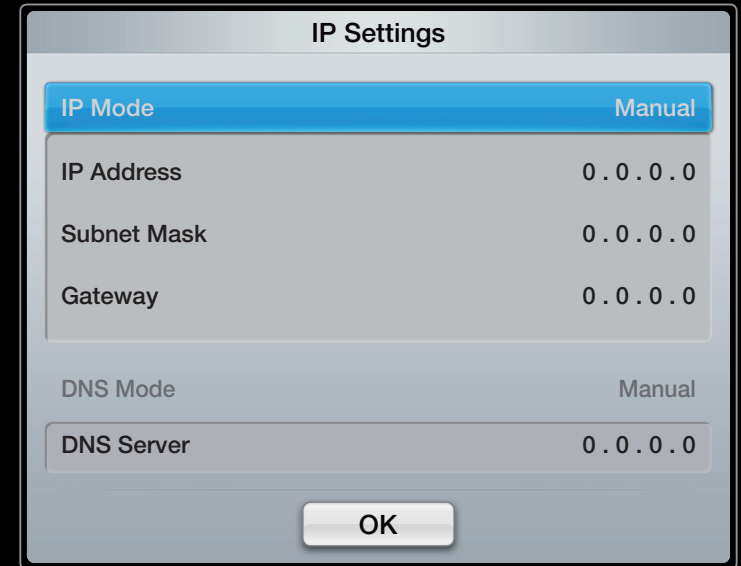


To set up your TV's cable network connection manually, follow these steps:

1. Go to the **Network Settings** screen.
(**MENU**  → **Network** → **Network Settings** → **ENTER** )
2. Select **Wired**, press **ENTER** , then press **ENTER**  again. The network connection screen appears and the verification process starts.
3. Press **ENTER** . The verification process stops. Select **IP Settings** on network connection screen. The **IP Settings** screen appears.



- The displayed image may differ depending on the model.


4. Select the field at the top, press **ENTER** , and then set **IP Mode** to **Manual**.
 5. Press the  button on your remote to go to the IP Address entry field, and then press **ENTER** .
 6. Enter the first portion of the **IP Address** (for example, 105) into the first entry field using the number keys on your remote. Press the right arrow button to go to the next field.
 7. Enter the next portion of the **IP Address**. Press the right arrow button to go to the next field.
 8. Repeat the entry process for each field in the **IP Address**.
-  If you make a mistake when entering a number, re-enter the number to correct it. You can also press the up or down arrow button to change the number one unit at a time.

9. When done entering the **IP Address**, press **ENTER** .
10. Press the down arrow key to go to the **Subnet Mask** fields, and then press **ENTER** .
11. Repeat the same entry process for **Subnet Mask**, **Gateway**, and **DNS Server**.
12. When done, select **OK** at the bottom of the page, and then press **ENTER** .
The network test screen appears and the verification process starts. When the connection has been verified, the “Internet connection successful.” message appears.

❑ Wireless Network Connection

■ Connecting to a Wireless Network For LED 5550, PDP 6450 Series

To connect your TV to your network wireless, you need a wireless router or modem and a Samsung Wireless LAN adapter (WIS09ABGN, WIS09ABGN2, or WIS10ABGN) , which you connect to your TV's back or side panel USB port. See the illustration below.

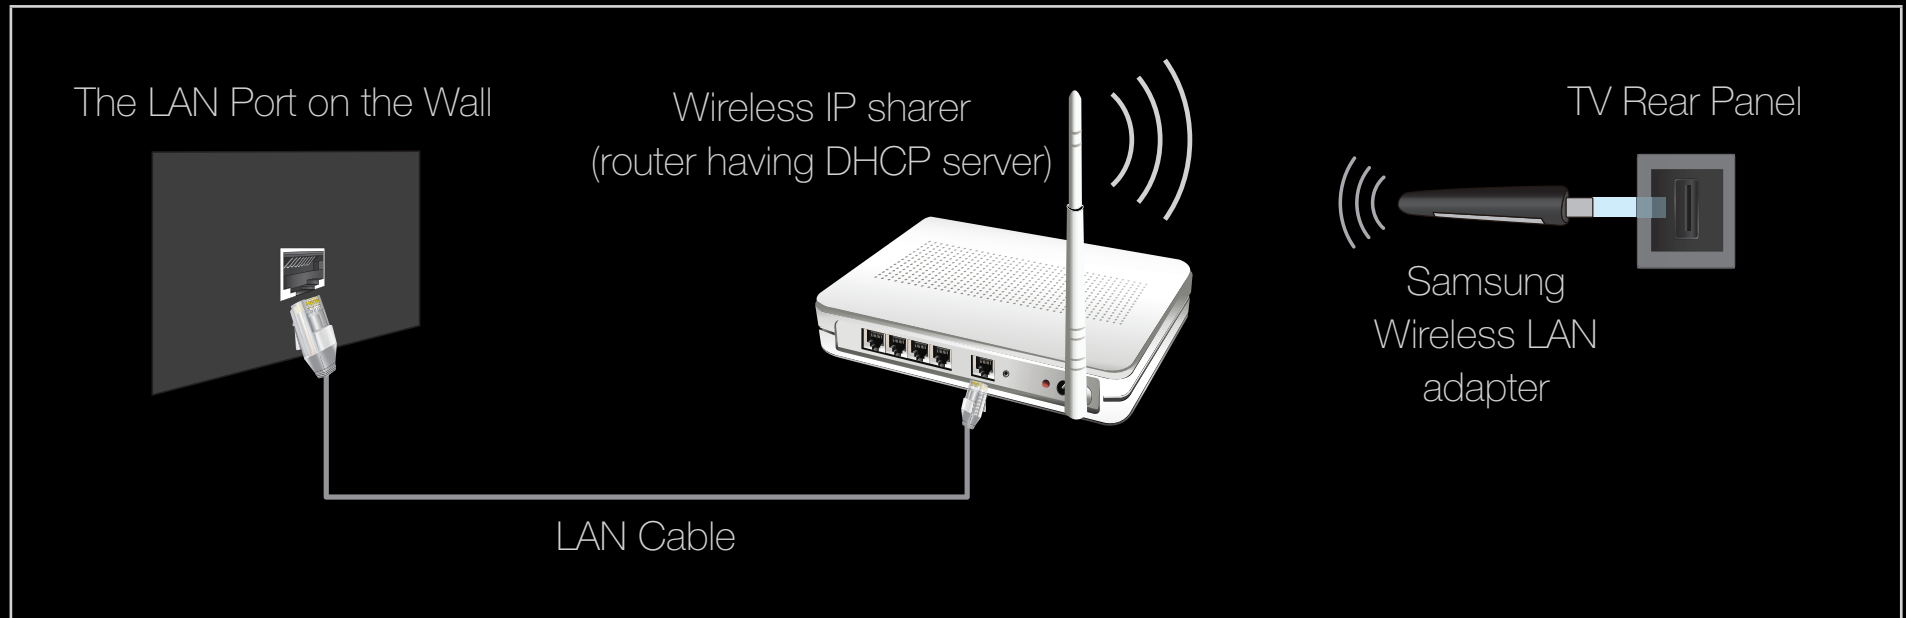

Samsung's Wireless LAN adapter is sold separately and is offered by selected retailers, Ecommerce sites, and Samsungparts.com. Samsung's Wireless LAN adapter supports the IEEE 802.11a/b/g and n communication protocols. Samsung recommends using IEEE 802.11n. When you play video over a IEEE 802.11b/g connection, the video may not play smoothly.

 NOTE

- You must use the “Samsung Wireless LAN adapter” (WIS09ABGN, WIS09ABGN2, or WIS10ABGN) to use a wireless network.
- The Samsung Wireless LAN adapter and the USB extension Cable are sold separately and are offered by select retailers, Ecommerce sites and Samsungparts.com.

- To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure.
- Your TV supports only the following wireless network security protocols:
 - Authentication Mode : WEP, WPAPSK, WPA2PSK
 - Encryption Type : WEP, TKIP, AES

- If you select the Pure High-throughput (Greenfield) 802.11n mode and the Encryption type is set to WEP, TKIP or TKIP AES (WPS2Mixed) on your wireless router, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.
- If your wireless router supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.
- If your router, modem, or device is not certified, it may not connect to the TV via the “Samsung Wireless LAN adapter.”
- Ensure the TV is turned on before you connect the Samsung Wireless LAN adapter.

- Connection Methods: You can set up the wireless network connection in five ways:
 - Auto Setup (Using the Auto Network Search function)
 - Manual Setup
 - **PBC (WPS)**
 - **One Foot Connection**
 - **Plug & Access**
- The TV may not recognize the Samsung Wireless LAN adapter if it is connected to the TV using a USB hub or USB extension cable other than the cable supplied.

Notice

The picture may appear corrupted or have static for some channels when the TV is connected to the Samsung Wireless LAN adapter. If this occurs, establish a connection using one of the following methods or connect the Samsung Wireless LAN adapter using a USB cable in a place that is not affected by radio interference.

- **Method 1:** Connecting the Samsung Wireless Adapter using the USB right angle adapter. **for LED TV**

To connect the Samsung Wireless LAN adapter using the USB right angle adapter, follow these steps:

1. Connect the USB right angle adapter to the Samsung Wireless LAN adapter.
2. Connect the other end of the right angle adapter to the **USB 1 (HDD)** port.




- The location of the USB port may differ depending on the model.

- **Method 2:** Connecting the Samsung Wireless Adapter via an extension cable for LED and PDP TV

To connect the Samsung Wireless LAN adapter using the extension cable, follow these steps:


1. Connect the extension cable to the **USB 1 (HDD)** port.
2. Connect the extension cable and Samsung Wireless LAN adapter.
3. Attach the Samsung Wireless LAN adapter to the back of the TV near the top, using double-sided adhesive tape.

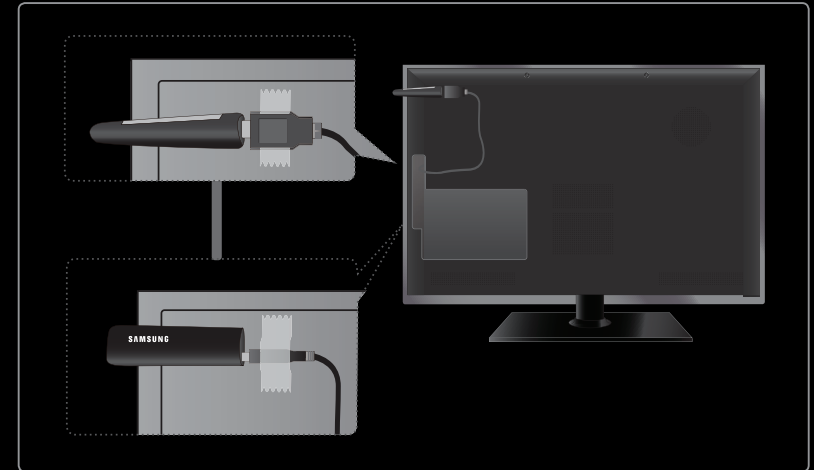

- The location of the USB port may differ depending on the model.

❑ Connecting to a Wireless Network For PDP 6500 Series and above

You can connect your TV to your LAN through a standard wireless router or modem.

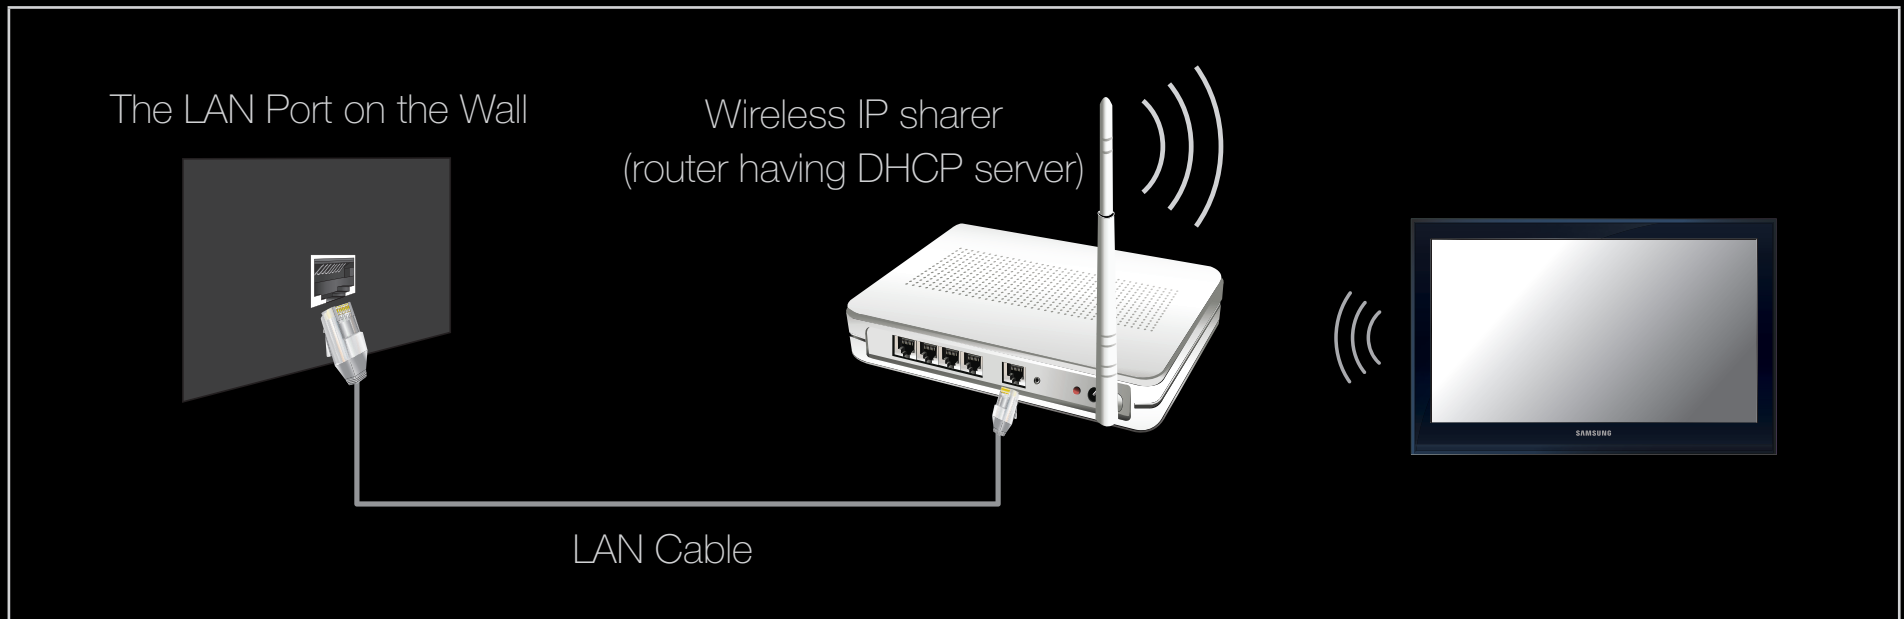

This TV supports the IEEE 802.11a/b/g and n communication protocols. Samsung recommends using IEEE 802.11n. When you play video over a IEEE 802.11b/g connection, the video may not play smoothly.

 NOTE

- To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure.

- Your TV supports only the following wireless network security protocols:
 - Authentication Mode : WEP, WPAPSK, WPA2PSK
 - Encryption Type : WEP, TKIP, AES.
- If you select the Pure High-throughput (Greenfield) 802.11n mode and the Encryption type is set to WEP, TKIP or TKIP AES (WPS2Mixed) on your wireless router, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.
- If your wireless router supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.







- If your router, modem, or device is not certified, it may not connect to the TV.
- Connection Methods: You can setup the wireless network connection in five ways:
 - Auto Setup (Using the Auto Network Search function)
 - Manual Setup
 - **PBC (WPS)**
 - **One Foot Connection**
 - **Plug & Access**



■ Automatic Network Setup

Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the automatic or manual setup process.

How to set up automatically

1. Go to the Network Settings screen.
(MENU  → Network → Network Settings → ENTER ).
2. Select **Wireless(General)**, press ENTER , and then press ENTER  again.
3. The **Network** function searches for available wireless networks. When done, it displays a list of the available networks.
4. In the list of networks, press the ▲ or ▼ button to select a network, and then press the ENTER  button twice.
 If the wireless router is set to Hidden (Invisible), you have to select **Add Network** and enter the correct **Network Name (SSID)** and **Security key** to establish the connection.




- The displayed image may differ depending on the model.


5. If the Enter Security Key screen appears, go to step 6. If you select an wireless router that does not have security, go to step 8.


6. If the wireless router has security, enter the Security key (Security key or PIN).

📝 When you enter the Security key (Security key or PIN), use ▲ / ▼ / ◀ / ▶

▶ buttons on your remote to select number/characters. Press **ENTER**  button to enter the characters.

📝 You can also enter numbers by pressing the number buttons on your remote.

7. When done, use the right arrow button to move the cursor to **Next**, and then press **ENTER** .

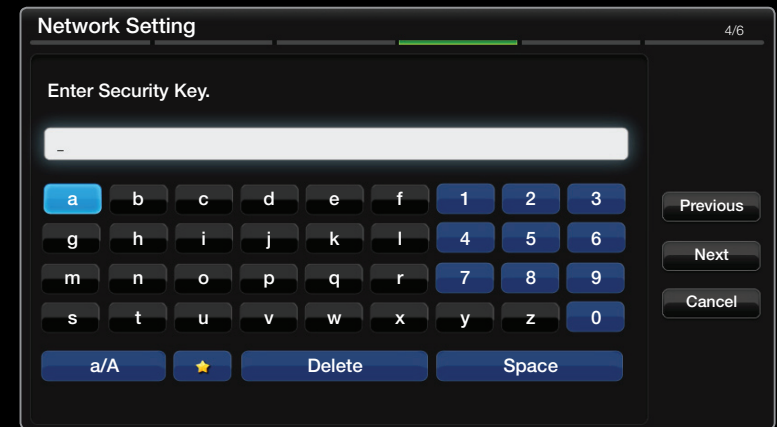

- The displayed image may differ depending on the model.

8. The network connection screen appears and the verification process starts. When the connection has been verified, the “Internet connection successful.” message appears.
- ☑ If the network does not accept the Security key (Security key or PIN), select **Retry** or select **IP Settings** to enter the settings manually.
 - ☑ If you want to set up the connection manually, select **IP Settings**. Then, go to the next section, “How to set up manually”.



■ Manual Network Setup

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address or if the automatic connection process has failed.








Getting the Network Connection Values


To view the Network connection values on most Windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.
3. On the dialog that appears, click the Support tab.
4. On the Support Tab, click the Details button. The Network connection values are displayed.

How to set up manually





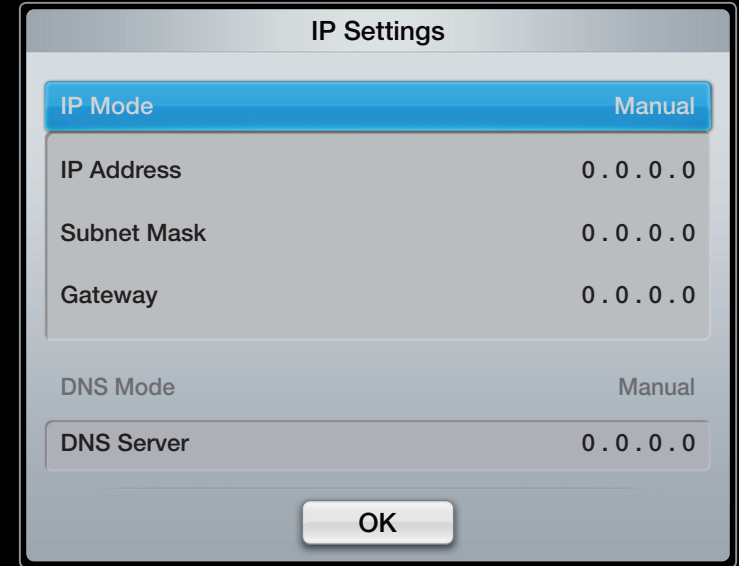

To set up your TV's cable network connection manually, follow these steps:

1. Go to the Network Settings screen. (**MENU** 
→ **Network** → **Network Settings** →
ENTER )
2. Select **Wireless (General)**, press the **ENTER**  button, and then press **ENTER**  again.
3. The **Network** function searches for available wireless networks. When done, it displays a list of the available networks.
4. In the list of networks, press the  or  button to select a network, and then press the **ENTER**  button twice.



- The displayed image may differ depending on the model.

5. If the Enter Security key screen appears, go to step 6. If you selected an AP that does not have security, go to step 8.
6. Enter the Security key (Security key or PIN).
 - ☑ When you enter the Security key (Security key or PIN), use ▲ / ▼ / ◀ / ▶ buttons on your remote to select number/characters. Press **ENTER** ↵ to enter the characters.
 - ☑ You can also enter numbers by pressing the number buttons on your remote.
 - ☑ You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.
7. When done, use the ▶ button to move the cursor to **Next**, and then press the **ENTER** ↵ button.

8. The network connection screen appears and the verification process starts. Press **ENTER**  to cancel. Select **IP Settings** on network connection screen. The **IP Settings** screen appears.
9. Select the field on the top, press **ENTER** , and then set **IP Mode** to **Manual**.
10. Press the  button on your remote to go to the **IP Address** entry field, and then press **ENTER** .
11. Enter the first portion of the **IP Address** (for example, 105) into the first entry field using the number keys on your remote. Press the  button to go to the next field.
12. Enter the next portion of the **IP Address**. Press the  button to go to the next field.

13. Repeat the entry process for each field in the **IP Address**.

✍ If you make a mistake when entering a number, re-enter the number to correct it. You can also press the ▲ or ▼ button to change the number one unit at a time.

14. When done entering the **IP Address**, press **ENTER** ↵.

15. Press the ▼ button to go to the **Subnet Mask** fields, and then press **ENTER** ↵.

16. Repeat the same entry process for **Subnet Mask**, **Gateway**, and **DNS Server**.

17. When done, select **OK** at the bottom of the page, and then press **ENTER** ↵.

The network connection screen appears and the verification process starts.



When the connection has been verified, the “**Internet connection successful.**” message appears.

■ WPS(PBC) Network Setup

How to set up using WPS(PBC)

If your router has a WPS(PBC) button, follow these steps:

1. Go to **Network Settings** screen. (MENU 
→ **Network** → **Network Settings** →
ENTER ).

2. Select **WPS(PBC)**, press **ENTER** , and
then press **ENTER**  again.

3. Press the WPS(PBC) button on your router
within 2 minutes. Your TV automatically
acquires all the network setting values it needs and connects to your network.

4. The network connection screen appears, and network setup is done.



- The displayed image may differ depending on the model.

■ Ad-Hoc Network Setup

You can connect to a mobile device supporting Ad-hoc connections without a wireless router or AP through the “Samsung Wireless LAN adapter”. When connected to a mobile device, you can use files on the device or connect to the Internet using the AllShare or Multimedia function.


How to set up using Ad hoc


1. Go to **Network Settings** screen. (**MENU**  → **Network** → **Network Settings** → **ENTER** ).
2. Select **Wireless (General)**, and press **ENTER** , then press **ENTER**  again.

3. Select **Ad hoc**. The message “**Ad hoc service supports a direct connection with Wi-Fi compatible devices like a cell phone or PC. Other network services may be limited. Do you want to change the network connection?**” is displayed.

4. Select **OK**, and press **ENTER** . The TV searches for the mobile device.


5. When the TV finishes searching for mobile devices, input the generated **Network Name (SSID)** and **Security Key** into the device you want to connect and then connect to the network.

◀  If network does not operate normally, check the **Network Name (SSID)** and Security key again. An incorrect Security key may cause a malfunction. ▶

 If a device is connected once, it is displayed in the Network Setting list. When you connect to it again, you can find it in the List.





■ One Foot Connection Network Setup

The **One Foot Connection** function lets you connect your Samsung TV automatically to Samsung wireless routers. If your wireless router does not support **One Foot Connection**, you must connect using one of the other methods.

 You can check for equipment that supports **One Foot Connection** on www.samsung.com.



How to set up using One Foot Connection

1. Turn on the Samsung wireless router and the TV.
2. Go to **Network Settings** screen. (MENU  → **Network** → **Network Settings** → **ENTER** ).
3. Select **One Foot Connection**, and press **ENTER** , then press **ENTER**  again.



- The displayed image may differ depending on the model.

4. Place the wireless router in parallel with the Samsung Wireless LAN adapter or your TV set (if you do not need to use the Adaptor), and no farther away than 25cm (about 9 3/4 inches).

✎ If **One Foot Connection** does not connect your TV to your router, a pop-up window appears on the screen notifying you of the failure. If you want to try using **One Foot Connection** again, reset the wireless router, disconnect the Samsung Wireless LAN adapter and then try again from Step 1. You can also choose one of the other connection setup methods.

◀ 5. The network connection screen appears, and network setup is done. ▶

6. Place the wireless router to a desired location.

✎ If the wireless router's settings change or you install a new wireless router, you must perform the **One Foot Connection** procedure again, beginning from Step 1.

■ Plug & Access Network Setup


The **Plug & Access** function lets you easily connect your Samsung TV to your Samsung wireless router by using a USB memory stick to transfer the setup information from the router to the TV. If your wireless router does not support **Plug & Access**, you must connect using one of the other methods.

 You can check for equipment that supports **Plug & Access** on www.samsung.com.



How to set up using the Plug & Access function

1. Turn on the Samsung wireless router and your TV.
2. Insert a USB memory stick into the USB port in your Samsung wireless router. Check the router's LED's to make sure it is on (Blinking → on).
3. Take the USB memory stick out of the router, and then insert it into a USB port on your Samsung TV. The memory stick downloads the connection information.
4. Wait until the connection is automatically established.

◀  If **Plug & Access** does not connect your TV to your wireless router, a pop-up window appears on the screen notifying you of the failure. If you want to try using **Plug & Access** again, reset the wireless router, disconnect the Samsung Wireless LAN adapter and then try again from Step 1. You can also choose one of the other connection setup methods. ▶

5. The network connection screen appears, and the network set up is done.
6. Place the wireless router in a desired location.
 - ✍ If the wireless router's settings change or you install a new wireless router, you must perform the **Plug & Access** procedure again, beginning from Step 1.



Priority QOS

Samsung wireless routers are optimized to stream HD AV to Samsung DTVs.

This Priority QOS function is unique to Samsung wireless routers.

You can connect a Samsung wireless router to many devices, such as laptops, mobile phones, BD players etc. But, when you connect a Samsung TV to a Samsung wireless router, the Samsung wireless router gives the Samsung TV a priority connection.

This ensures you get the highest quality streaming contents and the fastest throughput speed.

- Priority QOS makes your TV faster by giving it priority bandwidth. (Priority QOS is optional. You can turn it on and off.)
- Because your Samsung TV has a priority connection, you can enjoy HD content without buffering.

 The connection speed may vary based on the network environment.

If Your TV Fails to Connect to the Internet

Your TV may not be able to connect to the Internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you connect to the Internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV can not connect.

To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the Internet.

If your Internet service provider requires an ID or password to connect to the Internet, your TV may not be able to connect to the Internet. If this is the case, you must enter your ID or password when connecting to the Internet.

The internet connection may fail because of a firewall problem. If this is the case, contact your Internet service provider.

If you cannot connect to the Internet even after you have followed the procedures of your Internet service provider, please contact Samsung Electronics at 1-800-SAMSUNG.

□ Setting the Time

📄 MENU  → System → ENTER 

■ Time

📄 The current time will appear every time you press the **INFO** button.

- **Clock:** Set the clock to use the various various timer features of the TV.

📄 If you disconnect the power cord, you have to set the clock again.

- **Clock Mode:** Set the current time manually or automatically.




Auto: Have the TV set the current time automatically using the time from a digital channel.

📄 You must have the cable or an antenna connected to the TV to set the time automatically.

Manual: Set the current time manually.

☞ Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.

– **Clock Set:** Set the **Date** and **Time**.

Select **Clock Set**. Select **Date** or **Time**, and then press **ENTER** . Use the number buttons to enter numbers or press the up and down arrow buttons. Use the left and right arrow buttons to move from one entry field to the next. Press **ENTER**  when done. To exit **Clock Set**, select **Close**, and then press **ENTER** .



☞ Available only when **Clock Mode** is set to **Manual**.

☞ You can set the **Date** and **Time** directly by pressing the number buttons on the remote control.

- **Time Zone**: Select your time zone.
 - ☑ This function is only available when the **Clock Mode** is set to **Auto**.
- **DST (Off / On)**: Switches the DST (Daylight Saving Time) function on or off.
 - ☑ This function is only available when the **Clock Mode** is set to **Auto**.

Using the Sleep Timer

 **MENU**  → **System** → **Time** → **Sleep Timer** → **ENTER** 

- **Sleep Timer** : Automatically shuts off the TV after a preset period of time (30, 60, 90, 120, 150 and 180 minutes).
 - ☑ Use the up and down arrows to select a period of time, and then press **ENTER** . To cancel **Sleep Timer**, select **Off**.


Setting the On / Off Timer

 MENU  → System → Time → ENTER 

Set **On Timer** so that your TV turns on automatically at a time and on a day of your choosing.

- **On Timer:** You can set up three separate **On Timer** configurations. (**On Timer 1**, **On Timer 2**, **On Timer 3**)

 You must set to clock before you can use **On Timer**.

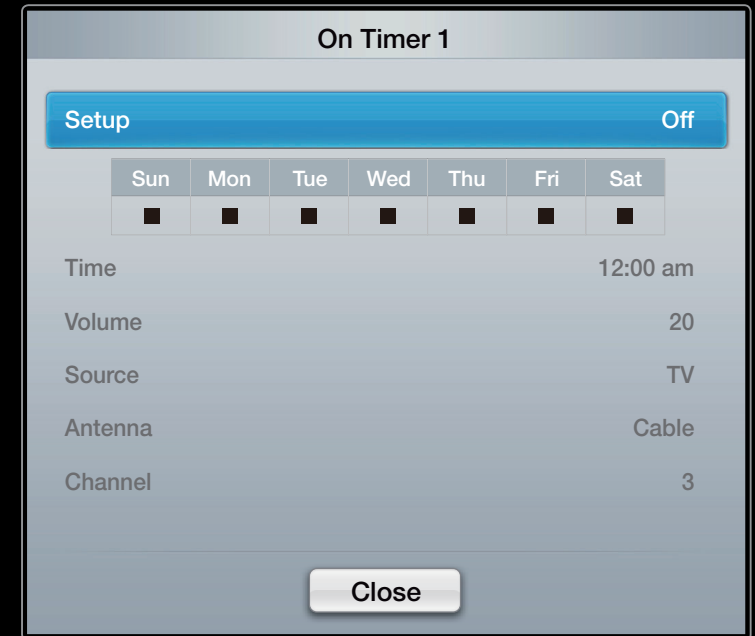

- The displayed image may differ depending on the model.

Setup: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual**. If you select **Manual**, you can choose the days you want **On Timer** to turn on your TV.

 The  mark indicates days you've selected.

Time: Set the hour, minute, am/pm. Use the number buttons or the up and down arrow keys to enter numbers. Use the left and right arrow buttons to change entry fields.

Volume: Set the desired volume level. Use the left and right arrow buttons to change the volume level.

Source: Select **TV** or **USB**. Select **TV** and the TV will display broadcast or cable TV programs when it turns on automatically. Select **USB** and the TV will play content from a USB device when the TV turns on automatically. (You can select **USB** only when a USB device is connected to the TV)

Antenna (when the **Source** is set to **TV**): Select **Air** or **Cable**.

Channel (when the **Source** is set to **TV**): Select the desired channel.

Music / Photo (when the **Source** is set to **USB**): Select a folder in the USB device containing music or photo files you want played when the TV turns on automatically.


NOTE

- If there is no music file on the USB device or you don't select a folder containing a music file, the Timer function does not operate correctly.
- If there is only one photo file in the USB, the Slide Show will not play.



- If a folder name is too long, the folder cannot be selected. Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names.
- We recommend that you use a USB memory stick and a multi card reader when using **On Timer**. The **On Timer** function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because the TV can take too long to recognize these devices.


- **Off Timer** : You can set up three separate Off Timer configurations. (**Off Timer 1**, **Off Timer 2**, **Off Timer 3**)

 You must set the clock before you can use **Off Timer**.

Setup: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual**. If you select **Manual**, you can choose the days you want **Off Timer** to turn off your TV.




 The  mark indicates days you've selected.

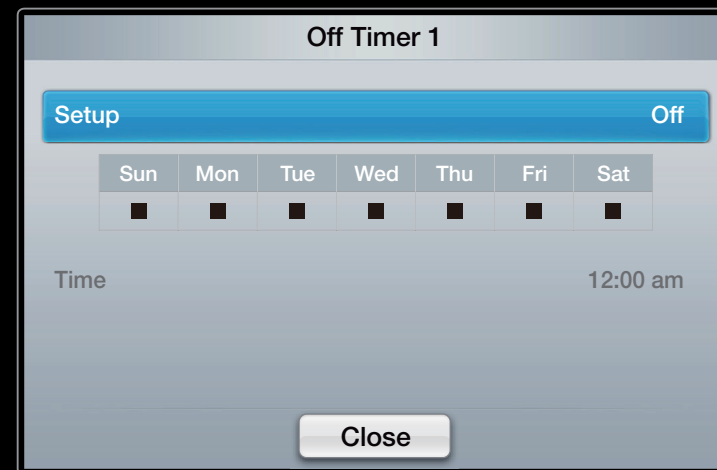Time: Set the hour, minute, and am/pm. Use the number buttons or the up and down arrow keys to enter numbers. Use the left and right arrow buttons to change entry fields.



- The displayed image may differ depending on the model.

❑ Blocking Programs

 MENU  → System → Security → ENTER 

■ Security

When you access the **Security** functions for the first time, the PIN input screen appears. Enter a 4 digit PIN you will remember. The PIN screen closes and the Security Menu appears. Every time you access the Security functions, the PIN screen will appear and you must enter that PIN.



- **Program Rating Lock (Off / On):** When turned on, the **Program Rating Lock** feature can automatically block programs that you deem inappropriate for your children. You must enter a PIN (personal identification number) before you can set or change any of the **Program Rating Lock** restrictions.

☒ **Program Rating Lock** is not available in **HDMI**, **Component** or **PC** mode.

☒ The default PIN number for a new TV set is “0-0-0-0”.



TV Rating: You can block TV programs based on their ratings. This function allows you to control what your children can watch.



TV Rating displays a grid with locks. The following categories are on the left side:

- **TV-Y:** Young children / **TV-Y7:** Children 7 and over / **TV-G:** General audience / **TV-PG:** Parental guidance / **TV-14:** Viewers 14 and over / **TV-MA:** Mature audience



The following categories are on top:

- **ALL**: Lock all TV ratings. / **FV**: Fantasy violence / **V**: Violence / **S**: Sexual situation / **L**: Adult Language / **D**: Sexually Suggestive Dialog

 To block certain content, you select a lock, and press **ENTER**  (That is, you “click it”). For example, click the lock at the intersection of **V** and **TV-MA**, and you block all programs that are rated violent and for mature adults. The blocks are also assigned to related groups. For example, if you click **TV-Y** under **All**, then **TV-Y7** will also automatically be blocked. Similarly, if you click **TV-G** under **ALL**, then all the categories in the young adult group will be blocked (**TV-G**, **TV-PG**, **TV-14** and **TV-MA**). The sub-ratings (**D**, **L**, **S**, **V**) work similarly. So, if you block the L sub-rating in **TVPG**, then the L sub-ratings in **TV-14** and **TV-MA** will automatically be blocked.



- 🔒 To unblock a category, click the lock. To unblock all the categories in a row, click the lock under **ALL**.
- 🔒 To watch a blocked program, you must enter the Security code when requested.



Movie Rating (MPAA): You can block movies based on their MPAA rating. The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information on which films are appropriate for children.

Movie Rating displays a column with locks and the following ratings categories:

- **G:** General audience (no restrictions). / **PG:** Parental guidance suggested. / **PG-13:** Parents strongly cautioned. / **R:** Restricted. Children under 17 should be accompanied by an adult. / **NC-17:** No children under age 17. / **X:** Adults only. / **NR:** Not rated.


 To block certain content, you select a lock, and press **ENTER**  (That is, you “click it”). For example, click the **X** lock and you block all X-rated movies. The rating categories are also grouped so that clicking one category blocks all the categories a parent would block along with it. For example, if you block the **PG-13** category, then **R**, **NC-17** and **X** will automatically be blocked also.

 To unblock a category, click the lock.

Canadian English Rating: You can block TV programs based on their Anglophone Canadian rating.

Canadian English Rating displays a column with locks and the following ratings categories:

- **C**: Programming intended for children under age 8. / **C8+**: Programming generally considered acceptable for children 8 years and over to watch on their own. / **G**: General programming, suitable for all audiences. / **PG**: Parental Guidance. / **14+**: Programming contains themes or content which may not be suitable for viewers under the age of 14. / **18+**: Adult programming.


- ☑ To block certain content, you select a lock, and press **ENTER**  (That is, you “click it”). For example, click the **18+** lock and you block all TV programs rated 18+. The rating categories are also grouped so that clicking one category blocks all the categories a parent would block along with it. For example, if you block the **G** category, then **PG**, **14+** and **18+** will automatically be blocked.
- ☑ To unblock a category, click the lock.



Canadian French Rating: You can block TV programs based on their French Canadian rating.

Canadian English Rating displays a column with locks and the following ratings categories:

- **G:** General / **8 ans+:** Programming generally considered acceptable for children 8 years and over to watch on their own. / **13 ans+:** Programming may not be suitable for children under the age of 13. / **16 ans+:** Programming is not suitable for children under the age of 16. / **18 ans+:** Programming restricted to adults.

☑ To block certain content, you select a lock, and press **ENTER**  (That is, you “click it”). For example, click the **18 ans+** lock and you block all TV programs rated **18 ans+**. The rating categories are also grouped so that clicking one category blocks all the categories a parent would block along with it. For example, if you block the 8 ans+ category, then **13 ans+**, **16 ans+** and **18 ans+** will automatically be blocked also.

☑ To unblock a category, click the lock.

Downloadable U.S. Rating: Parental restriction information you can use while watching DTV channels.

NOTE

- If information is not downloaded from the broadcasting station, **Downloadable U.S. Rating** menu is deactivated.
- Parental restriction information is automatically downloaded while you watch DTV channels. It may take several seconds.
- The **Downloadable U.S. Rating** menu is available for use after information is downloaded from the broadcasting station. However, depending on the information from the broadcasting station, it may not be available for use.
- Parental restriction levels differ depending on the broadcasting station. The default menu name and **Downloadable U.S. Ratings** change depending on the downloaded information.

- Even if you set the on-screen display to another language, the **Downloadable U.S. Rating** menu will appear in English only.
- Blocking one rating level will automatically block other categories that deal with more sensitive material.
- The rating titles (For example: Humor Level..etc) and TV ratings (For example: DH, MH, H..etc) may differ depending on the broadcasting station.



- **Change PIN:** The **Change PIN** screen will appear. Choose any 4 digits for your PIN and enter it in **Enter New PIN**. Re-enter the same 4 digits in Confirm New PIN. When the Confirm screen disappears, press the **Close** button. The TV has memorized your new PIN.

How to watch a restricted program or movie

If the TV is tuned to a restricted program or movie, the **Program Rating Lock** will block it. The screen will go blank and the following message will appear:

◀ “This channel is blocked by **Program Rating Lock**. Please enter the PIN to unblock.” ▶

Enter the PIN to unblock the program or movie.

- ☞ If you forget the PIN code, press the remote control buttons in the following sequence in Standby mode, which resets the PIN to “0-0-0-0”: **MUTE** → 8 → 2 → 4 → **POWER** (on).

□ Economical Solutions

■ Eco Solution

👆 MENU  → System → Eco Solution → ENTER 

- **Energy Saving (Off / Low / Medium / High / Picture Off)**: Lets you adjust the brightness of the TV in order to reduce power consumption. If you select **Picture Off**, the screen is turned off, but the sound remains on. Press any button except the volume button to turn on the screen.

- **Eco Sensor (Off / On)**: To enhance your power savings, the picture settings will automatically adapt to the light in the room.

☞ If you adjust **Backlight** for LED TV / **Cell Light** for PDP TV in the Picture menu, the **Eco Sensor** will be set to **Off**.

Min Backlight for LED TV / **Min Cell Light** for PDP TV: When **Eco sensor** is **On**, you can manually adjust the minimum screen brightness.

☞ If **Eco Sensor** is **On**, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity. You can control the screen's minimum brightness with the **Min Backlight / Min Cell Light** function.

- **No Signal Power Off (Off / 15 min. / 30 min. / 60 min.):** To avoid unnecessary energy consumption, you can set how long you want the TV to remain on if it's not receiving a signal.
 - ✎ Disabled when an attached PC is in power saving mode.
- **Auto Power Off (Off / On):** The TV will automatically turn off if you don't press a button on the remote or touch a button on TV's front panel within 4 hours to prevent overheating.



■ Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10 hours)

for LED TV

If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen.



■ **Screen Burn Protection**

for PDP TV

To reduce the possibility of screen burn, this unit is equipped with Pixel Shift screen burn prevention technology. Pixel Shift moves the picture slightly on the screen. The Pixel Shift Time setting allows you to program the time between movements of the picture in minutes.

Your TV also has the following additional screen burn protection functions:

- **Pixel Shift**
- **Auto Protection Time**
- **Scrolling**
- **Side Gray**

- **Pixel Shift (Off / On)**: Using this function, you can set the TV to move pixels minutely on the PDP screen in a horizontal or vertical direction to minimize after images on the screen.

 Available **Pixel Shift** Settings and Optimum Settings

	Available Settings	Optimum Settings for TV/AV/ Component/HDMI/PC
Horizontal	0~4 (pixels)	4
Vertical	0~4 (pixels)	4
Time (minute)	1~4 min	4 min

 The **Pixel Shift** value may differ depending on the monitor size (inches) and mode.

 This function is not available in the **Screen Fit** mode.

- **Auto Protection Time (Off / 10 min. / 20 min. / 40 min. / 1 hour)**: If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen.
- **Scrolling**: This function removes after-images on the screen by illuminating all the pixels on the PDP according to a pattern. Use this function when there are after images or symbols on the screen, especially when you displayed a still image on the screen for a long time.

☑ The after-image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after-images on the screen. If the after-image is not removed after you apply the function, repeat the function again.

☑ Press any key on the remote control to cancel this feature.

- **Side Gray (Light / Dark)**: When you watch TV with the screen ratio set to 4:3, using the Side Gray function can prevent damage to the edges of the screen by adjusting the white balance on the extreme left and right sides.

❑ Picture In Picture (PIP)

 MENU  System → PIP → ENTER 

■ PIP

You can watch a program whose signal has passed through the TV's tuner and the video from one external video source simultaneously. For example, if you have a cable box connected to the Cable In jack, you can use PIP to watch programs from the cable box and a movie from a Blu-ray player attached to the HDMI In jack.







NOTE

- For PIP sound, refer to the **Sound Select** instructions.
- If you turn the TV off while watching in the PIP mode, the PIP function is reset to off. When you turn your TV on, you must turn PIP on again to watch in the PIP mode.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.
- While **Program Rating Lock** is on, you cannot use PIP.
- **PIP** is not supported in **3D** mode. **for PDP TV**

- PIP Settings

The picture from the external video source will be in the main screen and the picture from the TV's tuner will be in the PIP sub-picture window.

Main picture	Sub picture
Component, HDMI, PC	TV



- **PIP (Off / On)**: Activate or deactivate the PIP function.
- **Air/Cable (Air / Cable)**: Select either **Air** or **Cable** as the input source for the sub-screen.
- **Channel**: Select the channel for the sub-screen.
- **Size** ( / ): Select a size for the subpicture.
- **Position** ( /  /  / ): Select a position for the sub-picture.
- **Sound Select (Main / Sub)**: You can choose to listen to the sound from the Main picture or the Sub picture.

❏ Other Features

📄 MENU  → System → ENTER 

■ Menu Language

Set the menu language.

1. Select **Menu Language**, and then press the **ENTER**  button.
 2. Choose a language, and then press the **ENTER**  button.
- 📄 Choose from **English**, **Español**, and **Français**.

■ Caption

(On-Screen Text Messages)

- **Caption (Off / On):** You can switch the caption function on or off. If captions are not available, they will not be displayed on the screen.


✎ The **Caption** feature does not work with devices connected to the TV through the Component, HDMI or PC input jacks.

- **Caption Mode:** You can select the desired caption mode.

✎ The availability of captions depends on the program being broadcast.

Default / CC1 ~CC4 / Text1 ~Text4: (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels.)

Default / Service1~Service6 / CC1~CC4 / Text1~Text4: (digital channels only) The Digital Captions function works with digital channels.

 **Service1~6** may not be available in digital caption mode depending on the broadcast.

- **Digital Caption Options:** (digital channels only) Adjusts the each option. When done, select **Close**.

Size: Options include Default, Small, Standard and Large. The default is Standard.

Font Style: Options include Default and Styles 0 to 7. The default is Style 0.

Foreground Color: You can change the color of the letters. Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. The default is White.

Background Color: You can change the background color of the caption. Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. The default is Black.

Foreground Opacity: This adjusts the opacity of text. Options include Default, Transparent, Translucent, Solid and Flashing.

Background Opacity: This adjusts the opacity of the caption background. Options include Default, Transparent, Translucent, Solid and Flashing.

Return to Default: This option sets each Size, Font Style, Foreground Color, Background Color, Foreground Opacity and Background Opacity to its default.

NOTE

- **Digital Caption Options** are available only when you can select **Default** and **Service1 ~ Service6** in **Caption** Mode.
- The availability of captions depends on the program being broadcast.
- The **Default** setting follows the standards set by the broadcaster.
- You cannot set the **Foreground** and **Background** to the same color.
- You cannot set both the **Foreground Opacity** and the **Background Opacity** to the same color.

■ General

- **Game Mode (Off / On)**: When you have connected a game console such as a PlayStation™ or Xbox™ to the TV, you can enjoy a more realistic gaming experience if you set **Game Mode** on.

📝 Precautions and limitations for Game Mode:

- Before disconnecting a game console and connecting another external device, set **Game Mode** to **Off** in the **System** menu.
- If you display the TV menu in **Game Mode**, the screen shakes slightly.

✍ **Game Mode** is not available when the input source is set to TV or PC.

✍ Set **Game Mode** to On only after connecting a game console. If you turn **Game Mode** on before you have attached the game console, you may notice reduced picture quality.

✍ If **Game Mode** is On:

– **Picture Mode** is set to **Standard** and **Sound Mode** is set to **Movie**.

- **BD Wise (Off / On)** **for PDP TV**: Provides the optimal picture quality for Samsung DVD, Blu-ray and Home Theater products which support **BD Wise**. When **BD Wise** is turned **On**, the picture mode is automatically changed to the optimal resolution.

✍ Available when you connect Samsung products that support **BD Wise** through an HDMI cable to the TV.

- **Boot Logo (Off / On):** Displays the Samsung logo when the TV is turned on.
- **TV Name:** Sets the TV name so you can find it easily on a mobile device.
 - ☑ If you select User Input, you can type on the TV using the OSK (On Screen Keyboard).



■ Anynet+(HDMI-CEC)

For details on set up options, refer to the “What is Anynet+?” instructions.



■ DivX® Video On Demand

Shows the registration code authorized for the TV. If you connect to the DivX web site and register using that code, you can download the VOD registration file. If you activate the VOD registration using Smart Hub, the registration is completed.

 For more information about DivX® VOD, visit “<http://vod.divx.com>”.



■ Network Remote Control (On / Off)

Turn on/off or give permission to Samsung mobile phone devices to connect with and control the TV.

You must have a Samsung Mobile phone/device which supports Wireless Remote Control. For more details, refer to each device's manual.



□ Support Menu

📖 MENU  → Support → ENTER 

■ e-Manual

The **e-Manual** is built into your TV. Open the **e-Manual** to learn how to use your TV's many features.

📖 For the detailed information about the e-Manual Screen, refer to “How to view the e-Manual” in the Users Manual.

■ Self Diagnosis

- **Picture Test:** Use to check for picture problems. **Picture test** displays a high definition picture that you can examine for flaws or faults.

Yes: Select **Yes** if the test picture does not appear or there is noise or distortion in the test picture. There may be a problem with the TV. Contact Samsung's Call Center for assistance.

No: Select **No** if the test picture displays properly. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

- **Sound Test:** Use the built-in melody to check for sound problems.
 - ☑ If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV Speaker** in the **Sound** menu, and then try the speakers again.
 - ☑ You will hear the melody during the test even if you have set **Speaker Select** to **External Speaker** or have muted the sound by pressing the **MUTE** button.

Yes: Select **Yes** if you can hear sound from only one speaker or from neither speaker during the sound test. There may be a problem with the TV. Contact Samsung's Call Center for assistance.

No: Select **No** if you can hear sound from the speakers. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

- **Signal Information:** (digital channels only) The reception quality of over-the-air HD channels is either perfect or the channels are unavailable. **Signal Information** displays HD channel signal strength so you can adjust your antenna to increase signal strength and receive HD channels.
- **Troubleshooting:** Displays a troubleshooting guide organized into four symptom categories: Poor or Distorted Picture, Distorted Sound or No Sound, RF or PC Issues, and Other Issues. If your TV seems to be having a problem, access the troubleshooting guide for a solution.



■ Software Upgrade

The **Software Upgrade** menu lets you upgrade your TV's software to the latest version.

- **Current Version:** This is the software version already installed in the TV.



Upgrading to the Latest Version

You can upgrade in three ways:

- **By USB**
- **By Online**
- **By Standby Mode Upgrade**


The three methods are explained in the following pages.

ⓘ Be careful not to turn off the power until the upgrade is complete. The TV will turn off and on automatically after completing the firmware upgrade. When you upgrade software, all video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.

By USB

To upgrade by USB, follow these steps:

1. Visit www.samsung.com.
2. Download the latest USB software upgrade exe archive to your computer.
3. Extracts the exe archive to your computer. You should have a single folder with the same name as the exe file.
4. Copy the folder to a USB flash drive.
5. Turn on the TV, and then insert the USB flash drive into the USB port of the TV.

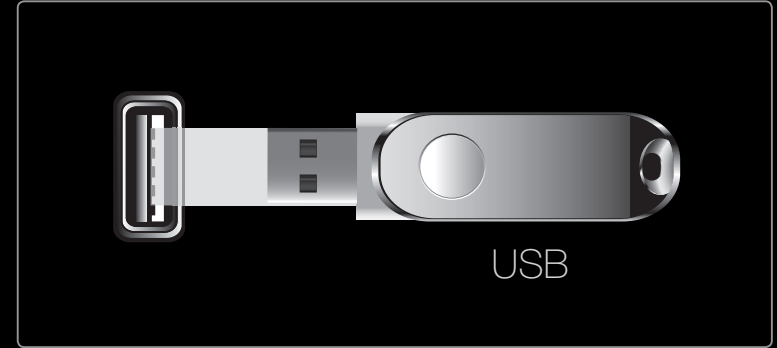

- The displayed image may differ depending on the model.

6. In the TV's menu, go to **Settings** → **Support** → **Software Upgrade**.


7. Select **By USB**.

 Please be careful not to remove the USB drive until the upgrade is complete.

By Online

The **By Online** function lets you download the upgrade software directly from the Internet into your TV and then upgrade the software in one operation. To use **By Online**, you must have configured your TV to connect to your network and the TV must be connected to the Internet. See the Network Connection instructions.

To upgrade by Online, follow these steps:


1. Select **By Online**, and then press the **ENTER**  button. The Connecting to Server message appears.

2. If there is a download available, the Download pop-up appears with a progress bar and the download starts.
3. When the download is complete, the Upgrade Query window appears with three choices: **Upgrade Now**, **Upgrade Later**, or **Don't Upgrade**.
4. If you select **Upgrade Now**, the TV upgrades the software, turns off, and then turns on automatically.
5. If you do not make a selection in one minute or select **Upgrade Later**, the TV stores the new upgrade software. You can upgrade the software later using the **Alternative Software** function.
6. If you select **Don't Upgrade**, the TV cancels the upgrade.

Alternative Software

The **Alternative Software** option lets you upgrade using a file the TV downloaded earlier, but you decided not to install immediately, or a file downloaded by the TV in **Standby Mode** (See Standby Mode Upgrade on the next page).

To upgrade By **Alternative Software**, follow these steps:

1. If upgrade software has been downloaded, you will see the software version number to the right of **Alternative Software**.
2. Select **Alternative Software**, and then press the **ENTER**  button.
3. The TV displays a message asking if you want to upgrade. Select **Yes**. The TV begins the upgrade.
4. When the update is complete, the TV turns off automatically, and then turns on.

Standby Mode Upgrade

You can set the **Standby Mode Upgrade** function so that the TV downloads new upgrade software when it is in Standby mode. In Standby mode, the TV is off, but its Internet connection is active. This allows the TV to download upgrade software automatically, when you are not using it. Because the TV is turned on internally, the screen may glow slightly. This phenomenon may continue for more than 1 hour until the software download is complete.

To set **Standby Mode Upgrade**, follow these steps:

1. Press the arrow buttons to select **Upgrade** in **Standby Mode**, and then press the **ENTER**  button.

2. Select **On** or **Off**.

- **Off**: If you select **Off**, the TV will notify you with a pop up message when new upgrade software is available.
- **On**: If you select **On**, the TV will automatically download new upgrade software when it is in Standby mode with the power off. If it downloads new upgrade software, the TV will ask you if you want to install it when you turn the TV on.

 To use the **Standby Mode Upgrade** function, your TV must be connected to the Internet.

■ Contact Samsung

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centers and how to download products and software.



3D

 MENU  Picture  3D  ENTER 

■ Using the 3D function

for PDP TV

This exciting new feature enables you to view 3D content. To fully enjoy this feature, you must purchase a pair of Samsung 3D Active Glasses (SSG-3100GB, SSG-3300GR, SSG-3300CR, SSG-3700CR) to view 3D video. Samsung 3D Active Glasses are sold separately. For more detailed purchasing information, contact the retailer where you purchased this TV.

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES.





Read and understand the following safety information before using the TV's 3D function.

WARNING

- Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea and headaches. If you experience any such symptom, stop viewing 3D TV, remove the 3D Active Glasses and rest.
- Watching 3D images for an extended period of time may cause eye strain. If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses and rest.

- A responsible adult should frequently check on children who are using the 3D function. If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest.
- Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.)
- Do not use the 3D function or 3D Active Glasses while walking or moving around. If you use the 3D function or 3D Active Glasses while walking or moving about you can injure yourself by running into objects, tripping, and/or falling.

- **3D Mode:** Select the 3D input format.
 - ☑ If you want to experience the 3D effect fully, put the 3D Active Glasses on first, and then select the **3D Mode** from the list below that provides the best 3D viewing experience.

3D Mode		Operation
	Off	Turns the 3D function off.
	2D → 3D	Changes a 2D image to 3D.
	Side by Side	Displays two images next to each other.
	Top & Bottom	Displays one image above another.

✎ Some file format may not supported the “2D → 3D.”

✎ “Side by Side” and “Top & Bottom” are available when the resolution is 720p, 1080i and 1080p in DTV, HDMI and USB mode or when you set the TV’s source to PC and your PC is connected through an HDMI/DVI cable.

- **3D Perspective (-5 ~ +5)**: Adjust overall 3D perspective of on-screen image.
- **Depth (1 ~10)**: Adjust overall depth.
- **L/R Change (L/R Image / R/L Image)**: Swap the left and right pictures.
- **3D → 2D (Off / On)**: Displays the image for the left eye only.

✎ This function is deactivated when **3D Mode** set to “2D → 3D” or **Off**.

Support resolution (16:9 only)


Resolution	Frequency (Hz)
1280 x 720p	60Hz
1920 x 1080i	60Hz
1920 x 1080p	24 / 30 / 60Hz Resolution

Resolution supported for HDMI PC mode

The optimal resolution for the HDMI PC mode is 1920 x 1080. If the input resolution is not 1920 x 1080, the TV may not display images properly in 3D display or full screen mode.


How to watch the 3D images

- ☞ Some 3D modes may not be available depending on the format of the image source.
 - ☞ To watch in 3D, you must wear 3D Active Glasses and turn the glasses on by pressing the power button.
1. Press the **MENU** button on your remote, use the ▲ or ▼ button to select **Picture**, and then press the **ENTER** ↵ button.
 2. Use the ▲ or ▼ button to select **3D**, and then press the **ENTER** ↵ button.

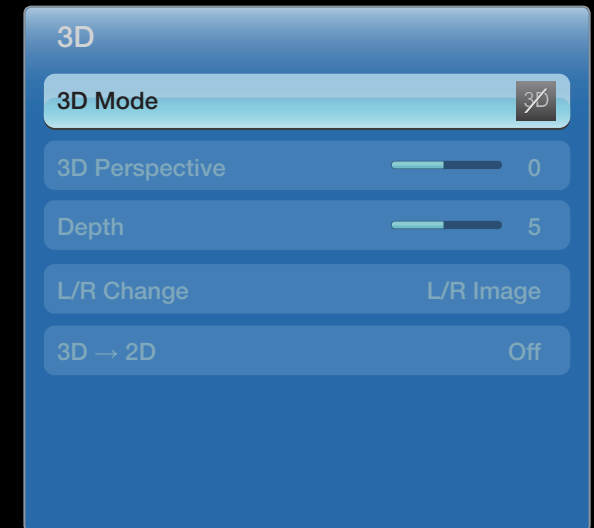

- The displayed image may differ depending on the model.

3. Use the ▲ or ▼ button to select **3D Mode**, and then press the **ENTER** ↵ button.
4. Using the ◀ or ▶ buttons on your remote control, select the **3D Mode** of the image you want to view.

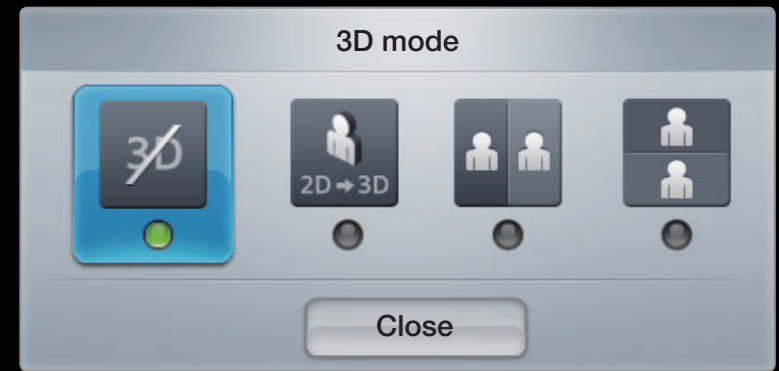

- The displayed image may differ depending on the model.



Supported formats and operating specifications for Standard HDMI 3D

- ☑ The 3D formats listed below are recommended by the HDMI association and must be supported by 3D TVs.

Source signal format	Standard HDMI 1.4 3D
1920x1080p@24Hz x 2	1920x2205p@24Hz
1280x720p@60Hz x 2	1280x1470p@60Hz

Read These Notes Before Using the 3D Function...

NOTE

- **3D Mode** is set to **Off** automatically when you access **Smart Hub** or **e-Manual** functions.
- **3D Mode** is set to its memorized configuration value automatically when you change the input source
- Some **Picture** functions are disabled in **3D** mode.
- **PIP** is not supported in **3D** mode.

- 3D Active Glasses from Samsung's previous product (IR type) or other manufacturers not be supported.
- When the TV is initially powered on, it may take some time until the 3D display is optimized.
- The 3D Active Glasses may not work properly if there is any other 3D product or electronic devices turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.




- Be sure to stay within the viewing angle and optimum TV viewing distance when watching 3D pictures. Otherwise, you may not be able to see 3D effects properly.
- The ideal 3D viewing distance is three times or more the height of the screen. For example, if your screen is two feet high, you should sit at least six feet from the screen. We recommend sitting so that your eyes are level with the screen.



□ Smart Hub



Using **Smart Hub**, you can stream movies, videos, and music from the Internet, access various for pay or free-of-charge applications and view them on your TV. Application content includes news, sports, weather forecasts, stock market quotes, maps, photos, and games.

 You can also start this function by pressing the **SMART HUB** button on the remote control.



- The displayed image may differ depending on the model.

Smart Hub at a Glance



NOTE


- Samsung Electronics takes no legal responsibility for any interruption of the Smart Hub service caused by the service provider for any reason.
- The Smart Hub service downloads and processes data via the Internet so that you can enjoy the Internet contents on your TV screen. If the Internet connection is unstable, the service may be delayed or interrupted. Furthermore, the player may turn off automatically in response to conditions on the Internet. If this occurs, check the Internet connection and try again.
- ◀ • Application services may be provided in English only and the contents available ▶ may vary, depending on your area.

- For more information about a Smart Hub service, visit the web site of the applicable service provider.
- The services provided are subject to change by the Smart Hub service provider without notice.
- The Smart Hub service contents may differ depending on the player's firmware version.
- For pay DivX contents with copy protection can only be played through a composite, a component or an HDMI cable.





Starting Smart Hub the First Time

To start Smart Hub for the first time, follow these steps :

1. Press the **SMART HUB** button.
2. The **Smart Hub** screen appears. In a few cases, the **Country** screen appears immediately after.
3. If the **Country** screen has appeared, press the ▲ / ▼ / ◀ / ▶ buttons to select your country, then press the **ENTER**  button.

◀  Certain applications are available only in certain countries. ▶

4. The **General Disclaimer** screen appears. Press the ◀ / ▶ buttons to select **Agree**, then press the **ENTER**  button.

 Screens can take a few seconds to appear.

5. The **Internet Privacy Policy** screen appears. Press the ◀ / ▶ buttons to select **Agree**, then press the **ENTER** ↵ button.
6. The **Service Update** screen appears and installs a number of services and applications. When done, it closes. The applications and services downloaded are displayed on the **Smart Hub** screen. This may take some time.
 - 📝 Smart Hub may close momentarily during the installation process.
 - 📝 A number of screens may appear after installation. You can press the **ENTER** ↵ button to close them or let them close on their own.
7. To start an application, press the ▲ / ▼ / ◀ / ▶ buttons to highlight a application, then press the **ENTER** ↵ button.

Using the Keypad

Through your remote, you can use the On-Screen Keypad to enter letters, numbers, and symbols.

- Entering Text, Numbers and Symbols

To enter text, press the number button on the remote that corresponds to the letter you want to enter. Press the button rapidly to enter a letter that is not the first letter listed on the On-Screen keypad button. For example, if you want to enter the letter b, press the **2** button on your remote rapidly twice. To enter the first letter listed on a button, press, release, and then wait.

To move within the text, use the arrow buttons. To delete text, move the cursor to the right of the character you want to delete, and then press the **PRE-CH** button. To change case or enter numbers or punctuation, press the **-** button.

Creating an Account



To establish your own, exclusive, configuration of Smart Hub, create your own Smart Hub account.

Note





- You must use an e-mail address as an ID.
- You can register up to 10 User Accounts.
- You do not need an account to use **Smart Hub**.









To create an account, follow these steps:

1. Press the **A** button on your remote control. The Login screen appears.
2. Press the **▲ / ▼ / ◀ / ▶** buttons to select **Create Account**, and then press the **ENTER**  button.
3. On the next screen, select **Smart TV Account**, and then press the **ENTER**  button. An entry screen and keypad appear.
4. Use the keypad to enter your e-mail address. This will serve as your ID.



5. When done, press the **ENTER**  button to select **OK**, and then press the **ENTER**  button again. The Login screen re-appears.
6. Select **Password**, and then press the **ENTER**  button. The Password screen and a keyboard appear.
7. Use the keypad to enter a password. The password can be any combination of letters, numbers, and symbols.
 -  Press the **A** button on your remote to show or hide the password as you enter it.




8. When done, press the **ENTER**  button to select **OK**, and then press the **ENTER**  button again. The Login screen re-appears.
9. Select **Confirm**, and then press the **ENTER**  button.
10. Repeat Steps 7 and 8.
11. When the Login screen re-appears, select **Create Account**, and then press the **ENTER**  button. The Confirmation window appears.
12. Select **OK**, and then press the **ENTER**  button. The Continue to Register Service window appears.
13. Select **Connect Service**, and then press the **ENTER**  button.

14. The Register Service Account Window appears.




- ☑ If you have existing accounts with any of the listed providers, you can associate the provider account and the provider account password with your Smart Hub account.






Registration makes it easier to access the providers web site. For registration instructions, go to Step 2 in **Account Management** under **Settings** in the “Setting Up Smart Hub” section of this manual.

- ☑ If you don't have existing provider accounts or do not want to register existing accounts at this time, select **OK**, and then press the **ENTER**  button. You can also let the window close on its own in about a minute.

Account Log In

To log in to your **Smart Hub** account, follow these steps:

1. With the **Smart Hub** main screen displayed on your TV, press the **A** button on your remote. The Login screen appears.
2. Select the  next to the **Smart TV ID** field, and then press the **ENTER**  button.
3. Select your ID from the list that appears, and then press the **ENTER**  button. The Login screen re-appears.


4. Select **Password**, and then press the **ENTER**  button. The Password window and a keypad appears.
5. Using the keypad and your remote, enter your password. When done, press the **ENTER**  button, select **OK**, and then press the **ENTER**  button again.
 -  If you want Smart Hub to enter your password automatically, select **Remember my Smart TV ID and password** after you have entered your password, and then press the **ENTER**  button. A check appears. Smart Hub will now enter your password automatically when you select or enter your ID.

❑ Setting up Smart Hub

■ Settings

The Settings Menu Screen gives you access to account management, account reset, and account properties functions.

To access the **Settings** Menu, and then select a menu item, follow these steps:

1. Press the **D** button on your remote.
2. Press the ◀ / ▶ to select a menu item, and then press the **ENTER**  button.

The functions on the **Settings** Menu screen are described below.


- **Account Management**


The **Account Management** Menu contains functions that let you register your service provider accounts, change your Smart Hub password, and delete or deactivate your Smart Hub account.





Register Service Account: If you have existing accounts with any of the providers listed by the **Register Service Account** function, you can associate the provider account and the provider account password with your Smart Hub account. If you associate the account, you will be able to log onto the account through Smart Hub easily, without entering your account name or password.


To use the **Account Management** function, follow these steps:



1. In the **Account Management** menu, select **Register Service Account**, and then press the **ENTER**  button. The Register Service Account Window appears.

2. Press the ▲ / ▼ arrow buttons to select a Service Provider you want to associate with your Smart Hub account, and then press the **ENTER**  button.

 If you have a Samsung account and you want to use the **Samsung Apps** function in Smart Hub, you must register your Samsung Apps account here.



3. Using your remote and the on-screen Keypad, enter your site ID and password. When done, press the **ENTER**  button.

 This is the ID and password you normally use to access your account on this site.

4. If you have entered the ID and password correctly, the **Registered Successfully** message appears, asking you if you want to add another service provider. If you do, press the **ENTER**  button. If not, press the **RETURN** button and return to the **Settings** Menu.
5. If you pressed **ENTER** , repeat Steps 2 through 4 to associate another Service Provider.
6. When you are done, press the **RETURN** button.



Change Password: The **Change Password** function lets you change your Smart Hub password. To change the password, follow these steps:

1. Select **Change Password**, and then press the **ENTER**  button.
2. Enter your current password. The next screen appears.
3. On the next screen, enter a new password on the first line. Enter it again on the second line to confirm.
4. The **Changing Password Complete** message screen appears. Press the **ENTER**  button or wait for the screen to close - about 5 seconds.

Remove from TV Account List: The **Remove From TV Account List** function cancels all your current registered Service Accounts that you registered on the **Register Service Account** screen.

Deactivate Account: The **Deactivate Account** function deactivates your **Smart TV ID** and deletes it and all your account settings entirely from **Smart Hub**.



- **Service Manager**

Ticker Autorun: You can set **Ticker Autorun** to come on when powering on the TV.

☑ The **Ticker** application provides useful News, Weather, and Stock Market information. The **Ticker** application on **Smart Hub** must be downloaded to use this feature.


☑ Depending on your country, the **Ticker** application may have a different service or not be supported.

Channel Bound Service (Off / On): Some channels support applications as an Internet data service, allowing you to access the Internet service while watching TV.

☑ Only available if supported by the broadcaster

- **Reset:** The **Reset** function initializes all downloaded applications, erases all user accounts and settings from the player, and resets all Smart Hub settings to the factory default settings. It then restarts **Smart Hub** as if it were starting for the first time. Your account, however, remains on the Smart Hub server. To log into your account, enter your ID and password on the Login screen.

To use the **Reset** function, follow these steps:

1. In the **Account Management** menu, select **Reset**, and then press the **ENTER**  button. The **Reset** screen appears.

2. Enter the your security password.

☑ The default password set is “0-0-0-0.”

☑ If you forget the password you created, press the following sequence of remote control buttons to reset the password to “0-0-0-0”: **POWER** (off) → **MUTE** → **8** → **2** → **4** → **POWER** (on).

3. After a few moments, Smart Hub automatically resets. The screen may go black, then Smart Hub re-appears. In a few moments, it starts the re-initialization procedure.

4. To complete the re-initialization, go to Step 4 in Starting Smart Hub for the First Time.

- **Properties**

The Properties menu item lists three functions that display information about Smart Hub :


Detail: Lists information about Smart Hub including version number, the number of services installed, memory usage, and the unique product ID.

Terms of Service Agreement: Display the **Terms of Service Agreement**.




■ Edit Mode

The functions in the **Edit Mode** menu let you manipulate the applications in the My Applications section of the **Smart Hub** screen. Using these functions, you can lock and unlock access to some applications, create folders and move applications to them, rename folders, delete applications, and change the position of applications on the screen. To access the **Edit Mode** Menu, and then select a menu item, follow these steps:

1. Press the **C** button on your remote. The **Edit Mode** menu bar appears on the bottom of the screen.
2. Press the **▲** / **▼** / **◀** / **▶** to select a menu item, and then press the **ENTER**  button.


The functions in the **Edit Mode** Menu bar are described below.

NOTE

- Some menu items may not appear on the screen. To see these items, press the ◀ / ▶ to move to the screen edge, and then press one more time to reveal the items.
- You can close the bar by highlighting the X on the bottom right side, and then pressing the **ENTER**  button.

◀ • **Move** ▶

The **Move** function lets you change the screen position of an application. To use the **Move** function, follow these steps:

1. Press the **C** button on your remote.
2. Select a application, and then press the **ENTER**  button. A ✓ appears above the application.

3. Press the ▲ / ▼ / ◀ / ▶ to select **Move**, and then press the **ENTER** ↵ button. A position change icon appears above the application.
4. Press the ▲ / ▼ / ◀ / ▶ to move the icon. Press the **ENTER** ↵ button when the icon is in the position of your choice. The application moves to its new location.

- **New Folder**

The **New Folder** function lets you create and name new folders. Once you have created a folder, you can move applications into it.

To use the **New Folder** function, follow these steps:

1. Press the **C** button on your remote.
2. Press the ▲ / ▼ / ◀ / ▶ to move the cursor to **New Folder**, and then press the **ENTER** ↵ button. The **Create Folder** window and a keypad appear.

3. Use the keypad to enter the name of the folder.



4. Select **OK**, and then press the **ENTER**  button. The **New Folder** screen closes and the New Folder appears on the Smart Hub screen.

- **Move to Folder**



The **Move to Folder** function lets you move an application to a folder. To use the **Move to Folder** function, follow these steps:

1. Press the **C** button on your remote.

2. Select an application, and then press the **ENTER**  button.

3. Press the ▲ / ▼ / ◀ / ▶ to select **Move to Folder**, and then press the **ENTER**  button. The Move to Folder window opens.
4. Press the ▲ / ▼ / ◀ / ▶ to select a folder, and then press the **ENTER**  button. The **Moved to Folder** message appears, and then closes. The application has been moved to the folder.



To access an application in a Folder

1. Close the **Edit Mode** menu.
2. In My Applications, press the ▲ / ▼ / ◀ / ▶ to select a folder, and then press the **ENTER**  button. The folder opens.
3. Select an application, and then press the **ENTER**  button. The application service starts.

To Edit Items in a Folder




Select a folder, and then press the **ENTER**  button. The folder opens. Press the **C** button on your remote. The Edit buttons appear at the bottom of the screen.

These buttons work the same as the **Edit Mode** menu buttons on the main screen. For example, to move an application back to the My Applications main screen:

1. Select the application.
2. Select **Move to Folder**, and then press the **ENTER**  button. The **Move to Folder** window appears.
3. Select My Applications, and then press the **ENTER**  button. The **Move to Folder** window closes and the application returns to the main My Applications screen.

- **Rename Folder**




The **Rename Folder** function lets you rename folders. To use the **Rename Folder** function, follow these steps:

1. Press the **C** button on your remote.
2. Press the **▲ / ▼ / ◀ / ▶** to select a folder, and then press the **ENTER**  button.
3. Press the **▲ / ▼ / ◀ / ▶** to select **Rename a Folder**, and then press the **ENTER**  button. The **Folder Rename** window and a keyboard appears.
4. Use the key board to enter a new name.
5. Select **OK**, and then press the **ENTER**  button twice. The Rename window closes and the new name appears below the folder.




- **Lock**

The **Lock** function lets you lock some application in My Applications so they can not be opened without entering the password.

To use the **Lock** function, follow these steps:




1. Press the **C** button on your remote.
2. Press the ▲ / ▼ / ◀ / ▶ to select an application, and then press the **ENTER**  button. If the application can be locked, the Lock menu item darkens.
3. Press the ▲ / ▼ / ◀ / ▶ to select **Lock**, and then press the **ENTER**  button. The Security window appears.
4. Enter your password. If you have not created a password, enter “0-0-0-0”.
5. Press the **ENTER**  button. The **Lock Service** window appears confirming the lock, and then closes. A lock symbol appears next to the application.

- **Unlock**

1. Press the **C** button on your remote.
2. Press the **▲ / ▼ / ◀ / ▶** to select a locked application, and then press the **ENTER**  button.
3. Press the **▲ / ▼ / ◀ / ▶** to select **Unlock**, and then press the **ENTER**  button. The Security window appears.
4. Enter your password. If you have not created a password, enter “0-0-0-0”.
5. Press the **ENTER**  button. The **Lock Service Released** window appears confirming the lock has been release, and then closes.

- **Delete**


The **Delete** function lets you delete application from My Applications. To use the **Delete** function, follow these steps:

1. Press the **C** button on your remote.
2. Press the ▲ / ▼ / ◀ / ▶ to select an application, and then press the **ENTER**  button.
3. Press the ▲ / ▼ / ◀ / ▶ to select **Delete**, and then press the **ENTER**  button. The message, “**Do you want to delete selected item(s)?**” appears.
4. Select **Yes**, and then press the **ENTER**  button. The application is deleted.

■ Sort by

The functions in the Sort Menu let you sort the applications in My Applications by Name, Date, Frequency (of use), and Category. If you manually change the position of an application, the Sort Menu automatically highlights **User Defined** when you start it.

To sort the applications in My Applications, follow these steps:

1. Press the **B** button on your remote.
2. Press the ▲ / ▼ / ◀ / ▶ to select a sorting method, and then press the **ENTER**  button. Smart Hub sorts the applications by the method you have chosen.

□ Using Smart Hub

Enjoy photos, music and/or movie files saved on a USB Mass Storage Class (MSC) device and/or your PC.


1. Press the **SMART HUB** button.
2. Press the ▲ / ▼ / ◀ / ▶ button to select **Videos**, **Photos**, or **Music**, and then press the **ENTER** ↵ button.

📝 To view content on a USB device, you must plug the device into a USB jack on the TV.



- The displayed image may differ depending on the model.

❑ Connecting a USB Device

1. Turn on your TV.
2. Connect a USB device containing photo, music and/or movie files to the **USB [1(HDD) or 2]** port on the back or side panel of the TV.
3. When a USB device is connected to the TV, the **Connected Device** window appears. Select a connected device, and then press **ENTER** .

-  The TV may display the files on the USB device automatically if it is the only device connected.



- The displayed image may differ depending on the model.

Read this information before using Smart Hub with a USB device

- The USB function might not work properly with unlicensed multimedia files.
- MTP (Media Transfer Protocol) is not supported.
- The file system supports FAT16, FAT32 and NTFS.
- Certain types of USB Digital camera and audio devices may not be compatible with this TV.
- **Smart Hub** only supports the Sequential jpeg format. It does not support the Progressive jpeg format.
- Smart Hub only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD (USB HUB are not supported). Devices should be connected directly to the TV's USB port.

- Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- Connect a USB HDD to the dedicated **USB 1 (HDD)** port.
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360X8640 pixels.
- If a file is corrupted or the TV does not support the file type, the “**Not Supported File Format**” message appears.
- If the files are sorted by **Folder View**, up to 1000 files can be displayed in each folder.

- The TV cannot play MP3 files with DRM that have been downloaded from a for pay site. Digital Rights Management (DRM) is a technology that supports the creation, distribution, and management of digital content in an integrated and comprehensive way, including protecting the rights and interests of content providers, preventing illegal copying of contents, and managing billings and settlements.
- If more than 2 PTP devices are connected, you can only use one at a time.
- If more than two MSC devices are connected, some of them may not be recognized. A USB device that requires high power (more than 500mA or 5V) may not be supported.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.



- If the TV has no input during the time set in **Auto Protection Time**, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be released automatically when you connect them to the TV.
- If you connect a USB device with a USB extension cable, the TV may not recognize the USB device or read the files on the device.
- If a USB device you connect to the TV is not recognized, the files on the device are corrupted, or a file in the list is not played, connect the USB device to a PC, format the device and check the connection.
- If a file you deleted from the PC is still found when you run Smart Hub, use the “Empty the Recycle Bin” function on the PC to permanently delete the file.

❑ Connecting to a PC through a network

You can play pictures, music, and videos saved in your PC through a network connection in the **AllShare** mode.

- ✍ For more information on how to configure your TV and connect it to your network, see 'Network Connection'.
- ✍ To view content located on your PC, you must have connected your TV and your PC to your LAN and downloaded and installed AllShare PC Software on your PC.
- ✍ We recommend you locate both your TV and PC in the same network subnet. IP addresses have four parts, separated by periods (111.222.333.444). If your TV and PC are in the same subnet, the first 3 parts of the TV IP address and the PC IP address (111.222.333) will be the same and only the last part (the host address) will be different.

✎ The following Smart Hub functions are not supported when you are playing media from a PC connected through a network:

- The **Background Music** and **Background Music Setting** functions.
- Sorting files by preference in the **Photos**, **Music**, and **Videos** folders.
- The  (REW) or  (FF) button while a movie is playing.

✎ Divx DRM, Multi-audio, embedded captions are not supported.

✎ Set your PC firewall program so that AllShare PC Software is a permitted program.

☞ Depending on the Internet server, when you use **Smart Hub** through a network connection:

- The sorting method may vary.
- The **Resume** function, which resumes playing of a video, may not be supported.
 - The **Resume** function does not support multiple users. (It memorizes only the point where the most recent user stopped playing a video.)
- The ◀ or ▶ button may not work depending on the content information.

☞ You may experience file stuttering while playing a video in Smart Hub through a network connection.

❑ Screen Display

Move to the file you want to play using the ▲ / ▼ / ◀ / ▶ buttons, and then press the **ENTER** ↵ or ▶ (Play) button. The file is played.

Device name: Displays the name of the connected device.

File List Section: Displays files sorted according to your criteria.



Home: Return to content home

Change Contents/Device: Changes the content type or connected device.

Sorting: Displays sort criteria. Sort criteria differ, depending on the content.

Edit Mode: Select and play multiple files or assign them to My Playlist. This function is available only for Music.

Move to another page containing a list of files.

■ Videos

Playing a Video

1. Press the ◀ / ▶ / ▲ / ▼ button to select the desired video in the file list.
2. Press the **ENTER** ↵ button or ▶ (Play) button.
 - The file name appears on the top with its playing time.
 - If video time information is unknown, the playing time and progress bar are not displayed.



- The displayed image may differ depending on the model.

- During video playback, you can search using the ◀ and ▶ buttons.
- You can use the ◀◀ (REW), ▶▶ (FF), Pause, Stop, and Play buttons on the bottom of your remote during playback.
- Press the **RETURN** button to exit the movie
- ☑ In this mode, you can enjoy movie clips contained in a game, but you cannot play the game itself.
- Supported Video Subtitle Formats (for language subtitles, etc.)

Name	File extension	Format
MPEG-4 time-based text	.txt	XML
SAMI	.smi	HTML
SubRip	.srt	string-based
SubViewer	.sub	string-based
Micro DVD	.sub or .txt	string-based

- Supported Video Formats

File Extension	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.avi *.mkv	AVI MKV	Divx 3.11 / 4.x / 5.1 / 6.0	1920x1080	6 ~ 30	8	MP3 / AC3 / LPCM / ADPCM / DTS Core
		XviD	1920x1080	6 ~ 30	8	
		H.264 BP / MP / HP	1920x1080	6 ~ 30	25	
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		Motion JPEG	800x600	6 ~ 30	8	
*.asf	ASF	Divx 3.11 / 4.x / 5.1 / 6.0	1920x1080	6 ~ 30	8	MP3 / AC3 / LPCM / ADPCM / WMA
		XviD	1920x1080	6 ~ 30	8	
		H.264 BP / MP / HP	1920x1080	6 ~ 30	25	
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		Motion JPEG	800x600	6 ~ 30	8	
*.wmv	ASF	Window Media Video v9	1920x1080	6 ~ 30	25	WMA
*.mp4	MP4	H.264 BP / MP / HP	1920x1080	6 ~ 30	25	MP3 / ADPCM / AAC
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		XVID	1920x1080	6 ~ 30	8	

File Extension	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.3gp	3GPP	H.264 BP / MP / HP	1920x1080	6 ~ 30	25	ADPCM / AAC / HE-AAC
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
*.vro *.vob	VRO VOB	MPEG1	1920x1080	24 / 25 / 30	30	AC3 / MPEG / LPCM
		MPEG2	1920x1080	24 / 25 / 30	30	
*.mpg *.mpeg	PS	MPEG1	1920x1080	24 / 25 / 30	30	AC3 / MPEG / LPCM / AAC
		MPEG2	1920x1080	24 / 25 / 30	30	
		H.264	1920x1080	6 ~ 30	25	
*.ts *.tp *.trp	TS	MPEG2	1920x1080	24 / 25 / 30	30	AC3 / AAC / MP3 / DD+ / HE-AAC
		H.264	1920x1080	6 ~ 30	25	
		VC1	1920x1080	6 ~ 30	25	

Other Restrictions

NOTE

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bitrate/frame rate above the compatible Frame/sec listed in the table above.
- If the Index Table is in error, the Seek (Jump) function is not supported.
- You may experience file stuttering while playing a video through a network connection.
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps.
- Some USB/Digital camera devices may not be compatible with the player.

Video Decoder

- Supports up to H.264, Level 4.1
- H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported.
- For XVID, MPEG4 SP, ASP:
 - Below 1280 x 720: 60 frame max
 - Above 1280 x 720: 30 frame max
- GMC is not supported.

Audio Decoder

- Supports up to WMA 7, 8, 9 STD, 9 PRO
- WMA sampling rate 22050Hz mono is not supported.
- WMA Lossless, Voice Lossless, and Voice are not supported.

Using the Play Continuously Function (Resume Play)

If you exit a movie when it is playing, you can play the movie later from the point where you stopped it.

☞ The **Resume** function does not support multiple users. (It will have only memorized the point where the most recent user stopped playing.)

1. Select the movie file you stopped and want to resume by pressing the ◀ or ▶ button.

2. Press the ▶ (Play) or **ENTER** ↵ button.

3. Select **Resume** (Resume Play). The Movie will begin to play from where you stopped it.

☞ **Resume** (Resume Play) is only available when you resume playing a movie you had stopped.

■ Music

Playing Music

1. Press the ◀ / ▶ / ▲ / ▼ button to select the desired music file in the file list.

2. Press the **ENTER** ↵ button or ▶ (Play) button.

- When the music is playing, you can search using the ◀◀ (REW) and ▶▶ (FF) button.


📝 Smart Hub only displays files with MP3 file extensions. Other file extensions are not displayed, even if they are saved on the same USB device.

📝 If the sound is abnormal when you play MP3 files, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)



- The displayed image may differ depending on the model.

Creating My Playlist

1. On the **Music** screen in the **Smart Hub** menu, press the ◀ / ▶ / ▲ / ▼ button to select **Edit Mode**, and then press the **ENTER**  button.

A check box appears to the left of the files.


2. Press the ◀ / ▶ / ▲ / ▼ button to select the tracks you want to add, and then press the **ENTER**  button.


 A check appears in the check box.

3. Repeat Step 2 to select additional tracks.

 To select all the files in the current page, select **Select All** at the top.



4. Press the ◀ / ▶ / ▲ / ▼ button to select **Add to My Playlist**.

 Note that selecting **Clear My Playlist** will return **My Playlist** to the default playlist and remove all the tracks you added.



5. Press the **ENTER**  button. The message “**Selected items were added to My Playlist.**” is displayed.
6. The newly created or updated playlist will be in the main **Music** page.

Playing My Playlist


Select the **My Playlist** folder and it will play automatically. Press the ▲ or ▼ button to play a different music file within the play list.



 To delete a file from **My Playlist**, select the recycle bin icon next to the file you want to delete by using the direction buttons, and then press **ENTER** . The file will be deleted from **My Playlist**.

Playing Selected Music Files

1. On the **Music** screen in the **Smart Hub** menu, press the ◀ / ▶ / ▲ / ▼ button to select **Edit Mode** on the far right side of the screen,, and then press the **ENTER**  button.
2. Press the ◀ / ▶ / ▲ / ▼ button to select the desired music file in the file list, and then **ENTER**  button.

NOTE

- The  mark appears to the left of the selected files.

3. Repeat Step 2 to select additional tracks.
 - To select all the files in the current page, select **Select All** at the top.
 - To cancel a selection, press the **ENTER**  button again.
4. Press the ◀ / ▶ / ▲ / ▼ button to select **Play** at the bottom of the screen, and then press **ENTER** . The selected music files play.


■ Photos



Viewing a Photo (or Slide Show)


1. Press the ◀ / ▶ / ▲ / ▼ button to select the desired file in the file list.
2. Press the **ENTER** ↵ button.
 - To view files manually, one at a time, press the left or right arrow buttons.




- The displayed image may differ depending on the model.

- To start the slide show, press the **ENTER**  button when the file you selected is displayed.
- During the slide show, all files in the file list are displayed in order, starting from the file you selected.

 When you press the  (Play) button in the file list, the slide show will start immediately.

 During a Slide show, press the **TOOLS** button to access additional functions such as **Slide Show Speed**, **Background Music**, **Zoom**, and **Rotate**.



 You can add background music to a slide show if you have music files on your USB device or PC by setting **Background Music** to **On** in the Tools menu, and then selecting music files to play.

- ✍ The **Background Music (BGM) Mode** cannot be changed until the BGM has finished loading.
- ✍ You can use the Pause, Stop, and Play buttons on the bottom of your remote during a slide show.
- ✍ When you press the Stop or Return button, the slide show stops and the main photo screen re-appears.



Smart Hub - Additional Functions

Sorting the file lists

To sort files in the file lists, select the  (**Sorting**) icon in the top right of the screen by using the ◀ / ▶ / ▲ / ▼ button. Then, press the **ENTER**  button. The checks below indicate which media the sort criteria apply to.

Sort Criteria	Operations	Videos	Music	Photos
Folder View	Displays the whole folder. You can view the file name and thumbnail by selecting the folder.	✓	✓	✓
Title	Sorts and displays the file title in Symbol/Number/Alphabet/Special order.	✓	✓	✓
Latest Date	Sorts and shows files by the latest date.	✓		✓
Earliest Date	Sorts and shows files by the earliest date.	✓		✓

Sort Criteria	Operations	Videos	Music	Photos
Artist	Sorts the music file by artist in alphabetical order.		▼	
Album	Sorts the music file by album in alphabetical order.		▼	
Genre	Sorts music files by the genre.		▼	
Monthly	Sorts and shows photo files by month.			▼















Videos/Music/Photos Play Option menu

When playing video, or photo files, you can press the **TOOLS** button to display an Options menu. Below are a series of tables listing the options available and the media each option applies to.

Option Name	Operation	Videos	Music	Photos
List	Return to the file list.	✓	✓	✓
Previous / Next	Go to previous / next photo file.			✓
Shuffle	You can play the music sequentially or randomly.		✓	
Resume	You can restart a movie file from where you stopped it.	✓		
Title Search	You can move directly to another Title.	✓		

Option Name	Operation	Videos	Music	Photos
Time Search	You can search the movie using ◀ and ▶ buttons at intervals of 1 minute.	▼		
Subtitle	You can view a subtitle. You can select a specific language if the subtitle file contains multiple languages.	▼		
Repeat Mode	You can play movie and music files repeatedly.	▼	▼	
Picture Size	You can adjust the picture size to your preference.	▼		
Picture Mode	You can change the Picture Mode .	▼		▼
Sound Mode	You can change the Sound Mode .	▼	▼	▼
Subtitle Setting	Displays the Subtitle Setting . You can set up a subtitle option.	▼		

Option Name	Operation	Videos	Music	Photos
Start Slide Show / Stop Slide Show	You can start or stop a slide show. Alternatively, the  or  button on the remote.			
Slide Show Speed	You can select the slide show speed during the slide show. Alternatively, the  or  button on the remote.			
Background Music On / Off	You can start or stop background music.			
Background Music Setting	You can set and select background music when watching a photo file or slide show.			
Zoom	You can zoom into images in full screen mode.			
Rotate	You can rotate images.			

-  Pressing the **INFO** button while a device name is selected will display information about the selected device.
-  Pressing the **INFO** button while a file is selected will display information about the selected file.

❑ Using Samsung Apps

■ Samsung Apps

Samsung Apps is a store where you can download applications to use on Samsung TV/AV equipment.

You can enjoy a variety of contents such as videos, music, photos, games, useful information etc. using the downloaded applications.

New applications are added regularly.



✍ Using the colored buttons with **Samsung Apps**.

- **A** Red (**Login**): To log in to the Internet service.
- **B** Green (**List View / Thumbnail View**): To toggle the view between List and Thumbnail.
- **D** Blue (**Sort by**): To sort the applications by **Recommended**, **Most downloaded**, **Most recent** or **Name**.

✍ You can sort all categories except **What's New?**.

- **◀▶** **Page**: Move to previous or next page.
- **↶** **Return**: Moves to previous menu.



- The displayed image may differ depending on the model.

Using the Samsung Apps by category

The following categories are available:

- **What's New?:** Displays newly registered applications.
- **Video:** Displays apps that provide video media such as movies, TV shows and short length videos.
- **Game:** Displays various game apps such as sudoku and chess.
- **Sports:** Displays apps that provide sports content such as game results, images and short length video.
- **Lifestyle:** Includes apps that provide lifestyle media services such as music, personal photo management tools and social networking such as Facebook and Twitter.

- **Information:** Includes apps that provide information content such as news, financial information, stock quotes, weather, etc.
- **Other:** Includes other miscellaneous apps and services.
- **My Account:** Displays the application list and your cyber cash balance.
 - ✍ Starting in the middle of 2010 (US and Korea only), you can purchase cyber-cash that you can use to buy applications through tv.samsung.com.
- **Help:** If you have questions about **Smart Hub**, check this section first.




■ Social TV for PDP 6450 Series and above

(May not be available, depending on your country.)






Share your TV viewing experience with your friends via social networking services (SNS). Using the Social TV function provided by the Smart Hub, you can use an SNS function such as Twitter, Facebook or Google Talk while watching TV in the same way you use it on a PC. For detailed information about using a service, refer to the corresponding website.

📝 To use the Social TV function, you have to sign in uniformly first. If you don't have a Smart Hub account, create a Smart Hub ID and log in first. If the Smart Hub account is not linked with the user account of the **SNS**, you have to register the **SNS** account in Smart Hub to use the service through Smart Hub. For more information about registering a service site, refer to “How to create a Smart Hub ID”.

1. To open **Social TV**, press the ◀ / ▶ / ▲ / ▼ buttons to select **Social TV**, and then press the **ENTER**  button.
2. Enjoy your social network service through **Social TV**.

Using the colored and function buttons with Social TV

- **A** Red (**Log in / Logout**): To log into or logout of the Smart Hub account.
- **B** Green (**Refresh**): Refresh the application.
- **C** Yellow (**Write Comment**): Displays the **Comment** screen.
 The function for this button may change depending on the service.
- **D** Blue (**Change Mode**): Change the view mode. Select **Overlay**, **PIG**, or **Hide** mode.
-  (**Settings**): Displays the **Service Setting**. You can activate or deactivate the service.
-  (**Exit**): Return to the previous screen.




■ **Search** for PDP 6450 Series and above



(May not be available, depending on your country.)

Easily search for and access content from diverse sources (e.g. applications, Your Video, AllShare)

- Usable while using **SMART HUB**
- For easy access, use the **SEARCH** button on the remote control.
- For detailed instructions to use search function, please visit www.samsung.com.

1. To open **Search**, press the ◀ / ▶ / ▲ / ▼ buttons to select **Search**, and then press the **ENTER**  button.
2. If you want to input a search term directly, press the **ENTER**  button. A keypad screen appears. Enter the search term using the remote control.
 -  If you want to select a category, press the ▼ button. You can select a category to search.



■ Your Video for PDP 6450 Series and above



(May not be available, depending on your country.)

Provides recommendations for videos based on your tastes.

- Lets you see movie recommendations based on your previous preferences.
- Lets you select a movie, displays a list of VOD (Video on Demand) providers that have the movie, and then lets you choose a provider for streaming.
(Streaming is unavailable in some areas.)
- For instructions to use Your Video, please visit www.samsung.com.

Your Video: Personalize your movie-watching with a customized video on demand (VOD) recommendation service.

Most Searched: You can search for a video by selecting a key word in the key word list. The key word list displays words you frequently use for searches.

Top Application: You can search top video applications and services for a video.

Search History: You can search for a video by selecting a keyword in the History list.



[Legal Statement]

Due to the various capabilities of products featuring the Samsung Smart Hub - Content Service, as well as limitations in the available content, certain features, applications, and services may not be available on all devices or in all territories.

Some features on Smart Hub may also require additional peripheral devices or membership fees that are sold separately. Please visit <http://www.samsung.com> for more information on specific device information and content availability.

The services and availability of content through Smart Hub are subject to change from time to time without prior notice.

❑ Troubleshooting for SMART HUB

Problem	Possible Solution
Some application contents only appear in English. How can I change the language?	The Application content language may be different from the application user interface language. The ability to change the language depends on the service provider.
Some application services do not work.	Check with the service provider. Refer to the help website for application service provider information.
When a network error occurs, I can only use the setting menu.	If network connection doesn't work, your service might be limited, as all functions except the setting menu are needed to connect to the internet.

All content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE DEVICE IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE AND ACCURACY IS WITH YOU. THE DEVICE AND ALL THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED. SAMSUNG EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE DEVICE AND ANY CONTENT AND SERVICES, EITHER EXPRESS OR, IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND DOES NOT WARRANT THAT THE DEVICE, CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS, OR THAT OPERATION OF THE DEVICE OR SERVICES WILL BE UNINTERRUPTED OR ERROR-FREE.

UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF THE DEVICE, OR ANY CONTENT OR SERVICE ACCESSED BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Third party services may be changed, suspended, removed, terminated or interrupted, or access may be disabled at any time, without notice, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any change, interruption, disabling, removal of or suspension of any content or service made available through this device. Samsung may impose limits on the use of or access to certain services or content, in any case and without notice or liability.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

□ AllShare™

AllShare™ connects your TV and compatible Samsung mobile phones / devices through a network. On your TV, you can view call arrivals and SMS messages, and received by your mobile phones. In addition, you can play media contents including videos, photos, and music saved on your mobile phones or the other devices (such as your PC) by controlling them on the TV via the network. Additionally, you can use your TV for browsing web pages on your mobile phones.

◻ For more information, visit “www.samsung.com” or contact the Samsung call center. Mobile devices may need additional software installation. For details, refer to each device’s user’s guide.


- ☞ If your Samsung TV connects to a non-Samsung DLNA server, a compatibility issue may occur during video playback.
- ☞ By connecting your Samsung TV to a network via AllShare™, you can use Samsung's original functions as follows:
 - Playback of various video formats (DivX, XVID, MP4, 3GPP, AVI, ASF, MKV, etc.)
 - Video thumbnail feature
 - Bookmark function (to resume video playback)
 - Auto-chaptering (scene navigation)
 - Digital content management
 - Compatibility with various subtitle formats (SRT, SMI, SUB, TXT, TTXT)
 - Search with file names
 - And many others
- ☞ To use the original DLNA functions of Samsung fully, it is recommended that you use the AllShare™ software provided with your TV.

□ Setting Up AllShare™

📄 MENU → Network → AllShare Settings → ENTER ↵

■ AllShare Settings

- **Media (On / Off):** Enables or disables the media function. When the media function is on, you can control Media contents play using mobile phones or other devices that support DLNA DMC.

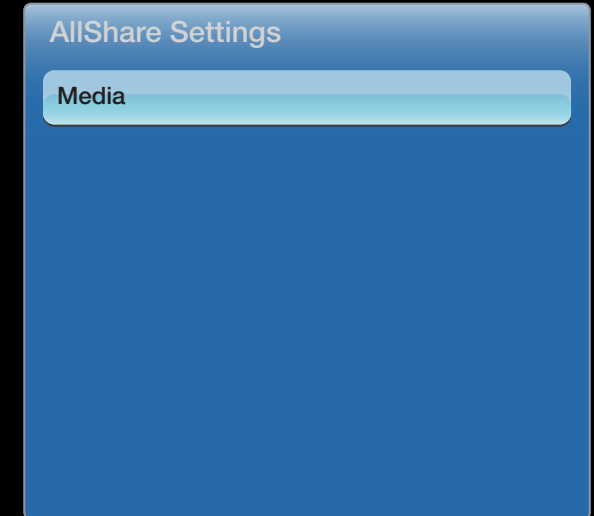

- The displayed image may differ depending on the model.

■ Media

Shows a list of mobile phones or connected devices which have been set up to use the **Media** function with this TV.

☑ The Media function is available in all devices which support DLNA DMC.


- **Allowed / Denied:** Allows/Blocks the devices.
- **Delete:** Deletes the devices from the list.




☑ This function only deletes the name of the device from the list. If the deleted device is turned on or tries to connect to the TV, it may appear on the list again.

Using the Media Function

An alarm window appears informing you that media contents (videos, photos, music) sent from a mobile phone will be displayed on your TV. The contents are played automatically 3 seconds after the alarm window appears. If you press the **RETURN** or **EXIT** button when the alarm window appears, the media contents are not played.

NOTE

- The first time a device accesses your TV through the media function, a warning popup window appears. Press the **ENTER**  button to select **Allow**. This permits the phone to access the TV freely and use the Media function to play content.

- To turn off media contents transmissions from a mobile phone, set **Media** to **Off** in the **AllShare Settings**.
- Contents may not play on your TV depending on their resolution and format.
- The **ENTER**  and  /  buttons may not work depending on the type of media content.
- Using the mobile device, you can control the media play. For details, refer to each mobile's user's guide.



❑ Anynet+(HDMI-CEC)

■ What is Anynet+? **TOOLS**

Anynet+ is a function that enables you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote. The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

NOTE

- You can only control Anynet+ devices using the TV's remote control, not the buttons on the TV.
- The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet+ device.
- The Anynet+ functions do not operate with other manufacturers' products.



- For instructions explaining how to connect Anynet+ external devices, refer to the device's user manual. You must connect an Anynet+ device using an HDMI cable. Some HDMI cables may not support Anynet+ functions.
- Anynet+ works when the AV device supporting Anynet+ is in the standby or on status.
- Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same type.



- However, you can connect only one Anynet+ Home Theater. To connect an Anynet+ Home Theater, connect the Home Theater to the TV using an HDMI cable then:
 - To hear sound from the Home Theater's Front, Left and Right speakers and the subwoofer only, connect a Digital Optical cable between the **DIGITAL AUDIO OUT (OPTICAL)** jack on your TV and the Digital Audio Input on the Home Theater.
 - To hear 5.1 channel audio, connect HDMI cables to your Anynet+ DVD player, satellite box, etc. Then, connect the **DIGITAL AUDIO OUT (OPTICAL)** jack on your DVD player, Satellite Box, etc. (i.e. Anynet + Device 1 or 2) directly to the Home Theater, not the TV.

Anynet+ Menu

The Anynet+ menu changes depending on the type and status of the Anynet+ devices connected to the TV.

Anynet+ Menu	Description
View TV	Changes Anynet+ mode to TV broadcast mode.
Device List	Shows the Anynet+ device list.
(device_name) MENU	Shows the connected device menus. E.g. if a DVD player recorder is connected, the disc menu of the DVD player recorder will appear.
(device_name) Tools	Shows the tools menu of the connected device. E.g. if a DVD player recorder is connected, the play menu of the DVD player recorder will appear.  Depending on the device, this menu may not be available.
(device_name) Title Menu	Shows the title menu of the connected device. E.g. If a DVD player recorder is connected, the title menu of the movie in the DVD player recorder will appear.  Depending on the device, this menu may not be available.
Receiver	Sound is played through the receiver.

□ Setting Up Anynet+

 MENU  → System → Anynet+ (HDMI-CEC) → ENTER 


■ Anynet+ (HDMI-CEC) (Off / On)

To use the Anynet+ Function, **Anynet+ (HDMI-CEC)** must be set to **On**.

 When the **Anynet+ (HDMI-CEC)** function is disabled, all the Anynet+ related operations are deactivated.




◀ ■ Auto Turn Off (No / Yes) ▶


Set an Anynet+ Device to turn off automatically when the TV is turned off.

 If **Auto Turn Off** is set to **Yes**, running external devices will turn off at the same time as the TV powers off.

 May not be enabled depending on the device.

❑ Switching between Anynet+ Devices

1. Press the **TOOLS** button, select **Anynet+ (HDMI-CEC)**, and then press **ENTER** .
2. Select **Device List**, and then press the **ENTER**  button.
 - ✎ If you cannot find a device you want, select **Refresh** to refresh the list.
3. Select a device, and then press the **ENTER**  button. You can switch to the selected device.

◀  The **Device List** menu appears only when you set **Anynet+ (HDMI-CEC)** to **On** in the **System** menu. ▶

- Switching to the selected device may take up to 2 minutes. You cannot cancel the operation during the switching operation.
- If you have selected an Anynet+ device by pressing the **SOURCE** button and then selecting its input source, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the **Device List**.

❑ Listening through a Receiver

You can listen to sound through a receiver (i.e Home Theater) instead of the **TV Speaker**.

1. Select **Receiver** and set to **On**.

2. Press the **EXIT** button to exit.

- ☞ If your receiver supports audio only, it may not appear in the device list.
- ☞ The receiver will work when you have properly connected the optical in jack of the receiver to the **DIGITAL AUDIO OUT (OPTICAL)** jack of the TV.
- ☞ When the receiver (i.e Home Theater) is set to On, you can hear sound output from the TV's Optical jack. When the TV is displaying a DTV (air) signal, the TV will send out 5.1 channel sound to the receiver. When the source is a digital component such as a DVD player and is connected to the TV via HDMI, you will hear only 2 channel sound from the receiver.

❑ Troubleshooting for Anynet+

Problem	Possible Solution
Anynet+ does not work.	<ul style="list-style-type: none">• Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only.• You can connect only one receiver (home theater).• Check if the Anynet+ device power cord is properly connected.• Check the Anynet+ device's Video/Audio/HDMI cable connections.• Check whether Anynet+ (HDMI-CEC) is set to On in the Anynet+ setup menu.• Check whether the TV remote control is in TV mode.• Check whether the remote control is Anynet+ compatible.• Anynet+ doesn't work in certain situations. (Searching channels, operating Smart Hub or Plug & Play (initial setup), etc.)• If you have removed and then reconnected the HDMI cable, please make sure to search devices again or turn your TV off and on again.• Check if the Anynet+ function of the Anynet+ device is set on.

I want to start Anynet+.	<ul style="list-style-type: none">• Check if the Anynet+ device is properly connected to the TV and check if the Anynet+ (HDMI-CEC) is set to On in the Anynet+ Setup menu.• Press the TOOLS button to display the Anynet+ menu and select a menu you want.
I want to exit Anynet+.	<ul style="list-style-type: none">• Select View TV in the Anynet+ menu.• Press the SOURCE button on the TV remote control and select a non- Anynet+ device.
The message “Connecting to Anynet+ device...” appears on the screen.	<ul style="list-style-type: none">• You cannot use the remote control when you are configuring Anynet+ or switching to a view mode.• Use the remote control after the TV has completed Anynet+ configuration or has finished switching to Anynet+.
The Anynet+ device does not play.	<ul style="list-style-type: none">• You cannot use the play function when Plug & Play (initial setup) is in progress.

The connected device is not displayed.

- Check whether or not the device supports Anynet+ functions.
- Check whether or not the HDMI cable is properly connected.
- Check whether **Anynet+ (HDMI-CEC)** is set to **On** in the Anynet+ setup menu.
- Search Anynet+ devices again.
- Anynet+ requires an HDMI connection. Make sure the device is connected to your TV with an HDMI cable.
- Some HDMI cables may not support Anynet+ functions.
- If the connection is terminated because there has been a power failure or the HDMI cable has been disconnected, please repeat the device scan.

The TV sound is not output through the receiver.

- Connect the optical cable between TV and the receiver.

❏ Troubleshooting

If your TV seems to have a problem, first review this list of issues and solutions. If none of these troubleshooting tips apply, please visit “[www. samsung.com](http://www.samsung.com),” and then click on Support, or contact the Samsung call center.

Issues	Solutions and Explanations
Picture Quality	<ul style="list-style-type: none">● First, perform the Picture Test and to see if your TV is properly displaying the test image.● Go to MENU - Support - Self Diagnosis - Picture Test● If the test image is properly displayed, the poor picture may be caused by the source or signal.

Issues

The TV image does not look as good as it did in the store.

Solutions and Explanations

- Store displays are all tuned to digital, HD (high definition) channels
- If you have an analog cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.
- Cable/Satellite subscribers: Try HD channels from the channel line up.
- Air/Cable Antenna connection: Try HD channels after performing an Auto program.
- ✍ Many HD channels are up scaled from SD (Standard Definition) contents. Look for a channel that is broadcasting true HD content.
- Adjust the Cable/Sat box video output resolution to 1080i or 720p.

Issues	Solutions and Explanations
<p>The picture is distorted: macro block error, small block, dots, pixelization</p>	<ul style="list-style-type: none"> • The compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies. • A weak or bad quality signal can cause picture distortion. This is not a TV issue. • Mobile phones used close to the TV (within 3.3 ft) may cause noise in the picture on analog and digital channels.
<p>Color is wrong or missing.</p>	<ul style="list-style-type: none"> • If you're using a Component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen.
<p>The color is poor or the picture is not bright enough.</p>	<ul style="list-style-type: none"> • Adjust the Picture options in the TV menu (go to Picture Mode / Color / Brightness / Sharpness) • Adjust the Energy Saving option in the TV menu (go to MENU – System – Eco Solution – Energy Saving) • Try resetting the picture to view the default picture settings (go to MENU - Picture - Reset Picture)

Issues	Solutions and Explanations
There is a dotted line on the edge of the screen.	<ul style="list-style-type: none">● If the picture size is set to Screen Fit, change it to 16:9.● Change the cable/satellite box resolution.
The picture is black and white.	<ul style="list-style-type: none">● If you are using an AV composite input, connect the video cable (yellow) to the Green jack of Component Input 1 on the TV.
When changing channels, the picture freezes or is distorted or delayed.	<ul style="list-style-type: none">● If the TV is connected to a cable box, try to reset the box. (Disconnect and then reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.)● Set the output resolution of the cable box to 1080i or 720p.



Issues	Solutions and Explanations
3D for PDP TV	
The 3D Active Glasses are not working correctly	<ul style="list-style-type: none"> • Make sure the glasses are turned on. • The 3D Active Glasses may not work properly if there is any other 3D product or electronic devices turned on near the glasses or TV. • If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.
The screen seems to flicker slightly when you watch 3D images..	<ul style="list-style-type: none"> • You may notice a small amount of screen flickering when watching 3D images under a fluorescent lamp (50Hz ~ 60Hz), a 3 wavelength lamp, or a strobe light. If this occurs, dim the light or turn it off entirely.
The 3D images don't look quite right.	<ul style="list-style-type: none"> • The ideal viewing distance is three times or more the height of the screen. • We also recommend sitting with viewer's eyes on a level with the screen.

Issues	Solutions and Explanations
The batteries in the 3D glasses don't last	<ul style="list-style-type: none">● Turn off 3D glasses while not using them. If you leave 3D glasses on, battery lifespan is shortened
Sound Problem	<ul style="list-style-type: none">● First, perform the Sound Test to determine if your TV audio is operating properly.● Go to MENU - Support - Self Diagnosis - Sound Test)● If the audio is OK, the sound problem may be caused by the source or signal.
There is no sound or the sound is too low at maximum volume.	<ul style="list-style-type: none">● Please check the volume of the device (Cable/Sat Box, DVD, Blu-ray, etc) connected to your TV.



Issues

The picture is good but there is no sound.

Solutions and Explanations

- Set the **Speaker Select** option to **TV Speaker** in the **Sound** menu.
- If you are using an external device, check the device's audio output option. (Ex. You may need to change your cable box's audio option to HDMI if you have the box connected to your TV using an HDMI cable.)
- If you are using an external device, check the device's audio output option (Ex. You may need to change your cable box's audio option to HDMI if you have the box connected to the TV using an HDMI cable.)
- If you are using a DVI to HDMI cable, a separate audio cable is required.
- If your TV has a headphone jack, make sure there is nothing plugged into it.
- Reboot the connected device by disconnecting, and then reconnecting device's power cable.

Issues	Solutions and Explanations
The speakers are making an inappropriate noise.	<ul style="list-style-type: none">● Check cable connections. Make sure a video cable is not connected to an audio input.● For antenna or Cable connections, check the signal information. A low signal level may cause sound distortion.● Perform the Sound Test as explained on a previous page.
No Picture, No Video	
The TV turns off automatically.	<ul style="list-style-type: none">● Ensure the Sleep Timer is set to Off in the System menu.● If your PC is connected to the TV, check your PC power settings.● Make sure the AC power cord is plugged in securely to the wall outlet and the TV.● When you are watching TV, and the signal is coming from an antenna or cable connection, the TV will turn off after 10 - 15 minutes if there is no signal.

Issues	Solutions and Explanations
RF (Cable/Antenna) Connection	
The TV is not receiving all channels.	<ul style="list-style-type: none"> ● Make sure the coaxial cable is connected securely. ● Run Auto Program to add available channels to the channel list. Go to MENU - Channel - Auto Program then select Auto and make sure to select the correct Cable TV signal type. There are 3 options, STD, HRC and IRC. Most cable systems use STD. ● Verify the antenna is positioned correctly.
No caption on digital channels.	<ul style="list-style-type: none"> ● Check the Caption Setup menu. Try changing Caption Mode Service1 to CC1. ● Some channels may not have caption data.
The picture is distorted: macro block error, small block, dots, pixelization.	<ul style="list-style-type: none"> ● The compression of video contents may cause picture distortion, especially with fast moving pictures such as sports and action movies. ● A weak signal can cause picture distortion. This is not a TV problem.


Issues	Solutions and Explanations
PC Connection	
A “Mode Not Supported” message appears.	<ul style="list-style-type: none"> ● Set your PC’s output resolution so it matches a resolution supported by the TV.
“PC” is always shown on the source list, even if a PC is not connected.	<ul style="list-style-type: none"> ● This is normal. “PC” is always shown in the source list, regardless of whether a PC is connected.
The video is OK but there is no audio.	<ul style="list-style-type: none"> ● If you are using an HDMI connection, check the audio output setting on your PC.
Network Connection	
The wireless network connection failed.	<ul style="list-style-type: none"> ● The Samsung Wireless USB dongle is required to use a wireless network. ● Make sure the Network Connection is set to Wireless. ● Make sure the TV is connected to a wireless IP sharer (router).
Software Upgrade over the network fails.	<ul style="list-style-type: none"> ● Run Network Test in Network menu to confirm the connection. ● If you have latest Software (SW) version, SW upgrade will not proceed.

Issues	Solutions and Explanations
Others	
<p>Purple/green rolling horizontal bars and buzzing noise from the TV speakers with a Component cable connection.</p>	<ul style="list-style-type: none">● Remove the left and right audio connections from the set-top-box. If the buzzing stops, this indicates that the set-top-box has a grounding issue. Replace the Component video cables with an HDMI connection.
<p>Plasma TV is making humming noise. for PDP TV</p>	<ul style="list-style-type: none">● Plasma TVs typically make a soft humming sound. This is normal. It's caused by the electrical charges that are used to create the images on the screen.● If the humming sound is loud, you may have set the brightness on the TV too high. Try setting the brightness lower.● You can also have loud humming if the back of your Plasma TV is too close to a wall or other hard surface. Also, try rerouting your connection cables.● An improperly installed wall mount can also create excessive noise.



Issues	Solutions and Explanations
The picture won't display in full screen.	<ul style="list-style-type: none">● HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.● Black bars will appear on the top and bottom of the screen when you watch movies that have aspect ratios different from your TV.● Adjust the picture size options on your external device or the TV to full screen.
Image Retention (Burn In) Issue. for PDP TV	<ul style="list-style-type: none">● To minimize the possibility of screen burn, this unit is equipped with Pixel Shift screen burn reduction technology. Pixel Shift lets you set the picture so it moves slightly up and down (Vertical Line) and side to side (Horizontal Dot). The regular, slight movement of the picture reduces screen burn in.
A "Mode Not Supported" message appears.	<ul style="list-style-type: none">● Check the supported resolution of the TV, and adjust the external device's output resolution accordingly. Refer to the resolution settings in the user manual.

Issues	Solutions and Explanations
<p>Caption on TV menu is greyed out.</p>	<ul style="list-style-type: none"> • You cannot select Caption menu if you have selected a source connected to the TV via HDMI or Component. • The external device's Caption function must also be activated.
<p>There is a plastic smell from the TV.</p>	<ul style="list-style-type: none"> • This smell is normal and will dissipate over time.
<p>The TV Signal Information is unavailable in the Self Diagnosis menu.</p>	<ul style="list-style-type: none"> • This function is only available for digital channels the TV receives from an Antenna / RF/Coax connection.
<p>The TV is tilted to the side.</p>	<ul style="list-style-type: none"> • Remove the base stand from the TV and reassemble it.
<p>The channel menu is greyed out (unavailable).</p>	<ul style="list-style-type: none"> • The Channel menu is only available when you select the TV source.


Issues	Solutions and Explanations
Your settings are lost after 30 minutes or every time the TV is turned off.	<ul style="list-style-type: none">● If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Change the settings from Store Demo mode to Home Use mode using the Plug & Play procedure. Press the SOURCE button to select TV mode, and go to MENU → System → Plug & Play → ENTER .
You have intermittent loss of audio or video.	<ul style="list-style-type: none">● Check the cable connections and reconnect them.● Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to a wall, we recommend using cables with 90 degree connectors.
You see small particles when you look closely at the edge of the frame of the TV.	<ul style="list-style-type: none">● This is part of the product's design and is not a defect.

Issues	Solutions and Explanations
The PIP menu is not available.	<ul style="list-style-type: none">● PIP functionality is only available when you are using an HDMI, PC, or Component source.
POP (TV's internal banner ad) appears on the screen.	<ul style="list-style-type: none">● Select Home Use under Plug & Play mode. For details, refer to Plug & Play Feature.



❑ Anti-theft Kensington Lock

A Kensington Lock is a device you can use to physically fix your TV in place when using it in a public place. You wrap the Kensington Lock's cable around a large, immobile object and then attach the lock to the Kensington slot on the back of the TV.

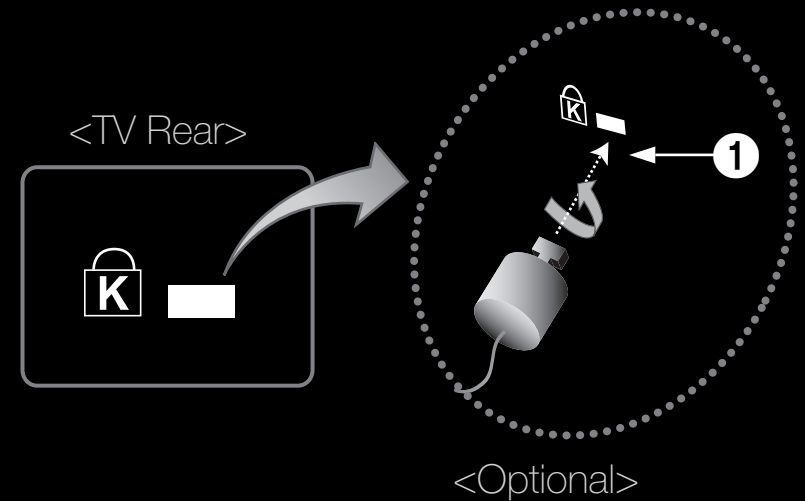



The appearance and locking method may differ from the illustration below depending on the manufacturer. Refer to the manual provided with the Kensington Lock for additional information on proper use. The Kensington Lock is not supplied by Samsung.


📝 Please find a “🔒” icon on the rear of the TV. The Kensington slot is beside the “🔒” icon.

To lock the product, follow these steps:

1. Wrap the Kensington Lock cable around a large, stationary object such as desk or chair.
2. Slide the end of the cable with the lock attached through the looped end of the Kensington Lock cable.
3. Insert the locking device into the Kensington slot on the product **1**.
4. Lock the lock.

◀  These are general instructions. For exact instructions, see the User manual supplied with the locking device. ▶

 The locking device has to be purchased separately.

 The location of the Kensington slot may be different depending on the TV model.

License



TheaterSound, SRS and the  symbol are trademarks of SRS Labs, Inc.

TheaterSound technology is incorporated under license from SRS Labs, Inc.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks. & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product Includes software. © DTS, Inc. All Rights Reserved.



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Covered by one or more of the following U.S. patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274

Open Source License Notice

In the case of using open source software, Open Source Licenses are available on the product menu.

Open Source License Notice is written only English.