 


Precautions

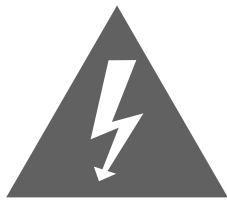 


CAUTION



WARNING: SHOCK HAZARD. DO NOT OPEN.
AVIS: RISQUE DE CHOC ELECTRIQUE.
NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

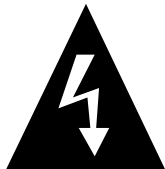

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

For Customer Use:

Enter below the serial number that is located on the rear of the unit. Retain this information for future reference.

Model No. TFDVD2695/3295

Serial No. _____

Precautions

WARNING: To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

Note: If the product suddenly has no response or powers off, an electrostatic discharge may be the cause. In this circumstance, please follow the procedures below for recovery:

- Unplug the unit. Wait 30 seconds.
- After 30 seconds, plug the unit in and turn it on again.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Important Safety Instructions

Warnings and precautions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment. Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

Important Safety Instructions

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Do not place the equipment on uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself. Always place the equipment on the floor or on a surface that is sturdy, level, stable and strong enough to support the weight of the equipment.
6. Use only a cart or stand recommended by the manufacturer. This equipment and recommended cart or stand should be handled with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart/stand to overturn.
7. Do not disable the 3-wire grounding type plug. The grounding pin on the 3-prong plug is an important feature. Removing the grounding pin will increase the risk of damaging the equipment.
8. If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet.
9. Always operate this equipment from the type of power source indicated on the rear of the serial/model plate.
10. Never overload wall outlets and extensions.
11. Use and handle the power cord with care. Do not place any heavy objects on the AC power cord.
12. Do not pull the AC power cord. Do not handle the AC power cord with a wet hand.
13. Do not touch the power cord and antenna cable during lightning.
14. Remove the plug from the wall outlet, if the equipment will not be used for a long period of time.
15. Do not place, use or handle this equipment near water.
16. Never expose the equipment to liquid, rain, or moisture. Seek service if any of the above is spilled into the equipment.
17. Do not expose the equipment to extreme temperature or to direct sunlight, as the equipment may heat up and suffer damage.
18. Do not install the equipment near any heat sources such as radiators, heat registers, stoves, or any other apparatus that might produce heat.
19. Do not attempt to service the equipment yourself.
20. Opening and removing the covers may expose you to dangerous voltage or other hazards and may void your warranty. Refer service to qualified personnel.
21. Do not place or drop any other objects on top.
22. Do not insert anything into the ventilation holes of your equipment. Inserting any metal or flammable objects may result to fire or electric shock.
23. Protect the power cord from being walked on or pinched particularly at plugs ,convenience receptacles, and the point where they exit
24. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
25. Always remove the power cord from the outlet before cleaning the equipment.
26. Never use liquid or aerosol cleaners on the equipment. Clean only with a soft dry cloth.
27. Only use attachments/accessories specified by the manufacturer.
28. Where the mains plug or an appliance coupler is used as the disconnected device, the disconnect device shall remain readily operable.

 
Important Safety Instructions

Antenna Safety Instructions

If an outdoor antenna is connected, follow the precautions below:

- An outdoor antenna should not be located in any area where it could come in contact with overhead power lines, or any other electric light or power circuits.
- When installing an outdoor antenna system, extreme caution should be taken to prevent contact with power lines. Direct contact with power lines may be fatal and should be avoided at all costs.

Section 810 of National Electrical Code (NEC) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

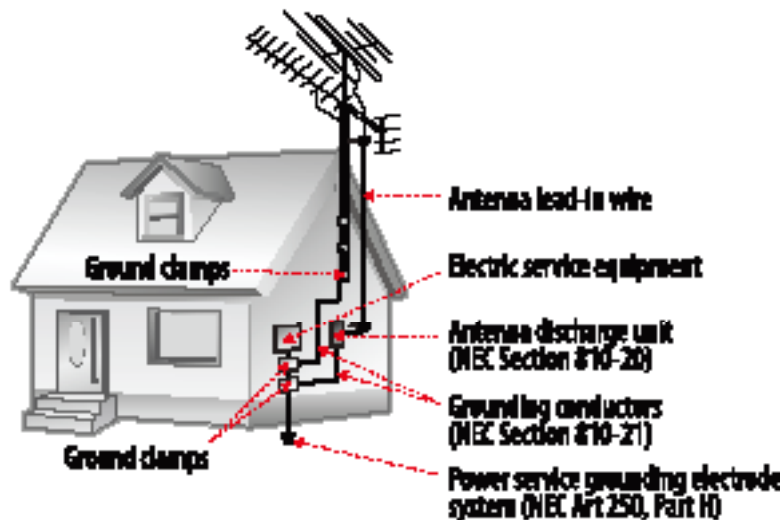

Listening with Earphones

- Listen at moderate Volumes to avoid hearing damage.
- If you hear no sound during playback, do not turn the Volume up as the music may suddenly begin at a high Volume. Excessive sound pressure from earphones and headphones can cause hearing loss.
- To avoid damaging your ears, adjust the Volume to the lowest level before playback, and turn up to the desired level when playback has started.

Legal and Trademark Notices

Coby is a registered trademark of Coby Electronics Corporation. All other trademarks and logos are property of their respective owners unless indicated otherwise.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc. All rights reserved.

This TV incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Note: This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.

Table of Contents

Table Of Contents

Precautions

Important Safety Instructions

Main Feature-----	1
Package Contents-----	2
Unit View-----	3
Remote Control -----	4
Cable Connections-----	7
TV Function-----	11
AV Function-----	15
PC Function-----	16
DVD Operation-----	17
Playback Function-----	19
DVD Setup-----	21
Troubleshooting -----	23
Specifications -----	24

Main Features

Multiple Mode

TV
AV1
AV2
S-VIDEO
COMPONENT1
COMPONENT2
DVD
HDMI1
HDMI2
HDMI3
VGA

High Quality Property

High Resolution

Adopt an MPEG2 decoding format to achieve horizontal resolution more than 500 lines.

Superior sound

Built-in Dolby Digital decoder to output high quality sound effects.

Screen

Support the picture size of a normal screen (4:3) and a wide screen (16:9)

LCD (Liquid Crystal Display)

TFT liquid crystal display technology delivers a high-definition color picture.

NOTE: It is normal for a TFT screen to experience some light or dark spots appearing on the LCD screen.

Advanced Playing Features

Compatibility

DVD, CD, MP3, CD-R, CD-RW, JPEG discs compatible.

All Playback Functions

Fast forward and reverse, repeat playback, program playback.

NOTICE: The LCD panel used in this unit contains millions of thin film transistors that have been manufactured using a high-technology process to deliver a crisp, clear, and detailed picture. Occasionally, a few of these transistors may become stuck or non-active; these transistors may appear as a small light or dark spot on the screen. Please note that this is a normal result of the manufacturing process and does not affect the performance of the unit.

Power Supply:

 
Connect one end of the supplied power cord to the power jack on the unit rear panel and the other end to the AC100-240V wall outlet. If the unit will not be used for a long time, disconnect the plug from the outlet.

Power Management:

- Before plugging the power cord into the AC outlet, make sure that all necessary connections have been properly made.
- If the unit will not be used for a long period of time, disconnect the power and remove the batteries from the remote.

Package Contents

Please make sure the following items are included with your product. If any item is missing, contact your dealer.

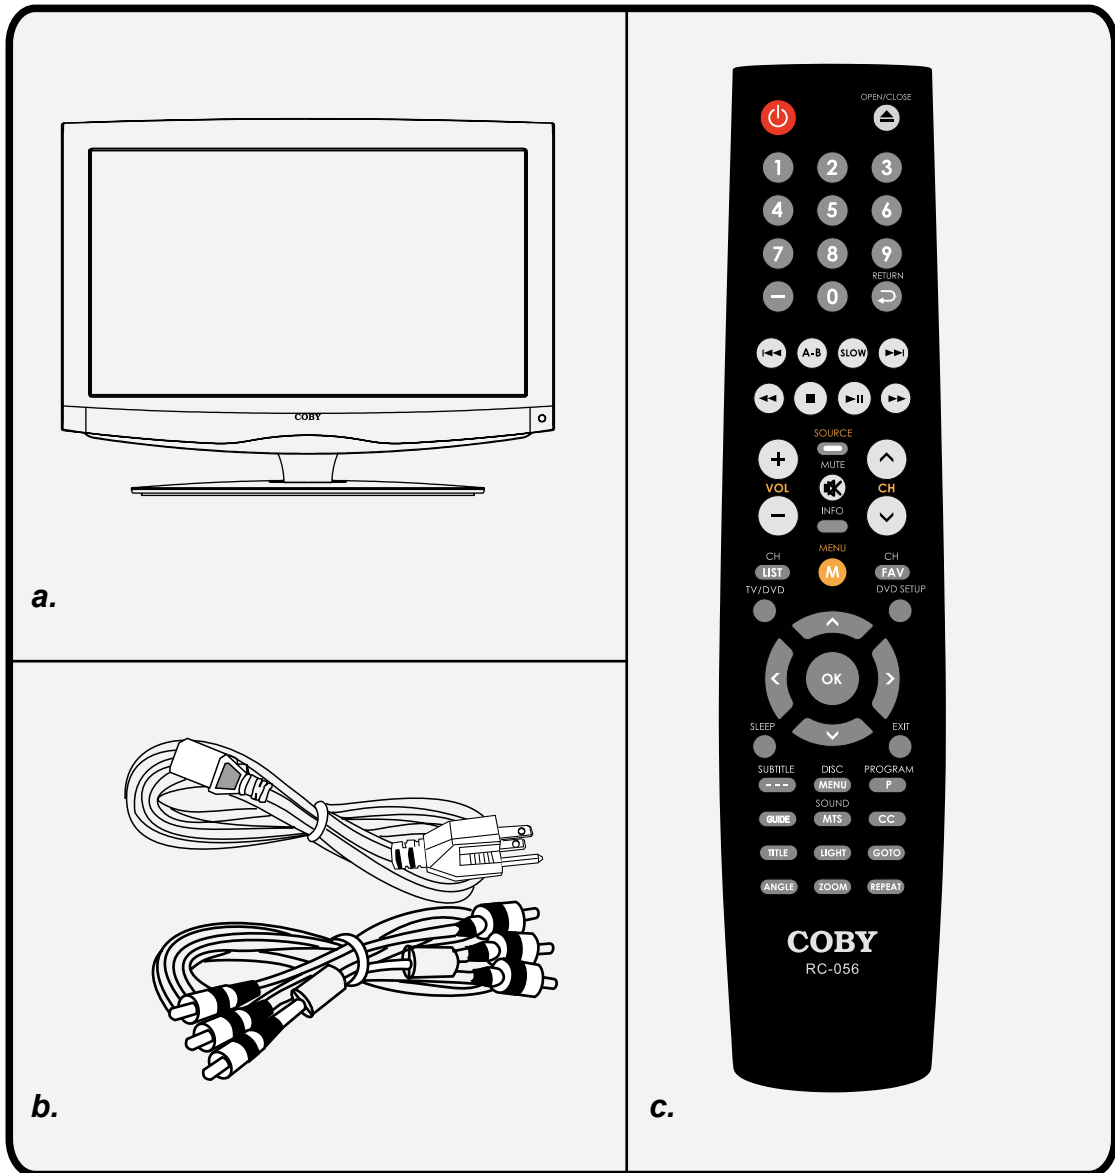


a, Main Unit


b, Power Cord & RCA Cable

c, Remote Control Unit

 Unit View

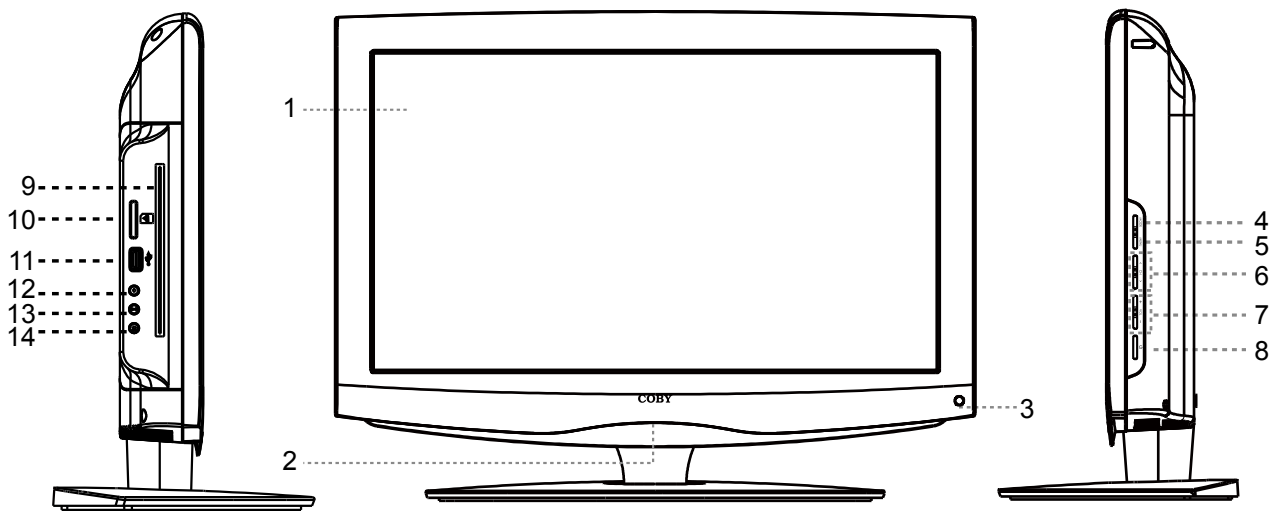

 1. TFT SCREEN
Present high resolution pictures
2. POWER INDICATOR
Lights blue in the standby/power-on mode,
3. REMOTE SENSOR
Sense the remote control signal.
4. SOURCE
Select a working mode.
5. MENU
Display the system setup menu.
6. CH+/-
Press to skip channels.
7. VOL+/-
Adjust sound output level.
8. POWER
Press to turn on/off the player.
9. Disc Slot
10. Card Slot
11. USB Port
12. STOP - Stop disc playback.
13. PLAY/PAUSE - Start/hold disc playback.
14. OPEN/CLOSE - Open/close the disc room.
15. Wall Mounting Thread X 4
16. Connector Panel 1
17. Unit Stand
18. Connector Panel 2

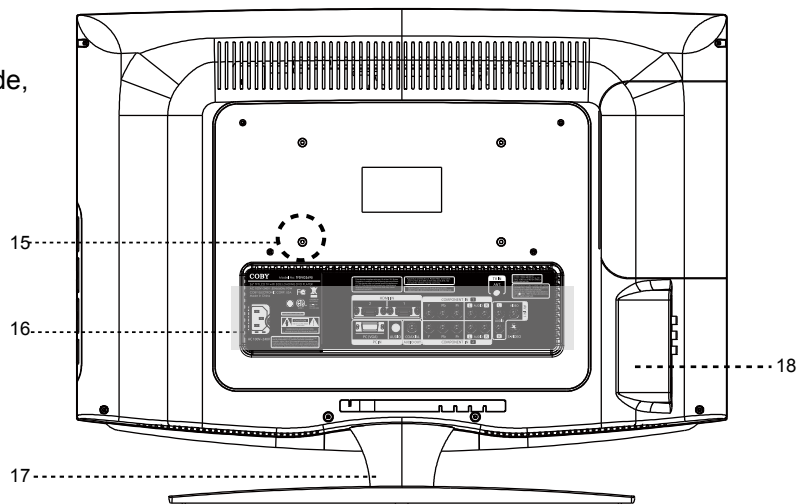

NOTE: See Cable Connection section for detailed description on connectors.

 
Wall Mounting - Attach the TV case to the wall

- Separate the TV case and the stand-base by removing screws before installation.
- Use the VESA standard mountings to fix the unit on the wall. Take care when mounting, it may cause damage or serious injury should it fall from its mountings. See the Specification page for VESA information. A variety of mounts are available in your local retailer, see instructions when installing the unit.

Remote Control

Remote Control Drawing

- POWER**
Turn the unit on or off (standby).
- Numeric Keypad**
Input numeric data. Access the TV channel directly.
- Sub-channel Selector <->**
This button is usually used with the numeric keypad to tune to a channel substation (e.g., 4-1, 4-2).
e.g. To tune to channel 13-2, press these keys in sequence: <1>, <3>, <->, <2>.
- Skip Backward**
Repeatedly press this button to skip backward through DVD playback.
- A-B**
Repeat specified playback A to B in the DVD mode.
- Fast Reverse**
Search fast backward through DVD playback.
- Stop**
Stop disc playback.
- VOL+/-**
Adjust the volume level up and down.
- INFO**
Display system current working information.
- CH/LIST**
Display the TV program list, use the up/down direction button to select the desired program in the list, press OK to access.
- TV/DVD**
Switch between the TV mode and the DVD mode.
- Direction & OK**
This set of buttons is usually used when working with system setup menu, use arrow buttons to select an option in the menu, press OK to confirm settings.
- SLEEP**
Cycle through the sleep timer options.
- SUBTITLE**
Display available DVD subtitles.
- DISC MENU**
Access the DVD root menu.
- GUIDE**
Display TV electronic program guide.
- MTS**
Set the audio mode.
- TITLE**
Access the DVD title menu.
- LIGHT**
Turn the front panel light on/off.
- ANGEL**
Some discs are recorded with Multi-angle, press this button to choose the desired viewing angle.

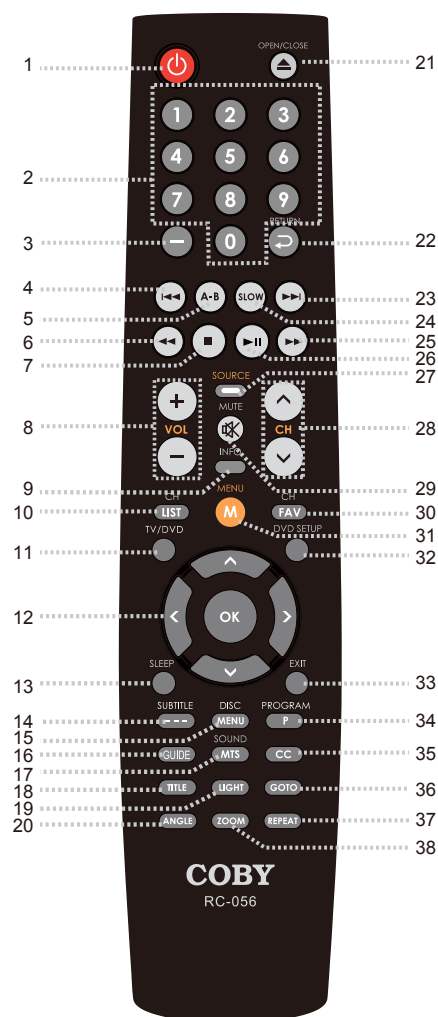

Remote Control

21. OPEN/CLOSE
In the DVD mode, press this button to take in/out disc automatically.
22. RETURN
Reveal the previously viewed channel.
23. Skip Forward
Repeatedly press this button to skip forward through DVD playback.
24. SLOW
Press this button to have current playback advanced in a slow motion, repeatedly press this button to change advance speed. You can press Play/Pause to pause current playback, and then repeatedly press this button to have playback moved step by step forward. To resume normal playback, press Play/Pause.
25. Fast Forward
Search fast forward through DVD playback.
26. Play/Pause
Press this button to start/hold DVD playback.
27. SOURCE
Display the working mode menu, use the up/down direction button to select a desired working mode, press OK to enter.
28. CH+/-
Tune to a higher or lower channel.
29. MUTE
Disable/enable audio output.
30. CH FAV
Display the TV favorite channels list.
31. MENU
Access the TV's main menu to adjust system options.
32. DVD SETUP
Display the DVD system menu.
33. EXIT
Exit the TV system menu.
34. PROGRAM
Display the DVD program menu.
35. CC
Repeatedly press this button to select a desired TV closed caption mode.
36. GOTO
Go to a desired section on a disc via information input.
37. REPEAT
Repeat DVD title/chaptor or CD tracks.
38. ZOOM
Repeatedly press this button to zoom in/out DVD images.

Remote Control

Remote Control

Preparation

- Remove the battery compartment cover located on the rear of the remote control. Insert 2 x “AAA” batteries, making sure to match their polarities (+/-) to the markings on the inside of the compartment. Replace the cover.
- Batteries in the remote will last for approximately 6 months under the normal use. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.
- Remove the batteries from the remote if it will not be used for a long period of time.

Warnings:

The battery used in this device may present a fire or chemical burn if mistreated. Do not recharge, disassemble, incinerate, or heat the battery (~212°F).

Keep batteries away from children.

Using the Remote Control

To use the remote, point it at the remote sensor of the player. Operate the remote within 20 feet of the sensor and at an angle of ± 30 degrees.

The operating distance may vary depending on the brightness around.

Notes:


1. Do not point bright lights directly at the remote control sensor.
2. Do not place objects between the remote control unit and the remote control sensor.
3. Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.

Cable Connections

Figure. Cable connections

Antenna/Power Connection

 1. Connect TV RF sources to the antenna port. TV RF signals include: receiving antenna/CATV net. You can use 75 Ohm coaxial cable to connect outdoor antenna.
2. Insert one end of the supplied power cord to the player's power jack and the other end to the 110-240V AC wall outlet.

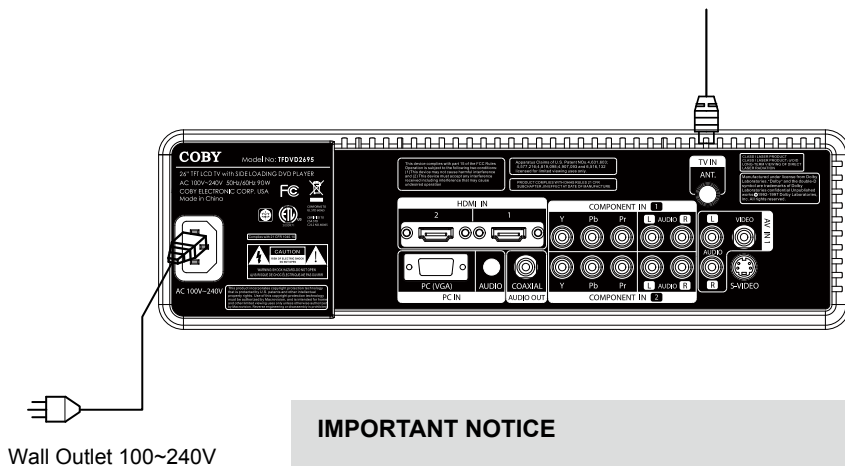


IMPORTANT NOTICE

1. Be sure to have all necessary connections properly done before connect the power supply.
2. If you have difficulty inserting the plug, turn it over and re-insert it.
3. If the product will not be used for a long period of time, disconnect the power. Note that the [POWER] button on the TV/remote control will place the TV into the standby mode, it does not disconnect the device from the main voltage. To completely disconnect the main voltage, please disconnect the power plug from the wall socket.

VGA Input - PC Connection

 
The VGA port of the TV is capable of accepting high-definition signals from computers with a VGA output jack. When used as a computer monitor, turn off both units and then connect the VGA jack and the PC Audio In jack with a 15-Pin D-Sub cable and a 3.5mm stereo audio cable. The mentioned cables are not included with this product.

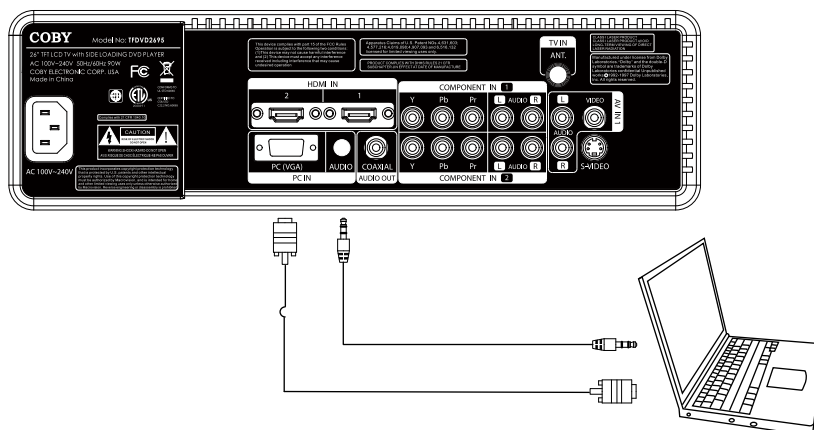

Cable Connections

Coaxial Output - Digital Audio Output Connector

 When MPEG audio or Dolby Digital audio is played, Dolby Digital bitstream or MPEG audio bitstream is sent to the player's digital audio output connector. When the player is connected to a Dolby or MPEG audio decoder via this output socket, you can enjoy theater-quality audio in your home. A coaxial audio cable is required when a Dolby Digital decoder or MPEG audio decoder is used. The mentioned cable is not included with this product.

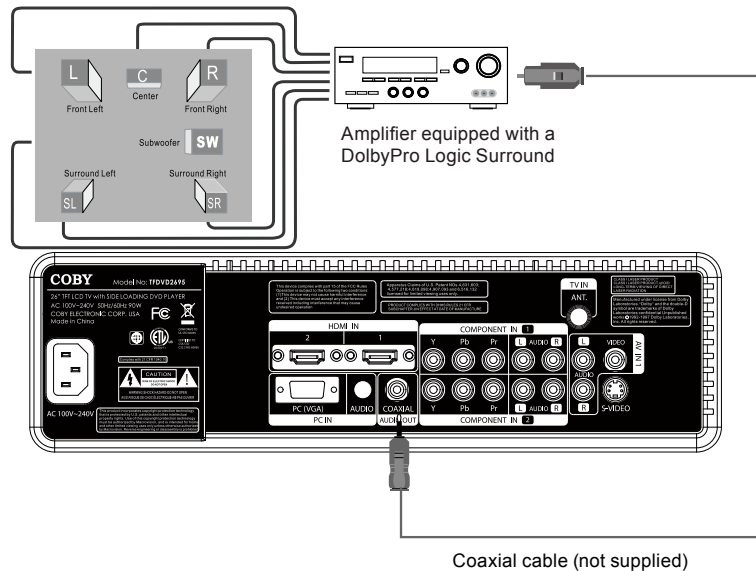

External Audio and Video Signal Input - HDMI, RCA, S-VIDEO, COMPONENT.

The player's AV function would enable users to view programs from external signal sources. Four input modes are available for you to choose from, it ranks as below in regard to image definition: HDMI/COMPONENT/S-VIDEO/RCA

NOTE:

We supply one set of AV cable and one piece of power cord with this product. The white/red plug of the AV cable is for the audio L/R connection and the yellow plug for the video connection. The white/red plug of the AV cable can also be used separately to input the audio signal in the S-video/Component connection. The rest of cable needed for other necessary connections are not included with this product, please check with electronic store.

IMPORTANT NOTICE - When work with external device,

- Be sure to have all necessary connections properly done before connect the power supply.
- Set the unit into the relative input/output mode to enable the signal pass.
- Refer to the manual of external sources as well.

 
Cable Connections

HDMI 1/2/3 Input

HDMI (High Definition Multimedia Interface) is a new type of connection that transmits digital audio and video signals simultaneously over a single cable. A HDMI cable is required for the HDMI connection.

These HDMI input connectors are capable of receiving video at resolutions up to 1080p (1080-progressive).

Unit Rear Panel HDMI1,2 Connection


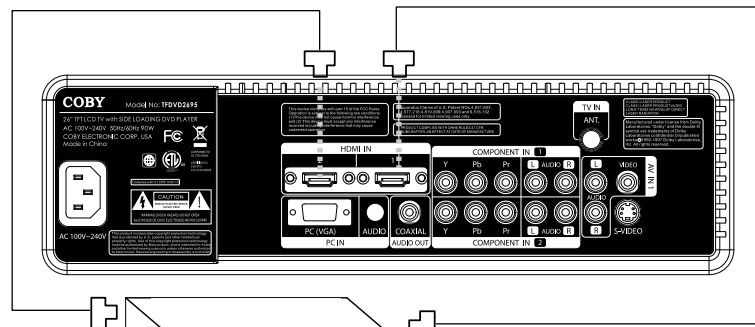


Component 1/2 Input (Y Cb/Pb Cr/Pr)

The component port is capable of accepting high-definition signals from standard video sources. (e.g., cable/satellite boxes, DVD players, VCRs, etc.)

1. Connect the Y, Cb/Pb(1/2), Cr/Pr(1/2) port by the component cable to input the video signal. Component cabel is not included with this product.
2. Use the red/white plug of supplied AV cable to connect R,L (1/2) port for audio transmission.

  Note: The component video jacks on your A/V device are sometimes labeled YPbPr, or YCbCr. For an explanation of component video, see your A/V device's user guide.

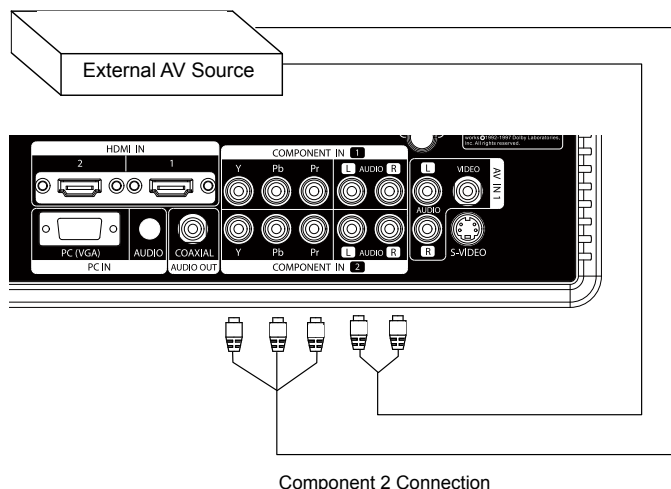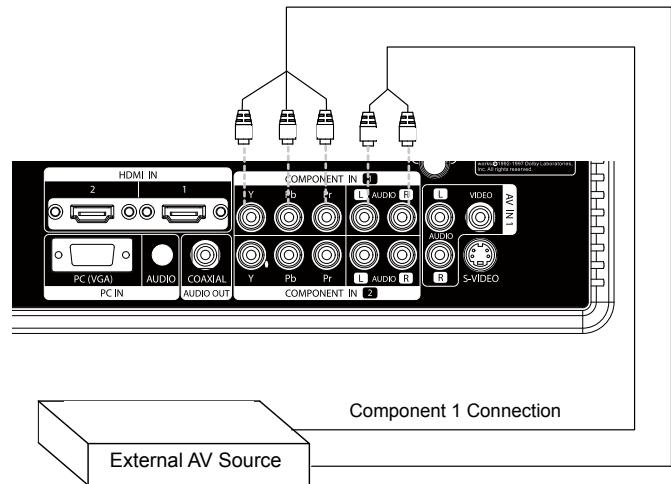


Cable Connections

S-Video Input

The S-Video port is capable of accepting signals from standard video sources. (e.g., cable/satellite boxes, DVD players, VCRs, etc.)


 
1. Connect the S-Video port by the S-Video cable to input the video signal. S-Video cable is not included with this product
2. Connect the L, R port by the white/red plug of the supplied AV cable to input the audio signal.

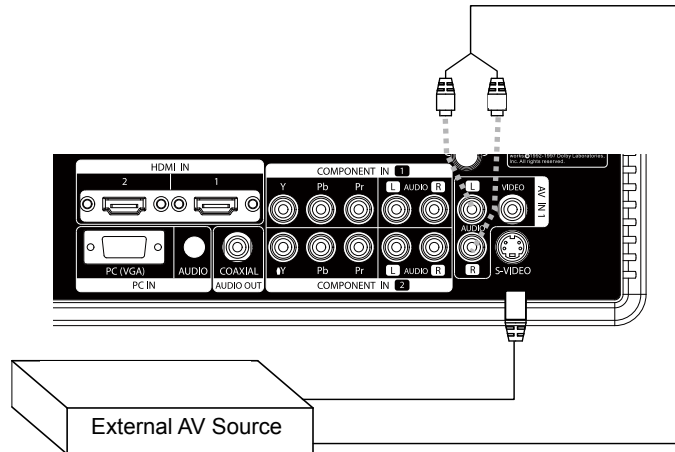

RCA Input

The CVBS port is capable of accepting signals from standard video sources (e.g., cable/satellite boxes, DVD players, VCRs, etc.)

  1. Connect the VIDEO port with the yellow plug of the the supplied AV cable.
2. Connect the L, R port with the white/red plug of the supplied AV cable to input the audio signal.

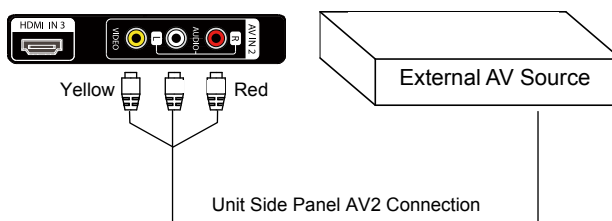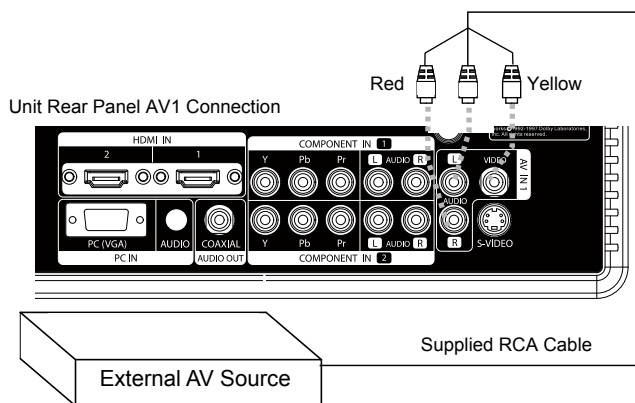

TV Function

TV Function

Preparations

1. Connect cables.(Refer to the “Cable Connections” section for details).
2. Press POWER to turn on the player.
3. Press SOURCE to select the TV signal mode.
 - a. Press the SOURCE button to display the Input Source menu.
 - b. Press the UP or DOWN buttons to browse the mode options.
 - c. Press OK to select a mode option.
4. Press the CH+/- buttons to skip channels. Or you can press the number buttons to input channels directly. For an initial use, you need to scan channels under the Channel Menu. See the "Channel Menu" section for details.

System Setup Menu

Most of advanced functions and features are performed with the system menu.

- Press MENU to display the menu window.
- Press the left/right direction button to select the desired menu, press OK or the down direction button to enter.



While working with the menu,

1. Press the up/down direction button to select the option.
2. Press the left/right direction button to adjust.
3. Press MENU to exit/back up menu.

TV Function

Menu Description

Picture Menu

ITEM	DESCRIPTION
Picture Mode	Setup the picture mode. (Custom, Vivid, Standard, Sports, Theater, Energy Saving).
Contrast	Adjust the display contrast
Brightness	Adjust the display brightness
Color	Adjust the display color
Tint	Adjust the display tint
Sharpness	Adjust the image sharpness
Display Settings	Press the right direction button to access the following options. Color Temp. - Set the color mode as Normal/Warm/Cool Screen Mode - Set Screen Mode as Zoom/Cinema/ Panorama/Proportional Mode/Stretch Mode Noise Reduction - Set noise appearance as Middle/Strong/ Auto/Off/Weak Adaptive Contrast - Set adaptive contrast on/off.

Audio Menu

ITEM	DESCRIPTION
Sound Mode	Set the sound mode as Standard/News/Music/Movie/Custom
Bass	Adjust the bass.
Treble	Adjust the treble.
Balance	Adjust the sound balance.
Surround	Set the audio surround effect on/off.
AVC	Set AVC on/off.
Digital Output	Set the digital output mode as PCM/RAM.
Audio Language	Set the audio language as English/French/Spanish.

TV Function

Menu Description

Option Menu

ITEM	DESCRIPTION
	<p>Parental Controls - Press the right direction button to access Enter Password. Input the 4-digit password to display parental control menu. The initial password is 0000.</p> <p>Change Password - To change the password, input the old password - -> input the new password- ->verify again. Please remember the password since the player's reset function would not revert the password.</p> <p>System Lock - Set the system lock function on/off. Set the lock function On to access the parental control setup.</p> <p>Unrated Lock - Set the unrated lock on/off.</p> <p>US - Setup the US parental control. TV(TV Rating) - Y, Y7, G, PG, 14, MA. Press the direction buttons to move between options, press OK to set block. To release, press OK again. MPAA(Movie Rating) - PG-13, R, NC-17, X, N/A, G, PG) Press the left/right direction button to set the movie rating.</p> <p>Canada - Setup the Canada parental control Canada English - G, PG, 14+, 18+, EXEMPT, C, C8+. Canada French - EXEMPT, G, 8ans+, 13ans+, 16ans+, 18ans+.</p> <p>RRT Setting - Set the rating region table.</p> <p>Reset RRT - Restore RRT to the default.</p>
	<p>Time - Press the right direction button to access Time options.</p> <p>Sleep Timer - The unit will shut down automatically on the Sleep Time. The available option is 5/10/15/30/45/60/90/120/180/240 min, Off. The count down would start immediately after setting. You can access this function by repeatedly pressing the SLEEP button on the remote also. To check the timer left, press the SLEEP button on the remote once. To cancel the sleep timer, set the timer to Off.</p> <p>Time Zone - Set the DTV time zone.</p> <p>DST - Set DST on/off</p> <p>Clock - Display clock information.</p>
	<p>Closed Caption - Press the right direction button to access options.</p> <p>CC Mode - Set the CC mode. (Off, On, CC On Mute)</p> <p>Basic Selection - Set the basic CC type. (CC1~4, Text 1~4)</p> <p>Advanced Selection - Set the advanced CC type (Service 1~6).</p> <p>Option -Press the right direction button to enter Option. Under the option menu, set Mode as Custom to edit the DTV CC type to your own liking.</p>
	<p>Menu Settings - Press the right direction button to access options.</p> <p>Transparency - Set OSD transparency.</p> <p>Menu Language - Set OSD languages.</p>
	<p>VGA Settings - Set PC parameter when this unit is used as a PC monitor.</p>
	<p>Restore Default - Set the unit to the factory default.</p>

TV Function

Menu Description

Channel Menu

ITEM	DESCRIPTION
Air/Cable	Setup the antenna type as Air or Cable.
Auto Scan	Search channels automatically. Select this option, press the right button to start searching, press MENU to stop.
Favorite	Make the favorite channels collection. Select this option, press the right direction button to access the Favorite List. In the Favorite List, press the up/down direction button to select the desired channel. Press OK to set it as a favorite channel. To release, press OK again. Press the left/right button to turn pages in the FAV list.
Show/Hide	Hide the unwanted channels. Select this option, press the right direction button to access the Show/Hide menu. In the Show/Hide menu, press the up/down direction button to select the channel, press OK to hide the channel, press OK again to release. Press the left/right button to turn pages in the Show/Hide list.
Channel No	Press the left/right direction button to locate a desired channel.
Channel Label	Edit the channel label. 1. Select the channel you want to put a label. You can use the Channel No option or directly locate the channel by the number button/CH+/- button. 2. Select "Channel Label", press the right direction button to show the edit menu. In the menu, press the left/right direction button to move left/right, press the up/down direction button to change characters.
DTV Signal	Display the DTV signal intensity.

AV Function

AV Function

The player's AV input function enables the user to view programs from external input sources.

1. Connect the external AV signal source. Refer to the "Cable Connection" section for details
2. Press the SOURCE button to select the relevant AV mode

System Setup Menu

Various features can be preset through the system menu.

- Press the MENU button to display the system menu.
- Press the left/right direction button to select the desired sub-menu, press OK or the down direction button to enter.

While working with the menu

1. Press the up/down direction buttons to select the desired item.
2. Press the left/right direction button to adjust.
3. Press MENU to exit/back up the menu.



NOTE: Please see the TV section for menu descriptions

Note: Menu option availability is dependent on the TV's current input source mode. Options that are grayed out are not selectable from the current mode.

PC Function

PC Function

You can use the unit's TFT LCD as your computer's monitor.

1. Shut down both units and connect the VGA jack and PC Audio In jack. See the "Cable Connection" section.
2. Turn on units and press the SOURCE button to select VGA

System Setup Menu

Various features can be preset through the system menu.

- Press MENU display the system menu.
- Press the left/right direction button to select the desired sub-menu, press OK or the down direction button to enter.

While working with the menu

1. Press the up/down direction buttons to select the desired item.
2. Press the left/right direction button to adjust.
3. Press MENU to exit/back up the menu.



NOTE: Please see the TV section for menu descriptions

Adjust the PC Screen

Upon switching to the PC mode, the monitor will be automatically regulated for a proper functioning. If the result is not up to your expectation, please perform the following steps to adjust the screen manually .

1. Enter "VGA Settings" from the Option menu, select "Auto" and press the right direction button to adjust the monitor automatically.
2. Or if you still have problem with the monitor after, adjust "H-Position", "V-Position", "Clock" as well as "Phase" accordingly under the VGA Settings menu.

 
DVD Operation

Preparation

After all necessary connections have been made, press POWER to turn on the player and then press the MODE button to select DVD. The following discs can be read by the player : DVD /CD / MP3 /JPEG.

Disc Loading

1. Put the disc slightly into the disc tray.
2. The disc will be taken automatically into the tray.

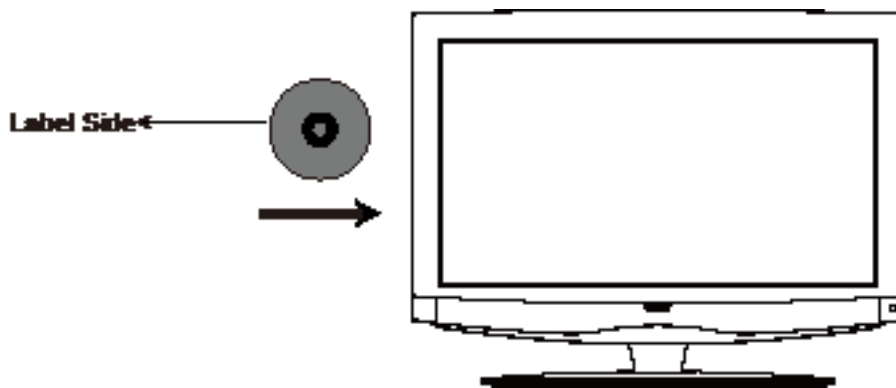

Warning: Do not play poor quality discs that may damage the player's lens.

DVD Playback

MENU

Normally a DVD disc consists of several titles and chapters. Once disc data is recognized by the player, a root menu will be displayed on the screen . Press the direction buttons to select the desired title/chapter from the menu and press OK to play. During playback, press DISC MENU to return to the root menu. Some discs start playback automatically.

SUBTITLE

Press the SUBTITLE button to select subtitle languages for multi-subtitle discs.

ANGLE

Press the ANGLE button to select the available viewing angle. Some discs are recorded from various camera positions, which lets you enjoy the same scene from different perspectives. In this case, you'll usually find a marking on the DVD sleeve.

VOLUME

During playback, press the VOL+ button to increase the volume and press the VOL- button to decrease the volume.

DVD Operation

CD Playback

The player will play all tracks on a CD disc by default.

MP3 Playback

1. Load a disc into the disc tray.
2. It will start playback automatically. Or press direction buttons to select a file from the menu and press OK or PLAY/PAUSE button to start playback. Press left/right button to enter /exit file folders.
3. Press the STOP button to stop playback.

JPEG Playback

JPEG is a common picture format that requires small amounts of storage per image and has low loss in resolution. Hundreds of pictures can be stored on a disc in this format. In order to view JPEG photo albums, you can ask your film development company to make a "PICTURE CD" when they develop your film.

Normal Playback

Load a JPEG disc in.

Press the direction buttons to select the target file and press OK to access.

Picture Rotation

There are four kinds of rotational modes: Inversion, Enantiomorphism, rotate left and rotate right.

Press direction buttons to select:

"UP" ----- Inversion/Normal

"DOWN" ----- Enantiomorphism/Normal

"LEFT" ----- Rotate left

"RIGHT" ----- Rotate right

Zoom

Press ZOOM button to zoom in/out picture.

 
Press direction buttons to move the zoomed picture.

During playback, press the STOP button to return to the previous menu.

NOTE: Depending on how the disc was made, a JPEG disc may allow playback , but not rotation or zooming of the images.

USB/Card Access

Set the unit into the DVD mode, plug the USB or Card into the corresponding slot, the player starts reading data. When the USB/Card is detected, the screen displays a working menu, press the direction buttons to select the file, press OK to start playback. To disconnect the device, just unplug it from the port when it is not in working.

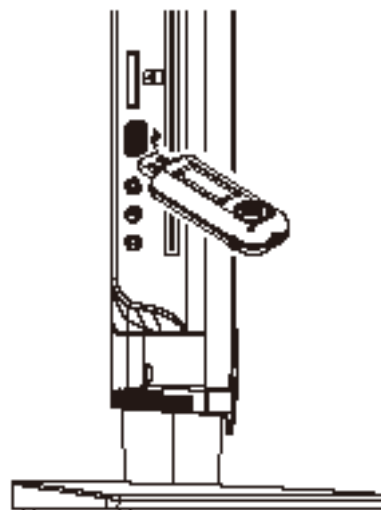

Playback Function

Start Playing

Press PLAY/PAUSE to start playback

Pause Playing

Press PLAY/PAUSE once to hold playback, press it again to resume.

Stop Playing

Press STOP once to stop playback at a time point. (Pre-stop mode) It will resume from where it was stopped, when you press PLAY button. Press STOP twice to stop playback completely.

Repeat Function

Use the REPEAT button to perform the repeat function.

1. Repeatedly press the REPEAT button to cycle through the repeat modes as below,
DVD Mode REP: CHAPTER --> REP:TITLE --> REP:ALL--> REP:OFF
CD Mode REP: 1 --> REP:ALL --> REP:OFF
2. Use the A-B button on the remote to repeat a section A-B. Press A-B once to set the starting point A, press it twice to set the ending point B, the player would start playing section A-B. To cancel, press A-B.

NOTE: Some discs do not support the repeat function.

 
Search Function

Go to a desired section in a disc.

Press the GOTO button, below picture appears on the screen.


DVD

Search by title /chapter/time



CD/MP3

 Search by track / time



1. Press direction buttons to move between title/chapter/time entry, press numeric buttons to input data. Press OK to start search.
2. Press GOTO once again to exit.

NOTE: Some DVD discs do not support the search function.

Fast Playback

Press ►►/◀◀ on the remote to go fast forward/backward through a disc. Repeatedly press the button to change the search speed as below.




Playback Function

Slow Playback

Slow Motion

Press the SLOW button on the remote to have current playback advanced in a slow motion, repeatedly press this button to change speed as below.

PLAY — SF1/2 — SF1/3 — SF1/4 — SF1/5 — SF1/6 — SF1/7

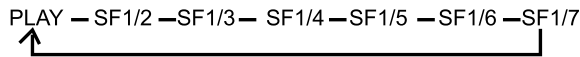

Step by Step

Press Play/Pause to pause current playback, and then repeatedly press SLOW to have playback moved step by step forward. To resume normal playback, press Play/Pause.

Zoom Function

Repeatedly press the ZOOM button to achieve the following zoom effect.

ZOOM 2 - ZOOM3 - ZOOM 4 - ZOOM1/2 - ZOOM1/3 - ZOOM1/4 - ZOOM:OFF

 
NOTE: There is no zoom function for MP3 or CD discs.

Programming Chapters/Tracks

You can store up to 16 programs.

1. Press the PROGRAM (P) button to display the program menu.


e.g. DVD Mode

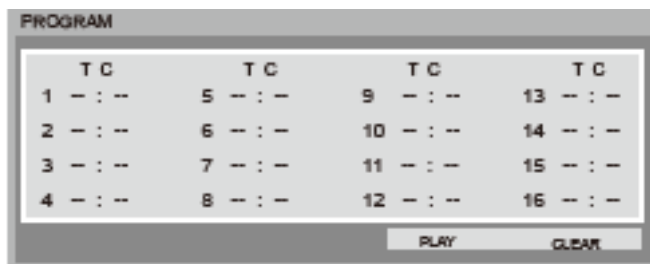

2. Press direction buttons to move between input fields and press number buttons to input data.
3. Press direction buttons to select "Play " and press OK to start playback.
4. To clear, select "CLEAR" from the menu and press OK.
5. To quit, press the Program button.

DVD Setup

 Various features can be preset through the DVD setup menu. Press the DVD SETUP button to show the DVD menu.

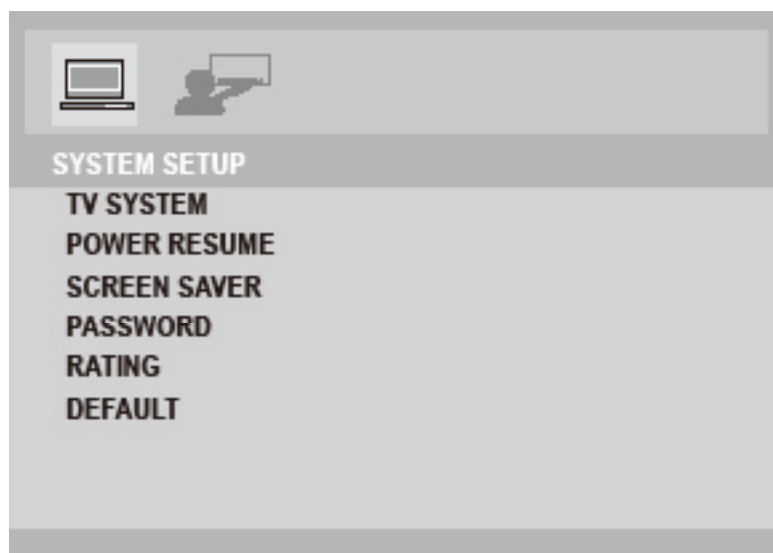

While working with the setup menu:

1. Press the direction buttons to select the desired item.
2. Press the right direction button or the OK button to confirm settings.
3. To exit, press DVD SETUP again.

System Setup

1. **TV System** - Select the TV System from NTSC/PAL/AUTO. The default setting is NTSC. (The TV System for north America is NTSC. AUTO should only be used if you have a Multi-System TV).
2. **Power Resume** - Set the power resume function On/Off. The default setting is Off.
3. **Screen Saver** - Set the Screen Saver ON/OFF. The default setting is On. The screen saver is useful to prevent your display from becoming damaged. If the Screen Saver is set ON, the screen saver picture appears when you leave the player in the stop mode for about a few minutes. Press any button on the unit/remote to exit the screen saver.
4. **Password** - Move the cursor to the PASSWORD prompt and press OK. Input the password 8888, if it is the first use. After confirmation, you will be required to input a new 4-digit code, and verify again.
5. **Rating** - There are eight levels of Parental Control. Level one opens discs to people of all ages, level eight is suitable only for adults. To change the parental control setting, a 4-digit code is required to be input first. (The default code is 8888). When the input code is confirmed, the level setting menu will appear, select the appropriate level by the UP/DOWN button and press OK to confirm.
6. **Default** - This function allows you to set the unit back to the factory default.

DVD Setup

Language Setup

Item	Instruction	Default
OSD Language	Setup the OSD language.	English
Audio Lang	Setup the audio language.	English
Subtitle Lang	Setup the subtitle language. When OFF is selected, the subtitle will not be displayed.	English
Menu Lang	Setup the menu language.	English

Trouble Shooting

If you have a problem with this device, please read the troubleshooting guide section and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

Address **COBY Electronics Technical Support**

150 Knowlton Way
Savannah, GA 31407

Email techsupport@cobyusa.com

Web www.cobyusa.com

Phone 800-727-3592: Weekdays 8:30AM–9:00PM EST
 Saturday 9:00 AM–5:30PM EST
 718-416-3197: Weekdays 8:00AM–5:30PM EST

Symptom	Check and Action
No Power	<ul style="list-style-type: none">• Make sure the unit has been powered on manually.• Check if the power cord has been properly connected to the power outlet.• Check if the main power has been switched on.
No Picture	<ul style="list-style-type: none">• Try another TV channel• Check if the system connection is proper and secure.• Check if the connection cables are damaged.
No Sound	<ul style="list-style-type: none">• Increase the volume.• Check if the MUTE function of the unit has been activated.• Check if the sound system has been properly set.• Check if the AV audio signal input cable has been connected properly.
Color Distorted	<ul style="list-style-type: none">• Reset the color system of the unit.• Check if the system has been properly connected.• Check if the AV video signal input cable is connected properly.
Picture and Sound are interfered	<ul style="list-style-type: none">• Check if the system has been properly connected.• If using antenna, adjust the antenna.
Remote Control does not work	<ul style="list-style-type: none">• Make sure the POWER button on the unit has been turned on manually.• Remove the obstacles between the remote control and the player.• Point the remote control towards the remote sensor on the player.• Check if the batteries of the remote control have been loaded with correct polarities.• Replace the batteries of the remote control.
Malfunction	<ul style="list-style-type: none">• Should the player develop a malfunction, unplug the player for 30 minutes. After that, power on the player and the restore function should reset the player.

Specifications and manual are subject to change without prior notice.

Specification

TFDVD 2695


TFT Panel Characteristic	Active Area	26"
	Resolution	1366X768
	Display Color	8 bit -16.7 M
	Pixel Pitch	0.4215(H) x 0.4215(V)
TV Charactoristic	TV System	ATSC/NTSC
	Antenna Impedance	75Ω
Standard	Power Consumption	100-240V 50/60Hz
		On Working 110W(Max)
		Speaker 2x(8Ω,10W)
	Operating Temperature Range	0°C-40°C

TFDVD 3295

TFT Panel Characteristic	Active Area	32"
	Resolution	1366X768
	Display Color	8-bit - 16.7M
	Pixel Pitch	0.51075(H) x 0.51075(V)
TV Charactoristic	TV System	ATSC/NTSC
	Antenna Impedance	75Ω
Standard	Power Consumption	100-240V 50/60Hz
		On Working 130W(Max)
		Speaker 2x(8Ω,10W)
	Operating Temperature Range	0°C-40°C

COBY®

 TFT LCD Widescreen Television

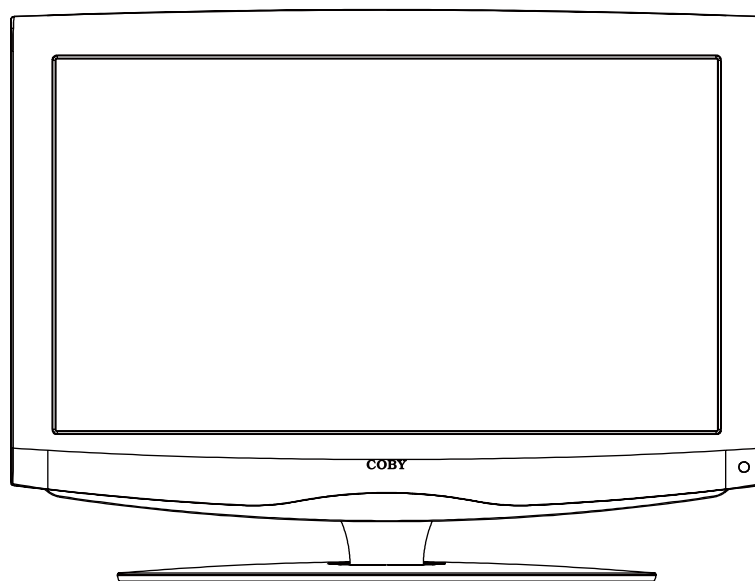

Instruction Manual

TFDVD2695/3295

Please read this manual carefully before connection and use