

**SHARP**  
 SHARP ELECTRONICS CORPORATION  
 Sharp Plaza, Mahwah, New Jersey 07495-1163  
 SHARP CORPORATION

Printed in Mexico  
 Imprimé au Mexique  
 Impreso en México  
 TINS-E037WJZZ  
 09P02-MX-NM

LC-42BD80U LC-46BD80U LC-52BD80U  
 OPERATION MANUAL MODE D'EMPLOI MANUAL DE OPERACIÓN

SHARP

# SHARP<sup>®</sup>

## AQUOS

### LC-42BD80U LC-46BD80U LC-52BD80U

LIQUID CRYSTAL TELEVISION  
 TÉLÉVISEUR ACL  
 TELEVISOR CON PANTALLA  
 DE CRISTAL LÍQUIDO

OPERATION MANUAL  
 MODE D'EMPLOI  
 MANUAL DE OPERACIÓN



IMPORTANT : Please read this operation manual before starting operating the equipment.  
 IMPORTANT : Veuillez lire ce mode d'emploi avant de commencer à utiliser l'appareil.  
 IMPORTANTE : Lea este manual de operación antes de comenzar a operar el equipo.

ENGLISH


FRANÇAIS

ESPAÑOL

# Dimensional Drawings

Unit: inch (mm)

## LC-52BD80U

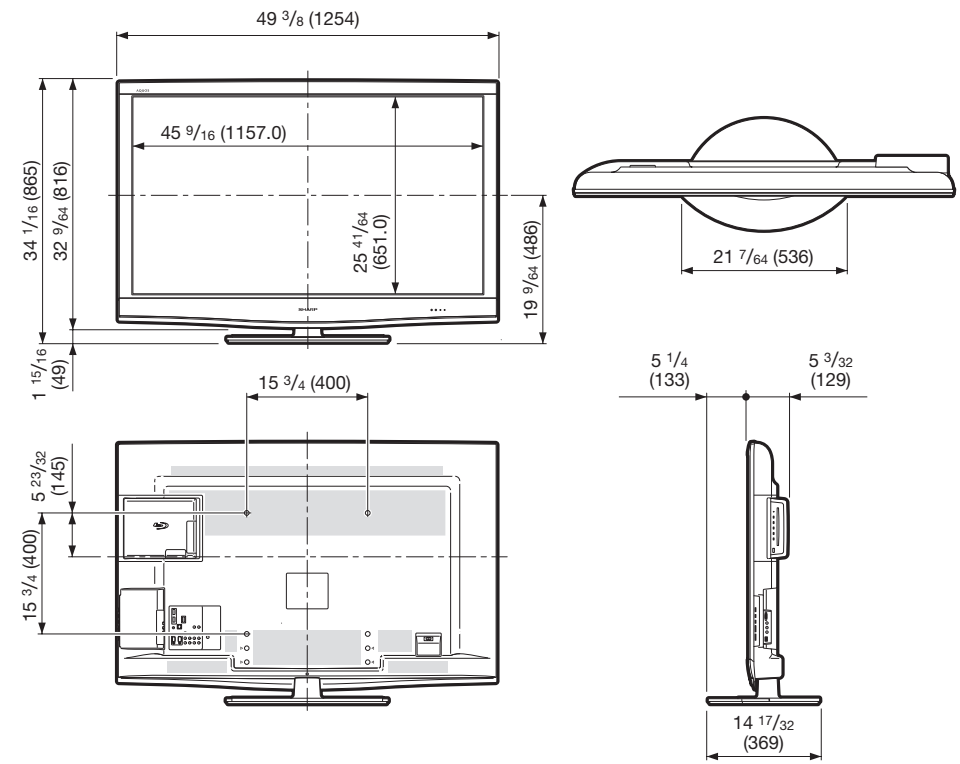

# LC-42BD80U LC-46BD80U LC-52BD80U

## LIQUID CRYSTAL TELEVISION ENGLISH





### OPERATION MANUAL

**IMPORTANT:**  
To aid reporting in case of loss or theft, please record the TV's model and serial numbers in the space provided. The numbers are located at the rear of the TV.

Model No.:
Serial No.:

## IMPORTANT INFORMATION

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> </div> 	 <p>The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**WARNING:** FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

**CAUTION:**  
This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

"Note to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical."

# IMPORTANT INFORMATION

## DECLARATION OF CONFORMITY:

SHARP LIQUID CRYSTAL TELEVISION, MODEL LC-42BD80U/LC-46BD80U/LC-52BD80U

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RESPONSIBLE PARTY:

SHARP ELECTRONICS CORPORATION  
Sharp Plaza, Mahwah, New Jersey 07495-1163  
TEL: 1-800-BE-SHARP

For Business Customers: URL <http://www.sharppusa.com>

## INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION:

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



AS THE LASER BEAM USED IN THIS UNIT IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

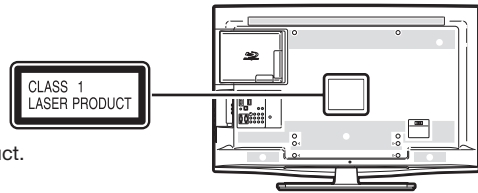- This Liquid Crystal Television is classified as a CLASS 1 LASER product.
- The CLASS 1 LASER PRODUCT label is located on the rear cover.
- This product contains a low power laser device. To ensure continued safety do not remove any cover or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.



This product utilizes tin-lead solder, and fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities, the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org), the lamp recycling organization: [www.lamprecycle.org](http://www.lamprecycle.org) or Sharp at 1-800-BE-SHARP (For U.S.A. only)

## Trademarks

- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."
- Products that have earned the ENERGY STAR® are designed to protect the environment through superior energy efficiency.
- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS 2.0 + Digital Out are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. ©1996-2007 DTS, Inc. All Rights Reserved.
-  is a trademark.
-  is a trademark of DVD Format/Logo Licensing Corporation.
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.
- LC フォント、LC FONT、エルシーフォント and LC logo mark are registered trademarks of SHARP Corporation. This product is embedded with LC Font technology, which was developed by SHARP Corporation for clearly displaying easy-to-read characters on LCD screens. However, other fonts are used for some screen pages, too.

# DEAR SHARP CUSTOMER

Thank you for your purchase of the Sharp Liquid Crystal Television. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Instructions carefully before using this product.

## IMPORTANT SAFETY INSTRUCTIONS

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your Liquid Crystal Television, please read the following precautions carefully before using the product.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### Additional Safety Information


- 15) Power Sources—This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 16) Overloading—Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 17) Object and Liquid Entry—Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 18) Damage Requiring Service—Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the AC cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions.

Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 19) Replacement Parts—When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 20) Safety Check—Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 21) Wall or ceiling mounting—When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.

# IMPORTANT SAFETY INSTRUCTIONS


- **Outdoor Antenna Grounding** — If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE, ANSI/NFPA 70

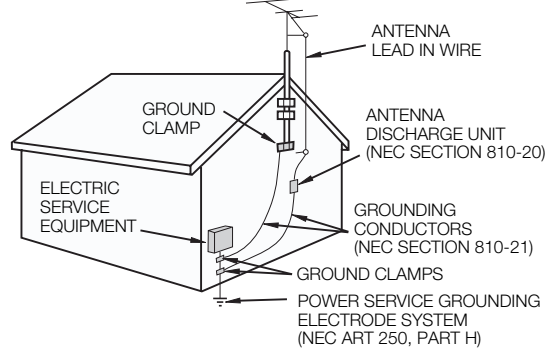

NEC — NATIONAL ELECTRICAL CODE

 - Turn off the main power and unplug the AC cord from the wall outlet before handling.
- Use a soft cloth and gently wipe the surface of the display panel. Using a hard cloth may scratch the panel surface.
- Use a soft damp cloth to gently wipe the panel when it is really dirty. (It may scratch the panel surface when wiped strongly.)
- If the panel is dusty, use an anti-static brush, which is commercially available, to clean it.
- To protect the panel, do not use a dirty cloth, liquid cleaners or chemical cloth to clean it, such materials may damage the panel surface.
- To clean the outer cabinet, use the same method. Do not use liquid or aerosol cleaners.



- **Water and Moisture** — Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- **Stand** — Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.
- **Selecting the location** — Select a place with no direct sunlight and good ventilation.
- **Ventilation** — The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
- **The Liquid Crystal panel used in this product is made of glass.** Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the panel breaks.
- **Heat** — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- **The Liquid Crystal panel is a very high technology product with 2,073,600 pixels, giving you fine picture details.** Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.
- **Lightning** — For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.
- **Power Lines** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- To prevent fire, never place any type of candle or flames on the top or near the TV set.
- To prevent fire or shock hazard, do not place the AC cord under the TV set or other heavy items.
- Do not display a still picture for a long time, as this could cause an afterimage to remain.
- To prevent fire or shock hazard, do not expose this product to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the product.
- Do not insert foreign objects into the product. Inserting objects in the air vents or other openings may result in fire or electric shock. Exercise special caution when using the product around children.



## Precautions when transporting the TV

- When transporting the TV, never carry it by holding or otherwise putting pressure onto the display. Be sure to always carry the TV by two people holding it with two hands — one hand on each side of the TV.

# IMPORTANT SAFETY INSTRUCTIONS

## CHILD SAFETY:

### It Makes A Difference How and Where You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



#### THE ISSUE

- The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.
- Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

#### THIS MANUFACTURER CARES!

- The consumer electronics industry is committed to making home entertainment enjoyable and safe.

#### TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

#### WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:


- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate. Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.



**Note:** CEA is the preeminent trade association promoting growth in the \$161 billion U.S. consumer electronics industry. More than 2,200 companies enjoy the benefits of CEA membership, including legislative advocacy, market research, technical training and education, industry promotion and the fostering of business and strategic relationships.

# Supplied Accessories

Make sure the following accessories are provided with the product.

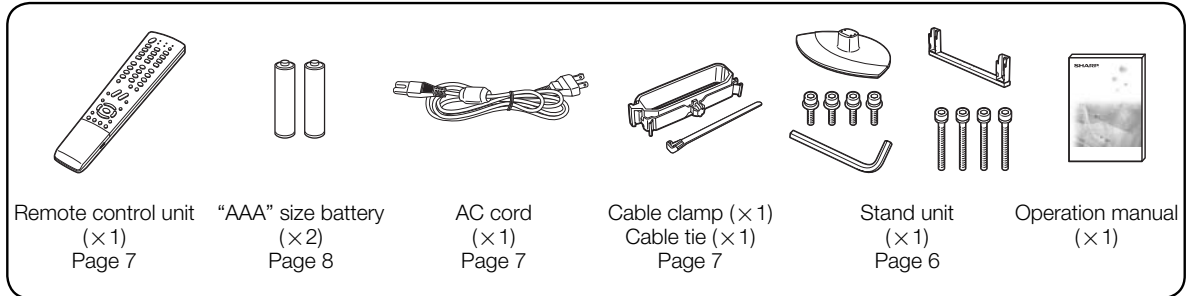

## NOTE

- Always use the AC cord supplied with the TV.
- To avoid scratching the frame or screen, please use a soft, lint free cloth for cleaning. Approved cleaning cloths are available directly from Sharp in single (00Z-LCD-CLOTH) or triple (00Z-LCD-CLOTH-3) packs. Call 1-800-BE-SHARP for ordering, or VISIT [www.sharppusa.com/SharpDirect](http://www.sharppusa.com/SharpDirect).

# QUICK REFERENCE

 
## Attaching the Stand

- Before attaching (or detaching) the stand, unplug the AC cord from the AC INPUT terminal.
- Before performing work spread cushioning over the base area to lay the TV on. This will prevent it from being damaged.

## CAUTION


- **Attach the stand in the correct direction.**
- **Do not remove the stand from the TV unless using an optional wall mount bracket to mount it.**
- **Be sure to follow the instructions. Incorrect installation of the stand may result in the TV falling over.**

- 1 Confirm that there are 8 screws (4 short screws and 4 long screws) and a hex key supplied with the stand unit.




- 2 Attach the supporting post for the stand unit onto the base using the box for the stand unit as shown below.

- The supporting post attaches to the base at an off-centered location on the base. Be sure to attach the supporting post in the direction indicated below and attach the stand to the TV with the wider side of the base facing forward.

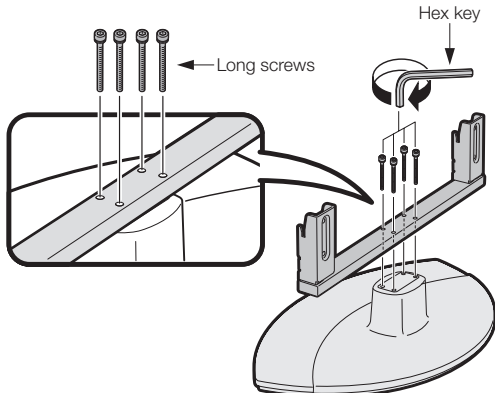

- 3
  - ① Insert the stand into the openings on the bottom of the TV.
  - ② Insert and tighten the 4 short screws into the 4 holes on the rear of the TV.

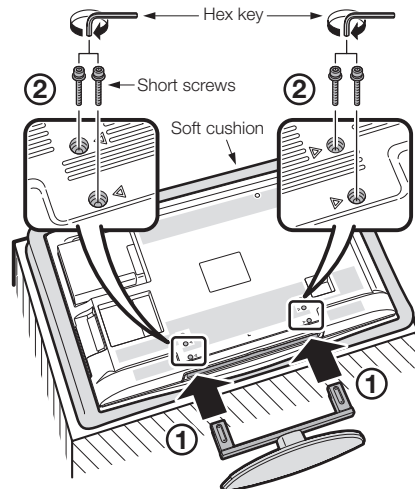

## NOTE


- To detach the stand, perform the steps in reverse order.



## QUICK REFERENCE

### QUICK INSTALLATION TIPS

- 1 Attach your antenna to the back of the television. (See page 8.)
- 2 Connect the AC plug for the television into the AC outlet.

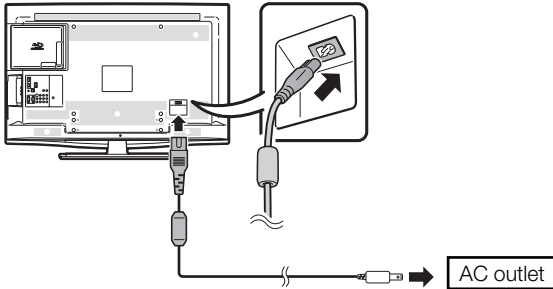


- Place the TV close to the AC outlet, and keep the power plug within reach.


#### NOTE

- **TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH UN-INSULATED PARTS OF ANY CABLES WITH THE AC CORD CONNECTED.**


- 3 Place the Ferrite core in the space indicated in the below figure and bundle the cords properly with the cable clamp and the cable tie.

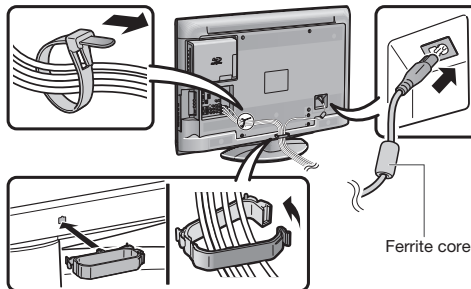

- 4 How to turn on the television for the first time.
  - A) Press **POWER** on the television.

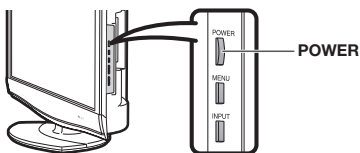

- B) The **POWER** indicator on the front of the television lights **GREEN**.

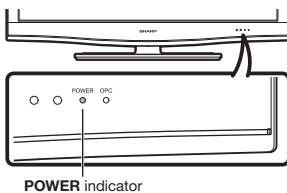


#### NOTE

- Speakers cannot be detached from the TV.
- The TV can be rotated up to 10 degrees to right and left.


### Using the Remote Control Unit

Use the remote control unit by pointing it towards the remote control sensor on the TV. Objects between the remote control unit and the remote control sensor may prevent proper operation.

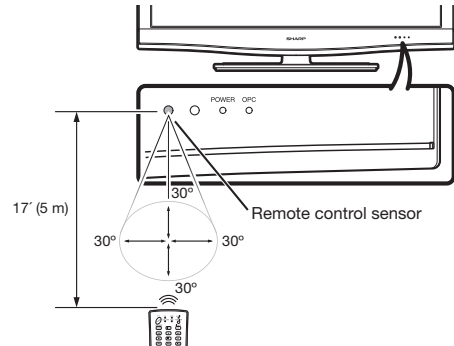

#### ■ Cautions regarding the remote control unit

- Do not expose the remote control unit to shock. In addition, do not expose the remote control unit to liquids, and do not place in an area with high humidity.
- Do not install or place the remote control unit under direct sunlight. The heat may cause deformation of the remote control unit.
- The remote control unit may not work properly if the remote control sensor on the TV is under direct sunlight or strong lighting. In such cases, change the angle of the lighting or the TV, or operate the remote control unit closer to the remote control sensor.

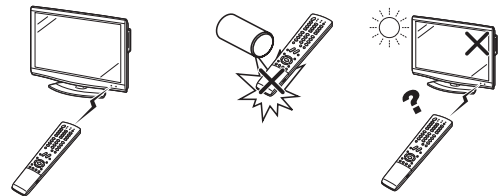

#### IMPORTANT:

The **POWER** indicator on the television should light **GREEN** indicating you have power to the television. If the **POWER** indicator on the television still does not light up, press **TV POWER** on the remote control to turn the power on.

#### IMPORTANT:

IF THE UNIT DOES NOT POWER ON - UNPLUG THE TELEVISION FROM THE OUTLET AND REPEAT THE INSTALLATION STEPS.


 
 
IF YOU STILL ENCOUNTER NO POWER, PLEASE CONTACT US AT 1-800-BE-SHARP.

# Preparation

## Antennas

To enjoy a clearer picture, use an outdoor antenna. The following is a brief explanation of the types of connections that are used for a coaxial cable. If your outdoor antenna uses a 75-ohm coaxial cable with an F-type connector, plug it into the antenna terminal at the rear of the TV set.

1. A 75-ohm system is generally a round cable with F-type connector that can easily be attached to a terminal without tools (Commercially available).
2. A 300-ohm system is a flat "twin-lead" cable that can be attached to a 75-ohm terminal through a 300/75-ohm adapter (Commercially available).

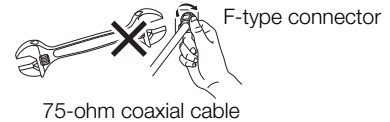

### NOTICE F-type connector should be finger-tightened only.

When connecting the RF cable to the TV set, do not tighten F-type connector with tools.  
If tools are used, it may cause damage to your TV set. (The breaking of internal circuit, etc.)

## Connecting Antenna Cable


• Connect the antenna cable to the TV using one of the methods in the illustration as shown (①, ②, ③ or ④).

### ① Cable without a CATV converter

### ② VHF/UHF antenna

### ③ Combination VHF/UHF antenna

### ④ Separate VHF/UHF antenna

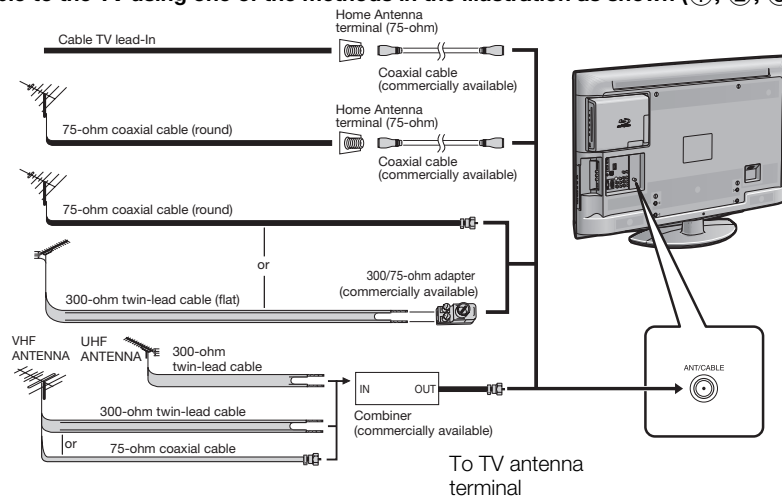




## Installing Batteries in the Remote Control Unit

If the remote control fails to operate TV functions, replace the batteries in the remote control unit.

1 Open the battery cover.

2 Insert two "AAA" size batteries (supplied with the product).

3 Close the battery cover.

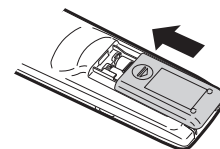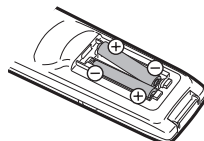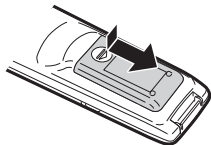

- Place the batteries with their terminals corresponding to the (+) and (-) indications in the battery compartment.

### CAUTION

- Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.
- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as they are worn out. Chemicals that leak from batteries that come in contact with skin can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control unit for an extended period of time, remove batteries from it.

# Contents



<b>IMPORTANT INFORMATION</b> .....	1	Setup Menu .....	35
<b>Trademarks</b> .....	2	EZ Setup .....	35
<b>DEAR SHARP CUSTOMER</b> .....	3	CH Setup .....	35
<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	3	Antenna Setup-DIGITAL .....	35
<b>Supplied Accessories</b> .....	6	Input Skip .....	35
<b>QUICK REFERENCE</b> .....	6	Input Label .....	35
Attaching the Stand .....	6	Auto Sync. (for Analog PC Input Mode Only) .....	36
<b>QUICK INSTALLATION TIPS</b> .....	7	Fine Sync. ....	36
Using the Remote Control Unit .....	7	Position .....	36
<b>Preparation</b> .....	8	Language .....	36
Antennas .....	8	Reset .....	36
Installing Batteries in the Remote Control Unit .....	8	Parental CTRL (Parental Control Setting) .....	37
<b>Contents</b> .....	9	Option Menu .....	40
<b>Part Names</b> .....	10	Audio Only .....	40
TV (Front) .....	10	Color System .....	40
TV (Side) .....	10	Input Select .....	40
TV (Side/Rear) .....	11	HDMI Setup .....	40
Remote Control Unit .....	12	PC Audio Select .....	40
<b>Connecting to External Equipment</b> .....	13	Output Select .....	41
Connecting Audiovisual Equipment .....	13	Caption Setup .....	41
Using Digital Audio Output .....	14	Digital Caption Info.	
Connecting HDMI Equipment .....	14	(Digital Caption Information) .....	41
Connecting a PC .....	14	Program Title Display .....	41
<b>Watching TV</b> .....	15	Game Play Time .....	41
Turning On/Off the Power .....	15	Operation Lock Out .....	41
Initial Setup .....	15	Favorite CH (Favorite Channel Setting) .....	41
<b>Direct Button Operation</b> .....	16	Demo Mode .....	41
<b>About Discs</b> .....	20	Blu-ray disc Setup .....	42
Blu-ray Disc .....	20	Digital Setup Menu .....	46
Types of Discs that Can Be Used with This TV .....	20	Audio Setup .....	46
Discs that Cannot Be Used with This TV .....	20	Identification .....	46
BD-VIDEO .....	21	Software Update .....	46
Title, Chapter and Track .....	21	<b>Other Viewing Options</b> .....	48
Icons Used on DVD-VIDEO Disc Cases .....	21	Presetting Remote Control Function .....	48
The Icons Used in This Operation Manual .....	21	Operating the Connected Equipment .....	48
Disc Precautions .....	22	<b>Using AQUOS LINK</b> .....	50
Copyright .....	22	Controlling HDMI Equipment Using AQUOS LINK .....	50
<b>Disc Playback</b> .....	23	AQUOS LINK Menu .....	52
Loading a Disc .....	23	<b>Appendix</b> .....	54
Removing a Disc .....	23	Removing the Stand .....	54
BD/DVD-VIDEO Playback .....	23	Setting the TV on the Wall .....	54
BD/DVD Menus .....	24	Troubleshooting .....	55
BONUSVIEW .....	25	Troubleshooting-Digital Broadcasting .....	55
DVD-R/-RW/BD-RE/-R Playback .....	25	Troubleshooting-Disc Playback .....	56
Audio CD Playback .....	26	RS-232C Port Specifications .....	58
Playback Functions .....	26	Specifications .....	59
Settings During Playback .....	29	Optional Accessory .....	59
<b>On-Screen Display Menu</b> .....	30	PC Compatibility Chart .....	60
Menu Items .....	30	Information on the Software License for This	
On-Screen Display Menu Operation .....	31	Product .....	60
Menu Operation Buttons .....	31	<b>Calling for Service</b> .....	61
Picture Menu .....	32	<b>LIMITED WARRANTY</b> .....	61
OPC Setting .....	32	<b>Dimensional Drawings</b>	
Advanced Picture Setting .....	32	• The dimensional drawings for the LCD TV set are shown	
Audio Menu .....	33	on the inside back cover.	
Surround .....	33		
Bass Enhancer .....	33		
Power Control Menu .....	34		
Power Saving .....	34		
Blu-ray disc Ecology .....	34		
No Signal Off .....	34		
No Operation Off .....	34		

# Part Names

## NOTE




- The illustrations in this operation manual are for explanation purposes and may vary slightly from the actual operations.
- The examples used throughout this manual are based on the LC-42BD80U model.

## TV (Front)

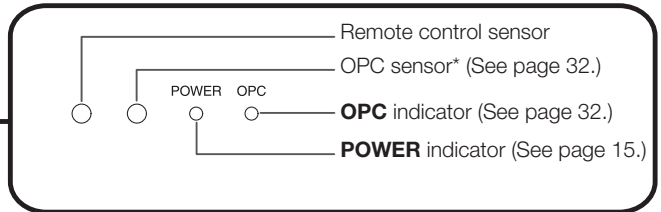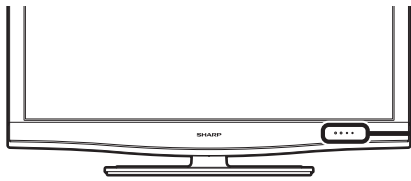

\* OPC: Optical Picture Control

## TV (Side)

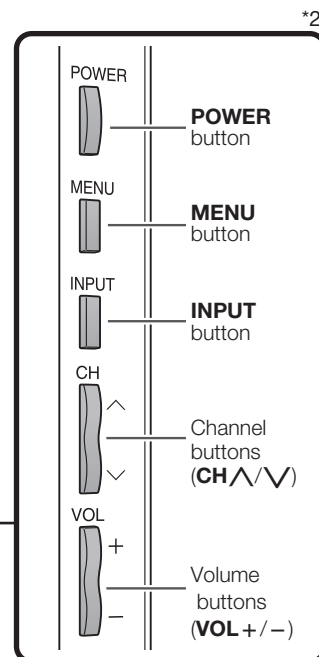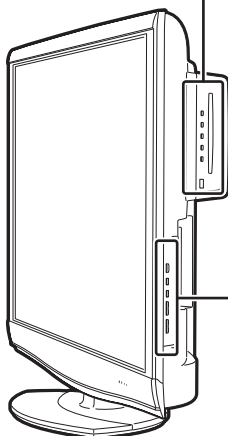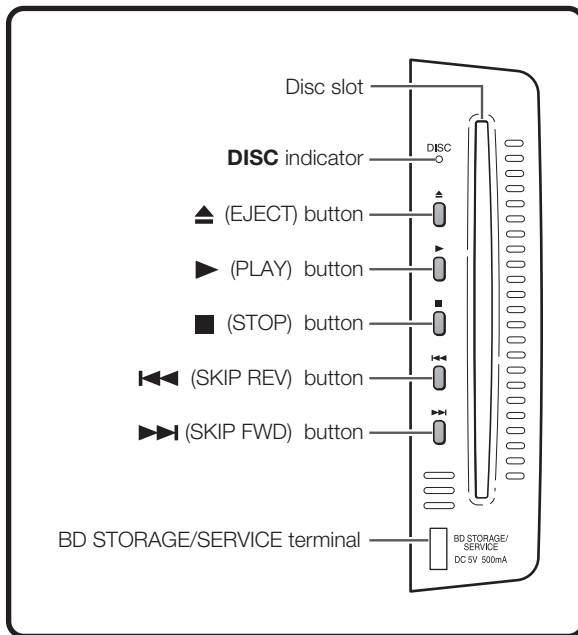


## NOTE

- \*1 For operation of buttons on the Disc Drive, see pages 23 to 27.
- \*2 For operation of buttons on the TV, see page 31.

## Part Names

### TV (Side/Rear)

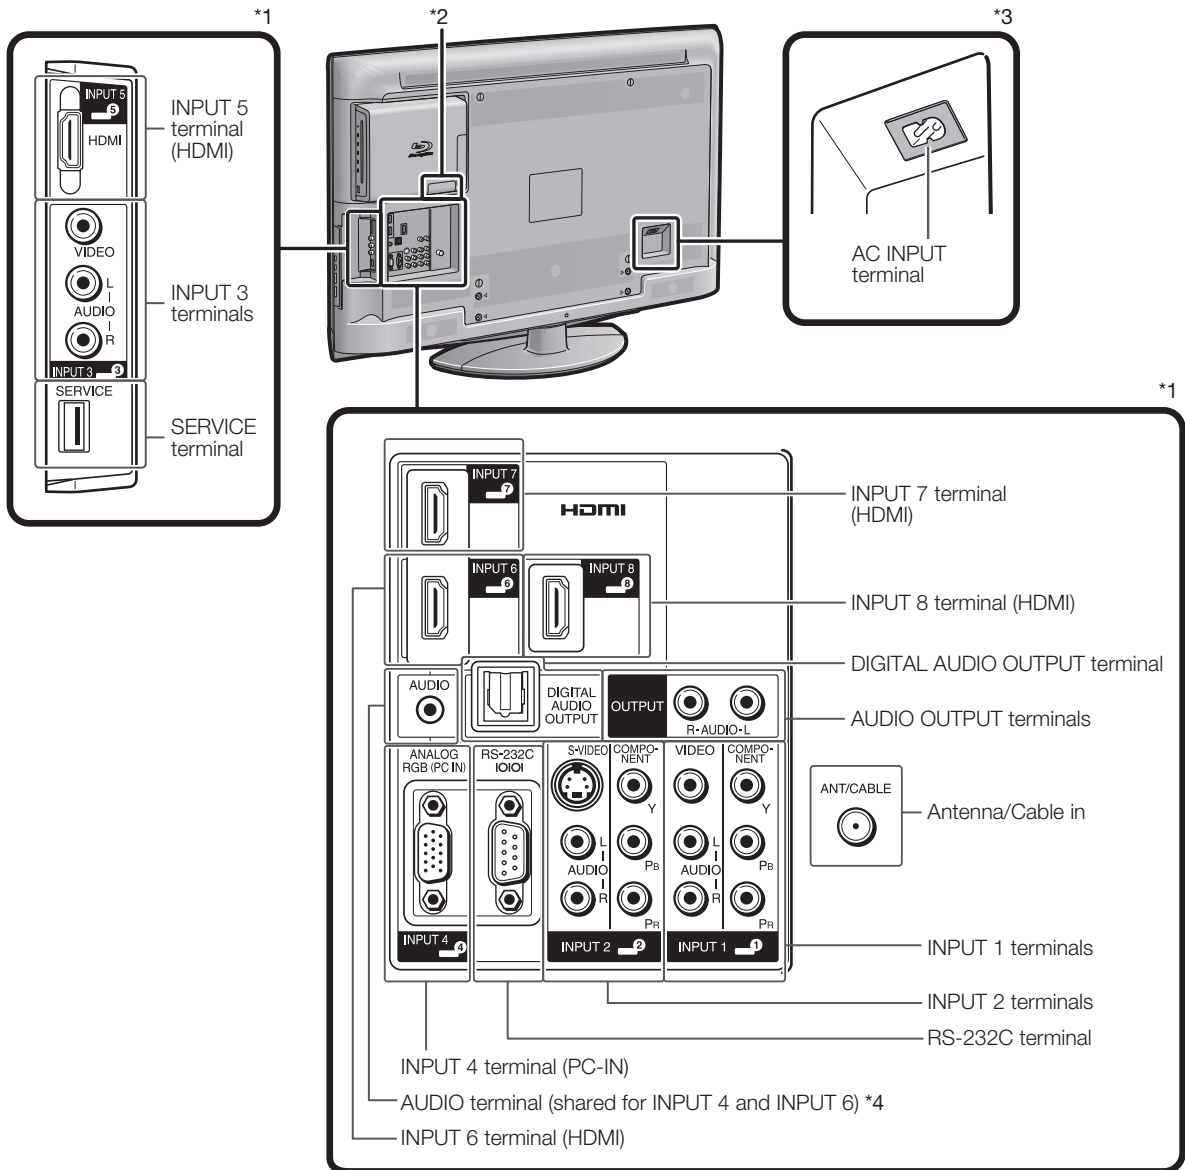

#### NOTE

\*1 See pages 13 and 14 for external equipment connection.



\*2 The Disc Drive has an ETHERNET terminal.

With a future firmware update, you will be able to enjoy additional contents by downloading them via the Internet.  
(For the BD-VIDEO discs compatible with BD-LIVE.)

\*3 See page 7 for connecting the AC cord.

\*4 See page 40 for details on the PC Audio Select function.

## Remote Control Unit

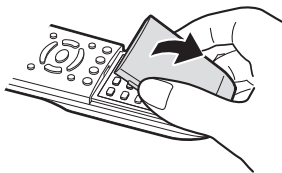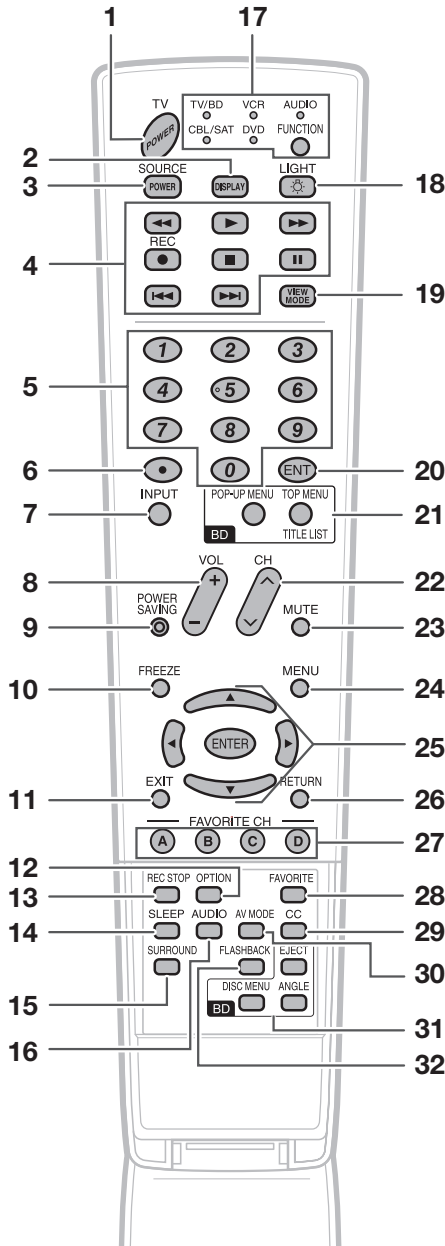

**NOTE**

• When using the remote control unit, point it at the TV.

- 1 **TV POWER:** Switch the TV power on or enter standby. (See page 15.)
  - 2 **DISPLAY:** Display the channel information. When a Blu-ray disc is loaded, the disc information during playback is displayed.
  - 3 **SOURCE POWER:** Turns the power of the external equipment on and off.
  - 4 **◀, ▶, ►, REC, ■, II, ◀◀, ▶▶:** Operate the Disc Drive or external equipment.
  - 5 **0-9:** Set the channel. (See page 16.)
  - 6 **• (DOT):** (See pages 16 and 48.)
  - 7 **INPUT:** Select a TV input source. (TV, Blu-ray, INPUT 1, INPUT 2, INPUT 3, INPUT 4, INPUT 5, INPUT 6, INPUT 7, INPUT 8) (See page 16.)
  - 8 **VOL + / -:** Set the volume. (See page 16.)
  - 9 **POWER SAVING:** Select Power Saving settings. (See page 18.)
  - 10 **FREEZE:** Set the still image. Press again to return to normal screen. (See page 16.)
  - 11 **EXIT:** Turn off the menu screen.
  - 12 **OPTION:** Display the AQUOS LINK MENU screen. This button will function only when AQUOS LINK is used. (See pages 50 to 53 for details.)
  - 13 **REC STOP:** Stops one touch recording. This button will function only when AQUOS LINK is used. (See pages 50 to 53 for details.)
  - 14 **SLEEP:** Set the sleep timer. (See page 16.)
  - 15 **SURROUND:** Select Surround settings. (See page 16.)
  - 16 **AUDIO:** Selects the MTS/SAP or the audio mode during multi-channel audio broadcasts. (See pages 17 and 28.)
  - 17 **FUNCTION:** Switches the remote control for TV/BD, CBL/SAT, VCR and AUDIO operation. Indicator lights up for the current mode. (See pages 48 to 49 for details.)
- \* To enter the code registration mode, you need to press **FUNCTION** and **DISPLAY** at the same time.
- 18 **LIGHT** : When this button is pressed, some buttons (for example, **VOL + / -** and **CH ^ / v**) on the remote control unit will light. The lighting will turn off if no operations are performed within about 5 seconds. This button is used for performing operations in low-light situations.
  - 19 **VIEW MODE:** Select the screen size. (See page 19.)
  - 20 **ENT:** Jumps to a channel after selecting with the **0-9** buttons.
  - 21 **POP-UP MENU, TOP MENU/TITLE LIST:** Use these buttons when playing back a disc. (See pages 23 to 29 for details.)
  - 22 **CH ^ / v:** Select the channel. (See page 16.)
  - 23 **MUTE:** Mute the sound. (See page 16.)
  - 24 **MENU:** Display the menu screen.
  - 25 **▲ / ▼ / ◀ / ▶, ENTER:** Select a desired item on the screen.
  - 26 **RETURN:** Return to the previous menu screen.
  - 27 **FAVORITE CH**  
**A, B, C, D:** Select 4 preset favorite channels in 4 different categories. (See page 41.)  
 While watching, you can toggle the selected channels by pressing **A, B, C** and **D**.
  - 28 **FAVORITE:** Set the favorite channels. (See page 41.)
  - 29 **CC:** Display captions from a closed-caption source. (See pages 18 and 28.)
  - 30 **AV MODE:** Select an audio or video setting.  
 (When the input source is TV, Blu-ray, INPUT 1, 2 or 3: STANDARD, MOVIE, GAME, USER, DYNAMIC (Fixed), DYNAMIC. When the input source is INPUT 4, 5, 6, 7 or 8: STANDARD, MOVIE, GAME, PC, USER, DYNAMIC (Fixed), DYNAMIC) (See page 17.)
  - 31 **EJECT, DISC MENU, ANGLE:** Use these buttons when playing back a disc. (See pages 23 to 29 for details.)
  - 32 **FLASHBACK:** Return to the previous channel or external input mode. (See page 16.)

# Connecting to External Equipment

You can connect many types of external equipment to your TV like a Blu-ray disc player, DVD player, VCR, Digital TV tuner, HDMI equipment, game console or camcorder. To view external source images, select the input source from **INPUT** on the remote control unit or on the TV. (See page 16.)

## CAUTION


- To protect equipment, always turn off the TV before connecting any external equipment.
- Please read the relevant operation manual (Blu-ray disc player, etc.) carefully before making connections.

## Connecting Audiovisual Equipment

You can use the INPUT 1, INPUT 2 or INPUT 3 terminals when connecting to a Blu-ray disc player, DVD player, a Digital TV STB (Air or Cable), VCR, game console, and camcorder.


### When using composite cable (INPUT 1 or 3):

**Blu-ray disc player/  
DVD player/Digital TV STB/VCR/  
Game console/Camcorder**

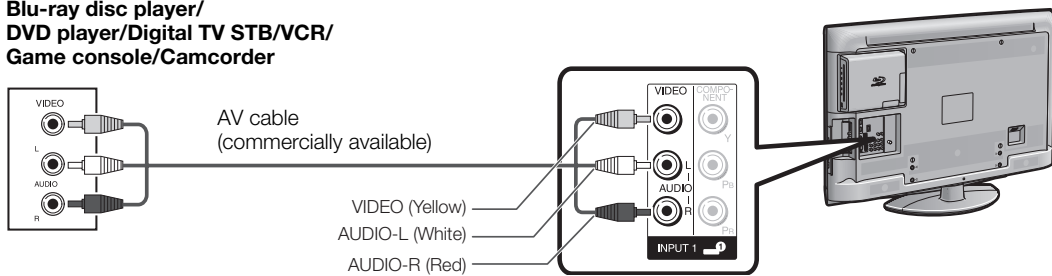


### When using component cable (INPUT 1 or 2):

**Blu-ray disc player/  
DVD player/Digital TV STB**

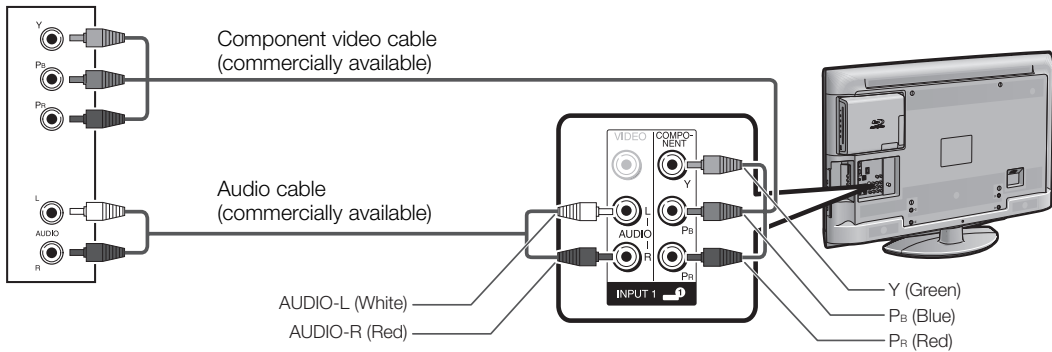

### When using S-VIDEO cable (INPUT 2):

**VCR/Game console/  
Camcorder**

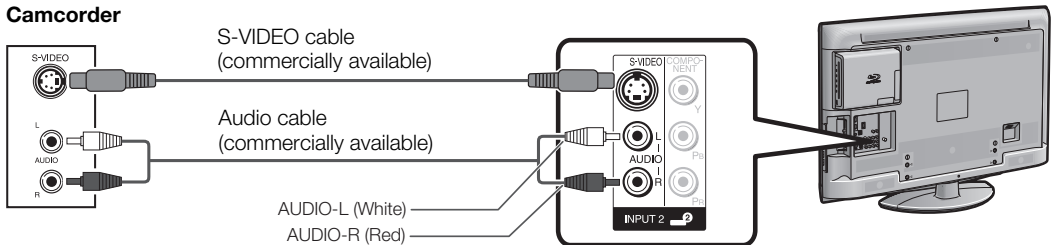

## NOTE


- To enjoy the AQUOS 1080p display capability, connect your external equipment using a component cable and set the equipment to 1080p output.
- See page 14 for connecting a Blu-ray disc player, DVD player or a Digital TV STB to the HDMI terminal.
- The COMPONENT terminals take priority over the VIDEO (INPUT 1) and S-VIDEO (INPUT 2) terminals.

## Connecting to External Equipment

### Using Digital Audio Output

It is possible to output audio through the DIGITAL AUDIO OUTPUT terminal. (See page 46 for details.) PCM audio outputs from the terminal.

#### To optical digital input of external audio devices

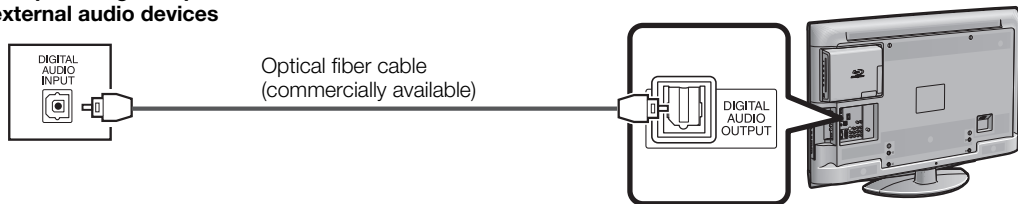


#### NOTE

- Depending on the connected equipment, audio will not output from the DIGITAL AUDIO OUTPUT terminal in HDMI connection. In this case, set the audio formats of the connected equipment to PCM, 32/44.1/48 kHz.

### Connecting HDMI Equipment

You can use the INPUT 5, INPUT 6, INPUT 7 or INPUT 8 terminal when connecting HDMI equipment.

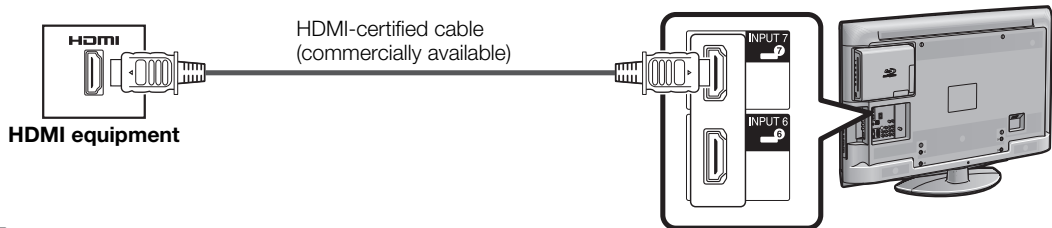


#### NOTE


- When using an HDMI-DVI conversion cable, input the audio signal to the AUDIO terminal of INPUT 6. When you input the audio signal via the AUDIO terminal with INPUT 6, set "PC Audio Select" to "Input 6 (HDMI)". (See page 40.)
- To enjoy the AQUOS 1080p display capability, connect your Blu-ray disc player or other external equipment using an HDMI-certified cable and set the equipment to 1080p output.

### Connecting a PC

When connecting to a PC with an analog RGB terminal (INPUT 4):

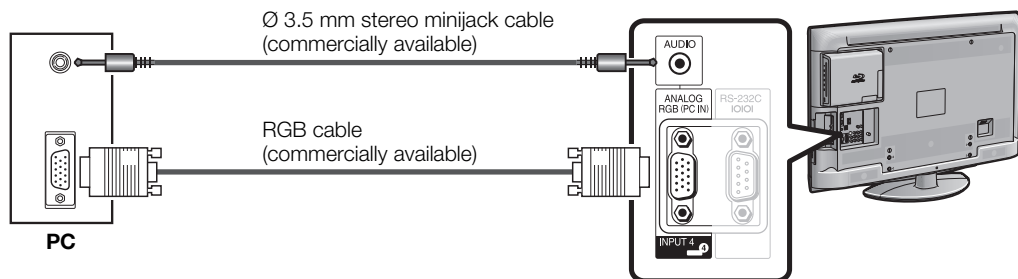

When connecting to a PC with an HDMI terminal (INPUT 5, 6, 7 or 8):

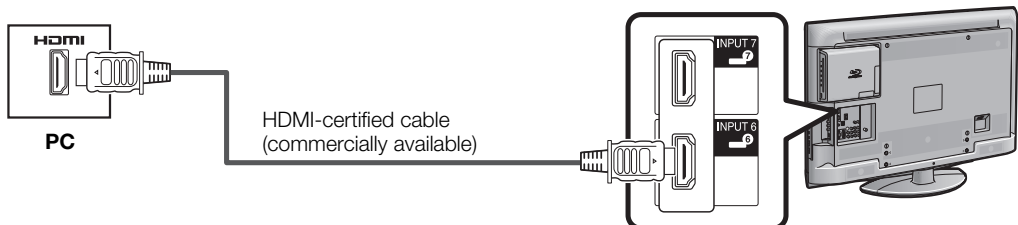


#### NOTE

- When connecting a PC to the INPUT 4, set "PC Audio Select" to "Input 4 (PC)". (See page 40.)
- When connecting a PC to the INPUT 6, set "PC Audio Select" to "Input 6 (HDMI)". (See page 40.)
- The HDMI terminals only support digital signal.
- Refer to page 60 for a list of PC signals compatible with the TV.



# Watching TV

## Turning On/Off the Power

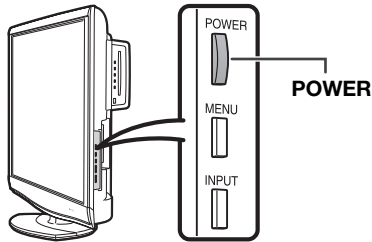

Press **POWER** on the TV, or **TV POWER** on the remote control unit to turn the power on.

- **POWER indicator (Green):** The TV is on. (After a few seconds, a window appears with sound.)

### NOTE


- The initial setup starts when the TV powers on for the first time. If the TV has been turned on before, the initial setup will not be invoked. For changing the settings of the initial setup, perform EZ setup on the Setup menu on page 35.

Press **POWER** on the TV, or **TV POWER** on the remote control unit again to turn the power off.

- The TV enters standby and the image on the screen disappears.
- The POWER indicator on the TV turns off.

### NOTE


- If you are not going to use this TV for a long period of time, be sure to remove the AC cord from the AC outlet.
- Weak electric power is still consumed even when the TV is turned off.

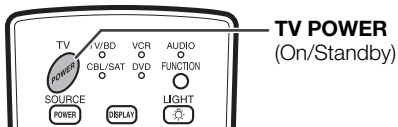

## Initial Setup

When you turn on the TV for the first time, it will automatically memorize the broadcasting channels available in the region where you live. Perform the following steps before you press **TV POWER** on the remote control unit.

1. Insert the batteries into the remote control unit. (See page 8.)
2. Connect the antenna cable to the TV. (See page 8.)
3. Plug in the AC cord to the AC outlet. (See page 7.)

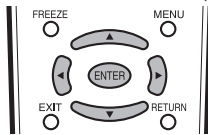

### Language (Language setting)

Select from among 3 languages: English, French and Spanish.

- 1 Press **▲/▼** to select the desired language listed on the screen, and then press **ENTER**.



### TV Location

Select "Home" or "Store" for the location where you plan to install the TV. This product qualifies for ENERGY STAR V3.0 in Home mode default setting.

- 2 Press **◀/▶** to select "Home" or "Store". Press **ENTER** to enter the setting.



**Home:** "Blu-ray disc Ecology" is set to "Enable", "Power Saving" is set to "Advanced", and AV MODE is set to "STANDARD".

**Store:** "Power Saving" is set to "Off" and AV MODE is set to "DYNAMIC (Fixed)". "Blu-ray disc Ecology" is not available. Picture Reset and Feature Demo can be set.

**Picture Reset:** AV MODE will be set to "DYNAMIC (Fixed)" regardless of whether Picture Reset is "On" or "Off". If you select "On", AV MODE will be reset to "DYNAMIC (Fixed)" if there is no operation for 30 minutes. When "Off" is selected, AV MODE will be set to "DYNAMIC (Fixed)".

**Feature Demo:** When "On" is selected, after all the settings are completed, the Feature Demo screen is displayed if there is no operation for several minutes.

### NOTE

- ENERGY STAR qualification is based on AV MODE "STANDARD".

### Air/Cable (Antenna setting)

Make sure what kind of connection is made with your TV when selecting "Air" or "Cable".

- 3 Press **◀/▶** to select "Air" or "Cable". Press **ENTER** to enter the setting.



### CH Search (Channel search)

 
Channel auto search makes the TV look for all channels viewable in the set area.

- 4 When "Air" is selected in Antenna setting: Press **◀/▶** to select "Start", and then press **ENTER**.



### When "Cable" is selected in Antenna setting:

Press **▲/▼** to select "Analog & Digital Search Start" to search both analog and digital broadcasts, or to select "Analog Search Start" to search only analog broadcasts, and then press **ENTER**.




- The Channel search will start automatically.
- To exit the Channel search screen, select "Cancel", and then press **ENTER**.

### NOTE

- If no channel is found, confirm the type of connection made with your TV and try EZ Setup again. (See page 35.)
- For changing the settings of the initial setup, perform EZ setup on the Setup menu on page 35.

# Direct Button Operation

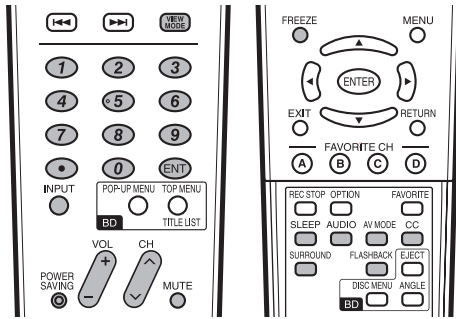

## Changing Channels

You can change channels by pressing **CH**▲/▼ or **0-9**, • (DOT).

### Examples:

To select a 1 or 2-digit channel number (e. g., Channel 5):  
Press **5** → **ENT**.

To select a 3-digit channel number (e. g., Channel 115):  
Press **1** → **1** → **5** → **ENT**.

To select a 4-digit channel number (e. g., Channel 22.1):  
Press **2** → **2** → • (DOT) → **1** → **ENT**.

### NOTE

- When selecting a 1-digit channel number, it is not necessary to press **0** before the number.
- When you enter **0-9** only, channel selection will be made if there is no operation within a few seconds.
- If you push "0" by itself, nothing will happen.
- Complete the above steps within a few seconds.
- When you enter **0-9** and • (DOT), channel selection will be made if there is no operation within a few seconds.

## Changing Volume

You can change the volume by pressing **VOL** +/– on the TV or on the remote control unit.

 
- To increase the volume, press **VOL** +.
- To decrease the volume, press **VOL** –.



## Audio status

Output device	Output Select	
	Fixed	Variable
Speaker	Variable sound	Mute

- When "Output Select" is set to "Variable", the indicator on the screen changes as shown below.



### NOTE

- See page 41 for details on the Output Select function.

## MUTE

Mutes the current sound output.

Press **MUTE**.

- "c" with a speaker icon and a slash will be displayed on the screen for 30 minutes, and the sound is silenced.

### NOTE

- Within 30 minutes of pressing **MUTE**, mute can be canceled by pressing **VOL** +/– or **MUTE**.
- Mute will be canceled after 30 minutes have passed. However, the TV will not suddenly output a loud sound as the volume level is set to 0 automatically.

## Sleep Timer

Allows you to set a time when the TV automatically switches to standby.

Press **SLEEP**.

- The remaining time displays when the sleep timer has been set.
- Each time you press **SLEEP**, the remaining time switches as shown below.

Off → 30 → 60 → 90 → 120

- When set, the time automatically starts counting down.
- If you want to adjust the sleep timer, you can press **SLEEP** twice then change the time setting.
- When it is 5 minutes before the time expires, the remaining time will start to keep appearing every minute.

### NOTE

- Select "Off" by pressing **SLEEP** to cancel the sleep timer.
- The TV will enter standby when the remaining time reaches 0.

## FLASHBACK

Press **FLASHBACK** to switch to the previously tuned channel.

- Press **FLASHBACK** again to switch back to the currently tuned channel.

### NOTE

- **FLASHBACK** will not work if no channel has been changed after the TV is turned on.

## SURROUND

The surround function produces Surround effect from the speakers. Each time you press **SURROUND**, the mode changes between On and Off.

**On:** Makes it possible to enjoy natural, realistic surround sound.

**Off:** Outputs the normal sound.

### NOTE

- You can have the same settings by choosing "Surround" on the menu items. (See page 33.)

## FREEZE

Allows you to capture and freeze a moving image that you are watching.

Press **FREEZE**.

- A moving image is captured.
- Press **FREEZE** again to cancel the function.

### NOTE

- When this function is not available, "No displaying still image available." will display.
- The still image automatically goes out after 30 minutes.
- If you are using the freeze function and a broadcast activates the V-CHIP BLOCK, the freeze function will be canceled and a V-CHIP BLOCK message will appear.

## INPUT

To view external source images, select the input source using **INPUT** on the remote control unit or on the TV.

**1** Press **INPUT**.

- A list of selectable sources appears.

**2** Press **INPUT** again or press ▲/▼ to select the input source.

- An image from the selected source automatically displays.
- Each time **INPUT** is pressed, the input source toggles.
- If the corresponding input is not plugged in, you cannot change the input. Be sure to connect the equipment beforehand.

### NOTE

- See pages 13 and 14 for external equipment connection.

## Direct Button Operation

### AV MODE

 
AV MODE gives you several viewing options to choose from to best match the surrounding environment of the TV, which can vary due to factors like room brightness, type of program watched or the type of image input from external equipment.

Press **AV MODE**. Current AV MODE displays.

- Press **AV MODE** again before the mode displayed on the screen disappears. The mode changes as shown below:


#### Example:

When the input source is TV, Blu-ray, INPUT 1, 2 or 3 terminals



#### Example:

 When the input source is INPUT 4, 5, 6, 7 or 8 terminals



**STANDARD:** For a highly defined image in a normal lighting.

**MOVIE:** For a movie.

**GAME:** Lowers image brightness for easier viewing.

**PC:** For PC.

**USER:** Allows the user to customize settings as desired. You can set the mode for each input source.

**DYNAMIC (Fixed):** Changes the image and sound settings to the factory preset values. No adjustments are allowed.

**DYNAMIC:** For a clear-cut image emphasizing high contrast, useful for sports viewing.

### NOTE

- You can select a different AV MODE item for each input mode. (For example, select STANDARD for TV input and DYNAMIC for INPUT 1.)
- When you play games, "GAME" is recommended for AV MODE.

### AUDIO

#### ■ MTS/SAP stereo mode

The TV has a feature that allows reception of sound other than the main audio for the program. This feature is called Multi-channel Television Sound (MTS). The TV with MTS can receive mono sound, stereo sound and Secondary Audio Programs (SAP). The SAP feature allows a TV station to broadcast other information, which could be audio in another language or something completely different like weather information.

You can enjoy Hi-Fi stereo sound or SAP broadcasts where available.

- **Stereo broadcasts:** View programs like live sporting events, shows and concerts in dynamic stereo sound.
- **SAP broadcasts:** Receive TV broadcasts in either MAIN or SAP sound.

MAIN sound: The normal program soundtrack (either in mono or stereo).

SAP sound: Listen to a second language, supplementary commentary or other information. (SAP is mono sound.)

If stereo sound is difficult to hear.

- Obtain a clearer sound by manually switching to fixed mono-sound mode.

You can change MTS as shown below to match the television broadcast signal.

Press **AUDIO** to toggle between audio modes.

**Examples: when receiving MTS and SAP**

STEREO mode: STEREO ↔ MONO

STEREO + SAP mode: ST(SAP) → SAP(ST) → MONO

MAIN + SAP mode: MAIN ↔ SAP

MONO mode: MONO

#### ■ Digital broadcasting audio mode

The types of audio transmitted in a digital broadcast include SURROUND as well as MONO and STEREO. In addition, it is possible for multiple audio tracks to accompany a single video track.

Press **AUDIO** to toggle between audio modes.

**Example: when receiving Digital broadcasting**

STEREO (Audio1) → STEREO (Audio2)

↔ SURROUND (Audio3) ↔

### NOTE

- MTS only operates while in TV mode.
- When the input source is Blu-ray, audio information contained on the disc being played back will be displayed. If multiple audio is recorded on the disc, **AUDIO** functions for audio switching.

## Direct Button Operation

### POWER SAVING

Allows you to set the Power Saving level in order to decrease the power consumption and increase the backlight lifespan.

Press **POWER SAVING**.

- Each time you press **POWER SAVING**, the mode changes as shown below.

Off → Standard → Advanced

#### NOTE

- You can have the same settings by choosing "Power Saving" on the menu items. (See page 34.)

### Closed Captions and Digital Closed Captions

Your TV is equipped with an internal Closed Caption decoder. It allows you to view conversations, narration and sound effects as subtitles on your TV. Closed Captions are available on some TV programs and on some VHS home video tapes at the discretion of the program provider.


Digital Closed Caption service is a new caption service available only on digital TV programs (also at the discretion of the service provider). It is a more flexible system than the original Closed Caption system, because it allows for a variety of caption sizes and font styles. When the Digital Closed Caption service is in use, it will be indicated by the appearance of a 3-letter abbreviation that also indicates the language of the Digital Closed Captions: ENG (English), SPA (Spanish), FRA (French) or other language codes.

Not all programs and VHS videotapes offer closed captions. Please look for the "**CC**" symbol to ensure that captions will be shown.

In the Closed Caption system, there can be more than one caption service provided. Each is identified by its own number. The "CC1" and "CC2" services display subtitles of TV programs superimposed over the program's picture.

In the Closed Caption system, the "Text1" or "Text2" services display text that is unrelated to the program being viewed (e.g., weather or news). These services are also superimposed over the program currently being viewed.

- Press **CC**.
  - This will present the Closed Caption information display.
- Press **CC** while the Closed Caption information is still on the screen.
  - Press repeatedly until you select the desired closed caption service.

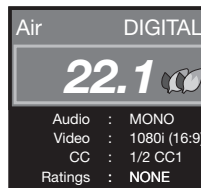

- Depending on the number of caption services in the signal being received, you will see information such as 1/2 or 1/4 displayed. 1/2 means "the first of two services".

#### Example:

If a program has three services (Digital CC(ENG), CC1 and Text1), the closed caption display will toggle in this sequence:



- The **CC** button keeps a record of the last service selected in its memory. If the last closed caption mode (e.g. 1/3 ENG) you selected is not available for the next program, or on another channel, the closed caption service that is available is automatically selected, and this service appears in parentheses, e.g. "1/3(CC1)". Closed Caption services that appear in parentheses will not be stored in the **CC** button's memory as your last selected service. Only services that you have selected with the **CC** button are stored.

#### Examples:

In a case where there are two closed caption services provided (for instance, Digital CC(ENG) and CC1), and Digital CC(ENG) is displayed as your current selection, if Digital CC(ENG) is not broadcast for the next program, the other closed caption service, CC1, will be displayed in parentheses.

A closed caption service appears in parentheses because the service you selected is not available and a different service is displayed on your screen. "1/1(CC1)" is displayed instead of "1/2/ENG".

#### NOTE

- When "Power Saving" is set to "Standard" or "Advanced", the Power Saving leaf icon appears on the channel information window. See page 34 for details of Power Saving settings.
- See page 41 for detailed closed caption settings.
- When the program contains no closed caption, "--" displays in the closed caption information.
- If the language code, e.g. "ENG", is not found on Digital TV programs, "--" will be shown.
- Four kinds of closed caption service (CC1, CC2, Text1, Text2) are potentially available, but a broadcast may contain none or only some of these services at the discretion of the program provider.
- When a BD/DVD-VIDEO disc is played back, the **CC** button functions for switching subtitles.

## Direct Button Operation

### VIEW MODE

You can select the screen size.

#### 1 Press **VIEW MODE**.





- The View Mode menu displays.
- The menu lists the View Mode options selectable for the type of video signal currently being received.

#### 2 Press **VIEW MODE** or **▲/▼** while the View Mode menu is displayed to select a desired item on the menu.

- You can sequentially select a View Mode that has its own aspect ratio.

#### ■ For 4:3 programs

**Example: Screen size images**

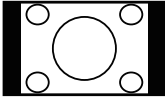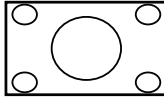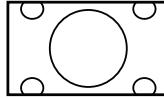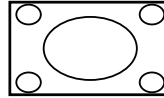Side Bar	S.Stretch (Smart stretch)	Zoom	Stretch
			
Suitable for viewing conventional 4:3 programs in their normal format.	Suitable for stretching 4:3 programs to fill the screen.	Suitable for viewing wide-screen 2.35:1 anamorphic DVDs in full screen.	This mode is useful for 1.78:1 DVDs. When viewing 1.85:1 DVDs, stretch mode will still show very thin black bands at the top and bottom of the screen.

#### ■ For HD programs

**Stretch:** Suitable for viewing wide-screen 1.78:1 aspect ratio program, stretch mode will still show very thin black bands at the top and bottom of the screen.

**Dot by Dot (1080i/p only):** Detects the resolution of the signal and displays an image with the same number of pixels on the screen.

**Full Screen (720p only):** You can select "Full Screen" only when receiving a 720p signal.

**S.Stretch (Smart stretch):** Suitable for stretching 4:3 programs to fill the screen.

**Zoom:** Suitable for viewing wide-screen 2.35:1 aspect-ratio programs in full screen.

#### NOTE









- When using Dot by Dot, it is possible to see noise or bars around different outer portions of the screen. Please change view mode to correct this.
- You cannot change view mode when the Blu-ray disc Setup screen, Title List screen, or Blu-ray disc screen saver is displayed.

#### ■ For PC input mode

#### NOTE

- Connect the PC before making adjustments. (See page 14.)
- Selectable screen size may vary with input signal type.

**Example: Screen size images**
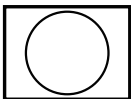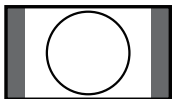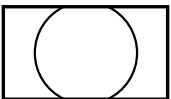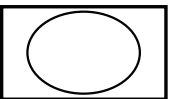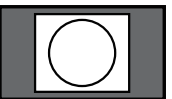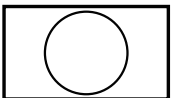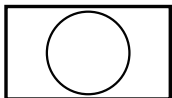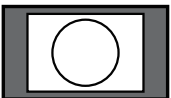
<b>Input signal</b>  4:3	<b>Normal</b>  Keeps the original aspect ratio in a full screen display.	<b>Zoom</b>  For viewing widescreen programs. The top and bottom of the image is cropped.	<b>Stretch</b>  An image fully fills the screen.	<b>Dot by Dot</b>  Detects the resolution of the signal and displays an image with the same number of pixels on the screen.
<b>Input signal</b>  16:9	<b>Stretch</b>  An image fully fills the screen.	<b>Dot by Dot</b>  Detects the resolution of the signal and displays an image with the same number of pixels on the screen.		

# About Discs



## Blu-ray Disc

Blu-ray disc is the ultimate next generation optical media format, offering the following key features:

- Largest capacity (25 GB single layer – 50 GB dual layer) – with over 5 times the amount of content possible with current DVDs, particularly well suited for high definition feature films with extended levels of interactive features
- Pristine picture quality with the capability for full high definition 1920 x 1080p resolution
- Best audio possible with uncompressed surround sound (higher quality than even theater audio)
- Broadest industry support – ensuring more choice for consumers in the marketplace
- Hardware products will be backward compatible with DVDs, allowing continued enjoyment of existing DVD libraries.
- Disc Durability – new breakthroughs in hard coating technologies gives Blu-ray discs the strongest resistance to scratches and finger prints.

## Types of Discs that Can Be Used with This TV

- The following discs can be played back in this TV. Do not use an 8 cm (3") to 12 cm (5") adapter.
- Use discs that conform to compatible standards as indicated by the presence of official logos on the disc label. Playback of discs not complying with these standards is not guaranteed. In addition, the image quality or sound quality is not guaranteed even if the discs can be played back.

Disc Type		Recording Format	Contents	Disc Size
BD-VIDEO	Region code A/ALL (A/B/C) 	–	Audio + Video (Movie)	12 cm (5")
BD-RE DL BD-R DL		BDMV BD-DAV		
DVD-VIDEO	Region code 1/ALL 	Video format	Audio + Video (Movie)	12 cm (5") 8 cm (3")
DVD+RW/DVD+R DVD-R DL DVD-RW/DVD-R		Video/VR format (finalized disc only)	Audio + Video (Movie)	12 cm (5") 8 cm (3")
Audio CD*		Audio CD (CD-DA)	Audio	12 cm (5") 8 cm (3")
CD-RW/CD-R		Audio CD (CD-DA)	Audio	

\* This TV has been designed on the premise of playing back Audio CDs that comply with CD (Compact Disc) standards. CDs containing a signal for the purpose of protecting copyrights (copy control signal) may not be able to be played back with this TV.

- BD/DVD-VIDEO players and discs have region codes, which dictate the regions in which a disc can be played. This product's region code is **A** for BD and **1** for DVD. (Discs marked **ALL** will play in any player.)
- BD/DVD-VIDEO operations and functions may be different from the explanations in this manual and some operations may be prohibited due to disc manufacturer's settings.
- If a menu screen or operating instructions are displayed during playback of a disc, follow the operating procedure displayed.
- The audio component of a DVD-VIDEO recorded at 96 kHz (Linear PCM) will be output as 48 kHz audio during playback.

### NOTE

- Playback for some of the discs in the left side column tables may not be possible depending on the disc.
- "Finalize" refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this TV. Only finalized DVD discs will play back in this TV. (This TV does not have a function to finalize discs.)

## Discs that Cannot Be Used with This TV

- **The following discs cannot be played back or will not play back properly on this TV. If such a disc is mistakenly played back, speaker damage may occur. Never attempt to play back these discs.**

CDG, Video CD, Photo CD, CD-ROM, CD-TEXT, SVCD, SACD, PD, CDV, CVD, DVD-RAM, DVD-Audio, BD-RE with the cartridge, CD-MP3, CD-WMA

- **Discs with unusual shapes cannot be played.**

- Discs with unusual shapes (heart-shaped or hexagonal discs, etc.) cannot be used. The use of such discs will cause malfunction.

- **The following BD-VIDEO discs cannot be played.**

- Discs not displaying "A" or "ALL" for the region code (discs sold outside the authorized marketing area).\*
  - Discs produced illegally.
  - Discs recorded for commercial use.
- \* The region code for this product is A.

- **The following DVD-VIDEO discs cannot be played.**

- Discs not displaying "1" or "ALL" for the region code (discs sold outside the authorized marketing area).\*
  - Discs produced illegally.
  - Discs recorded for commercial use.
- \* The region code for this product is 1.

- **The following BD-RE/R, DVD-RW/R and DVD+RW/R discs cannot be played.**

- Discs on which data has not been recorded cannot be played back.

- **The following Audio CD discs cannot be played.**

- Discs containing a signal for the purpose of protecting copyrights (copy control signal) may not be played back with this TV.
- This TV has been designed on the premise of playing back Audio CDs that comply with CD (Compact Disc) standards.

## About Discs

### ■ The following CD-RW/R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Discs recorded in a format other than an Audio CD cannot be played back.
- Discs may not be played back depending on their recording status or the status of the disc itself.
- Discs may not be played back depending on their compatibility with this TV.


## BD-VIDEO

- Enjoy Final Standard Profile functions (see page 25), such as picture-in-picture.  
The available functions differ depending on the disc. This is a new function of BD-VIDEO that plays the primary video and secondary video simultaneously. For instance, the function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.

## Title, Chapter and Track

- Blu-ray discs and DVDs are divided into “Titles” and “Chapters”. If the disc has more than one movie on it, each movie would be a separate “Title”. “Chapters”, on the other hand, are subdivisions of titles. (See Example 1.)
- Audio CDs are divided into “Tracks”. You can think of a “Track” as one tune on an Audio CD. (See Example 2.)

### Example 1: Blu-ray disc or DVD

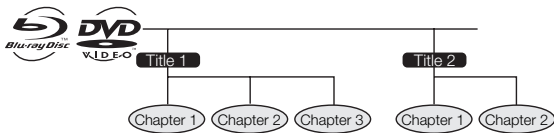


### Example 2: Audio CD



## Icons Used on DVD-VIDEO Disc Cases

The back of the case of a DVD that is commercially available usually contains various information about the contents of the disc.

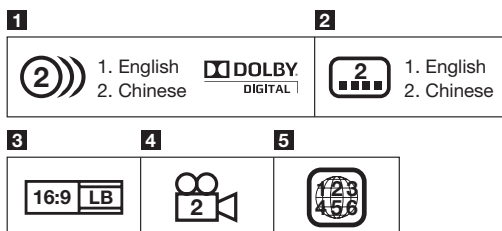

### 1 Audio tracks and audio formats

DVD discs can contain up to 8 separate tracks with a different language on each. The first in the list is the original track.

This section also details the audio format of each soundtrack — Dolby Digital, DTS, MPEG etc.

#### Dolby Digital

A sound system developed by Dolby Laboratories Inc. that gives movie theater ambience to audio output when the TV is connected to a Dolby Digital processor or amplifier.

#### DTS

DTS is a digital sound system developed by DTS, Inc. for use in cinemas.

#### Linear PCM

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD-VIDEO discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD-VIDEO discs.)

### 2 Subtitle languages

This indicates the kind of subtitles.

### 3 Screen aspect ratio

Movies are shot in a variety of screen modes.

### 4 Camera angle

Recorded onto some BD/DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.).

### 5 Region code

This indicates the region code (playable region code).

## The Icons Used in This Operation Manual

**BD-VIDEO** ..... Indicates the functions that can be performed for BD-VIDEO discs.

**BD-RE** ..... Indicates the functions that can be performed for BD-RE discs.

**BD-R** ..... Indicates the functions that can be performed for BD-R discs.

**DVD-VIDEO** .... Indicates the functions that can be performed for DVD-VIDEO discs.

**DVD-RW** ..... Indicates the functions that can be performed for DVD-RW discs.

**DVD-R** ..... Indicates the functions that can be performed for DVD-R discs.

**AUDIO CD** ..... Indicates the functions that can be performed for Audio CDs.





## About Discs

### Disc Precautions

#### Be Careful of Scratches and Dust

- BD, DVD and CD discs are sensitive to dust, fingerprints and especially scratches. A scratched disc may not be able to be played back. Handle discs with care and store them in a safe place.
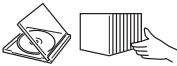
#### Proper Disc Storage

Place the disc in the center of the disc case and store the case and disc upright.	
Avoid storing discs in locations subject to direct sunlight, close to heating appliances or in locations of high humidity.	
Do not drop discs or subject them to strong vibrations or impacts.	
Avoid storing discs in locations where there are large amounts of dust or moisture.	

#### Handling Precautions

- If the surface is soiled, wipe gently with a soft, damp (water only) cloth. When wiping discs, always move the cloth from the center hole toward the outer edge.



- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not touch the surface.
- Do not stick paper or adhesive labels to the disc.
- If the playing surface of a disc is soiled or scratched, the TV may decide that the disc is incompatible and eject the disc, or it may fail to play the disc correctly. Wipe any dirt off the playing surface with a soft cloth.

#### Cleaning the Pick Up Lens

- Never use commercially available cleaning discs. The use of these discs can damage the lens.
- Request the nearest service center approved by SHARP to clean the lens.

#### Warnings about dew formation

- Condensation may form on pick up lens or disc in the following conditions:
  - Immediately after a heater has been turned on.
  - In a steamy or very humid room.
  - When the TV is suddenly moved from a cold environment to a warm one.

##### When condensation forms:

It becomes difficult for the TV to read the signals on the disc and prevents the TV from operating properly.

##### To remove condensation:

Take out the disc and leave the TV with the power off until the condensation disappears. Using the TV when there is condensation may cause malfunction.

### Copyright

- Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Refer to relevant laws in your country.
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

**U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132; and 5,583,936**




# Disc Playback

This section explains playback of commercially available BD-VIDEO and DVD-VIDEO discs (like movies), CDs, and recorded DVD-RW/R discs.

## Loading a Disc

Insert the disc into the disc slot.

- The label side of the disc must face towards the front of the TV (towards you).
- When inserting a dual-sided DVD, the side you want to play must face towards the rear of the TV (away from you).

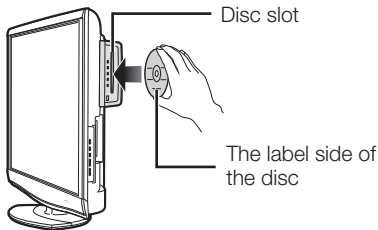


- When the disc is loaded, the DISC indicator lights up.
- Playback may begin automatically, depending on the disc.
- The menu may be displayed first, depending on the disc. Perform playback operation by following the directions on the screen.

### NOTE


- In the following cases, the disc will be ejected automatically.
  - When a disc using an incompatible standard or format was inserted.
  - When the disc was inserted facing the wrong way.

## Removing a Disc

- 1 Press **▲** on the TV or **EJECT** on the remote control unit.

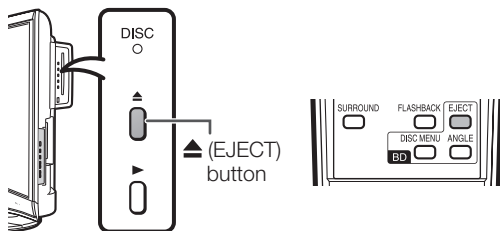

- The disc is ejected and protrudes partly from the slot.
- 2 Carefully grasp the protruding disc and pull it out.

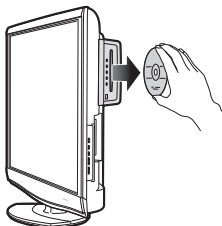


- After a disc has been ejected, it should be removed from the slot without delay.

### NOTE

- If the TV is jolted or moved while a disc is protruding from the slot, the disc may fall out.
- To reinsert a protruding disc, first remove the disc fully and then load it again.
- During loading, the disc may be unable to be ejected. Wait until the loading is complete and playback starts to eject the disc.

## BD/DVD-VIDEO Playback

**BD-VIDEO** **DVD-VIDEO** **BD-RE** **BD-R**

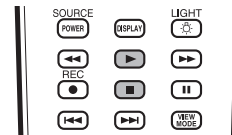

- 1 Load a disc.
  - Playback may begin automatically, depending on the disc.
- 2 Press **▶**.
  - Playback begins from the first title.
  - The menu may be displayed first, depending on the disc. Perform playback operation by following the directions on the screen.

### NOTE

- The disc load time may vary depending on the disc.
- During playback of HDMI equipment connected to the TV with AQUOS LINK Control set to "Enable", pressing **▶** controls the HDMI equipment, not the Disc Drive on the TV.
- Playback on the Disc Drive will stop when you switch the input source or select a TV channel.

## To stop playback

Press **■**.

## Resume playback function

After stopping the disc, press **▶** to resume playback from the point where the disc has been stopped.

- To play back from the beginning of the disc, press **■** twice and then press **▶**. (This may not work depending on the type of disc. In this case, eject the disc or enter standby.)


### NOTE

- Resume playback may not function depending on the disc.

## Disc Playback

### BD/DVD Menus


- This section explains how to play back a BD/DVD-VIDEO disc with a top menu, disc menu or pop-up menu.
- The titles listed in the top menu and a disc guide (for options like subtitles and audio languages) are given in the disc menu.

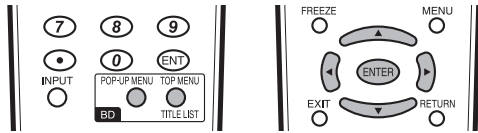

#### Start Playback by Selecting a Title from the Top Menu

BD-VIDEO DVD-VIDEO

- 1 Press **TOP MENU/TITLE LIST**.
  - The top menu screen is displayed.

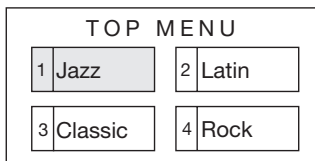

- 2 Press **▲/▼/◀/▶** to select the title, and then press **ENTER**.
  - The selected title is played back.

#### NOTE

- The procedure explained on this page is the basic operation procedure. Procedures vary depending on the BD/DVD-VIDEO disc, so you may need to follow the instructions in the BD/DVD-VIDEO disc manual or the instructions displayed on the screen.
- A top menu is not displayed for a DVD-RW/R (Video format) if it has not been finalized.

#### Top menu


- With some BD/DVD discs, the top menu may be referred to as the "Title Menu". Use **TOP MENU/TITLE LIST** on the remote control when the instructions refer to "Title Menu".
- If no top menu is available, the **TOP MENU/TITLE LIST** button will have no effect.

### Using the Disc Menu

DVD-VIDEO

**Example: Select "SUBTITLE LANGUAGE".**

- 1 Press **TOP MENU**.
  - The disc menu screen is displayed.
- 2 Press **▲/▼** to select "SUBTITLE LANGUAGE", and then press **ENTER**.
  - The screen for selecting the subtitle language is displayed.

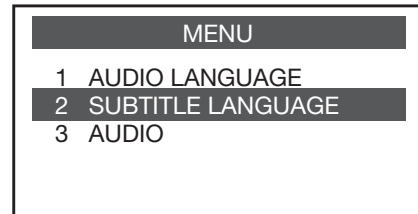


- 3 Press **▲/▼** to select the subtitle language, and then press **ENTER**.
- 4 Press **TOP MENU** to exit.

### Using the Pop-up Menu

BD-VIDEO

- 1 Press **POP-UP MENU** during playback.
  - The pop-up menu screen is displayed.
  - The menu contents displayed vary depending on the disc. For details on how to see and operate the pop-up menu, refer to the manual for the disc.

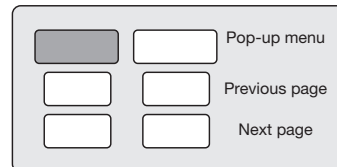

- 2 Press **▲/▼/◀/▶** to select the desired item, and then press **ENTER**.
- 3 Press **POP-UP MENU** to exit.
  - The pop-up menu will automatically disappear for some discs.

## Disc Playback

### BONUSVIEW

#### Use of Picture in Picture Function (Secondary Audio/Video Playback)

##### BD-VIDEO

BD-VIDEO that includes secondary audio and video compatible with Picture in Picture can be played back with secondary audio and video simultaneously as a small video in the corner.



- The secondary audio and video for Picture in Picture may automatically play back and be removed depending on the content. Also, playable areas may be restricted.

##### NOTE

- You can switch on/off the Secondary Audio function. (See page 42 for details.)

### Virtual Package

##### BD-VIDEO

Some BD-VIDEO discs are compatible with a function where data is copied to local storage (USB memory device, etc.) and played back along with the primary video as secondary video, secondary audio, subtitles, etc.

This function is called Virtual Package.

Virtual Package data is automatically copied to the local storage prior to playback. The playback methods vary depending on the disc.

A variety of functions can be enjoyed during playback of BD-VIDEO compatible with Virtual Package, which features data copied to the BD Local Storage separate from the Blu-ray disc.

This TV uses a USB memory device for Local Storage. Connect a USB memory device (USB2.0 256MB or greater) to the BD STORAGE/SERVICE terminal (see page 10) on the Disc Drive of this TV.

- See the disc manual for required storage space and instructions on copying/playback.

##### NOTE


- If there is insufficient storage space, the data will not be copied. Delete unneeded data or use a new USB memory device.
- If a USB memory device containing other data (previously recorded) is used, the video and audio may not play back properly.
- If the USB memory device is disconnected from this TV during playback of Virtual Package, playback of the disc will stop.
- Some time may be required for the data to load (read/write).

See page 44 for deletion of the Virtual Package data copied to the USB memory device.


### DVD-R/-RW/BD-RE/-R Playback

#### DVD-R DVD-RW BD-RE BD-R

You can play back a recorded disc (finalized DVD disc only).

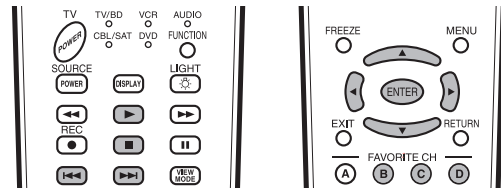

- Load a recorded disc.
  - The Title List screen is displayed.
  - When more than seven titles are displayed, switch pages by pressing **◀◀** or **▶▶**.

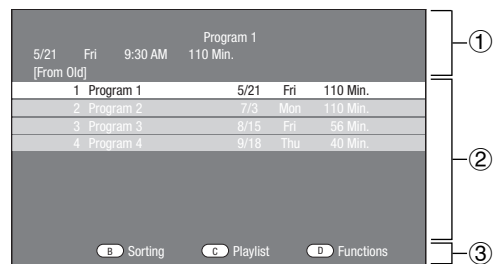

- Information of selected title
- Title Name/Recording Date/Recording Duration
- Caption for Color Button


- Press **▲/▼** to select the title, and then press **ENTER**.
  - Playback of the selected title will begin. You can play back by pressing **▶** instead of pressing **ENTER**.
- Press **■** to stop playback.

##### NOTE

- "Finalize" refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this TV. Only finalized DVD discs will play back in this TV. (This TV does not have a function to finalize discs.)

### Playback by Selecting a Playlist

- Load a recorded disc.
- Press **TOP MENU/TITLE LIST**.
  - The Title List screen is displayed.
- Press **C** while the Title List screen is displayed.
  - The Playlist screen is displayed.

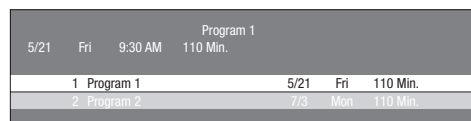

- Press **▲/▼** to select the title, and then press **ENTER**.
  - Playback of the selected title will begin.
- Press **■** to stop playback.

## Disc Playback

### Sorting the Titles

Each time you press **B**, the Title List display changes between displaying the newest titles first and the oldest titles first.

### Playing Back the Title You Stopped While Being Played

- 1 Press **D** while the Title List screen is displayed.



- 2 Press **◀/▶** to select the type of playback, and then press **ENTER**.
  - Playback of the title will begin.

#### NOTE

- "Finalize" refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this TV. Only finalized DVD discs will play back in this TV. (This TV does not have a function to finalize discs.)

## Audio CD Playback


### AUDIO CD

#### Playback from the Beginning



- 1 Load an audio CD.
  - Playback may begin automatically, depending on the disc.
  - Press **▶**.
  - Playback begins from the first track.
- 2 Press **■** to stop playback.

#### Selecting a Track for Playback

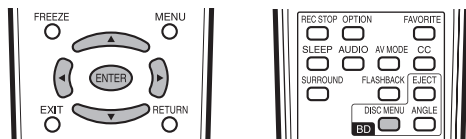


- 1 Load an audio CD, and then press **DISC MENU**.
  - The DISC MENU control screen is displayed.
- 2 Press **▲/▼/◀/▶** to select "T", and then press **ENTER**.
- 3 Press **▲/▼** to select the track number, and then press **ENTER**.
  - You can also use **0-9** on the remote control unit to specify the track number.
  - Playback starts from the selected track.

## Playback Functions

### BD-VIDEO | BD-R | BD-RE

### DVD-VIDEO | DVD-R | DVD-RW

### AUDIO CD

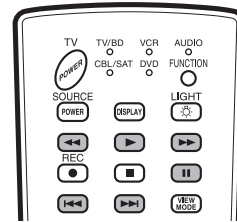

#### NOTE

- Some operations in the following playback functions cannot be performed depending on the specifications of the disc.

### Fast Forward/Reverse (Search)

Fast Forward/Reverse functions when **▶▶** or **◀◀** is pressed during playback.

**Example: When ▶▶ is pressed**

- The search speed will change each time you press the button.

**When playing back a DVD**

- You cannot fast forward or fast reverse from one title and continue to another title (except when playing audio CDs).

### Skipping to the Next or the Start of the Current Chapter (Track)

Skipping (to the beginning of a chapter or track) functions when **◀◀** or **▶▶** is pressed during playback.

### Pause/Frame Advance Playback

Pause functions when **||** is pressed during playback. (If you are playing back an audio CD, the CD will also pause.)

Frame Advance Playback functions when **▶▶▶** is pressed during Pause.

- Frame Advance Playback may not function properly with discs other than DVD-RW (VR format).

#### NOTE

- Frame Advance/Reverse Playback can be performed for DVD discs by pressing **◀◀◀** or **▶▶▶** during Pause.
- Some BD/DVD-VIDEO discs are not compatible with Pause/Frame Advance Playback.

### Slow Playback

Slow Playback functions when **◀◀◀** or **▶▶▶** is pressed more than 2 seconds during pause.


- Press **▶** to return to normal playback.

#### NOTE


- This function does not work for audio CDs.
- Reverse Slow Playback cannot be performed for BD-VIDEO.

## Disc Playback


### Repeat Playback of a Title or Chapter (Repeat Playback)

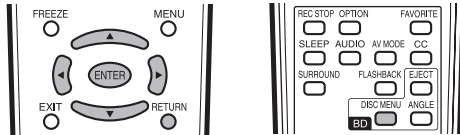

- 1 Play back the title or chapter you want to repeat.
- 2 Press **DISC MENU**.
  - The DISC MENU control screen is displayed.

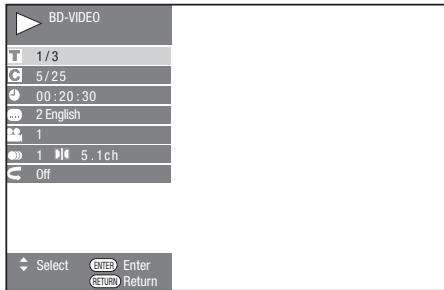

- 3 Press  $\blacktriangle/\blacktriangledown$  to select “ $\curvearrowright$ ”, and then press **ENTER**.
- 4 Press  $\blacktriangleleft/\blacktriangleright$  to select the type of Repeat Playback.
  - Playback Title: Repeats the title currently being played back.
  - Playback Chapter: Repeats the chapter currently being played back.
  - Scene Selection: Repeats the specified scene of title or chapter.

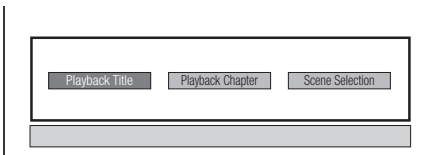


- Press **RETURN** to cancel without setting the type of Repeat Playback.
- For Audio CD, you can select “Playing Disc”, “Playing Track” and “Specify The Part” as Repeat Playback options.

- 5 Press **ENTER**.

### Partial Repeat Playback (Repeat Playback of a Specified Part)

**DVD-VIDEO** **DVD-R** **DVD-RW**


**AUDIO CD**

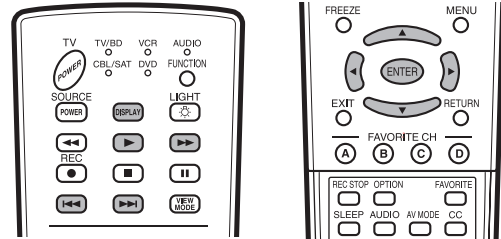

#### NOTE

- Some operations in the following playback function cannot be performed depending on the specifications of the disc.

- 1 Press **DISC MENU** during playback.
  - The DISC MENU control screen is displayed.
- 2 Press  $\blacktriangle/\blacktriangledown$  to select “ $\curvearrowright$ ”, and then press **ENTER**.
- 3 Press  $\blacktriangleleft/\blacktriangleright$  to select “Scene Selection”, and then press **ENTER**.
  - “Set Start Point” displays.

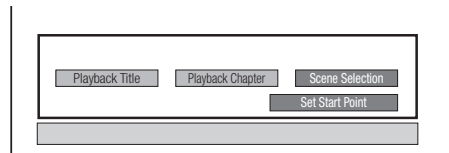

- 4 Press **ENTER** at the scene where you want to set the start point.
  - “Set End Point” displays.
- 5 Press **ENTER** at the scene where you want to set the end point.
  - You can press  $\blacktriangleright$  to fast forward to the scene where you want to set the end point. When you reach the desired scene, simply press  $\blacktriangleright$  and then **ENTER** to set the end point.

### To cancel Repeat Playback


- 1 Press  $\blacktriangle/\blacktriangledown$  to select “ $\curvearrowright$ ” while the DISC MENU control screen is displayed.
- 2 Press  $\blacktriangleleft/\blacktriangleright$  to select “Off”, and then press **ENTER**.

#### NOTE

- Press  $\blacktriangleright$ , the Repeat Playback is cancelled and the next chapter is played back.
- Press  $\blacktriangleleft$  once, the Repeat Playback is cancelled and the TV returns to the start of current chapter (track).
- If you press  $\blacktriangleleft$  again (within about 5 seconds), the TV will skip to the beginning of the previous chapter (track).
- For Partial Repeat Playback, set the start and end points within the same title.
- Repeat Playback may be forbidden depending on the disc.
- Partial Repeat Playback may not work in multi-angle scenes.
- If you press **DISPLAY**, you can confirm the Repeat Playback status.

## Disc Playback

### Displaying the Audio Information

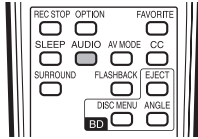

Pressing **AUDIO** displays the audio information for the disc being played back.

- The displayed information varies depending on the disc.

#### BD-VIDEO DVD-VIDEO

The audio track currently being played back will be displayed.


- If multiple audio is recorded, you can switch the audio each time you press **AUDIO**.

#### DVD-RW DVD-R

**When a recorded broadcast with stereo or monaural audio is played back:**

“Stereo” is displayed. (Audio cannot be switched.)

### Switching Subtitles

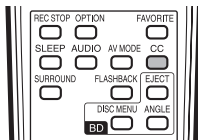

If subtitles are provided in multiple languages, you can switch between them.


Press **CC** during playback.

- The display indicates the subtitle number currently being played back, and the subtitles appear. Each time **CC** is pressed, the subtitles change.
- “—” is displayed if a disc has no subtitles.
- You can also select “Off”.

#### NOTE

- When no disc is inserted while the input source is Blu-ray, the **CC** button does not function.

### Switching the Angle

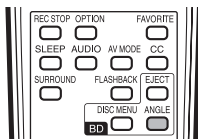

If multiple angles are recorded, you can switch between them.

Press **ANGLE** during playback.

- The display indicates the angle number currently being played back. Each time you press **ANGLE**, the angle switches.
- “—” is displayed if a disc is recorded with only one angle.



To return to the previous angle, press **ANGLE** to cycle through the angles until you return to the original angle.

### Displaying the Angle Mark

You can change settings so that Angle Mark appears in the right bottom part of the screen when multiple angles are recorded. (The Angle Mark is only displayed for DVD-VIDEO.) The settings can be changed in “Blu-ray disc Setup” - “Playback Setting” - “Angle Mark Display”. (See page 42.)

#### NOTE

- Settings for audio, subtitles and angle can be changed also in DISC MENU control screen. (See page 29.)
- The operations of subtitles, angle and audio differ according to each disc. You may need to refer to the operation manual of the disc.
- The following operations will not work when playing back an audio CD:  
Slow Playback, Frame Advance

#### Display of functions

- The display for subtitles, angle or audio automatically disappears after 5 seconds.

#### Switching between functions

- You can switch the subtitles, angle and audio at the DISC MENU control screen. (See page 29.)
- The operation for each function varies depending on the disc. See the manual for the disc.

#### Fast Forward/Reverse

- You cannot perform Fast Forward/Fast Reverse between titles. At the end or beginning of the title, Fast Forward/Fast Reverse will be cancelled and normal playback will automatically resume.
- Subtitles are not played back with BD/DVD-VIDEO discs during Fast Forward and Fast Reverse.

#### Slow Playback


- You cannot perform Slow Playback between titles. At the end of the title, Slow Playback will be cancelled and normal playback will automatically resume.

#### Repeat Playback

- Repeat Playback may be forbidden depending on the disc.
- Partial Repeat Playback may not work in multi-angle scenes.
- For Partial Repeat Playback, set the start and end points within the same title.

## Disc Playback


### Settings During Playback

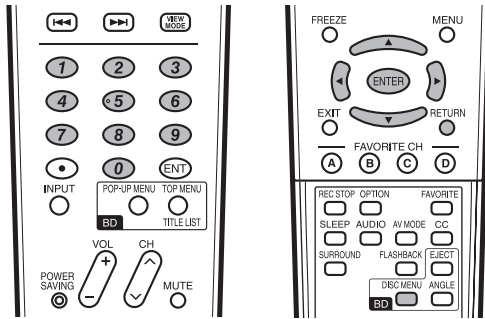

#### DISC MENU Control

This allows you to adjust various settings at once, like subtitles, angle settings and the title selection for Direct Playback. You can adjust the video and audio to suit your preferences. The operations are the same for BD and DVD.

#### DISC MENU control screen

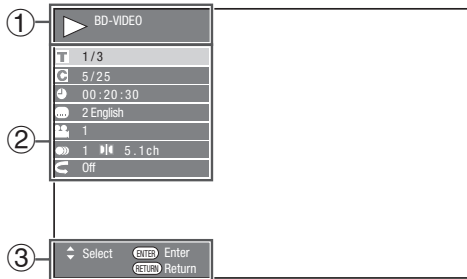

#### ① Playback status display

Shows the operation status and the disc type.

#### ② Setting items

Selects a title or chapter for playback, or performs video/audio settings.

- Title Number (Direct Title Skip)
- Chapter Number (Direct Chapter Skip)
- Playback Elapsed Time (Direct Time Skip)
- Subtitle Language
- Angle Number
- Audio
- Repeat

#### ③ Operation guide display

Provides help on remote control button operations.

#### DISC MENU Operation Procedure

- 1 Press **DISC MENU** during playback.
  - The DISC MENU control screen is displayed.
- 2 Press **▲/▼** to select the desired setting, and then press **ENTER**.
  - For a description of each setting, see "DISC MENU Which Can Be Set".
- 3 Press **▲/▼/◀/▶** to set, and then press **ENTER**.
  - Operations vary depending on the setting. Follow the operation instructions on the screen.
- 4 Press **RETURN** or **DISC MENU** to close the DISC MENU control screen.

#### NOTE

- If "–" is displayed for an option like title number or subtitles, the disc has no titles or subtitles which can be selected.
- The displayed items vary depending on the disc.
- If you access the DISC MENU control screen during playback of a BD/DVD-VIDEO, it may be impossible to operate the BD/DVD-VIDEO playback. In cases like this, close the DISC MENU control screen.

#### DISC MENU Which Can Be Set

##### Title Number (Direct Title Skip)

- Shows the title number being played back. You can skip to the start of the title.
- To skip to the start of a selected title, press **0-9** to enter the title number when this option is highlighted.

##### Chapter Number (Direct Chapter Skip)

- Shows the chapter number being played back. You can skip to the start of the chapter.
- To skip to the start of a selected chapter, press **0-9** to enter the chapter number when this option is highlighted.

##### Playback Elapsed Time (Direct Time Skip)

- Shows the elapsed time from the beginning of the disc to the present. This lets you skip to a specific time.
- Press **◀/▶** to select the Hour, Minute or Second, and then press **▲/▼** or **0-9** to set the time. Press **ENTER** to start playback at the set time.

##### Subtitle Language

- Shows the currently selected subtitle language. If subtitles are provided in other languages, you can switch to your preferred language.

##### Angle Number

- Shows the currently selected angle number. If the video is recorded with multiple angles, you can switch the angle.

##### Audio

- Shows the currently selected type of audio. You can select the desired type of audio.

##### Repeat

- The current Title (or Chapter) or partial segments can be repeatedly played back.

#### NOTE

- These functions may not work with all discs.

# On-Screen Display Menu

## Menu Items

### For TV/Blu-ray/INPUT 1/2/3 Mode

#### Picture Menu

OPC .....	Page 32
Backlight.....	Page 32
Contrast .....	Page 32
Brightness .....	Page 32
Color .....	Page 32
Tint .....	Page 32
Sharpness .....	Page 32
Advanced	
C.M.S.-Hue .....	Page 32
C.M.S.-Saturation .....	Page 32
C.M.S.-Value .....	Page 32
Color Temp. ....	Page 32
Active Contrast .....	Page 32
Fine Motion Enhanced .....	Page 32
Film Mode .....	Page 33
Digital Noise Reduction .....	Page 33
3D-Y/C .....	Page 33
Monochrome .....	Page 33
Range of OPC .....	Page 33
Reset .....	Page 32

#### Audio Menu

Treble .....	Page 33
Bass.....	Page 33
Balance.....	Page 33
Surround.....	Page 33
Bass Enhancer .....	Page 33
Reset .....	Page 33

#### Power Control Menu

Power Saving .....	Page 34
Blu-ray disc Ecology .....	Page 34
No Signal Off .....	Page 34
No Operation Off .....	Page 34

#### Setup Menu

EZ Setup.....	Page 35
CH Setup.....	Page 35
Antenna Setup-DIGITAL.....	Page 35
Input Skip .....	Page 35
Input Label .....	Page 35
Parental CTRL .....	Pages 37-39
Position.....	Page 36
Language.....	Page 36
Reset .....	Page 36

#### Option Menu

Blu-ray disc Setup.....	Pages 42-45
AQUOS LINK Setup .....	Page 51
Audio Only .....	Page 40
Input Select .....	Page 40
PC Audio Select .....	Page 40
Output Select .....	Page 41
Color System.....	Page 40
Caption Setup .....	Page 41
Digital Caption Info. ....	Page 41
Program Title Display .....	Page 41
Favorite CH .....	Page 41
Game Play Time .....	Page 41
Operation Lock Out.....	Page 41
Demo Mode .....	Page 41

#### Digital Setup Menu

Audio Setup.....	Page 46
Identification .....	Page 46
Software Update .....	Pages 46-47

### For HDMI/PC-IN Mode

#### Picture Menu

OPC .....	Page 32
Backlight.....	Page 32
Contrast .....	Page 32
Brightness .....	Page 32
Color .....	Page 32
Tint .....	Page 32
Sharpness .....	Page 32
Advanced	
C.M.S.-Hue .....	Page 32
C.M.S.-Saturation .....	Page 32
C.M.S.-Value .....	Page 32
Color Temp. ....	Page 32
Active Contrast .....	Page 32
Fine Motion Enhanced .....	Page 32
Film Mode .....	Page 33
Digital Noise Reduction .....	Page 33
Monochrome .....	Page 33
Range of OPC .....	Page 33
Reset .....	Page 32

#### Audio Menu

Treble .....	Page 33
Bass.....	Page 33
Balance.....	Page 33
Surround.....	Page 33
Bass Enhancer .....	Page 33
Reset .....	Page 33

#### Power Control Menu

Power Saving .....	Page 34
Blu-ray disc Ecology .....	Page 34
No Signal Off .....	Page 34
No Operation Off .....	Page 34

#### Setup Menu

Input Skip .....	Page 35
Auto Sync. ....	Page 36
Input Label .....	Page 35
Fine Sync. ....	Page 36
Position.....	Page 36
Language.....	Page 36
Reset .....	Page 36

#### Option Menu

Blu-ray disc Setup.....	Pages 42-45
AQUOS LINK Setup .....	Page 51
Audio Only .....	Page 40
HDMI Setup.....	Page 40
PC Audio Select .....	Page 40
Output Select .....	Page 41
Game Play Time .....	Page 41
Operation Lock Out.....	Page 41
Demo Mode .....	Page 41

#### Digital Setup Menu

Software Update .....	Pages 46-47
-----------------------	-------------


#### NOTE

- Some menu items may not be displayed depending on the selected input source.



## On-Screen Display Menu

### On-Screen Display Menu Operation

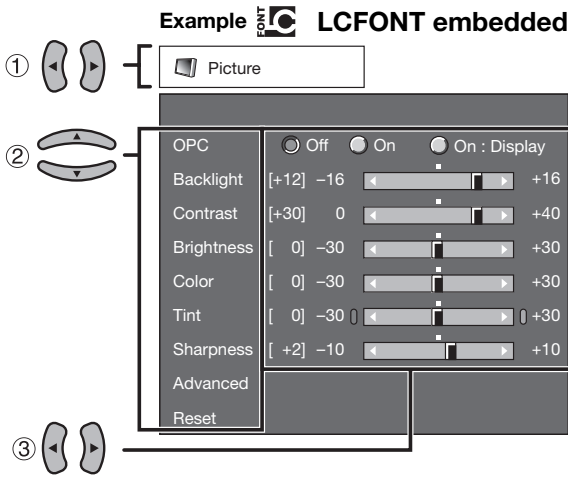

The bar above is an operational guide for the remote control. The bar will change in accordance with each menu setting screen.

- ① Press ◀▶ to select the desired item.
- ② Press ▲▼ to select the desired item.
- ③ Press ◀▶ to adjust the item.

#### NOTE

- Menu options differ in the selected input modes, but the operating procedures are the same.
- The screens in the operation manual are for explanation purposes (some are enlarged, others cropped) and may vary slightly from the actual screens.


#### LCFONT:

- This product is embedded with LC Font technology, which was developed by SHARP Corporation for clearly displaying easy-to-read characters on LCD screens.

### Menu Operation Buttons


#### Using the remote control

Use the following buttons on the remote control to operate the menu.

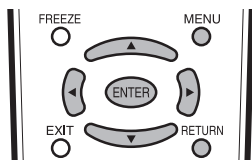

- MENU:** Press to open or close the menu screen.
- ▲/▼/◀/▶:** Press to select a desired item on the screen or adjust a selected item.
- ENTER:** Press to go to the next step or complete the setting.
- RETURN:** Press to return to the previous step.

#### Example

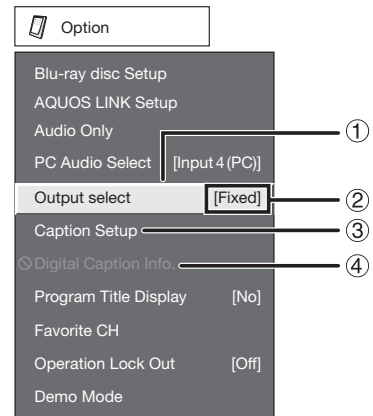


- ① Item displayed in yellow
  - This indicates the item currently selected.
  - Press **ENTER** to go to the adjustment screen for this item.
- ② Item in brackets
  - This indicates the current setting for the item.
- ③ Item displayed in white
  - This indicates that the item can be selected.
- ④ Item displayed in gray
  - This indicates that the item cannot be selected. There are various reasons why the items cannot be selected, but the main reasons are as follows:
    - Nothing is connected to the selected input terminal.
    - The function is not compatible with the current input signal.

#### Using the control panel of the main unit

You can also operate the menu with the control panel of the main unit.

Button operations on the control panel correspond to the ones on the remote control as shown below.

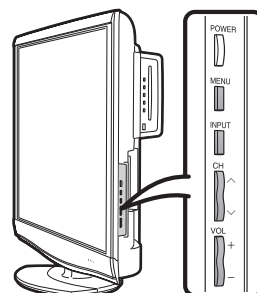



- MENU:** MENU on the remote control.
- INPUT:** ENTER on the remote control.
- CH ▲/▼:** Cursor ▲/▼ on the remote control.
- VOL +/-:** Cursor ◀/▶ on the remote control.

## On-Screen Display Menu

### Picture Menu

Adjusts the picture to your preference with the following picture settings.

#### Example

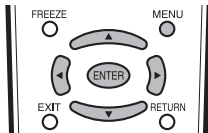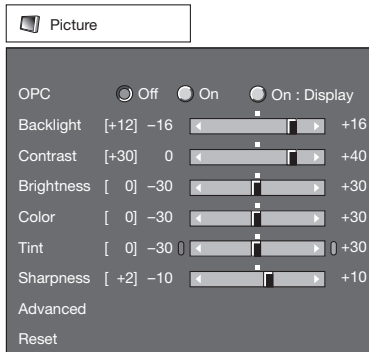

- 1 Press **MENU** to display the MENU screen, and then press **◀/▶** to select "Picture".
- 2 Press **▲/▼** to select a specific adjustment item.
  - Select "Advanced" and then press **ENTER** to set "C.M.S.-Hue", "C.M.S.-Saturation", "C.M.S.-Value", "Color Temp.", "Active Contrast", "Fine Motion Enhanced", "Film Mode", "Digital Noise Reduction", "3D-Y/C", "Monochrome" or "Range of OPC".
- 3 Press **▲/▼** (or **◀/▶**) to select the desired setting, and then press **ENTER**.
- 4 Press **MENU** to exit.

Selected item	◀ button	▶ button
<b>Backlight</b>	The screen dims	The screen brightens
<b>Contrast</b>	For less contrast	For more contrast
<b>Brightness</b>	For less brightness	For more brightness
<b>Color</b>	For less color intensity	For more color intensity
<b>Tint</b>	Skin tones become reddish	Skin tones become greenish
<b>Sharpness</b>	For less sharpness	For more sharpness

- For resetting all Picture adjustment items to the factory preset values, press **▲/▼** to select "Reset", press **ENTER**, press **◀/▶** to select "Yes", and then press **ENTER**.

#### OPC Setting

Automatically adjusts the brightness of the screen.

- Off:** The brightness is fixed at the value set in "Backlight".
- On:** Automatically adjusts.
- On: Display:** Displays the OPC effect on the screen while adjusting the brightness of the screen.

#### NOTE

- When set to "On", the Optical Picture Control (OPC) senses the surrounding light and automatically adjusts the backlight brightness. Make sure nothing obstructs the OPC sensor, which could affect its ability to sense surrounding light.
- When set to "On: Display", OPC effect displays on the screen while the OPC adjusts the screen brightness.
- When set to "On" or "On: Display", the OPC indicator on the TV lights green.

#### Advanced Picture Setting

This TV provides various advanced functions for optimizing the picture quality.

#### C.M.S. (Color Management System)

Color tone is managed using the six-color adjustment setting.

**C.M.S.-Hue:** This is a standard to adjust the color either more reddish or more bluish in tone.

**C.M.S.-Saturation:** Increases or decreases the saturation of a selected color.


**C.M.S.-Value:** A higher value makes the image brighter. A lower value makes the image darker.

#### NOTE

- For resetting all adjustment items to the factory preset values, press **▲/▼** to select "Reset", and then press **ENTER**.

#### Color Temp. (Color Temperature)

For a better white balance, use color temperature correction.

**High:** White with bluish tone  
**Mid-High:**  
**Middle:**   
**Mid-Low:**  
**Low:** White with reddish tone

White balance can be adjusted between a maximum of +30 and a minimum of -30 for each color temperature.

**R Gain:** -30 through +30

**G Gain:** -30 through +30

**B Gain:** -30 through +30

#### NOTE

- For resetting all adjustment items to the factory preset values, press **▲/▼** to select "Reset", and then press **ENTER**.

#### Active Contrast

Automatically adjusts the image contrast according to the scene.

- On:** Automatically adjusts the image contrast.
- Off:** No adjustment.

#### Fine Motion Enhanced

Use Fine Motion Enhanced to view fast-action video more clearly.

- On:** For obtaining a clearer image.
- Off:** Normal image.

#### NOTE

- Fine Motion Enhanced may cause image noise. If this occurs, turn the function "Off".

## On-Screen Display Menu

### Film Mode (3:2 pull-down)

Automatically detects a film-based source (originally encoded at 24 frames/second), analyzes it then recreates each still film frame for high-definition picture quality.

**Advanced(High)/Advanced(Low):** Select a desired level to remove jerkiness from film contents.

**Standard:** Detects, analyzes, converts film source.

**Off:** Normal viewing mode.

#### NOTE

- "Standard" does not function when channel display shows an input signal resolution of 480p, 720p or 1080p.
- "Film Mode" does not function when you set the "AV Mode" to "Game".
- "Film Mode" is not available during PC format input.

### Digital Noise Reduction

Produces a clearer video image.

**Off:** No adjustment

**High/Middle/Low:** Select a desired level for viewing a clearer video image.

#### NOTE

- "Digital Noise Reduction" is not available during PC format input.

### 3D-Y/C

Provides high quality images with minimal dot crawl and cross color noise.

**Slow:** For still images.

**Standard:** Normal adjustment.

**Fast:** For moving images.

#### NOTE

- 3D-Y/C is available for input signal from Composite Video and analog broadcasts (air and cable).

### Monochrome

For viewing a video in monochrome.

**On:** For viewing in monochrome.

**Off:** Normal color.

### Range of OPC

The brightness level range of the OPC sensor's automatic adjustments can be set according to your preferences.

The adjustment range of the OPC sensor can be set to a maximum of +16 and a minimum of -16.

**Max.:** -15 through +16

**Min.:** -16 through +15



#### NOTE

- The range of OPC settings are active only when the OPC is set to "On".
- The maximum setting cannot be set to a smaller number than the minimum setting.
- The minimum setting cannot be set to a bigger number than the maximum setting.
- Depending on the brightness of the surrounding light, the OPC sensor might not operate if the adjustment range is small.

## Audio Menu

You can adjust the sound quality to your preference with the following settings.

#### Example

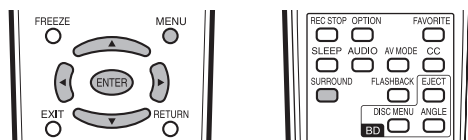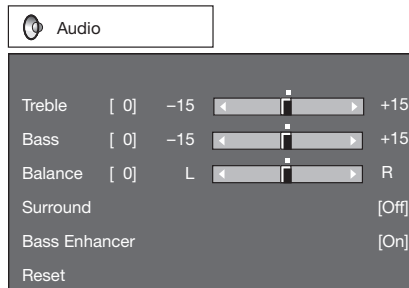

- 1 Press **MENU** to display the MENU screen, and then press **◀/▶** to select "Audio".
- 2 Press **▲/▼** to select a specific adjustment item.
  - Select "Surround" or "Bass Enhancer" and then press **ENTER** to set each item.
- 3 Press **▲/▼** (or **◀/▶**) to select the desired setting, and then press **ENTER**.
- 4 Press **MENU** to exit.

Selected item	◀ button	▶ button
<b>Treble</b>	For weaker treble	For stronger treble
<b>Bass</b>	For weaker bass	For stronger bass
<b>Balance</b>	Decrease audio from the right speaker	Decrease audio from the left speaker

#### NOTE

- Audio menu is grayed out when Output Select is set to "Variable". (See page 41.)
- For resetting all Audio adjustment items to the factory preset values, press **▲/▼** to select "Reset", press **ENTER**, press **◀/▶** to select "Yes", and then press **ENTER**.

### Surround

Surround function allows you to enjoy realistic "live" sound.

**On:** Surround function is on.

**Off:** Normal sound.

#### NOTE

- You can choose Surround by pressing **SURROUND** on the remote control unit. (See page 16.)
- Audio menu is grayed out when Output Select is set to "Variable". (See page 41.)
- For some discs, setup may be required on your DVD player. In this case, please refer to the operation manual of your DVD player.

### Bass Enhancer

This function allows you to enjoy bass-enhanced sound.

**On:** Bass Enhancer function is on.

**Off:** Normal sound.

#### NOTE


- Audio menu is grayed out when Output Select is set to "Variable". (See page 41.)

## On-Screen Display Menu

### Power Control Menu

Power control setting allows you to save energy.

#### Example

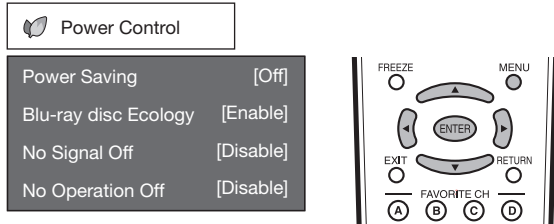

- 1 Press **MENU** to display the MENU screen, and then press **◀/▶** to select "Power Control".
- 2 Press **▲/▼** to select a specific adjustment item, and then press **ENTER**.
- 3 Press **▲/▼** (or **◀/▶**) to select the desired setting, and then press **ENTER**.
- 4 Press **MENU** to exit.

#### Power Saving

This function allows you to set the Power Saving level in order to decrease the power consumption and increase the backlight lifespan.

**Standard:** Optimizes power reduction based upon video content. When set to "Standard", "🍃" appears on the screen.

**Advanced:** Optimizes power reduction based upon video content and engages OPC. When set to "Advanced", "🍃" appears on the screen.

**Off:** This function does not work.

#### NOTE

- "Power Saving" does not function when you set "AV MODE" to "DYNAMIC (Fixed)".
- You cannot select a different Power Saving item for each AV MODE.  
When "Power Saving" is set, the "OPC" settings for all AV Modes will automatically change.
  - If you set "OPC" to "On" when "Power Saving" is set to "Standard", then the "Power Saving" setting will change to "Advanced".
  - When you change the "Power Saving" setting from "Advanced" to "Off" or to "Standard", "OPC" will be set to "Off".
  - "DYNAMIC (Fixed)" will remain set to "Off".
- When "Power Saving" is set to "Standard" or "Advanced", the Power Saving leaf icon appears to the left of "OPC" in the Picture menu screen.
- You can select Power Saving by pressing **POWER SAVING** on the remote control unit. (See page 18.)

#### Blu-ray disc Ecology

You can control the power on/off status of the Disc Drive when power to the TV is on.

**Enable:** Power to Disc Drive is turned on when a disc is inserted or when the input source is switched to Blu-ray.

**Disable:** Power to Disc Drive is turned on when TV power is turned on.

#### No Signal Off

When set to "Enable", the power will automatically shut down if there is no signal for 15 minutes.

#### NOTE

- When it is 5 minutes before the power shuts down, the remaining time will start to keep appearing every minute.
- "Disable" is the factory preset value.
- When a TV program finishes, this function may not operate.

#### No Operation Off

When set to "Enable", the power will automatically shut down if there is no operation for 3 hours.



#### NOTE

- When it is 5 minutes before the power shuts down, the remaining time will start to keep appearing every minute.
- "Disable" is the factory preset value.

## On-Screen Display Menu

### Setup Menu

#### Example

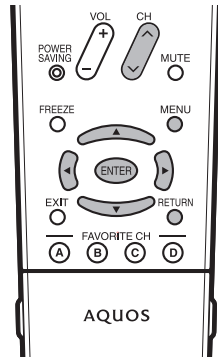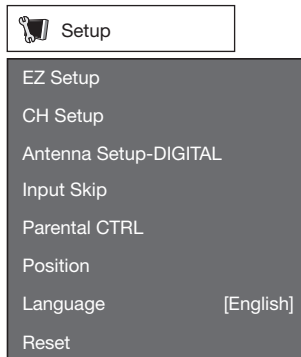

- 1 Press **MENU** to display the MENU screen, and then press **◀▶** to select "Setup".
- 2 Press **▲/▼** to select a specific adjustment item, and then press **ENTER**.
  - When you select "EZ Setup", "CH Setup", "Parental CTRL" or "Reset", you can enter the 4-digit secret number here. See page 37 for setting a secret number.
- 3 Press **▲/▼** (or **◀▶**) to select the desired setting, and then press **ENTER**.
- 4 Press **MENU** to exit.

### EZ Setup

You can run EZ Setup again, even after setting up the preset channels.

- Language:** Select from among 3 languages (English, French and Spanish).
- TV Location:** Select "Home" or "Store" for the location where you plan to install the TV. This product qualifies for ENERGY STAR V3.0 in Home mode default setting.
- Home:** "Blu-ray disc Ecology" is set to "Enable", "Power Saving" is set to "Advanced", and AV MODE is set to "STANDARD".
- Store:** "Power Saving" is set to "Off" and AV MODE is set to "DYNAMIC (Fixed)". "Blu-ray disc Ecology" is not available. Picture Reset and Feature Demo can be set.
- Picture Reset:** AV MODE will be set to "DYNAMIC (Fixed)" regardless of whether Picture Reset is "On" or "Off". If you select "On", AV MODE will be reset to "DYNAMIC (Fixed)" if there is no operation for 30 minutes. When "Off" is selected, AV MODE will be set to "DYNAMIC (Fixed)".
- Feature Demo:** When "On" is selected, after all the settings are completed, the Feature Demo screen is displayed if there is no operation for several minutes.
- ENERGY STAR qualification is based on AV MODE "STANDARD".

**Air/Cable:** Make sure what kind of connection is made with your TV when selecting "Air" or "Cable".

**CH Search:** Channel auto search makes the TV look for all channels viewable in the set area.

#### NOTE

- See "Initial Setup" on page 15 for setting each item.
- If no channel is found, confirm the type of connection made with your TV and try EZ Setup again.
- If you select "Analog Search Start" and initiate the channel search, the CH Memory for Cable Digital will be deleted.

### CH Setup

If initial setup does not memorize all the channels in your region, follow the instructions below to manually memorize the channels.

**Air/Cable:** Make sure what kind of connection is made with your TV when selecting "Air" or "Cable".

**CH Search:** Channel auto search makes the TV look for all channels viewable in the set area.

**CH Memory:** You can select the channels to skip in each ANALOG (Air), ANALOG (Cable), DIGITAL (Air) and DIGITAL (Cable).

**On:** Skips channels. (Channel selection disabled using **CH ▲▼**.)

**Off:** Does not skip channels. (Channel selection enabled using **CH ▲▼**.)

**Remove Scrambled CH:** This function makes the TV look for and then delete digital cable channels that are scrambled and so unavailable in the set area. The process may take more than 20 minutes.

**Yes:** Starts to remove scrambled channels.

**No:** This function does not work.

#### NOTE

- See "Initial Setup" on page 15 for setting each item.
- If no channel is found, confirm the type of connection made with your TV and try channel search again.
- If you select "Analog Search Start" and initiate the channel search, the CH Memory for Cable Digital will be deleted.

### Antenna Setup-DIGITAL

In order to receive digital air broadcasts, you need a digital broadcast antenna. You can confirm the antenna configuration through the "Antenna Setup-DIGITAL" screen. If necessary, adjust the direction of the antenna to obtain the maximum signal strength.

**Signal Strength:** The signal strength of DIGITAL channel is displayed. The signal information is based on the current channel.

**Channel Strength:** Input the 2-digit channel number to check the signal strength of the selected channel. Make sure the signal is strong enough for each channel.

- This function is available for DIGITAL (Air) only.

### Input Skip

This setting allows you to skip the HDMI or PC-IN Input ("Input 4 (PC)", "Input 5 (HDMI)", "Input 6 (HDMI)", "Input 7 (HDMI)" and "Input 8 (HDMI)") on the Input Selection operation.

**Yes:** Skips the input.

**No:** Does not skip input.

### Input Label

Lets you set the input terminal displayed when using the INPUT SOURCE menu or channel display. Press **▲/▼/◀▶** to select the new name for the input mode.

#### NOTE

- You cannot change labels if the INPUT SOURCE is TV or Blu-ray.

## On-Screen Display Menu

### Auto Sync. (for Analog PC Input Mode Only)

For automatically adjusting the PC image.

**Yes:** Auto Sync. starts and "Now adjusting the image." displays.

**No:** This function does not work.

#### NOTE

- When Auto Sync. is successful, "Completed" displays. If not, Auto Sync. failed.
- Auto Sync. may fail even if "Completed" displays.
- Auto Sync. may fail if the computer image has low resolution, has unclear (black) edges, or is moved while executing Auto Sync.
- Be sure to connect the PC to the TV and switch it on before starting Auto Sync.

### Fine Sync.

Ordinarily you can easily adjust the picture as necessary to change image position using Auto Sync. In some cases, however, manual adjustment is needed to optimize the image.

**H-Pos.:** Centers the image by moving it to the left or right.

**V-Pos.:** Centers the image by moving it up or down.

**Clock:** Adjust when the image flickers with vertical stripes.

**Phase:** Adjust when characters have low contrast or when the image flickers.

#### NOTE

- For resetting all Fine Sync. adjustment items to the factory preset values, press ▲/▼ to select "Reset", and then press **ENTER**.
- It is not necessary to adjust the "Clock" or "Phase" when a digital signal is being input, so it cannot be selected.
- The default cursor position may not be in the center, because the screen position variable ranges may be asymmetrical.
- The screen position variable ranges depend on the View Mode or the signal type. The ranges can be seen on the position-setting screen.

### Position

For adjusting a picture's horizontal and vertical position.

**H-Pos.:** Centers the image by moving it to the left or right.

**V-Pos.:** Centers the image by moving it up or down.

#### NOTE

- For resetting adjustments to the factory preset values, press ▲/▼ to select "Reset", and then press **ENTER**.
- When connecting a PC to the HDMI terminal, the image position will be automatically adjusted. It cannot be manually adjusted.
- The screen position variable ranges depend on the View Mode or the signal type. The ranges can be seen on the position-setting screen.
- Adjustments are stored separately according to input source.

### Language

You can also select a language from the Setup menu. Select from among 3 languages: English, French and Spanish.

### Reset

If complex adjustments are made and the settings cannot be restored to normal, you can reset the settings to the factory preset values.

- 1 "Return to the factory preset values" displays on the screen.
  - If you have already set the Secret No., input the 4-digit secret number here.
- 2 Select "Yes".
  - "Now, TV will restart automatically. OK?" displays on the screen.
- 3 Select "Yes".
  - "Now initializing..." displays on the screen and blinks. After the reset has been completed, the power shuts off and then comes back on. The screen will have returned to its original settings.

#### NOTE

- The Channel Setup settings will not be changed.
- The Language settings will not be changed.
- The Secret number settings will not be changed.
- The TV Location settings will not be changed.

## On-Screen Display Menu

### Parental CTRL (Parental Control Setting)

#### Secret No.

Allows you to use a secret number to protect certain settings from being accidentally changed.

#### IMPORTANT:

Three conditions must be met to enable the V-Chip (see pages 37 to 39):

1. Secret No. is registered.
2. V-Chip/V-Chip (DTV Only) settings have been made.
  - The "V-Chip (DTV Only)" will only be selectable when a new rating system can be downloaded via digital broadcasting in the U.S.
3. "Status" is set to "On".

#### ■ New Secret No.

You can set and change the secret number by using 0-9.

**Input Secret No.:** When you change the secret number, enter the old 4-digit secret number here. The cursor moves to "New Secret No.".

**New Secret No.:** When you set the new secret number, enter the new 4-digit secret number here. The cursor moves to "Reconfirm".

**Reconfirm:** Enter the same 4-digit number you set in "New Secret No.".

#### ■ Secret No. Clear

You can clear your secret number.

**Yes:** Your secret number is cleared.

**No:** Your secret number is not cleared.

#### NOTE

- As a precautionary measure, make a note of your secret number and keep it in a familiar place.
- If the secret number is cleared, the Status setting automatically sets to "Off". "V-Chip" and "Status" will not be selectable from the menu.

### Status

Used to enable or disable the parental control function. This function will not be selectable from the menu if you do not first configure your secret number.

**On:** Enables Parental CTRL.

**Off:** Disables Parental CTRL.

### V-Chip

V-CHIP is an electronic filtering device built into your TV. This tool gives parents a great degree of control over broadcasts accessed by their children. It allows parents to select programs judged suitable for child viewing while blocking ones judged not suitable. It does so automatically once you activate the V-CHIP feature in your TV. "V-Chip" and "Status" will not be selectable from the menu if you do not first configure your secret number.

- The U.S. has two rating systems for viewing content: TV Parental Guidelines and movie ratings.
- The TV Parental Guidelines work in conjunction with the V-CHIP to help parents screen out inappropriate television shows from their children.
- Movie ratings are used for original movies rated by the Motion Picture Association of America (MPAA) as watched on cable TV and not edited for television. The V-CHIP can also be set to block MPAA-rated movies.


#### NOTE

- The setting automatically enters "Block" for any ratings below your selection.
- If Status is not set to "On", the configuration settings will not work.

## On-Screen Display Menu

### ■ MPAA (Voluntary movie rating system)

#### Example

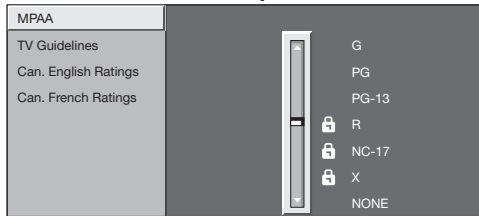

Press ▲/▼ to adjust the item to your desired position.  
"🔒" indicates the item is blocked. Press **MENU** to exit.

#### NOTE

- Voluntary movie rating system only uses an age-based rating.

**G:** General audiences. All ages admitted.

**PG:** Parental guidance suggested. Some material may not be suitable for children.

**PG-13:** Parents strongly cautioned. Some material may be inappropriate for children under 13.


**R:** Restricted. Under 17 requires accompanying parent or adult guardian (age varies in some jurisdictions).

**NC-17:** No one 17 and under admitted.

**X:** X is an older rating that is unified with NC-17 but may be encoded in the data of older movies.

### ■ TV Parental Guidelines

#### Example

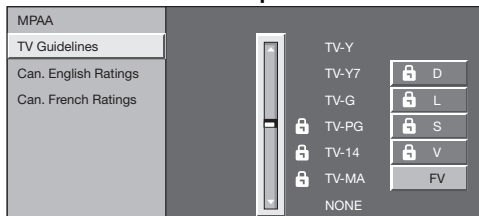

Press ▲/▼ to adjust the item to your desired position.  
"🔒" indicates the item is blocked. Press **MENU** to exit.

#### Example



#### When setting an individual content-based rating item:

- 1 Press ► or **ENTER** to access blocked content items from the currently selected age-based rating item.
- 2 Press ▲/▼ to select an individual item, and then press **ENTER** to unblock it ("🔒" is removed). Repeat the same steps for the other items.
- 3 Press ◀ or **RETURN** to register after all individual content rating items are set.

Rating		Content				
		FV (Fantasy violence)	V (Violence)	S (Sexual situation)	L (Adult language)	D (Sexually suggestive dialog)
Suggested age	TV-Y (All children)	☒	☒	☒	☒	☒
	TV-Y7 (Directed to older children)	×	☒	☒	☒	☒
	TV-G (General audience)		☒	☒	☒	☒
	TV-PG (Parental Guidance suggested)		×	×	×	×
	TV-14 (Parents strongly cautioned)		×	×	×	×
	TV-MA (Mature audience only)		×	×	×	

☒ : The content rating can be set, but this rating is not normally broadcast by TV stations.

× : Content rating can be set.




## On-Screen Display Menu

Canadian Rating Systems (Canadian English ratings and Canadian French ratings)

- The TV rating systems in Canada are based on the Canadian Radio-Television and Telecommunications Commission (CRTC) policy on violence in television programming.
- While violence is the most important content element to be rated, the structure developed takes into consideration other program content like language, nudity, sexuality and mature themes.
- When setting the V-CHIP on the Canadian system you can choose either the Canadian English ratings or the Canadian French ratings.

### ■ Canadian English Ratings

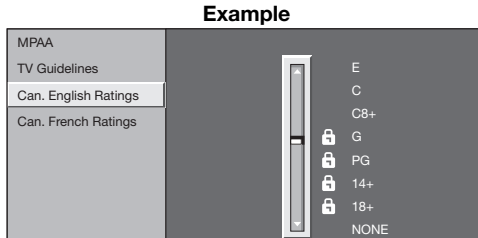

Press ▲/▼ to adjust the item to your desired position. "🔒" indicates the item is blocked.  
Press **MENU** to exit.

**E:** Exempt: Includes news, sports, documentaries and other information programming; talk shows, music videos, and variety programming.

**C:** Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of security and well-being.

**C8+:** Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen.


**G:** General: Considered acceptable for all age groups. Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.

**PG:** Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.

**14+:** Over 14 years: Could contain themes where violence is one of the dominant elements of the storyline, but it must be integral to the development of plot or character. Language usage could be profane and nudity present within the context of the theme.

**18+:** Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of sex and nudity.

### ■ Canadian French Ratings

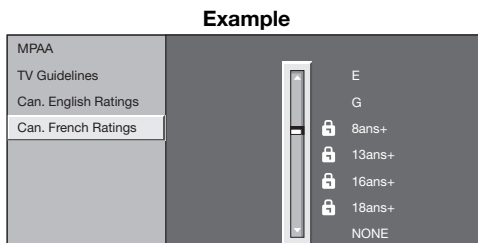

Press ▲/▼ to adjust the item to your desired position. "🔒" indicates the item is blocked.  
Press **MENU** to exit.

**E:** Exempt programming.

**G:** General: All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner.

**8ans+:** General but inadvisable for young children: May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations.  
Recommended for viewing with parent.

**13ans+:** Over 13 years: Could contain scenes of frequent violent scenes and therefore recommended for viewing with parent.

**16ans+:** Over 16 years: Could contain frequent violent scenes and intense violence.

**18ans+:** Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.

### ■ How to temporarily release the V-CHIP BLOCK

When the V-CHIP BLOCK is working and censors a broadcast, "V-CHIP HAS BEEN ACTIVATED." displays.

- 1 Press **ENTER** while the V-CHIP is working, and then the secret number setting menu displays.
- 2 Input the 4-digit secret number by using **0-9**. At this time V-CHIP BLOCK temporarily releases.

### ■ Reactivating the temporarily released V-CHIP BLOCK

You can reactivate the temporarily released V-CHIP BLOCK as shown below.



- Select "Status" setting from the Parental CTRL menu to reactivate BLOCK. (See page 37.)
- Select "V-Chip" setting ("MPAA", "TV Guidelines", "Can. English Ratings" or "Can. French Ratings") from the Parental CTRL to reactivate BLOCK. (See pages 37 to 39.)
- Switch off the TV power.

#### NOTE

- Performing any of the three above will activate the V-CHIP BLOCK.

## Option Menu

### Example

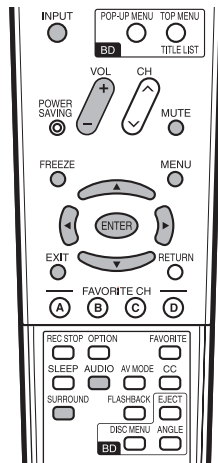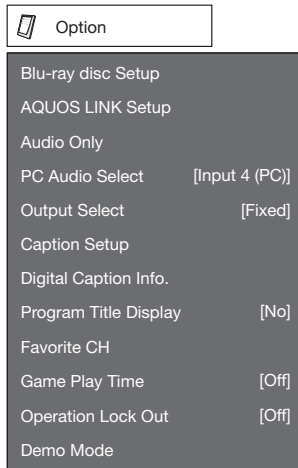

- 1 Press **MENU** to display the MENU screen, and then press **◀/▶** to select "Option".
- 2 Press **▲/▼** to select a specific adjustment item and then press **ENTER**.
- 3 Press **▲/▼** (or **◀/▶**) to select the desired setting, and then press **ENTER**.
- 4 Press **MENU** to exit.  
Skip this step for "Audio Only".

### Audio Only

When listening to music from a music program, you can turn the screen off and enjoy audio only.

**On:** Audio is output without screen image.

**Off:** Both screen images and audio are output.

#### NOTE

- The screen image will return to normal when a button (except those for audio adjustment, such as **VOL**, **MUTE**, **SURROUND**, **AUDIO**) is pressed.

### Color System

Select the video signal system compatible with your equipment from the list below:

**Auto/NTSC/PAL-M/PAL-N**

#### NOTE

- "Color System" can only be set for the INPUT 1 VIDEO, INPUT 2 S-VIDEO and INPUT 3 VIDEO.
- If you have already set the Secret No., input the 4-digit secret number here. See page 37 for setting a secret number.

### Input Select

If the image does not come in clearly from the external equipment connected to INPUT 1 or INPUT 2, you may need to change the input signal type setting on the "Input Select" menu.

#### ■ INPUT 1

Select the input signal type from the list below:

**Auto/COMPONENT/VIDEO**

#### ■ INPUT 2

Select the input signal type from the list below:

**Auto/COMPONENT/S-TERMINAL**

#### NOTE

- If the selected signal type is incorrect, images are not displayed at all or are displayed without any color.
- Refer to your external equipment operation manual for the signal type.
- If you set INPUT 1 or 2 to Auto, the TV will automatically select the input signal.
- Setting INPUT 1 or 2 signal selection to "Auto" when other equipment is connected will result in the following connection priority.

#### INPUT 1:

- ① COMPONENT VIDEO
- ② VIDEO

#### INPUT 2:

- ① COMPONENT VIDEO
- ② S-VIDEO

### HDMI Setup

To watch an HDMI or PC-IN equipment image, select "INPUT5", "INPUT6", "INPUT7" or "INPUT8" from "INPUT SOURCE" menu using **INPUT** on the remote control unit or on the TV.

#### Auto View:

**Enable:** To use View Mode based on signal recognition, including an HDMI signal.

**Disable:** No function.

#### NOTE

- Refer to your external equipment operation manual for the signal type.
- When connecting an HDMI-DVI conversion adapter/cable to the HDMI terminal, the image may not come in clearly.

### PC Audio Select

Determines whether the AUDIO terminal is used for INPUT 4 (PC-IN) or INPUT 6 (HDMI).

**Input 4 (PC):** Select this item when the audio signal is input via the INPUT 4 (PC-IN) terminal using an analog RGB cable.

**Input 6 (HDMI):** Select this item when the audio signal is input via the INPUT 6 (HDMI) terminal using an HDMI-DVI conversion cable.

#### NOTE

- When "PC Audio Select" is set to "Input 6 (HDMI)", sound will not be produced if you use only an HDMI-certified cable to connect HDMI-compatible equipment. To produce sound, you should make an analog audio connection.
- If you want to connect HDMI-compatible equipment using only an HDMI-certified cable, set "PC Audio Select" to "Input 4 (PC)".

## On-Screen Display Menu

### Output Select

Allows you to select what controls the audio output.

**Fixed:** Sound via speaker is adjusted with **VOL +/–** on the remote control unit or **VOL +/–** on the TV. Sound via the AUDIO OUTPUT terminal is not adjustable and outputs at a consistent level.

**Variable:** Sound via the AUDIO OUTPUT terminal is adjusted with **VOL +/–** on the remote control unit or **VOL +/–** on the TV. Sound via speaker is muted.

### Caption Setup

This function allows you to adjust the closed caption screen appearance to suit your preference. You can adjust 7 items: "Caption Size", "Font Style", "Foreground Color", "Foreground Opacity", "Background Color", "Background Opacity" and "Character Edge".

**Example:**

**Selectable items available for "Font Style".**

**Default:** The font specified by broadcasting station or default font.

**Type 0:** Proportional font used in the MENU screen.

**Type 1:** Monospaced with serifs.

**Type 2:** Proportionally spaced with serifs.

**Type 3:** Monospaced without serifs.

**Type 4:** Proportionally spaced without serifs.

**Type 5:** Casual font type.

**Type 6:** Cursive font type.

**Type 7:** Small capitals.

#### NOTE

- For resetting adjustments to the factory preset values, press **▲/▼** to select "Reset", and then press **ENTER**.
- The default value depends on the broadcasting station.

### Digital Caption Info. (Digital Caption Information)

This function allows viewing of digital closed caption information for the digital broadcast program being viewed.

#### NOTE

- This list is not displayed for analog broadcasts or external input audio/video.
- This information is not included in CC1, CC2, Text1, or Text2, and is not displayed in a list.

### Program Title Display

Select the CH display when changing channels for digital broadcasting.

**Yes:** "Program Info." displays.

**No:** "Program Info." does not display.

### Game Play Time

This function displays the elapsed game time so you do not lose track of the time. To display the elapsed time, select "GAME" for the AV MODE before starting the game.

**On:** The elapsed time is displayed every 30 minutes when you switch to GAME mode in external input mode.

**Off:** No adjustment.

### Operation Lock Out

This function locks the operation buttons on the TV and the remote control.

**Off:** No adjustment.

**RC Control Lock:** All buttons on the remote control are locked.

**Button Control Lock:** All buttons on the TV, except **POWER**, are locked.

#### NOTE

- To unlock the buttons on the remote control, press **MENU** on the TV, and then select "Off" on the MENU screen.
- To unlock the buttons on the TV, press **MENU** on the remote control, and then select "Off" on the MENU screen.

### Favorite CH (Favorite Channel Setting)

This function allows you to program 4 favorite channels, in 4 different categories. By setting the favorite channels in advance, you can select your favorite channels easily.

**To register your favorite channel:**

Select "Register" and then press **ENTER**. Press **▲/▼/◀/▶** to select the position in the category, and then press **ENTER** to register.

**To delete your favorite channel:**

Select "1 Data Clear" and then press **ENTER**. Press **▲/▼/◀/▶** to select the channel you want to delete, and then press **ENTER**. Select "Yes" and then press **ENTER**. To delete all the favorite channels, select "All Data Clear".

#### NOTE

- Before setting the channel, select the channel you want to register as a favorite channel.
- You can display the "Favorite CH" screen by pressing **FAVORITE** on the remote control.

### Demo Mode

You can select the image from several types of demo mode.

**Blu-ray Demo/120Hz Demo/10 bit Demo/  
Feature Demo/Auto Play**

If you select "Auto Play", you need to set playback type.

**Continuous:** Play Demos continuously.

**10 min.:** Play Demos every 10 minutes.

**20 min.:** Play Demos every 20 minutes.

#### NOTE

- This function will be canceled when you press **EXIT** on the remote control unit.
- When "Demo Mode" is set to "Feature Demo", pressing **FREEZE** pauses/restarts demo.
- "Demo Mode" may not be selected depending on input signal type.
- "Demo Mode" may be automatically canceled depending on input signal type.

## On-Screen Display Menu

### Blu-ray disc Setup

#### Audio Video Settings

##### ■ Play Format

Set the playback setting for content recorded in 24Hz.

**Auto:** The content is played back in 24Hz.

**Off:** The content is played back in 60Hz.

##### ■ Secondary Audio

This toggles the clicking sound on the menu and audio with secondary video in picture in picture mode for BD-VIDEO.

**On:** BD-VIDEO that includes secondary audio compatible with Picture in Picture can be played back with secondary audio.

**Off:** Secondary audio does not output.

#### NOTE

- "On" is the factory preset value.
- Select "Off" when enjoying the high quality sounds of BD-VIDEO.
- You cannot change the Secondary Audio setting during playback.

##### ■ Digital Audio Out

You can set Digital Audio Out when connecting to SURROUND equipment.

**Bitstream:** Select this when connecting to SURROUND equipment with a built-in decoder for DOLBY DIGITAL, etc.

Setting to Bitstream will output each audio signal by Bitstream.

**PCM:** Select this when connecting to 2-channel stereo audio equipment.

Setting to PCM will output by converting each audio signal into PCM 2-channel audio signal.

#### NOTE

- See page 43 for information on output of next generation audio formats.

##### ■ Dynamic Range Control

This lets you adjust the range between the loudest and softest sounds (dynamic range) for playback at average volume. Use this when it is hard to hear dialog.

**Normal:** The same audio output range is played as the original recorded audio output range.

**Shift\*:** When Dolby Digital audio is played back, the dynamic range of the audio is adjusted so that the dialog portion can be heard easily. (If the audio sounds abnormal, set to "Normal".)

\* Lower the audio volume before setting. If you do not do so, the speakers may emit a loud sound or excessive output may be applied to the speakers.

### Playback Setting

##### ■ Parental Control

This lets you set the Parental Control depending on the disc content. The available Parental Control Levels are shown below.

The 4-digit password number needs to be entered before the Parental Control Levels and the Country Code are set. The Parental Control Levels and the Country Code cannot be set if a password has not been created or the password is not entered.

##### For DVD-VIDEO:

**8 and Off:** All DVD-VIDEO can be played.

**1-7:** Prohibits play of DVD-VIDEO with corresponding ratings recorded on them.

##### For BD-ROM:

**No Limit:** All BD-VIDEO can be played.

**0-99 year(s):** Prohibits play of BD-VIDEO with corresponding ratings recorded on them.

##### Country Code:

Set the Country Code. Refer to the Country Code List (see page 43) because the ratings differ according to the country.

##### ■ Disc Language (Disc Priority Language)

This lets you select the language for subtitles, audio and menus displayed on the screen.

**Subtitle:** Refer to the Language List. (See page 43.)

**Audio:** Refer to the Language List. (See page 43.)

**Menu:** Refer to the Language List and the Language Code List. (See page 43.)

##### ■ Angle Mark Display

This lets you turn the Angle Mark Display on or off when DVD-VIDEO recorded with multiple angles is played back.

**Yes:** The Angle Mark is displayed in the lower right screen.

**No:** The Angle Mark is not displayed.

##### ■ Password Setting

This sets the password for setting or changing the Parental Control Level.

**Yes:** Enter the 4-digit number.

**No:** Select this when not setting the password.

## On-Screen Display Menu

### Country Code List

USA / CANADA / JAPAN / GERMANY / FRANCE / UK / ITALY / SPAIN / SWISS / SWEDEN / HOLLAND / NORWAY / DENMARK / FINLAND / BELGIUM / HONG KONG / SINGAPORE / THAILAND / MALAYSIA / INDONESIA / TAIWAN / PHILIPPINE / AUSTRALIA / RUSSIA / CHINA

### Language List

English / Français / Deutsch / Italiano / Español / Japanese / Svenska / Nederlands

### Language Code List

**AA** Afar / **AB** Abkhazian / **AF** Afrikaans / **AM** Ameharic / **AR** Arabic / **AS** Assamese / **AY** Aymara / **AZ** Azerbaijani / **BA** Bashkir / **BE** Byelorussian / **BG** Bulgarian / **BH** Bihari / **BI** Bislama / **BN** Bengali, Bangla / **BO** Tibetan / **BR** Breton / **CA** Catalan / **CO** Corsican / **CS** Czech / **CY** Welsh / **DA** Danish / **DE** German / **DZ** Bhutani / **EL** Greek / **EN** English / **EO** Esperanto / **ES** Spanish / **ET** Estonian / **EU** Basque / **FA** Persian / **FI** Finnish / **FJ** Fiji / **FO** Faroese / **FR** French / **FY** Frisian / **GA** Irish / **GD** Scots Gaelic / **GL** Galician / **GN** Guarani / **GU** Gujarati / **HA** Hausa / **HI** Hindi / **HR** Croatian / **HU** Hungarian / **HY** Armenian / **IA** Interlingua / **IE** Interlingue / **IK** Inupiak / **IN** Indonesian / **IS** Icelandic / **IT** Italian / **IW** Hebrew / **JA** Japanese / **JI** Yiddish / **JW** Javanese / **KA** Georgian / **KK** Kazakh / **KL** Greenlandic / **KM** Cambodian / **KN** Kannada / **KO** Korean / **KS** Kashmiri / **KU** Kurdish / **KY** Kirghiz / **LA** Latin / **LN** Lingala / **LO** Laothian / **LT** Lithuanian / **LV** Latvian, Lettish / **MG** Malagasy / **MI** Maori / **MK** Macedonian / **ML** Malayalam / **MN** Mongolian / **MO** Moldavian / **MR** Marathi / **MS** Malay / **MT** Maltese / **MY** Burmese / **NA** Nauru / **NE** Nepali / **NL** Dutch / **NO** Norwegian / **OC** Occitan / **OM** Afan (Oromo) / **OR** Oriya / **PA** Panjabi / **PL** Polish / **PS** Pashto, Pushto / **PT** Portuguese / **QU** Quechua / **RM** Rhaeto-Romance / **RN** Kirundi / **RO** Romanian / **RU** Russian / **RW** Kinyarwanda / **SA** Sanskrit / **SD** Sindhi / **SG** Sangho / **SH** Serbo-Croatian / **SI** Singhalese / **SK** Slovak / **SL** Slovenian / **SM** Samoan / **SN** Shona / **SO** Somali / **SQ** Albanian / **SR** Serbian / **SS** Siswat / **ST** Sesotho / **SU** Sundanese / **SV** Swedish / **SW** Swahili / **TA** Tamil / **TE** Telugu / **TG** Tajik / **TH** Thai / **TI** Tigrinya / **TK** Turkmen / **TL** Tagalog / **TN** Setswana / **TO** Tonga / **TR** Turkish / **TS** Tsonga / **TT** Tatar / **TW** Twi / **UK** Ukrainian / **UR** Urdu / **UZ** Uzbek / **VI** Vietnamese / **VO** Volapuk / **WO** Wolof / **XH** Xhosa / **YO** Yoruba / **ZH** Chinese / **ZU** Zulu

## About Output of Next Generation Audio Formats

Next generation audio formats	Maximum number of channels	DIGITAL OUT	
		PCM	Bitstream
Dolby TrueHD	7.1ch (48KHz/96KHz)	2ch *2	5.1ch *1/*3
	5.1ch (192KHz)	2ch *2	5.1ch *1/*3
Dolby Digital PLUS	7.1ch (48KHz)	2ch *2	5.1ch *1/*3
DTS-HD Master Audio	7.1ch (48KHz/96KHz)	2ch *2	5.1ch *1/*3
	5.1ch (192KHz)	2ch *2	5.1ch *1/*3
DTS-HD High Resolution Audio	7.1ch (48KHz/96KHz)	2ch *2	5.1ch *1/*3
LPCM	7.1ch (48KHz/96KHz)	2ch *2	—
	5.1ch (192KHz)	2ch *2	—

\*1 Core only

\*2 Down mixed

\*3 When Secondary Audio is set to "On", the audio is output as 48KHz.


## On-Screen Display Menu

### Version

When you select "Version", the system software version is displayed.

### USB Memory Management


The following instructions explain how to delete data such as the Virtual Package data copied to a USB memory device.

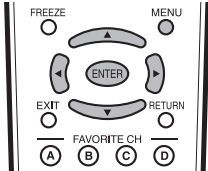

#### CAUTION

- Do not remove the USB memory device or unplug the AC cord while the erase is being performed.
- Do not use a USB extension cable when connecting a USB memory device to the BD STORAGE/SERVICE terminal on the Disc Drive of this TV.
- Using a USB extension cable may prevent the Disc Drive from performing correctly.

- 1 Insert the USB memory device into the BD STORAGE/SERVICE terminal on the Disc Drive of this TV.

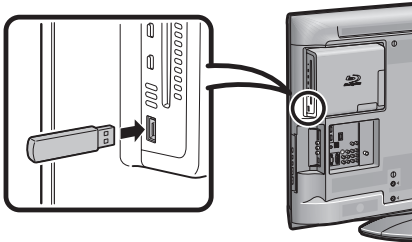


- 2 Press **MENU** to display the MENU screen, and then press **◀/▶** to select "Option".
- 3 Press **▲/▼** to select "Blu-ray disc Setup", and then press **ENTER**.
- 4 Press **▲/▼** to select "USB Memory Management", and then press **ENTER**.



- "No USB memory" appears when no USB memory is inserted.

- 5 Press **▲/▼** to select "Erase" or "Format", and then press **ENTER**.


**Erase:** Deletes only BD-VIDEO data contents.  
**Format:** Deletes all contents.

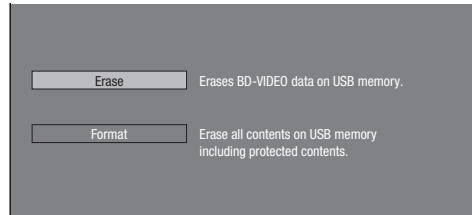

#### NOTE


- Data which has been saved to the Disc Drive's internal memory (game score, etc.) will also be deleted.

- 6 Press **◀/▶** to select "Yes", and then press **ENTER**.

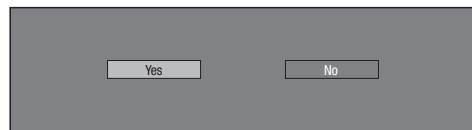

- 7 Start the process.


- The screen for the current operation will display.

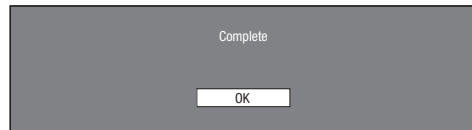

- 8 Press **ENTER**.

### Software Update

This function allows software updates by inserting a USB memory device with the update file into the BD STORAGE/SERVICE terminal on the Disc Drive of this TV. To check for the availability of a software update, visit [www.sharpusa.com](http://www.sharpusa.com). If you have any questions, please call 1-800-BE-SHARP (800-237-4277).

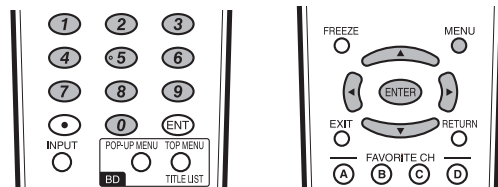

#### CAUTION

- Do not remove the USB memory device or unplug the AC cord while the software is being updated.
- Do not use a USB extension cable when connecting a USB memory device to the BD STORAGE/SERVICE terminal on the Disc Drive of this TV.
- Using a USB extension cable may prevent the Disc Drive from performing correctly.


- 1 Insert the USB memory device with the update file into the BD STORAGE/SERVICE terminal on the Disc Drive of this TV.
- 2 Press **MENU** to display the MENU screen, and then press **◀/▶** to select "Option".
- 3 Press **▲/▼** to select "Blu-ray disc Setup", and then press **ENTER**.

## On-Screen Display Menu

- 4 Press ▲/▼ to select “Software Update”, and then press **ENTER**.
- If you have not yet set the password, go to step 6.




- 5 Enter the 4-digit number by using **0-9**.

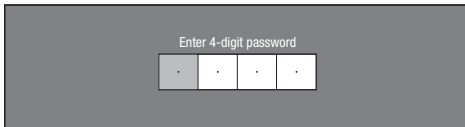


- 6 Press **ENTER** to start checking data in the USB memory device.



- 7 During the data checking, “Checking” blinks.

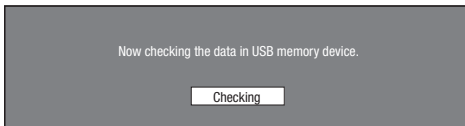



- The current version of the Disc Drive software and the version of the update file on the USB memory device are displayed. To update the Disc Drive software with update file, select “Yes”, and press **ENTER**.

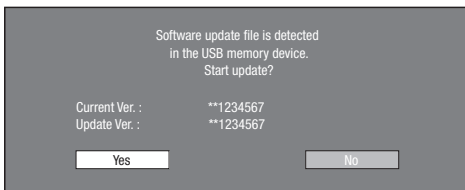

- If the USB memory device is not properly installed or the correct update file cannot be found on the USB memory device, an error message is displayed. Check the file on the USB memory device, and then reinsert the USB memory device correctly.



- 8 Press **ENTER** to start updating.
- The screen becomes dark for a while until the update screen can be displayed. Please wait for the update screen to appear. Do not unplug the AC cord.

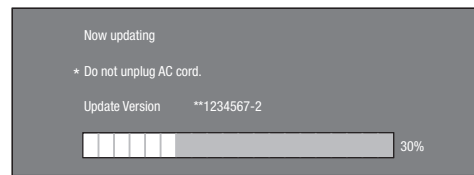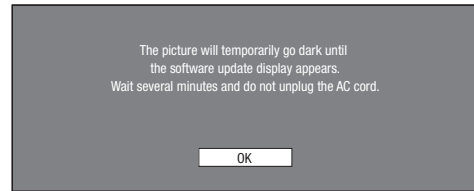

- 9 When the software is successfully updated, a screen is displayed indicating that the update process is completed.
- If the update has failed, check the file in the USB device and try Software Update again.

- 10 Press **TV POWER** to turn off the TV.


- 11 Remove the USB memory device.

## On-Screen Display Menu

### Digital Setup Menu

This setting allows you to optimize the settings of Digital broadcasting.

#### Example

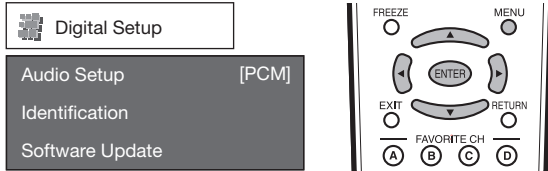

- 1 Press **MENU** to display the MENU screen, and then press **◀▶** to select "Digital Setup".
- 2 Press **▲▼** to select a specific adjustment item, and then press **ENTER**.
- 3 Press **▲▼** (or **◀▶**) to select the desired setting, and then press **ENTER**.
- 4 Press **MENU** to exit.

### Audio Setup

You can output digital audio to an AV amplifier or similar device whose DIGITAL AUDIO INPUT terminal is connected to the DIGITAL AUDIO OUTPUT terminal on the TV. Please select an audio output format compatible with the audio format of the program you are watching and the equipment connected.

**PCM:** The optical output terminal outputs audio signal in PCM form. If your digital audio system does not support Dolby Digital, select "PCM".

**Dolby Digital:** The optical output terminal outputs audio signal in Dolby Digital form. It reproduces sound from surround program of digital.


### Identification

The current version of the TV software is displayed.

### Software Update

This function allows software updates by inserting a USB memory device with the update file into the SERVICE terminal on the TV.


To check for the availability of a software update, visit [www.sharpsusa.com](http://www.sharpsusa.com). If you have any questions, please call 1-800-BE-SHARP (800-237-4277).

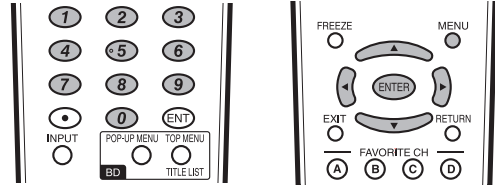


#### CAUTION

- Do not remove the USB memory device or unplug the AC cord while the software is being updated.
- Be sure to properly follow the whole procedure described below, step by step. Otherwise, for example, the TV cannot read the data in the USB memory device and software updating will fail.


- 1 Insert the USB memory device with the update file into the SERVICE terminal on the TV.

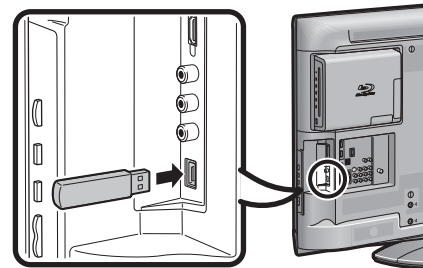

- 2 Press **MENU** to display the MENU screen, and then press **◀▶** to select "Digital Setup".
- 3 Press **▲▼** to select "Software Update", and then press **ENTER**.
  - If you have already set the Secret No., go to step 4.

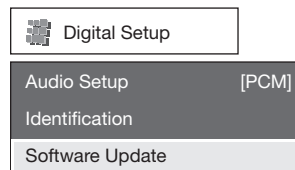

 
- 4 Input the 4-digit secret number by using **0-9**.






## On-Screen Display Menu

- 5 Press **ENTER** to start checking the data in the USB memory device.

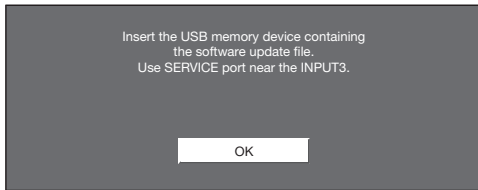


- 6 During the data checking, "Checking" blinks.


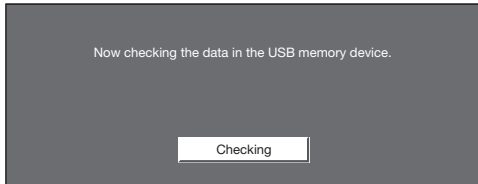


- The current version of the TV software and the version of the update file on the USB memory device are displayed. To update the TV software with the update file, select "Yes", and then press **ENTER**.

### Example

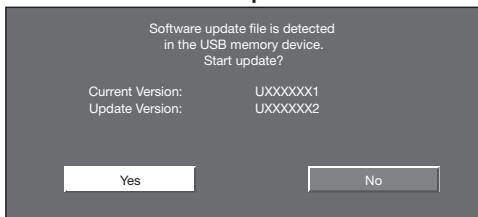


- If the USB memory device is not properly installed or the correct update file cannot be found on the USB memory device, an error message is displayed. Check the file on the USB memory device, and then reinsert the USB memory device correctly.

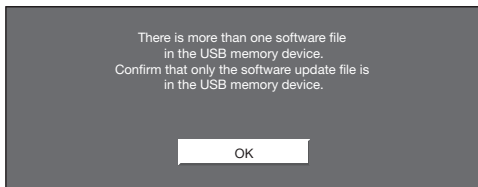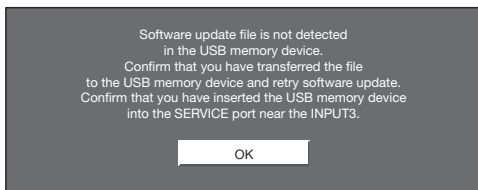


- 7 Press **ENTER** to start updating.

- The screen becomes dark for a while until the update screen can be displayed. Please wait for the update screen to appear. Do not unplug the AC cord.

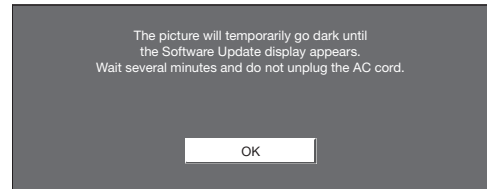

### Example

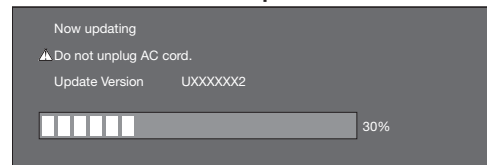


### CAUTION

- Do not remove the USB memory device or unplug the AC cord while the software is being updated.**


- 8 When the software is successfully updated, a screen is displayed indicating that the update process is completed.

After this screen is displayed, the TV automatically turns off and then turns on again.

### Example

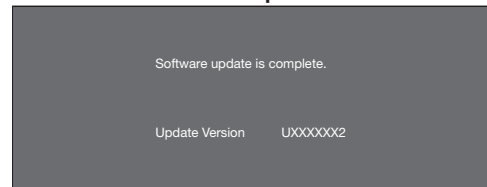

 - If the update has failed, check the file in the USB memory device and try Software Update again.



- 9 After the screen shown below is displayed, press **ENTER**.




- 10 Remove the USB memory device.

# Other Viewing Options

## Presetting Remote Control Function

You can operate the connected AV products (AV receiver, cable box, SAT tuner, DTV, VCR, DVD, LD) using the presetting manufacturer function of your remote control unit.

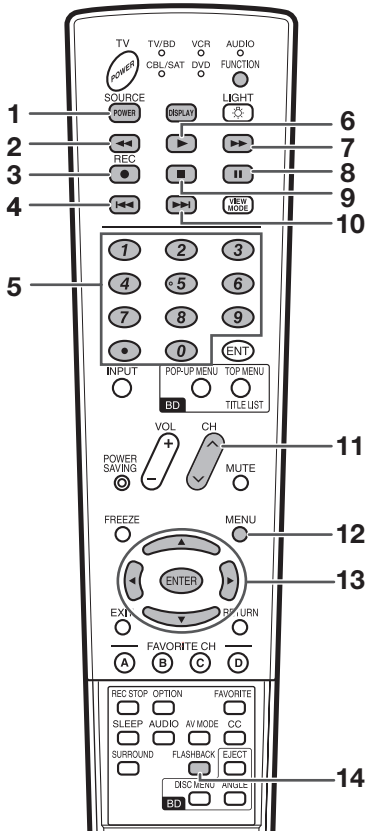

### Presetting manufacturer codes

- 1 Press **FUNCTION** until the LED for your device lights up.
- 2 After the LED for your device lights up, press **FUNCTION** and **DISPLAY** at the same time to enter the code registration mode. The LED will blink.
- 3 Press **0-9** to enter the manufacturer code. (See page 49.)
  - Preset mode is finished once the LED no longer lights up.
- 4 After registering the code, the LED will stop blinking then turn off after one second. (If you perform an incorrect operation, the LED will blink quickly then turn off.)

## Operating the Connected Equipment

To operate the connected equipment, press **FUNCTION** to select the LED for your device. (VCR, AUDIO, CBL/SAT (cable converter) or DVD.) The LED lights up, and the remote control unit button will function as follows.

- When you operate VCR or DVD, press **INPUT** to select the terminal connected to your device.
- CABLE and SAT cannot be selected at the same time.

### 1 SOURCE POWER

- Turns the connected equipment power on and off.

### 2 REWIND

- Rewinds the tape and allows picture search. (VCR)
- Hold down to go in reverse. (DVD)

### 3 REC

- Starts recording. (VCR)

### 4 REWIND

- Pressing quickly once takes you to the start of the chapter currently playing. Each time you press it, you move back to the start of the previous chapter. (DVD)

### 5 0-9 (CBL/SAT), • (DOT) (SAT)

- Press a button (or buttons) that corresponds to the channel that you wish to watch.

### 6 PLAY

- Starts playback. (VCR, DVD)

### 7 FAST FORWARD

- Rapidly advances the tape and allows picture search. (VCR)
- Hold down to fast forward. (DVD)

### 8 PAUSE

- Sets pauses and still pictures. (VCR, DVD)

### 9 STOP

- Stops the tape transport. (VCR)
- Playback stops when pressed. With some DVD players, pressing the button twice may open the disc tray. (DVD)

### 10 NEXT CHAPTER

- Pressing quickly once takes you to the start of the next chapter. Each time you press it, you move ahead to the start of the next chapter. (DVD)

### 11 CH UP/DOWN

- Press **CH▲** or **CH▼** to tune in to a higher or lower channel. (CBL)
- Press to select the channel of the TV tuner on the VCR. (VCR)

### 12 MENU

- When this button is pressed, the DVD menu will display.

### 13 ▲/▼/◀/▶, ENTER

- **▲/▼/◀/▶**: Press the button to select items on the SAT GUIDE screen or SAT MENU screen. (SAT). Press the button to select items on the DVD MENU screen. (DVD)
- **ENTER**: Press to activate the selected function. (SAT, DVD)

### 14 FLASHBACK

- Press to switch between the current channel and the channel you were watching immediately before. Some manufacturers do not preset FLASHBACK. (CBL)

## Other Viewing Options

### Manufacturer codes

VCR BRAND	REMOTE CONTROL CODE NUMBER
Akai	25, 26, 37
Audio	15, 22, 30
Broksonic	32
Canon	04
Capehart	34
Craig	10, 31
Curtis Mathis	04
Daewoo	34
DBX	15, 22, 30
Dynatech	29
Emerson	21, 32, 35
Fisher	09, 10, 11
Funai	28, 29
G.E.	04
Goldstar	24
Hitachi	06, 47
Instant Replay	04
JC Penney	04, 06, 24, 30
JVC	15, 41, 42, 53
Kenwood	14, 15
Lloyds	29
Magnavox	04, 05, 08
Magnin	31
Marantz	30
Memorex	04, 10, 24, 29
Minolta	06
Mitsubishi	17, 18, 39, 40, 48
Montgomery Ward	02, 43
Multitech	29
NEC	15, 22, 30
Panasonic	04, 44, 45, 49, 50
Pentax	05, 06
Philco	04, 06
Philips	04, 05, 08
Pioneer	46
QUASAR	04
RCA	06, 07, 33, 51
Realistic	01, 02, 10, 24
Samsung	23, 31
Sanyo	10, 14, 52
Scott	20
Sears	06, 11, 24
Sharp	01, 02, 03
Shintom	36
Sony	12, 13, 38
Sound Design	29
Sylvania	05, 08
Symphonic	29
Tatung	15
Teac	15, 29
Teknika	27, 29
Thomas	29
TMK	21
Toshiba	19, 20
Video Concepts	30
Yamaha	15, 29, 30
Zenith	16

DVD/BD/LD BRAND	REMOTE CONTROL CODE NUMBER
Denon	02
JVC	09
Kenwood	21
Magnavox	04
Marantz	04
Mitsubishi	06
Panasonic	02, 22
Philips	04, 23
Pioneer	08, 11, 20
Proscan	03
RCA	03, 24
Samsung	07, 12
Sharp	01, 10
Sony	05, 25
Toshiba	04
Yamaha	02
Zenith	04

CATV/SAT BRAND	REMOTE CONTROL CODE NUMBER
Anvision	04, 05
Cable Star	04, 05
Eagle	05
General Instrument	02, 03, 07, 12, 13, 14, 19, 22
Jerrold	02, 03, 07, 12, 13, 14, 22, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40
Magnavox	04, 05, 09, 14, 17, 18, 20, 21, 24, 25
Motorola	47
NEC	42
Oak Sigma	8
Panasonic	16, 23
Philips	04, 05, 09, 15, 17, 18, 20, 21, 24, 25
Pioneer	08, 10, 29, 30, 43*, 46
Randtek	04, 05
RCA	16, 27, 44*, 45*
Scientific Atlanta	01, 26
Sony	28
Viewstar	04, 05, 09, 15, 17, 18, 20, 21, 24, 25
Zenith	06, 41

#### NOTE

- Numbers marked with \* are SAT codes, all others are CATV codes.


AUDIO BRAND	REMOTE CONTROL CODE NUMBER
Sharp	01

# Using AQUOS LINK

## Controlling HDMI Equipment Using AQUOS LINK


### What's AQUOS LINK?

- Using the HDMI CEC (Consumer Electronics Control) protocol, with AQUOS LINK you can interactively operate compatible system equipment (Blu-ray disc equipment, AV amplifier, DVD).
- By connecting AQUOS LINK-compatible devices with HDMI-certified cables to the TV, you can control a recorder or AV amplifier using the remote control of the TV.
- AQUOS LINK allows you to operate the HDMI-connected equipment with one remote control.

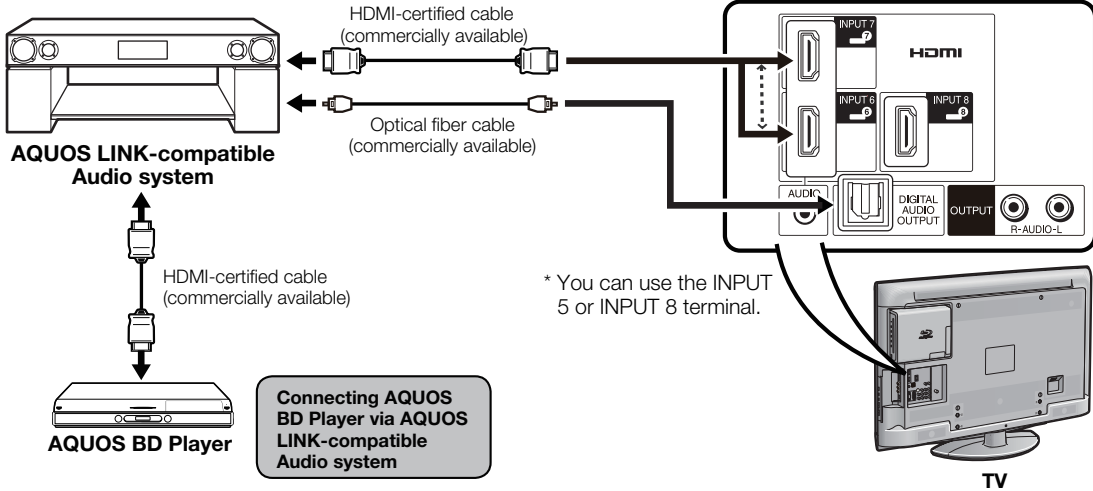

### NOTE

- Point the remote control toward the TV, not to connected HDMI equipment.
- Video noise may occur depending on the type of HDMI cable used. Make sure to use an HDMI-certified cable.
- Up to 3 pieces of HDMI recording equipment and one AV amplifier can be connected using this system.
- These operations affect the HDMI equipment selected as the current input source. If the equipment does not operate, turn on the equipment and select the appropriate input source using **INPUT**.

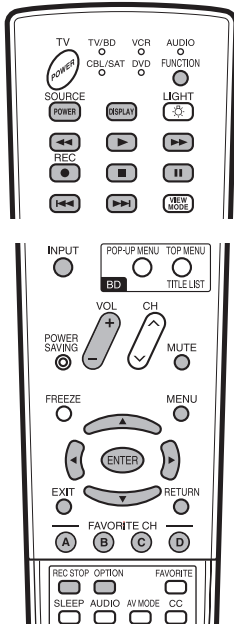

You can operate AQUOS LINK-compatible devices with the remote control unit when the **FUNCTION** of the remote control unit is set to TV/BD.

**REC STOP** and **OPTION** buttons will function only when AQUOS LINK is used.

### ■ One Touch Play

While the TV is in standby mode, it automatically turns on and plays back the image from the HDMI source.

### ■ One Touch Recording

Press **REC** while you are viewing a broadcast received with the AQUOS LINK-compatible recorder. The AQUOS LINK automatically recognizes the connected HDMI device and starts recording.

### ■ Single remote control

The AQUOS LINK automatically recognizes the connected HDMI device and you can control the TV and the devices as if using a universal remote control.

### ■ Control the AQUOS LINK-compatible audio system


Set the volume of AQUOS LINK-compatible audio system.

### NOTE

- The above description is an example of the AQUOS LINK function.
- The steps in "AQUOS LINK Setup" on page 51 need to be completed beforehand.
- Refer to this operation manual and the operation manual of the AQUOS LINK device to be used with this TV.
- You can use **▶** to control playback on connected HDMI equipment. When the connected HDMI equipment is not playing back video, this button controls playback on the Disc Drive on the TV.

## Using AQUOS LINK

### AQUOS LINK Setup

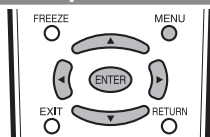


- 1 Press **MENU** to display the MENU screen, and then press **◀▶** to select "Option".
- 2 Press **▲/▼** to select "AQUOS LINK Setup", and then press **ENTER**.
- 3 Press **▲/▼** to select a specific item, and then press **ENTER**.
- 4 Press **▲/▼** (or **◀▶**) to select the desired setting, and then press **ENTER**.
- 5 Press **MENU** to exit.

### AQUOS LINK Control

Select AQUOS LINK Control to disable AQUOS LINK function even when an AQUOS LINK-compatible HDMI device is connected to the TV. This function prevents the device from starting to operate unexpectedly.

**Enable:** You can operate AQUOS LINK-compatible equipment.

**Disable:** AQUOS LINK function does not work.

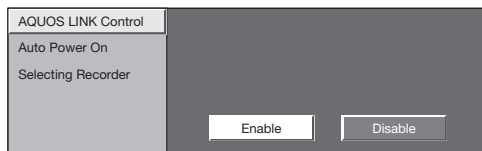


### Auto Power On

If this is activated, the One Touch Play function is enabled.

**Yes:** While the TV is in standby mode, it automatically turns on and plays back the image from the HDMI source.

**No:** This function does not work.

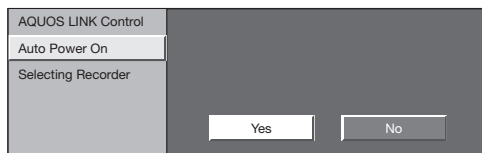


### Selecting Recorder

When multiple AQUOS LINK-compatible devices are connected, this function allows you to set the recorder for recording when you press **REC** on the TV's remote control unit.


Press **▲/▼** to select the recorder for recording.

#### Example

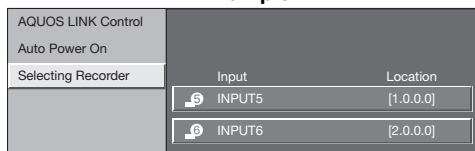

#### NOTE


**Example : when connecting AQUOS LINK-compatible recorder via AQUOS LINK-compatible Audio system**

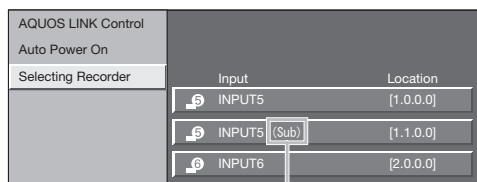

When an AQUOS LINK-compatible audio system or other equipment is connected between the TV and recorder, "Sub" is displayed.

### One Touch Recording

This function allows easy one-touch recording of the program being viewed on the TV to AQUOS LINK-compatible equipment with a recording function by simply pressing **REC** on the remote control.

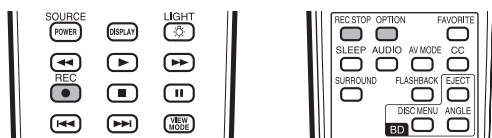

**Prepare the connected AQUOS LINK-compatible recorder for recording. Check the following items.**

- Make sure that the antenna cable is connected.
- Check that there is sufficient available space on the recording media (HDD, DVD, etc.).
- On the TV, use "AQUOS LINK Setup" and "Selecting Recorder" to select the equipment for recording.
- By default, the recorder connected to INPUT 5 is selected for recording.

**1** Press **REC** to start recording.


- When you are viewing a broadcast received with the AQUOS LINK-compatible recorder selected in "Selecting Recorder", recording to the AQUOS recorder of the broadcast being viewed starts.
- When you are viewing a broadcast received with equipment other than the AQUOS LINK-compatible recorder selected in "Selecting Recorder" or other external input equipment, pressing **REC** on the remote control does not start recording.

**2** Press **REC STOP** to stop recording.

## Using AQUOS LINK

### One Touch Playback

AQUOS LINK allows you to operate the HDMI-connected equipment with one remote control.

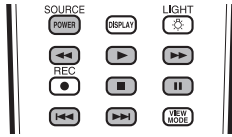

Press ► to start playing back a title.



- The last played program is played back. You can use the following buttons during broadcast viewing.

Buttons	Description
<b>SOURCE POWER</b>	Turns the power of the HDMI connected devices on and off.
◀◀	Hold down to go in reverse.
▶	Starts playback.
▶▶	Hold down to fast forward.
■	Playback stops.
	Sets pauses and still pictures.
◀◀	Pressing quickly once takes you to the start of the chapter currently playing. Each time you press it, you move back to the start of the previous chapter.
▶▶	Pressing quickly once takes you to the start of the next chapter. Each time you press it, you move ahead to the start of the next chapter.

#### NOTE

- You can use ► to control playback on connected HDMI equipment. When the connected HDMI equipment is not playing back video, this button controls playback on the Disc Drive on the TV.
- You can use ◀◀/▶▶ only when the model BD-HP21U is connected.
- The buttons ◀◀/▶▶ do not function with the following BD players currently available.
  - BD-HP20U, BD-HP50U

### AQUOS LINK Menu

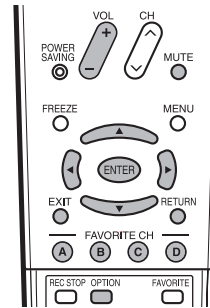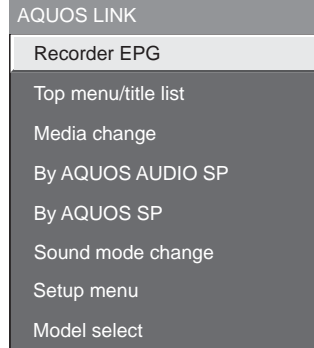

### Timer Recording

You can call up the CEC-compatible recorder's EPG and preset timer recordings using the TV's remote control.

- 1 Press **OPTION** to display the AQUOS LINK MENU screen.
- 2 Press ▲/▼ to select "Recorder EPG", and then press **ENTER**.
  - The recorder's EPG is displayed.
- 3 Select the program to record.
  - You can use ▲/▼/◀/▶, **ENTER**, **RETURN**, **EXIT** and the coloured buttons.

#### NOTE

- This function works only when a CEC-compatible recorder is connected.
- Refer to the operation manual of the recorder for details.

## Using AQUOS LINK

### Playback of Titles Using AQUOS LINK

This section explains how to play back a title in the AQUOS LINK-compatible equipment.

- 1 Power on the AQUOS LINK-compatible equipment, and select appropriate external input.
- 2 Press **OPTION** to display the AQUOS LINK MENU screen.
- 3 Press **▲/▼** to select "Top menu/title list", and then press **ENTER**.
  - The title list data from the connected AQUOS LINK-compatible equipment displays.
- 4 Select the title with **▲/▼/◀/▶**, and then press **▶** to start playback.

#### NOTE

- This function works only when AQUOS LINK-compatible equipment is connected.

### Selecting Media Type for CEC-Compatible Recorder

You can switch the media (HDD or DVD) for playback or recording on the AQUOS LINK-compatible recorder.

- 1 Press **OPTION** to display the AQUOS LINK MENU screen.
- 2 Press **▲/▼** to select "Media change", and then press **ENTER**.
- 3 Select the desired media such as DVD or HDD.
  - The Media type toggles each time you press **ENTER** in "Media change".
  - Select the media to be operated by the player.

### Listening with the AQUOS AUDIO Speaker System

You can select to listen to the TV sound only from the AQUOS LINK-compatible audio system and manually change its sound mode.

- 1 Press **OPTION** to display the AQUOS LINK MENU screen.
- 2 Press **▲/▼** to select "By AQUOS AUDIO SP", and then press **ENTER**.
  - The sound from the TV speaker is muted and only the sound from the AQUOS LINK-compatible audio system is audible.
  - You can use **VOL +/–** and **MUTE**.

Select "By AQUOS SP", and then press **ENTER** to listen to the TV sound.

### Manually Changing AQUOS AUDIO Speaker System's Sound Mode

- 1 Press **OPTION** to display the AQUOS LINK MENU screen.
- 2 Press **▲/▼** to select "Sound mode change", and then press **ENTER**.
  - The sound mode changes each time you press **ENTER**.
  - Refer to the operation manual of the AQUOS LINK-compatible audio system for details.

### Displaying the Setup Menu of AQUOS LINK-Compatible Equipment

You can call up a setup menu from the connected AQUOS LINK-compatible equipment.

- 1 Press **OPTION** to display the AQUOS LINK MENU screen.
- 2 Press **▲/▼** to select "Setup menu", and then press **ENTER**.
  - The setup menu of the AQUOS LINK-compatible equipment is displayed.

#### NOTE

- Depending on the status of the equipment (recording or in standby mode, etc), the setup menu will not be displayed.
- This function works only when the model BD-HP21U or BD-HP50U is connected.
- The setup menu will not be displayed with the player BD-HP20U currently available.

### HDMI Device Selection

If multiple HDMI devices are connected in a daisy chain, you can specify which device to control here.

- 1 Press **OPTION** to display the AQUOS LINK MENU screen.
- 2 Press **▲/▼** to select "Model select", and then press **ENTER**. The HDMI device toggles each time you press **ENTER**.

# Appendix

## Removing the Stand


- Before detaching (or attaching) the stand, unplug the AC cord from the AC INPUT terminal.

### CAUTION

- **Do not remove the stand from the TV unless using an optional wall mount bracket to mount it.**

### Before attaching/detaching the stand

- Before performing work, make sure to turn off the TV.
- Before performing work spread cushioning over the base area to lay the TV on. This will prevent it from being damaged.

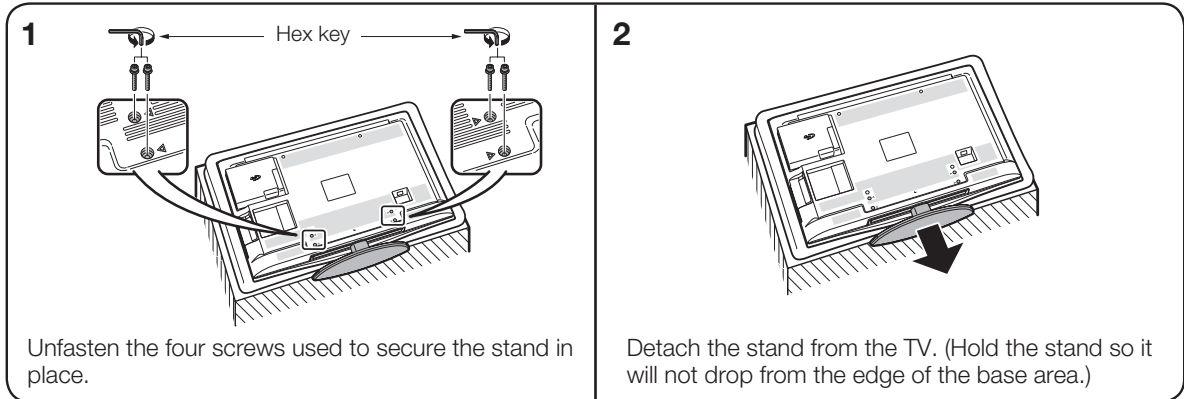

### NOTE

- To attach the stand, perform the above steps in reverse order.

## Setting the TV on the Wall

### CAUTION


- **This TV should be mounted on the wall only with the wall mount bracket AN-52AG4 (SHARP). The use of other wall mount brackets may result in an unstable installation and may cause serious injuries.**
- **Installing the TV requires special skill that should only be performed by qualified service personnel. Customers should not attempt to do the work themselves. SHARP bears no responsibility for improper mounting or mounting that results in accident or injury.**

### Using an optional bracket to mount the TV


- You can ask a qualified service professional about using an optional AN-52AG4 bracket to mount the TV on the wall.
- Carefully read the instructions that come with the bracket before beginning work.

### Hanging on the wall

AN-52AG4 wall mount bracket.  
(See the bracket instructions for details.)

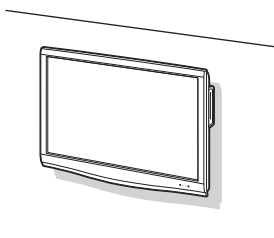

### About setting the TV angle

 

#### LC-42BD80U

- The “c” position is at the center of the display.

#### LC-46BD80U

- The “b” position is at the center of the display.

#### LC-52BD80U

- The “f” position is at the center of the display.
- Refer to the operation manual of AN-52AG4 for details.

### CAUTION

- Install the TV vertically on the wall. If the TV is installed at an angle, the Disc Drive may not operate normally.

### NOTE

- Detach the cable clamp on the rear of the TV when using the optional mount bracket.
- To use this TV mounted on a wall, remove the covers at the 4 locations on the rear of the TV, and then use the screws supplied with the wall mount bracket to secure the bracket to the rear of the TV.



## Troubleshooting

Problem	Possible Solution
<ul style="list-style-type: none"> <li>No power</li> </ul>	<ul style="list-style-type: none"> <li>Check if you pressed <b>TV POWER</b> on the remote control unit. (See page 15.) If the indicator on the TV does not light up, press <b>POWER</b> on the TV.</li> <li>Is the AC cord disconnected? (See page 7.)</li> <li>Has the power been turned on? (See page 15.)</li> </ul>
<ul style="list-style-type: none"> <li>Unit cannot be operated.</li> </ul>	<ul style="list-style-type: none"> <li>External influences such as lightning, static electricity, may cause improper operation. In this case, operate the unit after first turning off the power of the TV or unplugging the AC cord and replugging it in after 1 or 2 minutes.</li> </ul>
<ul style="list-style-type: none"> <li>Remote control unit does not operate.</li> </ul>	<ul style="list-style-type: none"> <li>Is the <b>FUNCTION</b> set correctly? Set it to the TV setting position.</li> <li>Are batteries inserted with polarity (+, -) aligned? (See page 8.)</li> <li>Are batteries worn out? (Replace with new batteries.)</li> <li>Are you using it under strong or fluorescent lighting?</li> <li>Is a fluorescent light illuminated near the remote control sensor?</li> </ul>
<ul style="list-style-type: none"> <li>Picture is cut off/with sidebar screen.</li> </ul>	<ul style="list-style-type: none"> <li>Is the image position correct? (See page 36.)</li> <li>Are screen mode adjustments such as picture size made correctly? (See page 19.)</li> </ul>
<ul style="list-style-type: none"> <li>Strange color, light color, or color misalignment</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the picture tone. (See pages 32 and 33.)</li> <li>Is the room too bright? The picture may look dark in a room that is too bright.</li> </ul>
<ul style="list-style-type: none"> <li>Power is suddenly turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Is the sleep timer set? (See page 16.)</li> <li>Check the power control settings. (See page 34.)</li> <li>The unit's internal temperature has increased. Remove any objects blocking vent or clean.</li> </ul>
<ul style="list-style-type: none"> <li>No picture</li> </ul>	<ul style="list-style-type: none"> <li>Is connection to other components correct? (See pages 13 and 14.)</li> <li>Is correct input signal source selected after connection? (See page 40.)</li> <li>Is the correct input selected? (See page 40.)</li> <li>Is picture adjustment correct? (See pages 32 and 33.)</li> <li>Is "On" selected in "Audio Only"? (See page 40.)</li> <li>Is a non-compatible signal being input? (See page 60.)</li> </ul>
<ul style="list-style-type: none"> <li>No sound</li> </ul>	<ul style="list-style-type: none"> <li>Is the volume too low? (See page 16.)</li> <li>Is "Variable" selected in "Output Select"? (See page 41.)</li> <li>Have you pressed <b>MUTE</b> on the remote control unit? (See page 16.)</li> </ul>
<ul style="list-style-type: none"> <li>The TV sometimes makes a cracking sound.</li> </ul>	<ul style="list-style-type: none"> <li>This is not a malfunction. This happens when the cabinet slightly expands and contracts according to change in temperature. This does not affect the TV's performance.</li> </ul>

## Troubleshooting-Digital Broadcasting

The error message about reception of broadcast

The example of an error message displayed on a screen	Error code	Possible Solution
<ul style="list-style-type: none"> <li>Failed to receive broadcast.</li> </ul>	<b>E202</b>	<ul style="list-style-type: none"> <li>Check the antenna cable. Check that the antenna is correctly setup.</li> </ul>
<ul style="list-style-type: none"> <li>No broadcast now.</li> </ul>	<b>E203</b>	<ul style="list-style-type: none"> <li>Check the broadcast time in the program guide.</li> </ul>

## Troubleshooting-Disc Playback

Problem	Possible Solution
<ul style="list-style-type: none"> <li>No picture.</li> </ul>	<ul style="list-style-type: none"> <li>Take out the disc and clean it.</li> </ul>
<ul style="list-style-type: none"> <li>Video stops.</li> </ul>	<ul style="list-style-type: none"> <li>Has the TV been subjected to shock or impact? Are you using it in an unstable location? The TV will stop if it senses shock or vibration.</li> </ul>
<ul style="list-style-type: none"> <li>No sound or distorted sound from speakers.</li> </ul>	<ul style="list-style-type: none"> <li>There is no sound during still mode, slow motion playback, fast forward and fast reverse.</li> <li>Take out the disc and clean it.</li> <li>Audio may not be output depending on the audio recording status, such as when audio other than an audio signal or non-standard audio is recorded for the audio content of the disc.</li> </ul>
<ul style="list-style-type: none"> <li>Cannot play a disc.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that region code on the disc matches that of this TV.</li> <li>The TV can only play BD-VIDEO discs with Region Code "A" or no Region Code.</li> <li>BD-RE Version 1.0 discs cannot be played.</li> <li>To enable playback of a recorded DVD, finalize the disc in the recorder that was used to create it.</li> <li>Take out the disc and clean it.</li> <li>Make sure that the disc is loaded properly. The disc should be loaded with the playback side facing the back of the TV.</li> <li>If there is condensation in the TV, take suitable countermeasures.</li> <li>Proper playback may be impossible due to the state of the disc recording, a scratched, warped or dirty disc, the state of the pick-up, or compatibility issues between this TV and the disc being used.</li> <li>BD discs with video material recorded on other recorders using long-play mode may not play in this TV.</li> <li>When the recorded time of a disc is unusually short, playback may not be possible.</li> <li>The TV cannot play back video which was not recorded normally.</li> </ul>
<ul style="list-style-type: none"> <li>During playback of a commercial BD-VIDEO or DVD-VIDEO disc, the soundtrack switches between dubbed and original language.</li> </ul>	<ul style="list-style-type: none"> <li>Some commercially available BD-VIDEO and DVD-VIDEO discs contain the soundtrack as used during TV broadcast of the material. During parts where there is no dubbed sound, the TV will switch to the original soundtrack, which may result in a change in language.</li> </ul>
<ul style="list-style-type: none"> <li>Cannot play commercially available BD-VIDEO or DVD-VIDEO disc.</li> </ul>	<ul style="list-style-type: none"> <li>If the BD-VIDEO or DVD-VIDEO disc contains viewing restrictions according to age level (Parental Control), playback may be inhibited. For BD-VIDEO, stop playback and disable Parental Control for the respective age level. For DVD-VIDEO, enter the 4-digit password number and select a suitable Parental Control level from the menu.</li> <li>Check the region code indicated on the disc package. BD-VIDEO and DVD-VIDEO discs have a Region Code which specifies in which geographical region the disc can be played. In North America, the following discs can be played. BD-VIDEO: Discs with Region Code "A" or no Region Code. DVD-VIDEO: Discs with Region Code "ALL" or "1".</li> <li>PAL or SECAM format BD-VIDEO discs cannot be played in this TV.</li> </ul>
<ul style="list-style-type: none"> <li>Playback stops partway when playing DVD discs recorded or edited in another recorder.</li> </ul>	<ul style="list-style-type: none"> <li>With discs edited in another recorder, playlist content exceeding 12 hours cannot be played.</li> <li>Some DVD-R DL (dual-layer) discs cannot be played.</li> </ul>
<ul style="list-style-type: none"> <li>Resuming playback from a previous point does not work.</li> </ul>	<ul style="list-style-type: none"> <li>The resume function will no longer work if the disc was removed.</li> <li>Also in some other cases, the resume function may not work, depending on the disc and the playback circumstances.</li> </ul>
<ul style="list-style-type: none"> <li>Cannot switch the soundtrack of bilingual program material.</li> </ul>	<ul style="list-style-type: none"> <li>If the TV is connected to audio equipment via a digital link, switch the soundtrack at the amplifier. If the amplifier has no suitable function for this, use an analog connection and switch the soundtrack at this TV.</li> </ul>
<ul style="list-style-type: none"> <li>Cannot display the Title List screen.</li> </ul>	<ul style="list-style-type: none"> <li>Take out the disc, and then load the disc again.</li> <li>Turn power off the main power, and then turn power on again.</li> </ul>
<ul style="list-style-type: none"> <li>"*" is shown in a title indication on the Title List screen.</li> </ul>	<ul style="list-style-type: none"> <li>Characters in title names of material created on other equipment that cannot be displayed by this TV are shown as asterisks, such as "****...".</li> </ul>

## Appendix

Problem	Possible Solution
<ul style="list-style-type: none"> <li>Still image playback or frame advance playback does not work properly.</li> </ul>	<ul style="list-style-type: none"> <li>Frame advance playback on discs other than DVD-RW/R (VR format) may not work properly.</li> <li>Some commercially available BD-VIDEO and DVD-VIDEO discs are not compatible with still image playback or frame advance playback.</li> <li>On BD-VIDEO discs, frame reverse playback does not work.</li> </ul>
<ul style="list-style-type: none"> <li>Fast forward/reverse (search) does not work properly.</li> </ul>	<ul style="list-style-type: none"> <li>Depending on the disc and the scene being played, the speed of fast forward may not be as described in this manual.</li> <li>Search across different titles is not possible. Except for audio CDs, the TV will switch to playback mode for BD and DVD discs.</li> </ul>
<ul style="list-style-type: none"> <li>Slow playback does not work properly.</li> </ul>	<ul style="list-style-type: none"> <li>At the end of a title, slow playback will be canceled.</li> <li>Slow playback across different titles is not possible.</li> <li>With BD-VIDEO discs, reverse slow playback is not possible.</li> </ul>
<ul style="list-style-type: none"> <li>Cannot play DVD discs recorded on other equipment.</li> </ul>	<ul style="list-style-type: none"> <li>Discs that were not finalized on the other equipment may not play in this TV. Finalize the disc in the recorder that was used to create it.</li> <li>Discs in formats not supported by this TV, such as discs recorded with a high-definition digital video camera cannot be played in this TV.</li> <li>Discs created on a computer may not play in this TV.</li> </ul>
<ul style="list-style-type: none"> <li>The disc is automatically ejected.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that region code on the disc matches that of this TV.</li> <li>Make sure that the disc is playable.</li> <li>Make sure that the disc is loaded properly. The disc should be loaded with the playback side facing the back of the TV.</li> <li>Take out the disc and clean it.</li> </ul>
<ul style="list-style-type: none"> <li>Disc cannot be ejected.</li> </ul>	<ul style="list-style-type: none"> <li>Turn power off the main power, and then turn power on again. After the power indicator has come on, press <b>EJECT</b> on the TV or <b>EJECT</b> on the remote control unit.</li> <li>If the above steps do not resolve the problem, please contact your dealer or an authorized service center.</li> </ul>
<ul style="list-style-type: none"> <li>The TV makes a snapping sound when starting playback or loading a disc.</li> </ul>	<ul style="list-style-type: none"> <li>The TV may sometimes make a snapping sound when starting playback if it has not been operated in a while. These sounds are not malfunctions of the TV but are normal operating conditions.</li> </ul>
<ul style="list-style-type: none"> <li>Pressing <b>MENU</b> does not bring up a menu.</li> </ul>	<ul style="list-style-type: none"> <li>If a message appears, follow the instructions in the message.</li> </ul>
<ul style="list-style-type: none"> <li>A MiniDisc (MD) recorder is connected to the TV via a digital link. When recording songs from a CD onto MD, the track numbers are incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>If the pauses between tracks on the CD are short, the track numbers on the MD may be different.</li> <li>In cases such as when tracks were specified using an on-screen menu, the track numbers on the MD may be different.</li> </ul>

### Cautions regarding use in high and low temperature environments

- When the unit is used in a low temperature space (e.g. room, office), the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
- Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the Liquid Crystal panel to malfunction.  
Storage temperature: -4°F to +140°F (-20°C to +60°C)

## RS-232C Port Specifications

### PC control of the TV

- Attach an RS-232C cable cross-type (commercially available) to the supplied Din/D-Sub RS-232C for the connections.

#### NOTE

- This operation system should be used by a person who is accustomed to using computers.

### Communication conditions

Set the RS-232C communication settings on the PC to match the TV's communication conditions. The TV's communication settings are as follows:

<b>Baud rate:</b>	9,600 bps
<b>Data length:</b>	8 bits
<b>Parity bit:</b>	None
<b>Stop bit:</b>	1 bit
<b>Flow control:</b>	None

### Communication procedure

Send the control commands from the PC via the RS-232C connector.

The TV operates according to the received command and sends a response message to the PC. Do not send multiple commands at the same time. Wait until the PC receives the OK response before sending the next command.

### Command table

- Commands not indicated here are not guaranteed to operate.

 
CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
POWER ON COMMAND SETTING	R : S : P : W	0	The Power On command rejected.
		1	The Power On command accepted.
POWER SETTING	P : O : W : R	0	Power Off It shifts to standby.
		1	Power On Power On
INPUT SELECTION A	I : T : G : D	x	(Toggle)
		x	It input-switches by the toggle. (It is the same as an input change key)
		x	It input-switches to TV. (A channel remains as it is. (Last memory))
INPUT SELECTION B	I : N : P : 1	*	Input terminal number (1-8)
		*	0: Auto, 1: VIDEO, 2: COMPONENT
		*	0: Auto, 2: COMPONENT, 3: S-TERMINAL
AV MODE SELECTION	A : V : M : D	*	0: (Toggle), 1: STANDARD, 2: MOVIE, 3: GAME, 4: USER, 5: DYNAMIC (Fixed), 6: DYNAMIC, 7: PC
		*	Although it can choose now, it is toggle operation in inside.
VOLUME	V : O : L : M	*	Volume (0-60)
		*	The screen position variable ranges depend on the View Mode or the signal type. The ranges can be seen on the position-setting screen.
		*	
		*	
POSITION	H : P : O : S	*	
		*	
		*	
		*	
VIEW MODE	W : I : D : E	*	0: (Toggle) [AV], 1: Side Bar [AV], 2: S.Stretch [AV] 3: Zoom [AV], 4: Stretch [AV], 5: Normal [PC] 6: Zoom [PC], 7: Stretch [PC], 8: Dot by Dot [PC] [AV], 9: Full Screen [AV]
		*	0: Although it can choose now, it is toggle operation in inside.
		*	1: Only available when 4:3 signal is being input.
		*	5, 6: Only available when 4:3 signal is being input. 8: [PC] Available except when UXGA is being input. [AV] Only available when 1080i/p is being input. 9: Only available when 720p is being input.
MUTE	M : U : T : E	*	0: (Toggle), 1: On, 2: Off
SURROUND	A : C : S : U	*	0: (Toggle), 1: On, 2: Off
AUDIO SELECTION	A : C : H : A	x	(Toggle)
SLEEP TIMER	O : F : T : M	*	0: Off, 1: OFF TIMER - 30 MIN., 2: OFF TIMER - 60 MIN., 3: OFF TIMER - 90 MIN., 4: OFF TIMER - 120 MIN.
CHANNEL	D : C : C : H	*	The channel number of TV (1-135)
		*	An input change is included if it is not TV display. In Air, 2-69ch is effective. In Cable, 1-135ch is effective.
		*	DIGITAL Air (Two-Part numbers, 2-digit plus 2-digit)
		*	DIGITAL Cable (Two-Part numbers, 3-digit plus 3-digit)
		*	Front half of DIGITAL CABLE CHANNEL NO. (Designate major channel)
		*	DIGITAL Cable (Two-Part numbers, 3-digit plus 3-digit)
		*	Rear half of DIGITAL CABLE CHANNEL NO. (Designate minor channel)
CH UP	C : H : U : P	x	The channel number of TV +1
		x	If it is not TV display, it will input-switch to TV. (same function as CH▲)
		x	If it is not TV display, it will input-switch to TV. (same function as CH▼)
CH DOWN	C : H : D : W	x	The channel number of TV -1
		x	Toggle operation of a closed caption.
CC	C : L : C : P	x	(Toggle)

#### NOTE

- If an underbar ( ) appears in the parameter column, enter a space.
- If an asterisk (\*) appears in the range indicated in brackets under CONTROL CONTENTS.
- Any numerical value can replace the "x" on the table.

### Command format

Eight ASCII codes + CR




Command 4-digits      Parameter 4-digits      Return code

Command 4-digits: Command. The text of four characters.  
Parameter 4-digits: Parameter 0-9, x, blank, ?


### Parameter

 Input the parameter values, aligning left, and fill with blank(s) for the remainder. (Be sure that 4 values are input for the parameter.)

When the input parameter is not within an adjustable range, "ERR" returns. (Refer to "Response code format".) Any numerical value can replace the "x" on the table.



 When "?" is input for some commands, the present setting value responds.



### Response code format

Normal response



Return code (ODH)

Problem response (communication error or incorrect command)



Return code (ODH)

## Specifications

Item		Model: LC-42BD80U	Model: LC-46BD80U	Model: LC-52BD80U
LCD panel		42" Class (42 1/64" Diagonal) Advanced Super View & BLACK TFT LCD	46" Class (45 63/64" Diagonal) Advanced Super View & BLACK TFT LCD	52" Class (52 1/32" Diagonal) Advanced Super View & BLACK TFT LCD
Resolution		2,073,600 pixels (1,920 × 1,080)		
TV Function	TV-standard (CCIR)	American TV Standard ATSC/NTSC System		
	Receiving Channel	VHF/UHF	VHF 2-13ch, UHF 14-69ch	
		CATV	1-135ch (non-scrambled channel only)	
		Digital Terrestrial Broadcast (8VSB)	2-69ch	
		Digital cable <sup>1</sup> (64/256 QAM)	1-135ch (non-scrambled channel only)	
Audio multiplex		BTSC System		
Backlight		60,000 hours (at Backlight Standard position)		
Audio out		10W × 2		
Terminals	Rear	INPUT 1	AV in, COMPONENT in	
		INPUT 2	COMPONENT in, S-VIDEO in	
		INPUT 4	ANALOG RGB (PC) in (15-pin mini D-sub female connector), Audio in (Ø 3.5 mm jack)	
		INPUT 6	HDMI in with HDCP, Audio in (Ø 3.5 mm jack)	
		INPUT 7	HDMI in with HDCP	
		INPUT 8	HDMI in with HDCP	
		ANT/CABLE	75 Ω Unbalance, F Type × 1 for Analog (VHF/UHF/CATV) and Digital (AIR/CABLE)	
		AUDIO	Audio in (Ø 3.5 mm jack)	
		DIGITAL AUDIO OUTPUT	Optical Digital audio output × 1 (PCM/Dolby Digital)	
		OUTPUT	Audio out	
	RS-232C	9-pin D-sub male connector		
	Side	INPUT 3	AV in	
		INPUT 5	HDMI in with HDCP	
		SERVICE	Software update	
Disc Drive	ETHERNET	Network connector (See page 11.)		
	BD STORAGE/SERVICE	USB 2.0 correspondence (for Local storage/Software Update)		
OSD language		English/French/Spanish		
Power Requirement		AC 120 V, 60 Hz		
Power Consumption		245 W (0.8 W Standby with AC 120 V)	270 W (0.8 W Standby with AC 120 V)	325 W (0.8 W Standby with AC 120 V)
Weight	TV + stand	49.6 lbs./22.5 kg	52.9 lbs./24.0 kg	65.0 lbs./29.5 kg
	TV only	41.9 lbs./19.0 kg	45.2 lbs./20.5 kg	57.3 lbs./26.0 kg
Dimension <sup>2</sup> (W × H × D) (inches)	TV + stand	40 11/64 × 28 5/32 × 14 17/32	43 53/64 × 30 7/16 × 14 17/32	49 3/8 × 34 1/16 × 14 17/32
	TV only	40 11/64 × 25 61/64 × 5 9/32	43 53/64 × 28 5/32 × 5 31/64	49 3/8 × 32 9/64 × 5 3/32
Operating temperature		+41°F to +95°F (+5°C to +35°C)		

<sup>1</sup> Emergency alert messages via Cable are unreceivable.

<sup>2</sup> The dimensional drawings are shown on the inside back cover.

- As part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

## Optional Accessory

The listed optional accessory is available for the Liquid Crystal Television. Please purchase it at your nearest shop.

- Additional optional accessories may be available in the near future. When purchasing, please read the newest catalogue for compatibility and check the availability.

Part name	Model number
Wall mount bracket	AN-52AG4

## PC Compatibility Chart

It is necessary to set the PC correctly to display XGA and WXGA signal.

PC	Resolution	Horizontal Frequency	Vertical Frequency	VESA Standard	
PC	VGA	720 x 400	31.5 kHz	70 Hz	—
		640 x 480	31.5 kHz	60 Hz	○
			37.9 kHz	72 Hz	○
	37.5 kHz		75 Hz	○	
	SVGA	800 x 600	35.1 kHz	56 Hz	○
			37.9 kHz	60 Hz	○
			48.1 kHz	72 Hz	○
			46.9 kHz	75 Hz	○
	XGA	1024 x 768	48.4 kHz	60 Hz	○
			56.5 kHz	70 Hz	○
			60.0 kHz	75 Hz	○
	WXGA	1360 x 768	47.7 kHz	60 Hz	○
	SXGA	1280 x 1024	64.0 kHz	60 Hz	○
	SXGA+	1400 x 1050	65.3 kHz	60 Hz	○
UXGA	1600 x 1200	75.0 kHz	60 Hz	○	

VGA and XGA are registered trademarks of International Business Machines Corp.

## Information on the Software License for This Product

### ■ Software composition

The software included in this product is comprised of various software components whose individual copyrights are held by SHARP or by third parties.

### ■ Software developed by SHARP and open source software

The copyrights for the software components and various relevant documents included with this product that were developed or written by SHARP are owned by SHARP and are protected by the Copyright Act, international treaties, and other relevant laws. This product also makes use of freely distributed software and software components whose copyrights are held by third parties. These include software components covered by a GNU General Public License (hereafter GPL), a GNU Lesser General Public License (hereafter LGPL) or other license agreement.

### ■ Obtaining source code

Some of the open source software licensors require the distributor to provide the source code with the executable software components. GPL and LGPL include similar requirements. For information on obtaining the source code for the open source software and for obtaining the GPL, LGPL, and other license agreement information, visit the following website:

<http://www.sharppusa.com/gpl>

We are unable to answer any questions about the source code for the open source software. The source code for the software components whose copyrights are held by SHARP is not distributed.

### ■ Acknowledgements

The following open source software components are included in this product:

- linux kernel/busybox/uClibc/zlib/libpng/libjpeg

### CLEARING THE SECRET NUMBER

If you forget the secret number, clear the secret number using the following procedure.

- 1 Select an item from the list below to display the secret number input screen. (For operating the on-screen display menu, see page 31.)
  - “EZ Setup”, “CH Setup”, “Parental CTRL” or “Reset” on the Setup menu.
  - “Color System” on the Option menu.
  - “Software Update” on the Digital Setup menu.
- 2 Press and hold both **CH** and **VOL+** on the TV simultaneously until the message appears on the screen.

The secret number is     .

#### NOTE

- As a precautionary measure, make a note of your secret number above, cut it from this manual, and keep it in a safe place.

# Calling for Service

For location of the nearest Sharp Authorized Service, or to obtain product literature, accessories, supplies, or customer assistance, please call 1-800-BE-SHARP.

## LIMITED WARRANTY

### CONSUMER LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand Liquid Crystal Display product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product or if the serial number or model number affixed to the Product has been removed, defaced, changed, altered or tampered with. This warranty does not cover installation or signal reception problems. This limited warranty will not apply if the Product has been or is being used in a commercial setting or application; this warranty is meant solely for the non-commercial, household use of the Product by consumers in their home or residence. If you intend to or already use this Product for commercial purposes or in a commercial setting, there are warranties available to cover your use of this Product, the terms of which may vary. Please contact **1-888-GO-SHARP** for further information.

In order to enforce your rights under this limited warranty, you should follow the steps set forth below. You must be able to provide proof of purchase to the servicer, which proof must include the date of purchase.

To the extent permitted by applicable state law, the warranties set forth are in lieu of, and exclusive of, all other warranties, express or implied. Specifically ALL OTHER WARRANTIES OTHER THAN THOSE SET FORTH ABOVE ARE EXCLUDED, ALL EXPRESS AND IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR USE, AND FITNESS FOR A PARTICULAR PURPOSE ARE SPECIFICALLY EXCLUDED. IF, UNDER APPLICABLE STATE LAW, IMPLIED WARRANTIES MAY NOT VALIDLY BE DISCLAIMED OR EXCLUDED, THE DURATION OF SUCH IMPLIED WARRANTIES IS LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

The warranties given herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser and only for the time periods set forth herein. No other representations or promises made by anyone are permitted. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. Sharp does not warrant nor shall Sharp be liable, or in any way responsible, for Products which have been subject to abuse (including, but not limited to, improper voltage), accident, misuse, negligence, lack of reasonable care, alteration, modification, tampering, misuse, improper operation or maintenance or any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than a Sharp authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow limits on warranties or on remedies for breach in certain transactions; in such states, the limits herein may not apply.

**THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND PUERTO RICO.**

### Model Specific Section

#### Your Product Model Number & Description:

LC-42BD80U/LC-46BD80U/LC-52BD80U LCD Color Television  
(Be sure to have this information available when you need service for your Product.)

#### Warranty Period for this Product:

One (1) year parts and labor from the date of purchase.

#### Additional Exclusions from Warranty Coverage (if any):

In order for the Product to be serviced, the Product must be readily available to the servicer, free and clear of any complex or non-standard installation, mounting or other encumbrance which would unreasonably interfere with servicing the Product. The Servicer will remount the Product after service, provided that such remounting is not into a complex or non-standard installation. Any additional labor and materials required to remove and/or reinstall a Product above and beyond the foregoing are not covered by this warranty, may result in additional charges and are the responsibility of the consumer. Image Retention resulting from a fixed image being displayed for long periods of time is not covered by this Limited Warranty (see Operation Manual on how to prevent this).

#### Where to Obtain Service:

From a Sharp Authorized Servicer located in the United States. To find the location of the nearest Sharp Authorized Servicer, please call Sharp toll free at 1-800-BE-SHARP.

#### What to do to Obtain Service:

Contact your Sharp Authorized Servicer to obtain in home service for this product. The Servicer will come to your location and if necessary remove the unit for repair at the Servicer's facility and return the set to you once completed. Be sure to have **Proof of Purchase** available.

TO OBTAIN PRODUCT INFORMATION OR PURCHASE ACCESSORIES AND EXTENDED WARRANTIES, CALL **1-800-BE-SHARP** OR VISIT [www.sharppusa.com](http://www.sharppusa.com)