

AKAI

OPERATING INSTRUCTIONS

42" Widescreen Plasma HDTV Monitor

PDP4273M



1. Safety Guidelines

Caution: Always use a power cable is properly grounded. Please use the AC cords listed below for each area:

USA UL
Canada CSA/cUL

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

FCC Warning

To assure continued FCC compliance, the user must the provided grounded power supply cord and the provided shielded video interface cables to connect to this equipment. Also, any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.



BBE is trademark of BBE Sound, Inc.

Manufactured under license from BBE Sound, Inc.

Licensed by BBE Sound, Inc. under USP4638258, 5510752 and 5736897.

BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.


2. Important Safeguards

Safety of operators has been taken into consideration at the design and manufacture phase, but inappropriate operation may cause electric shock or fire. To prevent the product from being damaged, the following rules should be observed for the installation, use and maintenance of the product. Read the following safety instructions before starting the operation.

The User Manual uses the following symbols to ensure a safe operation and prevent any damage to operators or properties:	
	WARNING-----Ignorance or inappropriate use may cause damage to the product.
	ATTENTION---Ignorance or inappropriate use may cause injury to the user.
Examples:	
	Prohibition
	Warning (Attention) symbol (indicating “Electric Shock”).
	WARNING
Do not install the product on sloping or unstable surface: The product may drop or tip over.	
Only the marked power source can be used for the product: Any power source other than the specified one may cause fire or electric shock.	
Keep the product away from moisture: <ul style="list-style-type: none">- Do not expose this appliance to rain or moisture.- If water penetrates into the product, stop the operation; unplug the connector and contact with your dealer. Continuous use in this case may result in fire or electric shock.	
	WARNING
Do not place any objects on the top of the product: Spilled water or metal objects may cause short circuit, fire or electric shock if they penetrate into the housing of the product.	

<p>Never use a damaged power cord: Heavy objects, heat or tensile force may damage the power cord and cause fire or electric shock.</p>	
<p>Do not change or open the back cover: Removing the back cover of the product may cause fire or electric shock. Contact the manufacturer when inspection or adjustment is required.</p>	
<p>Do not use the product if any abnormality occurs: If any smoke or odor becomes apparent, unplug the connector and contact the manufacturer immediately. Do not try to repair the product by yourself.</p>	
 WARNING	
<p>Avoid using dropped or damaged appliances: If the product is dropped and the housing is damaged, the internal components may function abnormally. Unplug the connector immediately and contact the manufacturer for repair. Continuous use of the product may cause fire or electric shock.</p>	
 WARNING	
<p>Do not touch the power cord during lightning: To avoid electric shock, avoid handling the power cord during electrical storms.</p>	
 ATTENTION	
<p>Do not install the product close to smoke or moisture: Fire or electric shock may be caused when the product is installed close to smoke or moisture. Do not installed the product in an area with heavy dust or high humidity: Fire or electric shock may be caused when the product is installed in a place with heavy dust or high humidity.</p>	
<p>Instructions for moving the product: Ensure that the power connector and any other leads are unplugged before moving the product.</p>	
<p>The power cable should be kept away from heat sources: The heat produced by any heat source may melt the covering of the power cable.</p>	

OPERATING INSTRUCTIONS
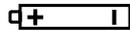
<p>Hold the power connector when removing the power cable: Pulling the power cable itself may damage the wires inside the cable and cause fire or electric shock.</p>	<p>Unplug the connector</p>  
<p>Do not touch the connector with wet hands: To avoid risk of electric shock.</p>	
 ATTENTION	
<p>Insert batteries in accordance with instructions: Insert the batteries with correct polarities (positive ⊕ and negative ⊖). Incorrect polarities may cause breakage and leakage of the batteries, hurt operators and contaminate the remote controller.</p>	 
<p>Do not block or cover the vents: Blocking the vents may cause overheating and fire. Do not install the product in a place with little or no ventilation. Never cover the vents with towels, blankets or dusters.</p>	
<p>Unplug the connector: Unplug the power connector when the product will not be used for a long time.</p>	  <p>Unplug the connector</p>
<p>Image Sticking: The plasma monitor illuminates phosphor to display images. The phosphor has a finite illumination life. After extended periods of illumination, the brightness of the phosphor will be degraded to such extent that stationary images would burn-in that part of the screen as grayed-out images.</p> <p>Tips to prevent such image sticking are:</p> <ul style="list-style-type: none">- Do not display static images of high contrast and high brightness for long periods. Use of video games and computers on this product may promote burn in of images on the screen. Many portions of video game play and computer desktops do not refresh and will contribute to this problem.- Do not leave stationary images appearing for long, but try to refresh them at appropriate intervals of time, or try to move them using screen saver function.- Turn down the contrast and brightness control. <p>Note: Such "Image Sticking" constitute misuse are NOT COVERED by the manufacturer's warranty.</p>	
<p>Others: This product is designed for indoor use only and is not suitable for out door use. The operation temperature is 5°C ~ 33°C.</p>	

1. Read all safety instructions and the User Manual before using the product.
2. The safety instructions and User Manual should be maintained in good condition for future reference.
3. Unplug the power connector before cleaning the product. A wet cloth is sufficient for the cleaning of the product, never use liquid or spray cleaner for cleaning the product.
4. Always use the accessories recommended by the manufacturer to avoid any risk.
5. When moving the product from an area of low temperature to an area of high temperature, drops of water may condense on the housing. Do not turn on the display immediately after moving so as not to cause fire, electric shock or component damage.
6. Do not install the product on unstable fixtures or stands. The installation of the product should be conducted in accordance with the instructions and using the support recommended by the manufacturer.
7. Do not remove the earthing pin on the power plug. The product is supplied with a three-pin earthing-type power plug, this plug will only fit an earthing-type power outlet. This is a safety feature, if you are unable to insert the plug into the outlet, contact an electrician.
8. Avoid overloading the power cord. Using extension cables or the cords of other appliances may cause fire or electric shock.
9. If any of the following occurs please contact the retailer:
 - The power supply or connector fails.
 - Liquid sprays or any object drops into the Display.
 - The Display is exposed to rain or other moisture.
 - The Display is dropped or damaged in any way.
 - The performance of the Display changes substantially.
10. A distance of at least 1 meter should be maintained between the product and any heat source, i.e. radiator, heater, oven, amplifier etc.
11. To avoid the risk of electric shock or component damage, switch off the power before connecting the PDP to other devices, such as VCR, DVD or PC.
12. The power cable must be replaced when using different voltage from that specified in the User Manual. For more information, contact your dealer.
13. Operating environment:
 - Temperature: 5°C~33°C
 - Humidity: 20% to 85% non-condensing
 - Atmospheric pressure: 800 to 1100hPa

Contents

1. Before use	7
1.1 Open the Package	7
1.2 Installation	7
2. Product Features	8
3. Accessories	8
4. Names and Functions of Parts	9
4.1 Side View	9
4.2 Front View	10
4.3 Rear View	11
4.4 Remote Control	12
5. Connection to External Equipment	15
6. Basic Operation	18
6.1 Power ON/OFF	18
6.2 Selection of Input Mode	18
6.3 Other Function	19
6.4 OSD Option Adjustment	20
6.5 OSD Functions	20
1 Picture Page	20
2 Window Page	22
3 Audio Page	24
4 Options Page	25
5 Layout Page	30
7. Technical Specification	32
8. Support the Signal Mode	33
9. Cleaning and Simple Troubleshooting	34

1. Before use

The product is a 42" WXGA (WXGA resolution) Plasma Display. It has passed the Class-B EMC test and the UL and cUL safety certifications, and is ideal for both consumer and commercial use. The product is a precise electronic product. Users should read the following instructions carefully to maximise the performance of the product:

1.1 Open the Package

- The product is packaged in a carton together with other standard accessories. Any optional accessories shall be packed separately in another carton.
- Due to the size & weight of the product, it is recommended that it should be moved by a minimum of two people.
- The protective glass and the glass substrate are installed on the front of the product. Since both glasses can be broken and scraped easily, move the product gently. Never place the unit with the glass facing downwards unless it is protected with soft pads.
- When opening the carton, check that the product is in good condition and that all standard accessories and items are included.
- Whenever possible, use the handles on the back of the Display for transport.

1.2 Installation

- Please use caution if wall mounting this product. Follow all directions from the manufacturer of the wall mount and be sure to securely fasten the product to the mount. While the TV can be wall mounted, improper wall installation may void the warranty.
- Due to the higher power consumption, always use the jack exclusively designed for this product. If an extended line is required, please consult with your service agent.
- The product should be installed on a flat surface to avoid tipping. The distance between the back of the product and the wall should be maintained for proper ventilation.
- Avoid installing the product in the kitchen, bathroom or any other places with higher humidity so as not to shorten the service life of the electronic components.
- Please ensure the product be installed horizontally, any 90 degree clockwise or counterclockwise installation may induce poor ventilation and subsequent component damage.
- To protect the screen and avoid screen burn, do not hold on a static picture for a long time.

2. Product Features

The 42" PDP provides quality image displays and is suitable for a variety of multimedia applications:

1. Available input signals

- The standard PC module provides VGA (D-SUB 15 PIN) and HDMI input connectors. The product supports PC image resolutions up to (1024 x 768@60Hz) with a vertical frequency of 60 Hz.
- The Video module provides composite video (RCA), S-Video (DIN 5 PIN) and component video (RCA) input connectors. It supports the quality input images of DVD and HDTV (480p/720p/1080i). The Video module also provides six sets of stereo audio input connectors, one set of audio output connector (RCA) and one set of video output connector (RCA).

2. Power Management Function

The machine provides an automatic power control function.

3. Fan-free Design

The unit does not require any fans for ventilation, eliminating any bothersome noise that may be generated. It also lowers the power consumption of the unit.

4. BBE Sound system

This unit adopts technologies of BBE which can enhance the overall sound effect and performance of the music program.

5. Others

- PIP Function: The user can watch two programs at the same time in multiwindow. (Refer to P31.)
- The product includes a set 15W + 15W loudspeakers.
- The Plasma unit provides warm, normal and cool color temperature options. The user may customize their favorite color temperature.

3. Accessories


- 1 Stand x 1 (pre-assembled)
- 2 User Manual x 1
- 3 AC Cable x 1
- 4 Remote Control x 1
- 5 Battery (UM-4/R03P/AAA) x 2
- 6 Warranty Card x 1
- 7 Insertion Card x 1

4. Names and Functions of Parts

4.1 Side View


- Connect the power cable to the product then connect the main plug to the wall outlet.
- Push the power switch (O: Off, I: On). The power indicator on the front of the panel should now display red, indicating that the plasma is in standby mode.

Note: Shut down the power switch, turn on it again after the power indicator is extinguished entirely.

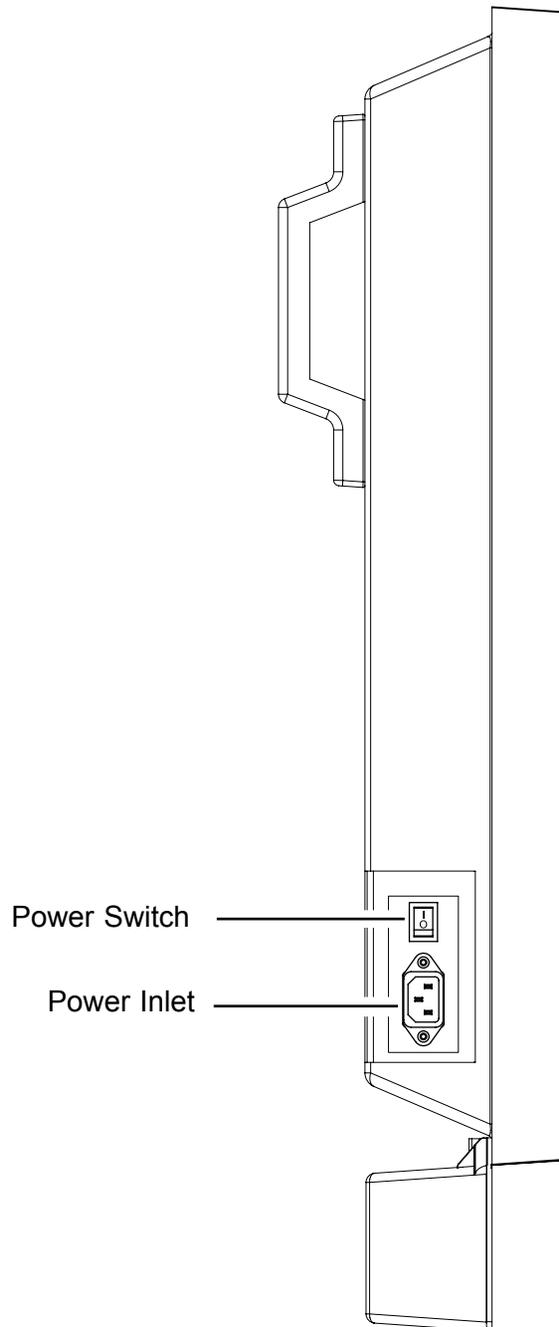

4.2 Front View

Sketch map

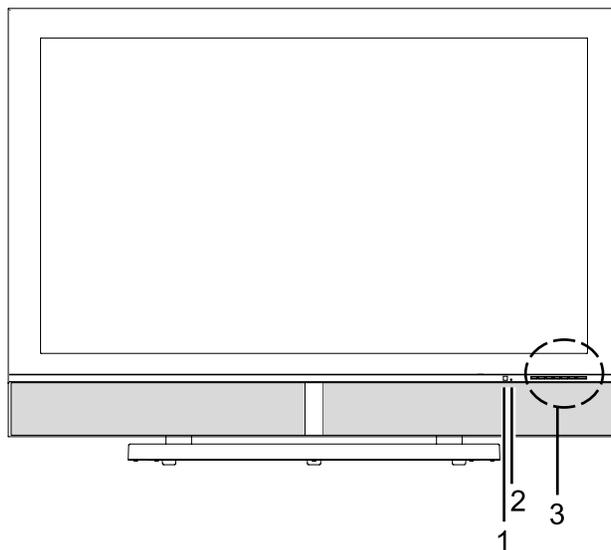

- 1 Remote control window: The receiving of Remote control signals window.
- 2 Power indicator:
Indicator ON (red) Standby mode.
Indicator ON (green) The unit power ON mode.
- 3 Buttons: The functions of the buttons are described as follows:



SOURCE: Press to display the source menu, Use ▲ or ▼ button to select AV, S-Video, YPbPr 1, YPbPr 2, VGA or HDMI, then press ► button to confirm.

MENU: Press to display the menu. Press again to exit the Sub Menu or the Main Menu.


▼ **SEL.** ▲ : They are used as ▲ / ▼ button in the OSD Menu screen.

◀ **VOL.** ▶ :

- A. They are used as ◀ / ▶ button in the OSD Menu screen.
- B. The ▶ button has the function of Enter in the OSD Menu screen.
- C. They can be used for the adjustment of volume when the OSD Menu is not shown on the screen. Press Left button to reduce the volume, while press Right button to increase the volume.

STANDBY: Press this button to turn off to standby and turn on from standby.

4.3 Rear View

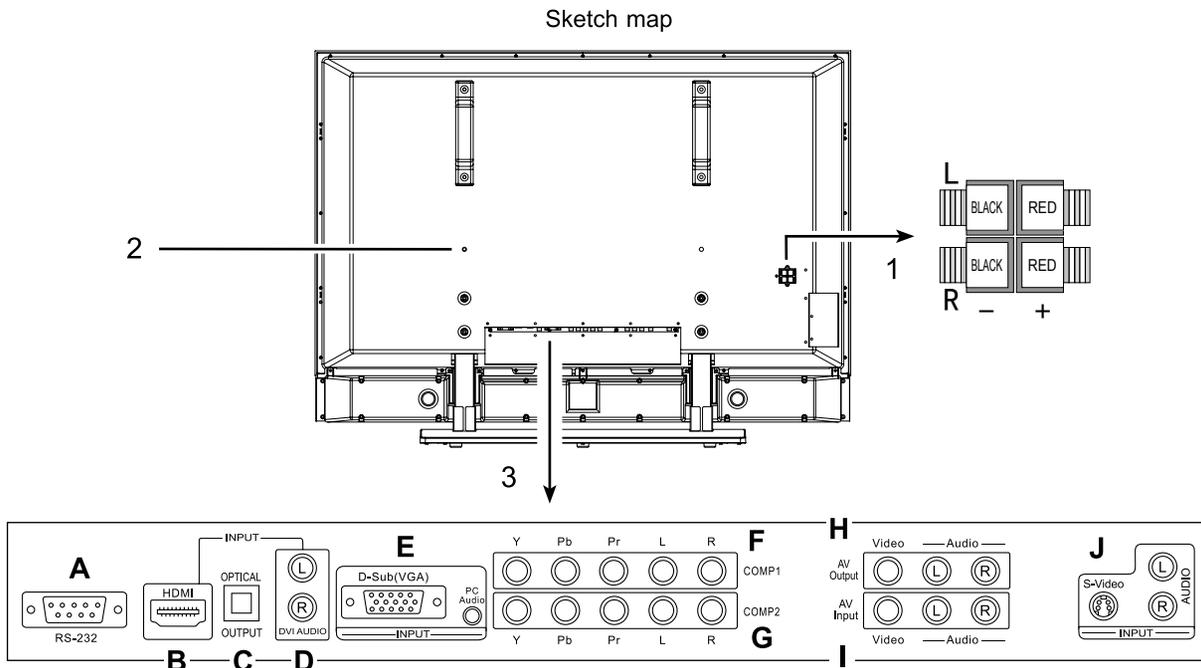

- 1 Speaker Terminals: Can be used to connect external speakers with 8 Ohm impedance to the product.
- 2 Wall Mount fixing holes (six holes): Use the standard screws to fix the wall mount.
- 3 Signal input and other terminals:
 - A. **RS-232:** The D-SUB 9 Pins terminal is used as a control port for serial communication between PC and Panel. (Only for after-sales service)
 - B. **HDMI INPUT:** For high quality picture display purposes. Connects to HDMI or DVI (with DVI to HDMI couple) digital output connector of the DVD or HDTV Set-top box.
 - C. **OPTICAL OUTPUT:** Connect the optical output to the optical input connector of the Amplifier. (Only for HDMI)
 - D. **DVI AUDIO INPUT:** Connect the audio input terminal to the audio output terminal of DVD or HDTV Set-top box with DVI output terminal.
 - E. **D-Sub (VGA) INPUT:** For PC display purposes. Connects to the Mini D-Sub 15 Pins analog output connector of the PC display card.
PC Audio INPUT: Connect the audio input terminal to the audio output terminal of the PC output device.
 - F. **YPbPr (COMP1) INPUT:** Connect the Component video input terminal to the Component output terminal of the video output device.
YPbPr (COMP1) Audio INPUT: Connect the audio input terminal to the audio output terminal of the video output device.
 - G. **YPbPr (COMP2) INPUT:** Connect the Component video input terminal to the Component output terminal of the video output device.
YPbPr (COMP2) Audio INPUT: Connect the audio input terminal to the audio output terminal of the video output device.
 - H. **Video Output:** Connect the video output terminal to the video input terminal of the video input device. (Only for AV)
Audio Output: Connect audio amplifier or other TV set that with audio input.


(Continued on next page)

OPERATING INSTRUCTIONS

- I. **Video Input:** Connect the video input terminal to the video output terminal of the video output device.
Video Audio Input: Connect the audio input terminal to the audio output terminal of the video output device.
- J. **S-Video INPUT:** Connect the Y/C S-Video input terminal to the S-Video output terminal of the video output device.
S-Video Audio INPUT: Connect the audio input terminal to the audio output terminal of the video output device.


4.4 Remote Control

- 1 **Standby**(⏻): Press this button to turn off to standby and turn on from standby.
- 2 **Mute**(🔇): Press this button to quiet the sound system. Press again to reactivate the sound system.
- 3 **Number buttons:** Use these buttons to enter the password.
- 4 **PIP POS.** : Press the button to select different Image Position in PIP Mode.
- 5 **Source:** Press this button and use ▲ / ▼ button to select the signal sources. AV, S-Video, YPbPr 1, YPbPr 2, VGA or HDMI.
- 6 **Layout:** Press this button to pop up Layout menu.
- 7 **Swap:** Press this button to switch the Main window or Sub window pictures in PIP and Split Screen.
- 8 **VOL +/-** : Press these buttons to increase or decrease the volume.
- 9 **W. Sele:** Press this button to select the Main Window or Sub Window.
- 10 **S. Sele:** Press this button to select the sound output from Main Window or Sub Window.
- 11 **PIP:** Press this button to change different Picture Mode.
- 12 **OK** : Press to enter or confirm.
 ◀ / ▶ : They are used as ◀ / ▶ buttons in the OSD Menu screen.
 ▲ / ▼ : They are used as ▲ / ▼ buttons in the OSD Menu screen.
 They also can be used for the selection of the program when the OSD Menu is not shown on the screen, but only for the Model with Tuner.

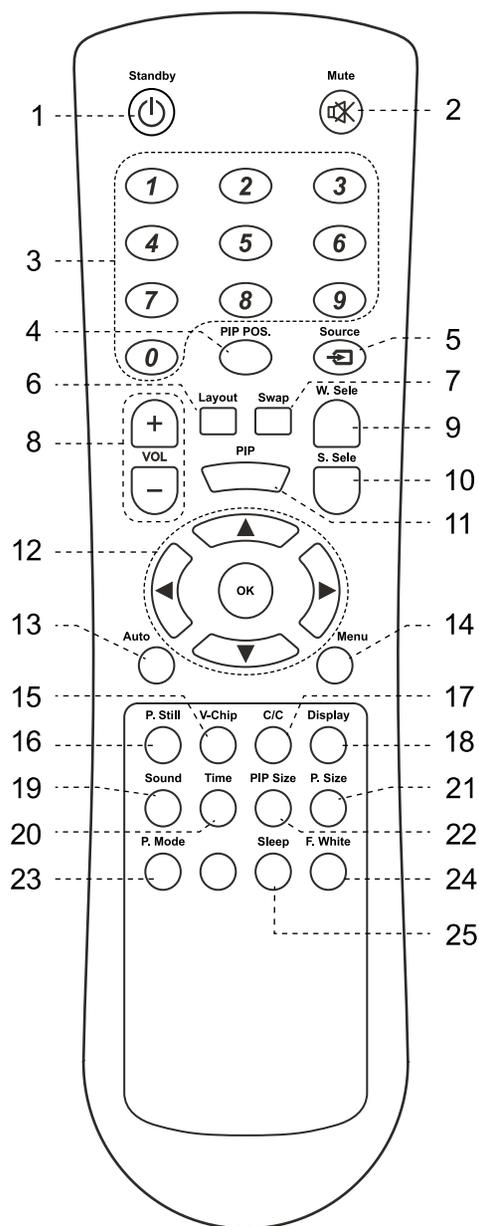

(Continued on next page)

- 13 **Auto:** The Display automatically adjusts the phase, vertical / horizontal position when pressing this button in VGA mode.
- 14 **Menu:** Press this button to pop up the OSD Menu and press it again to exit the OSD Menu.
- 15 **V-Chip:** Press this button to enter the V-Chip Function. (Only for AV or S-Video)
- 16 **P. Still:** Press this button to hold on the screen. Press again to normal.
- 17 **C/C:** Press this button to enter the Closed Caption Function. (Only for AV or S-Video)
- 18 **Display:** Press the button to display the source information.
- 19 **Sound:** Press the button to select different sound effect.
- 20 **Time:** Press this button to pop up the "Clock Set" menu.
- 21 **P. Size:** When the input source is YPbPr 1, YPbPr 2, VGA or HDMI, press this button, the picture will change according to Fill All, Force 4:3, Letter Box, Wide or Anamorphic. When the input source is AV or S-Video, press this button, the picture will change according to Fill All, 4:3, Letter Box, Wide or Anamorphic.
- 22 **PIP Size :** Press the button to select different Image Size in PIP Mode.
- 23 **P. Mode :** Press the button to select different picture effect.
- 24 **F. White:** Press this button to show a full white picture.
- 25 **Sleep:** Press this button to select the sleep time.

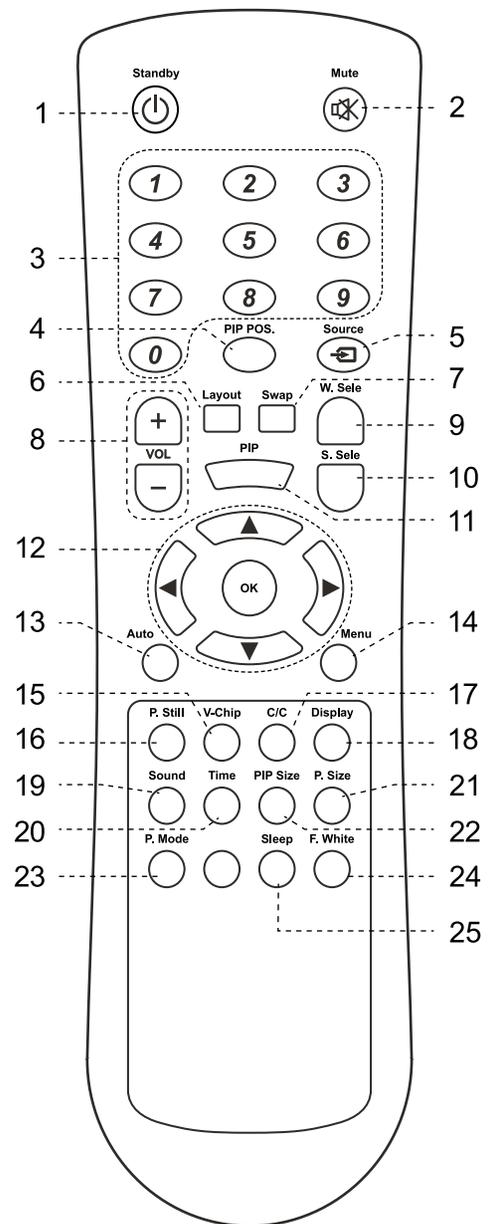


Insertion of Batteries:

- Turn the remote control upside down, press and slide off the battery cover.
- Insert two 1.5V (AAA) batteries into the compartment, take care to observe the ⊕ and ⊖ markings indicated inside.
- Replace the cover and slide in reverse until the lock snaps.

Range of Remote Control

Sketch map

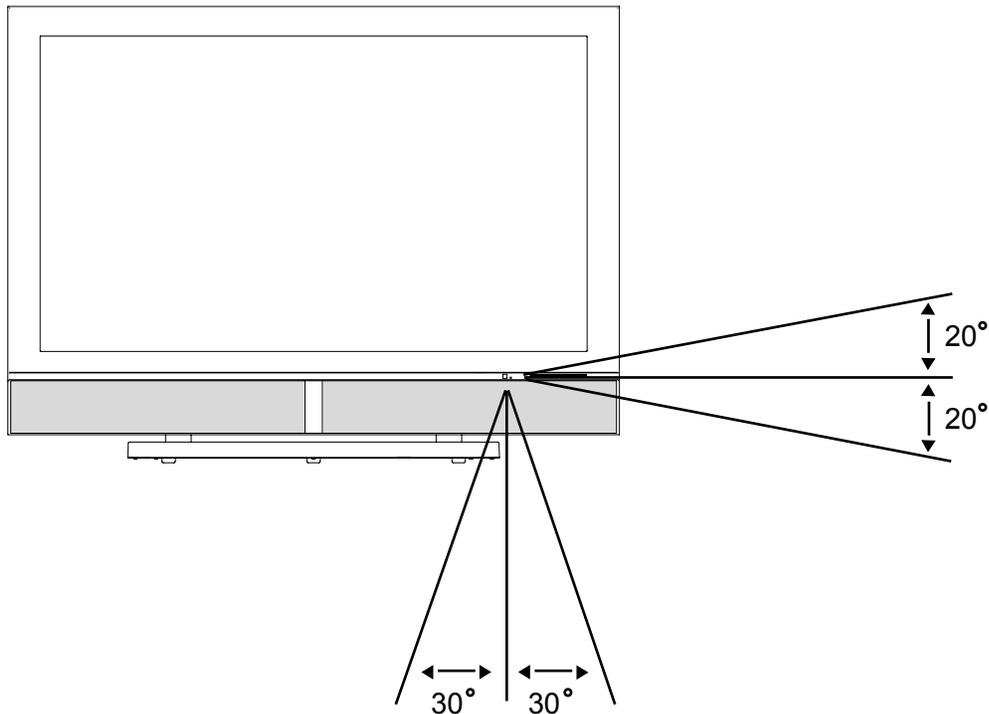


- Ensure the remote control is pointed towards the remote control window on the display unit.
- No obstacles should be placed between the remote control and the remote control window.
- The effective receiving range for the signal is within 5-8 meters from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

Care For Remote Control


- Avoid spilling liquids on the remote.
- Avoid dropping or otherwise jarring the remote.
- Always store the remote control at dry and normal room temperature place.
- If the remote is not performing satisfactorily, replace the batteries. The batteries should be replaced after one year.
- If the remote control will be idled for a long time (above 1 month) take out the batteries to avoid leakage from the batteries.
- Clean up the entire remote control especially the battery compartment if any leakage found.
- Do not mix using different kind of new and used batteries together to avoid leakage.

5. Connection to External Equipment

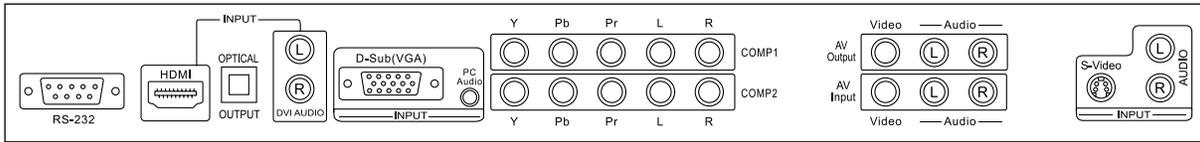


Connecting the Computer

1. Connect the PDP to the computer with the D-Sub (VGA) cable.
2. Connect the audio output of the computer to the audio input on the PDP.
3. Please ensure the Power Cord is connected and turned on the **STANDBY** button before it is operated.
4. Press **STANDBY** button on the remote control or on the PDP.
5. The PDP and Computer are working at the same time. Press **SOURCE** button to select VGA on the remote control.

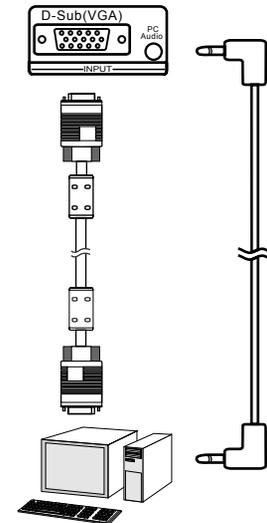

Connecting the DVD player or HDTV Set-top box using Component input

1. Connect the YPbPr output of the DVD player or HDTV Set-top box to the YPbPr input of the PDP.
2. Connect the audio output of the DVD player or HDTV Set-top box to the audio input of the PDP.
3. Please ensure the Power Cord is connected and turned on the **STANDBY** button before it is operated.
4. Press **STANDBY** button on the remote control or on the PDP.
5. Press **SOURCE** button again to select YPbPr 1 or YPbPr 2.

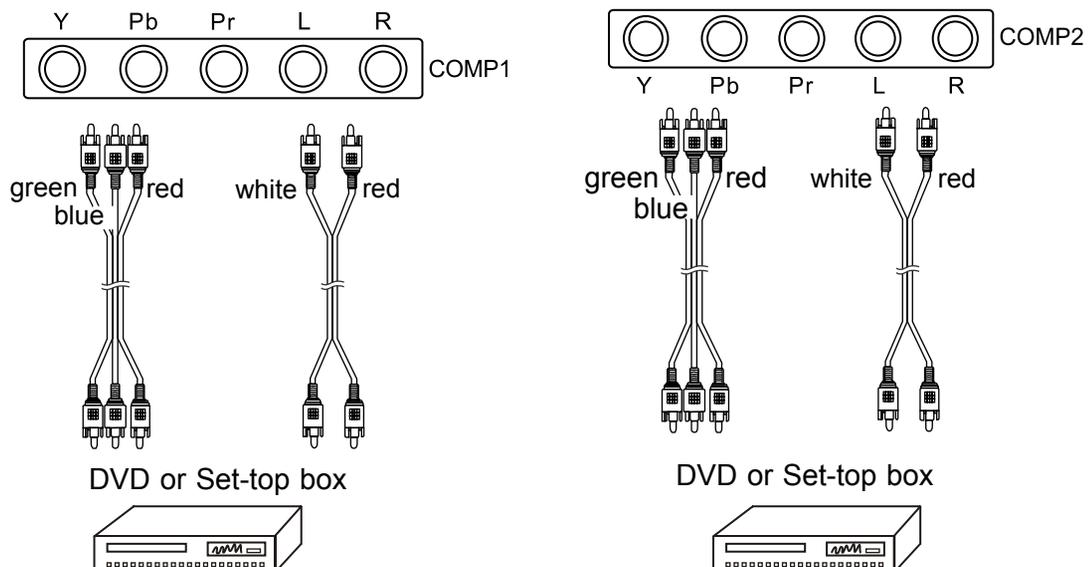



OPERATING INSTRUCTIONS

Connecting the DVD player or HDTV Set-top box using HDMI input

1. Connect the PDP to the DVD player or HDTV Set-top box with the HDMI cable.
2. Connect the DVI AUDIO input terminal to the audio output terminal of HDTV Set-top box with DVI output terminal, and a DVI to HDMI conversion cable should be adopted.
3. Please ensure the Power Cord is connected and turned on the **STANDBY** button before it is operated.
4. Press **STANDBY** button on the remote control or on the PDP.
5. The PDP and Computer are working at the same time. Press **SOURCE** button to select HDMI on the remote control.


Note:

1. The second step is used, if you connect DVI output to the HDMI input of the PDP.
The second step isn't used, if you connect HDMI output to the HDMI input of the PDP.
2. HDMI don't support PC.

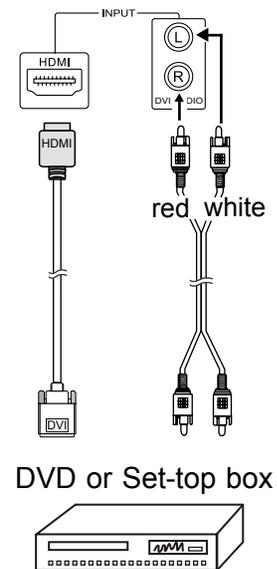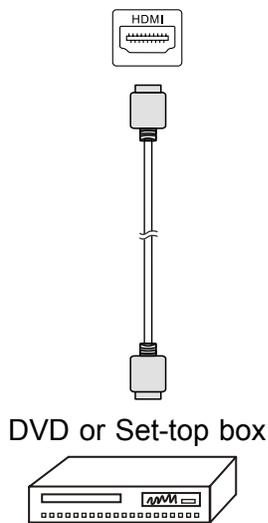



Connect audio amplifier or other TV set (Only for AV)

1. Connect audio amplifier apparatus or other TV set that with audio input.
2. Connect the composite video output terminal to the video output terminal of the video input device.

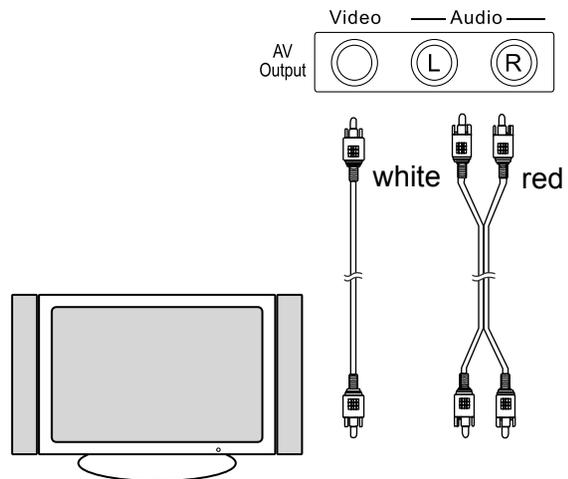

Connecting the DVD, VCR or other video apparatus

1. With an S-VIDEO cable connect the PDP to the VCR or other device. S-VIDEO will connect only the video portion (image only) of the signal. With an AUDIO cable (RCA type) connect the AUDIO OUT from the device to the AUDIO IN on the PDP.
2. With an AV cable connect to the Video plug of the PDP and the VCR or other video apparatus. With an AUDIO cable connect the audio output of the VIDEO of the VCR or other video apparatus to the audio input of the VIDEO of the PDP.
3. Please ensure the Power Cord is connected and turn on **Power Switch** button before it is operated.
4. Press **STANDBY** button to turn on the PDP.
5. To watch the VCR or other video apparatus, please press **SOURCE** button to select S-VIDEO or AV.

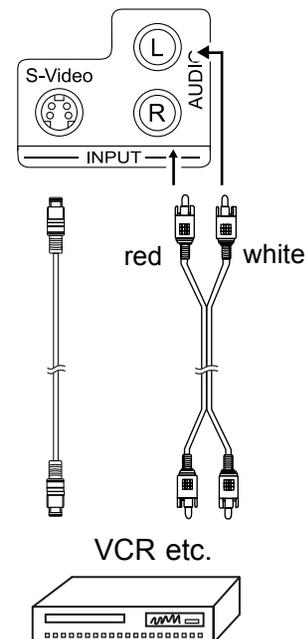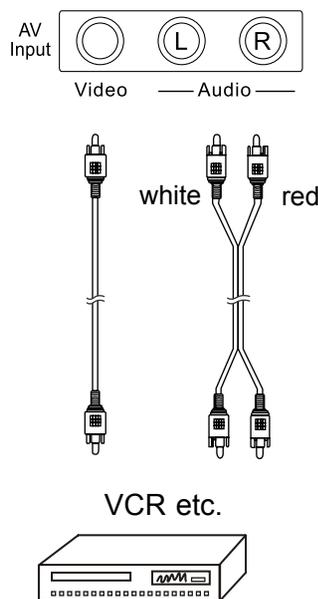

6. Basic Operation

6.1 Power ON/OFF: The Display is in Standby mode

- Press **Standby** (⏻) button on the remote control or on the front panel to turn on the unit. The power indicator changes from red to green.
- Press **Standby** (⏻) button on the remote control or on the front panel again to return the display to standby mode. The power indicator changes from green to red.

Note: For protecting your PDP product, the interval time between turn on the PDP product and shut down it should be kept at least one minute.

6.2 Selection of Input Mode

- Press **Source** button on the remote control or on the front panel. A menu of input signal sources shall appear. Press ▲ or ▼ to select the signal source you desired and press **OK** / ► to confirm the selection. The signal sources are displayed in the following sequence:

Source Select:

AV


S-Video

YPbPr 1


YPbPr 2

VGA


HDMI

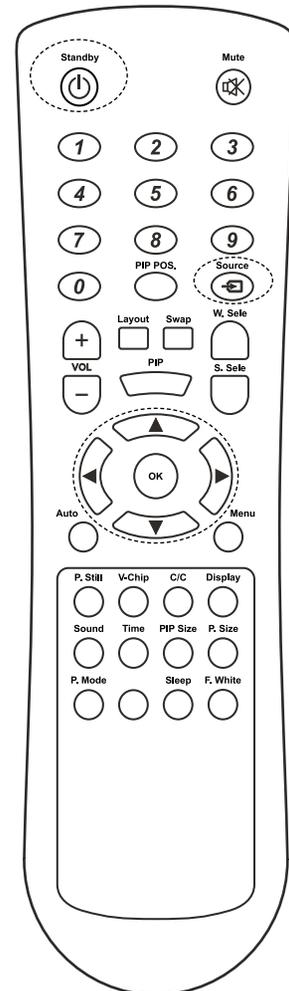

When select the input source, the screen will display the direction.

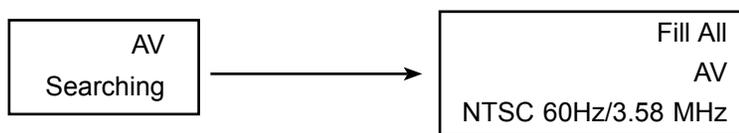

When there is no signal from the selected source (see illustration), either change the channel or press **Source** button to change sources. If there is no signal on your selected source for 15 minutes the television will power down.

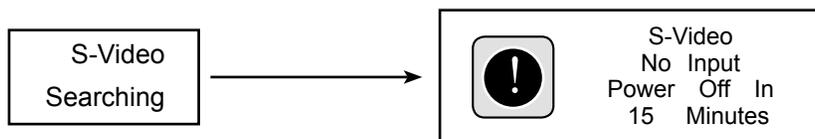

6.3 Other Function

Swap:


- Press this button on remote control to switch the Main window or Sub window picture in PIP or Split Screen.

S. Sele:

- Press this button to select the sound output from Main Window or Sub Window.


W. Sele:

- Press this button to select the Main Window or Sub Window.
- When you want to select the signal source from the Main Window or Sub Window, you can press **Source** button to pop up "Source Select" menu, then use ▲ or ▼ button to select the signal source and press **OK** or ► to confirm.

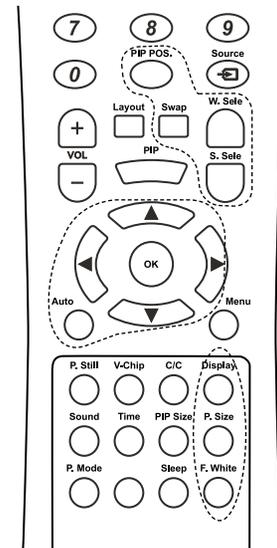

Display:

- Press this button to show the source's information as follow:

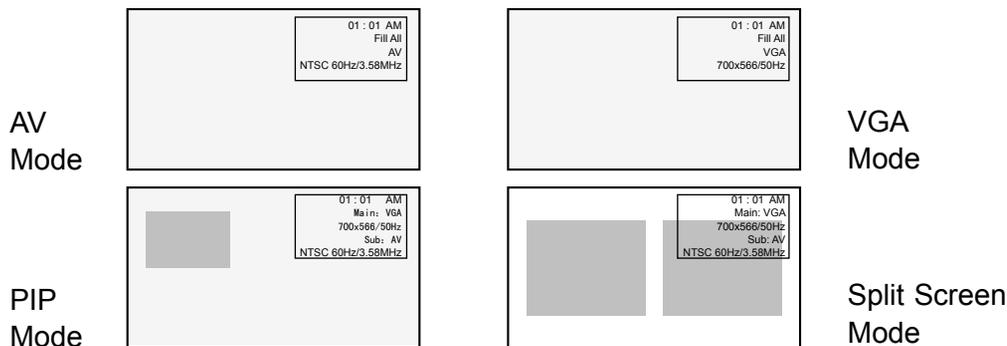

Auto:

- Press this button to adjust the phase, vertical / horizontal position in VGA Mode only.


PIP POS.:

- Press this button to pop up the "PIP Position" item, then press ◀ / ▶ button to select different PIP position in PIP Mode.



PIP Size:

- Press this button to pop up the "PIP Size." item, then press ◀ / ▶ button to select different PIP Size in PIP Mode.

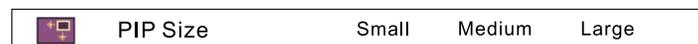

F. White:


- Press this button to show a full white picture, press it again to return to the normal picture.

Note: Some data will be update in five seconds if you change them.

6.4 OSD Option Adjustment

Learning about the menu system

- The buttons for OSD option adjustment include: **Menu**, **▲**, **▼**, **◀**, **▶** and **OK** buttons.
- Press **Menu** button to open the OSD Menu then press **◀**, **▶** button to select the pages. The pages are displayed in the following sequence (circular display):

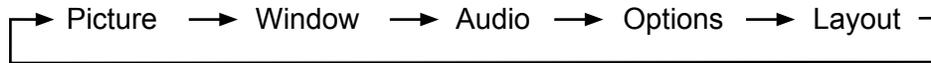


- Press **Menu** button on the remote control or on the front panel, it will change in the following sequence:


Main Menu → Exit

Sub Menu → Main Menu → Exit

- Press **Menu** button to open the OSD Menu.
- Use **◀**, **▶** buttons to select the pages.
- Use **▲**, **▼** buttons to select the items.
- Press **OK** or **▶** button to enter.
- Use **◀**, **▶** buttons to select or adjust.
- Press **Menu** button to exit the Sub Menu or Main Menu.

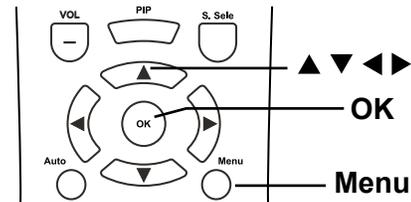

the front panel

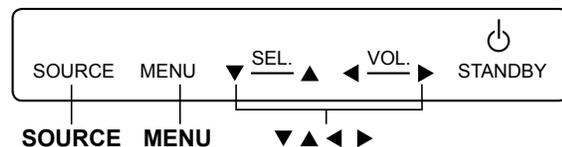

6.5 OSD Functions

1 Picture Page


[Input source is YPbPr 1, YPbPr 2, VGA or HDMI signal]

- Press **Menu** button, then press **◀** or **▶** button to choose the “Picture” item.
- Press **▲** or **▼** button to select “Brightness”, “Contrast”, “Saturation (only for YPbPr 1 and YPbPr 2)”, “Phase (only for VGA)”, “Peaking (only for YPbPr 1, YPbPr 2 and HDMI)”, “Frequency”, “Picture Mode” or “Color Temp”, then press **OK** or **▶** button to enter.
- Press **◀** or **▶** button to adjust;
- Press **Menu** button to exit Sub Menu or Main Menu.


Note: When the signal source is HDMI, you can't adjust “Phase” and “Frequency”.

Items (press ▲/▼ button)	Adjust (press ◀/▶ button)	Adjust Effects
Brightness	Decrease / Increase	Darken / Brighten
Contrast	Decrease / Increase	Reduce / Enhance
Saturation	Decrease / Increase	Only for YPbPr 1 and YPbPr 2
Phase	Decrease / Increase	Only for VGA
Peaking	Choose Normal, Sharp or Sharpest	Only for YPbPr 1, YPbPr 2 and HDMI
Frequency	Decrease / Increase	Reduce to left / Widen to right
Picture Mode	Choose	Choose Normal, Bright, Cinema or User
Color Temp	Choose	Choose Warm, Normal or Cool

For VGA

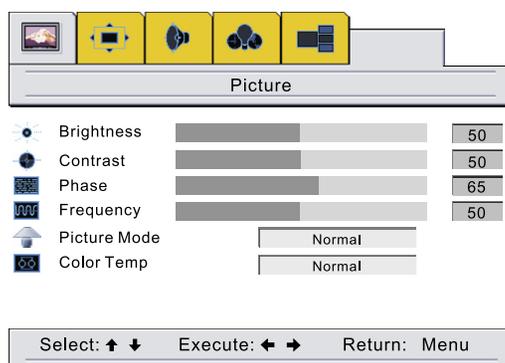


For YPbPr 1, YPbPr 2 or HDMI

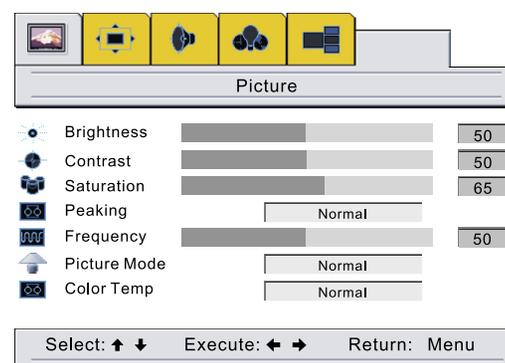

[Input Source is AV or S-Video signal]

- Press **Menu** button, then press ◀ or ▶ button to choose the “Picture” item.
- Press ▲ or ▼ button to select “Brightness”, “Contrast”, “Saturation”, “Tint (only for NTSC)”, “Sharpness”, “Picture Mode” or “Color Temp”, then press **OK** or ▶ button to enter.
- Press ◀ or ▶ button to adjust;
- Press **Menu** button to exit Sub Menu or Main Menu.

Items (press ▲/▼ button)	Adjust (press ◀/▶ button)	Adjust Effects
Brightness	Decrease / Increase	Darken / Brighten
Contrast	Decrease / Increase	Reduce / Enhance
Saturation	Decrease / Increase	Decrease / Increase
Tint	Decrease / Increase	Picture Color Bias Green / Bias Red
Sharpness	Decrease / Increase	Picture Gentleness / Sharpness
Picture Mode	Choose	Choose Normal, Bright, Cinema or User
Color Temp	Choose	Choose Warm, Normal or Cool

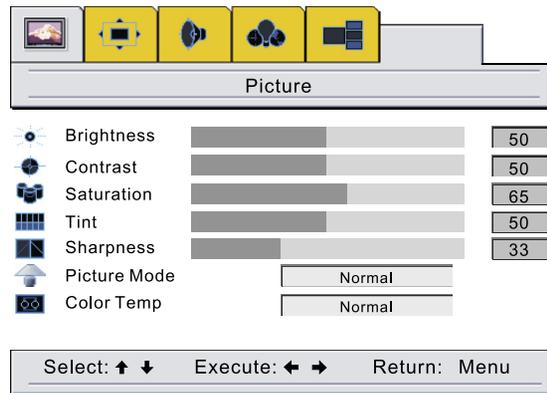

Hot keys:

- Press **P. Mode** button to pop up the menu, then press \leftarrow/\rightarrow or **P. Mode** button to select Normal, Bright, Cinema or User.



2 Window Page


[Input source is YPbPr 1, YPbPr 2, VGA or HDMI signal]

- Press **Menu** button, then press \leftarrow or \rightarrow button to choose the "Window" item.
- Press \blacktriangle or \blacktriangledown button to select "Image Size", "H Position", "V Position", "H Resolution" or "Freeze Window", then press **OK** or \rightarrow button to enter.
- Press \leftarrow or \rightarrow button to adjust;
- Press **Menu** button to exit Sub Menu or Main Menu.

Note:1. When the signal source is HDMI, you can't adjust "H Resolution".

2. In VGA, YPbPr 1 or YPbPr 2 signal source, when select "Fill All" in "Image Size" item, you can adjust "H Resolution".


Items (press $\blacktriangle/\blacktriangledown$ button)	Adjust (press \leftarrow/\rightarrow button)	Adjust Effects
Image Size	Choose	Choose Fill All, Force 4:3, Letter Box, Wide or Anamorphic
H Position	Decrease / Increase	Picture Left / Right Move
V Position	Decrease / Increase	Picture Down / Up Move
H Resolution	Decrease / Increase	Picture Left and Right Shrink / Broaden
Freeze Window	Choose	Choose Off or On

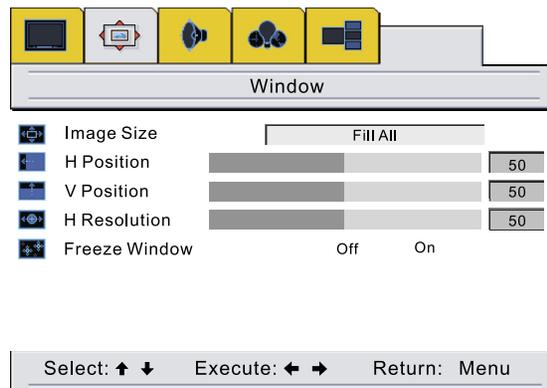

[Input Source is AV or S-Video signal]

- Press **Menu** button, then press ◀ or ▶ button to choose the “Window” item.
- Press ▲ or ▼ button to select “Image Size” or “Freeze Window”, then press **OK** or ◀ button to enter.
- Press ◀ or ▶ button to adjust;
- Press **Menu** button to exit Sub Menu or Main Menu.

Items (press ▲/▼ button)	Adjust (press ◀/▶ button)	Adjust Effects
Image Size	Choose	Choose Fill All, 4:3, Letter Box, Wide or Anamorphic
Freeze Window	Choose	Choose Off or On

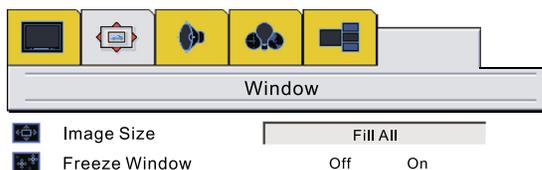

Hot keys:

Image Size

- When the input signal source is YPbPr 1, YPbPr 2, VGA or HDMI, press **P. Size** button to pop up the menu, then press ◀/▶ or **P. Size** button to select “Fill All, Force 4:3, Letter Box, Wide or Anamorphic”.
- When the input signal source is AV or S-Video, press **P. Size** button to pop up the menu, then press ◀/▶ or **P. Size** button to select “Fill All, 4:3, Letter Box, Wide or Anamorphic”.



Freeze Window

- When the program information you want to capture is displayed, press **P. Still** button on the remote control. The picture freezes. Press **P. Still** button again, and the frozen picture is released, and the picture begins to move again.



OPERATING INSTRUCTIONS


3 Audio Page

3.1 Adjust Sound Effects

- Press **Menu** button, then press ◀ or ▶ button to choose the “Audio” item.
- Press ▲ or ▼ button to select “Balance”, “Audio Mode”, “AVC” or “Equalizer”, then press **OK** or ▶ button to enter.
- Press ◀ or ▶ button to adjust;
- Press **Menu** button to exit Sub Menu or Main Menu.
- When you adjust “Equalizer”, press ▲ or ▼ button to select “120Hz, 500Hz, 1.5kHz, 5kHz or 10kHz”, then press ◀ or ▶ button to adjust the items needing.

Note: When select “User” in “Audio Mode” item, you can adjust “Equalizer”.

Items (press ▲/▼ button)	Adjust (press ◀/▶ button)	Adjust Effects
Balance	Decrease / Increase	Left / Right Channel Gradual Decrease / Increase
Audio Mode	Choose	Choose BBE, Cinema, Music, News or User
AVC	Choose Off or On	AVC (Automatic Volume Correction) Off or On
Equalizer	Press OK /▶ button to confirm	Adjust Equalizer

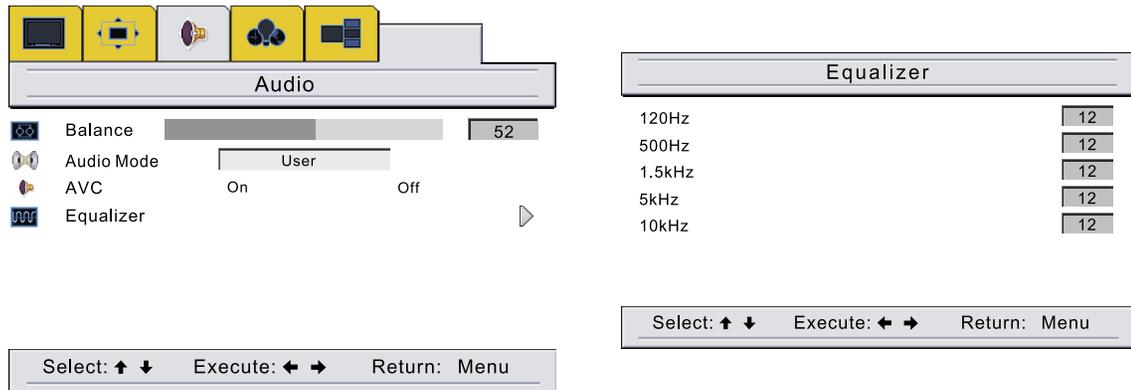

Hot keys:

Audio Mode

- Press **Sound** button, it will pop up the “Audio Mode” item, then press ◀/▶ or **Sound** button to select “BBE, Cinema, Music, News or User”.



3.2 Selecting “MUTE” on / off

- Press **Mute** button, the icon will appear on the screen and the system is mute;
- Press **Mute** button again, sound continues.



3.3 Adjust Volume

- Pressing $\leftarrow \overset{\text{VOL.}}{\text{VOL.}} \rightarrow$ on the front panel or \leftarrow / \rightarrow on the remote control, a bar showed on the screen to adjust volume which the number scales and volume gradually increase or decrease.
- Press $\leftarrow \overset{\text{VOL.}}{\text{VOL.}} \rightarrow$ on the control panel or \leftarrow / \rightarrow buttons on remote control once, volume increases or decreases a scale correspondingly.



4 Options Page

- Press **Menu** button, then press \leftarrow or \rightarrow button to choose the “Options” item.
- Press \blacktriangle or \blacktriangledown button to select “Osd Timeout, Menu Background, Language, Default Setting, Close Caption Mode, Close Caption, Content Blocking or Timer”, then press **OK** or \rightarrow button to enter.
- Press \leftarrow or \rightarrow button to adjust;
- When you select “Default Setting”, press **OK** or \rightarrow button to enter and show “Default Setting”.
- Press **Menu** button to exit Sub Menu or Main Menu.

Note: When the signal source is YPbPr 1, YPbPr 2, VGA or HDMI, you can't adjust “Close Caption Mode, Close Caption or Content Blocking”.

Items (press $\blacktriangle / \blacktriangledown$ button)	Adjust (press \leftarrow / \rightarrow button)	Adjust Effects
Osd Timeout	Choose 5 Sec, 15 Sec or 60 Sec	Adjust show time of OSD on the screen.
Menu Background	Choose Opaque / Translucent	Adjust OSD menu background.
Language	Choose	Choose English, French or Spanish.
Default Setting	Press OK / \rightarrow button to confirm	Some adjusted items go back to original factory settings.
Close Caption Mode	Choose	Choose CC1, CC2, T1, T2 or Xds.
Close Caption	Choose	Choose Off, On or On Mute.
Content Blocking	Press OK / \rightarrow button to confirm	
Timer	Press OK / \rightarrow button to confirm	Pop up the Clock Set menu.

OPERATING INSTRUCTIONS


- When you select “Timer”, press **OK** or **▶** button to enter.
- Press **◀** or **▶** button to move the bit, press **▲** or **▼** button to adjust.

You can set the timer three ways:

- a. Set the “Wake Up Time” only
- b. Set the “Sleep Time” only
- c. Set the “Sleep Time” and “Wake Up Time”

Note: 1. After you set the timer, you must press **Standby** button to put the PDP in the standby mode.

2. The setting is valid, you must set “On” in “Timer”.

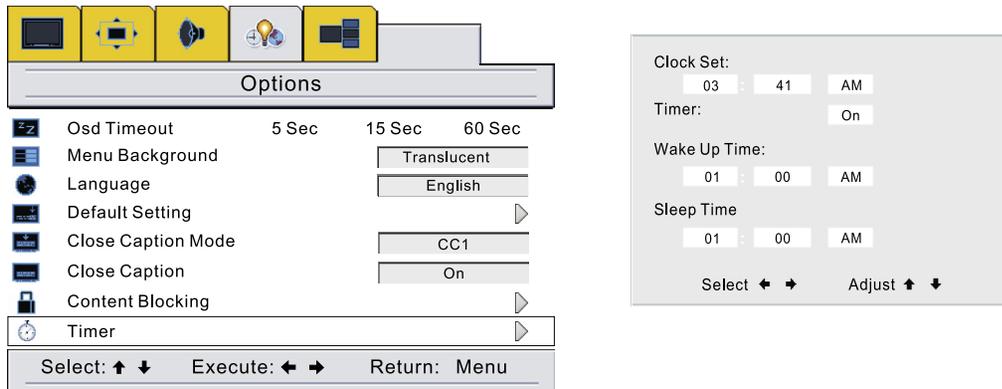

Hot keys:

- Press **Time** button to show the Timer menu, then you can set “Clock Set, Timer, Wake Up Time or Sleep Time”. The operation is as same as above.

Sleep Time function

- Press **Sleep** button to select “15 Minutes, 30 Minutes, 45 Minutes, 60 Minutes, 75 Minutes, 90 Minutes, 105 Minutes, 120 Minutes or Off”.

Note: With these functions, the PDP will be turned on or off at the set time automatically.


1. Before you use these functions, please set the time of “Clock Set” to the current time. The Wake Up Time and Sleep Time base on the Clock Set you set.
2. Turn off the PDP by Power Switch will cancel the “Clock Set, Timer, Wake Up Time or Sleep Time” settings.
3. Turn off the PDP by **Power Switch** or set “Off” by **Sleep** button will cancel the “Sleep Time” settings.

[Input Source is AV or S-Video]

● You can set “CC (Close Caption)” as the following operation:

- Press **Menu** button, then press **◀** or **▶** button to choose the “Options” item.
- Press **▲** or **▼** button to select “Close Caption Mode” or “Close Caption”, then press **OK** or **▶** button to enter.
- Press **◀** or **▶** button to adjust;
- Press **Menu** button to exit Sub Menu or Main Menu.

(Continued on next page)

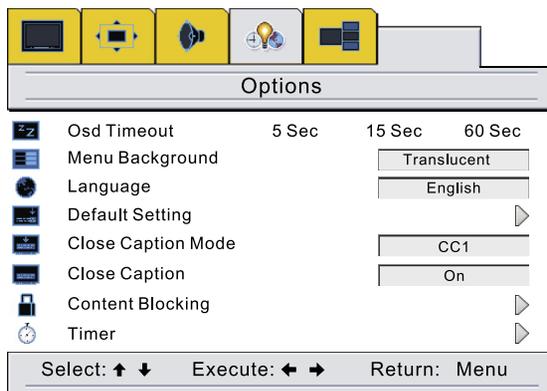


Hot keys:

- Press **C/C** button to pop up “Close Caption Mode” item, then press ◀ or ▶ button to choose “CC1”, “CC2”, “T1”, “T2” or “Xds”.




● You can set “Content Blocking” as the following operation:

- Press **Menu** button, then press ◀ or ▶ button to choose the “Options” item.
- Press ▲ or ▼ button to select “Content Blocking”, then press **OK** or ▶ button to enter and show “Enter Password” (Initial Password is 0000).
- Use **0~9** buttons to enter the password, then press **OK** button to enter “Content Blocking” setting.

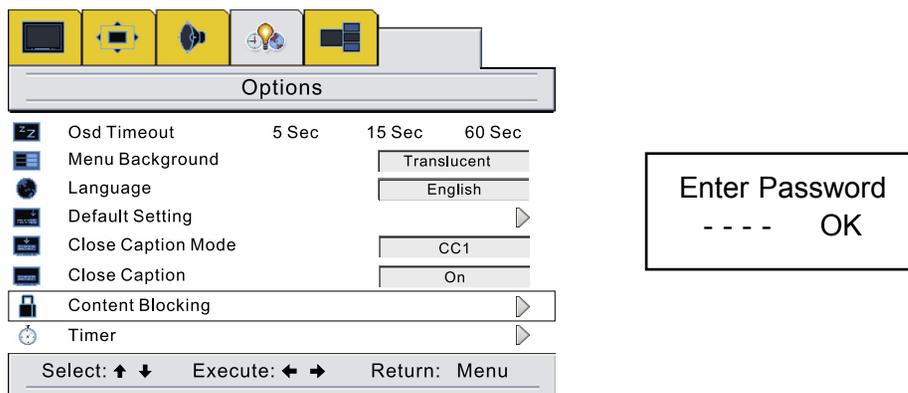

Note: Before setting for “Change”, “Movie Block” and “TV Block”, the correct block password is required to input. If the input is invalid, the “Password Error” menu will pop up, as the following illustration;

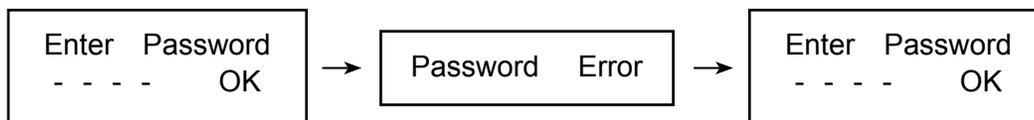

(Continued on next page)

Note: The initial password for the system is 0000.

Please operate "Change" at the first time.

If you had forgotten the password, please contact with service centre.

☀ Change Blocking Password

- Press ▲ or ▼ button to select "Change" in Sub Menu, then press **OK** or ► button to pop up "Enter New Password".
- Use 0~9 buttons to enter your new password.
- Press **OK** button to confirm and pop up "Confirm Password".
- Use 0~9 buttons to enter your new password again.
- Press **OK** button to confirm.
- Press **Menu** button to exit Sub Menu or Main Menu.



☀ V-Chip Enable

- Press ▲ or ▼ button to select "V-Chip Enable" in Sub Menu, then press ◀ / ▶ button to select "On" or "Off".
- "Movie Block" and "TV Block", these functions are activate, while "V-Chip" select "On".
- "Movie Block" and "TV Block", these functions are inactivate, while "V-Chip" select "Off".
- Press **Menu** button to exit Sub Menu or Main Menu.

☀ Movie Block

- Press ▲ or ▼ button to select "Movie Block" in Sub Menu, then press **OK** or ► button to pop up "Movie Content Blocking" Menu.
- Press ▲ or ▼ button to select "G", "PG", "PG 13", etc.
- Press **OK** button to lock (display "🔒") or unlock (doesn't display "🔒").
- When display "🔒", you can not watch the programs.
- When doesn't display "🔒", you can watch the programs.
- Press **Menu** button to exit Sub Menu or Main Menu.

(Continued on next page)

Movie Content Blocking

G
PG
PG 13
R
NC 17
X
NR

Select: ↑ ↓ ← → Execute: OK Return: Menu

Items	Description and Content themes
G	General Audience (Appropriate for all ages).
PG	Parental Guidance Suggested (Some material may not be suitable for children).
PG 13	Parents Strongly Cautioned (Some material may be inappropriate for children under 13).
R	Restricted (Under 17 requires accompanying parent or adult guardian).
NC 17	Not intended for anyone 17 and under.
X	X-rated (For adults only).
NR	No rating (Blocks all viewing).

☀ **TV Block**

- Press ▲ or ▼ button to select “TV Block” in Sub Menu, then press **OK** or ► button to pop up “TV Content Blocking” Menu.
- Press ▲ , ▼ , ◀ or ▶ button to select “Y”, “Y7”, “G”, etc.
- Press **OK** button to lock (display “🔒”) or unlock (doesn’t display “🔒”).
- When display “🔒”, you can not watch the programs.
- When doesn’t display “🔒”, you can watch the programs.
- Press **Menu** button to exit Sub Menu or Main Menu.

TV Content Blocking

Y				
Y7	FV			
G				
PG	D	L	S	V
14	D	L	S	V
MA		L	S	V

Select: ↑ ↓ ← → Execute: OK Return: Menu

(Continued on next page)

OPERATING INSTRUCTIONS

Items	Description and Content themes
Y	All Children (This program is designed to be appropriate for all children).
Y7	Directed to Older Children (This program is designed for children age 7 and above). <i>Note: Programs in which fantasy violence may be more intense or more combative than other programs in this category are designed TV-Y7.</i>
G	General Audience (Most parents would find this program suitable for all ages).
PG	Parental Guidance Suggested (This program contains material that parents may find unsuitable for younger children). D Some suggestive dialog L Infrequent coarse language S Some sexual situations V Moderate violence
14	Parents Strongly Cautioned (This program contains some material that may parents would find unsuitable for children under 14 years of age). D Intensely suggestive dialog L Strong, coarse language S Intensely sexual situations V Intense violence
MA	Mature Audience Only (This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17). L Crude or indecent language S Explicit sexual activity V Graphic violence

☀ Temporary cancel “V-Chip” function

- If you want to watch the “lock” programs, you can enter the password and temporary cancel “V-Chip” function only for current program.
- In the current program source, after the temporary cancel “V-Chip” function, can’t operate from “On” to “Off” function of the “V-Chip Enable” in the OSD menu.

Hot Key:


- Press **V-Chip** button to enter the V-Chip menu directly, and the operation is as same as above.

5 Layout Page

- Press **Menu** button, then press ◀ or ▶ button to choose the “Layout” item.
- Press ▲ or ▼ button to select “Full Screen”, “PIP” or “Split Screen”, then press **OK** or ▶ button to enter.
- Press **Menu** button to exit Sub Menu or Main Menu.

Items (press ▲/▼ button)	Adjust (press ◀ / ▶ button)	Adjust Effects
Full Screen	Press OK or ▶ button to enter	Full Screen Mode
PIP	Press OK or ▶ button to enter	PIP Mode
Split Screen	Press OK or ▶ button to enter	Split Screen Mode

(Continued on next page)

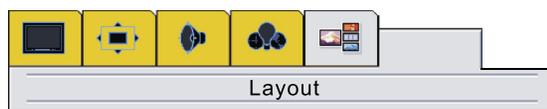


-  Full Screen
-  PIP
-  Split Screen



* You can view program in a variety of picture layout: Full Screen, PIP, Split Screen picture, and them showed as following:


Hot keys:

- Press **PIP** button to display in the following sequence (circular display).

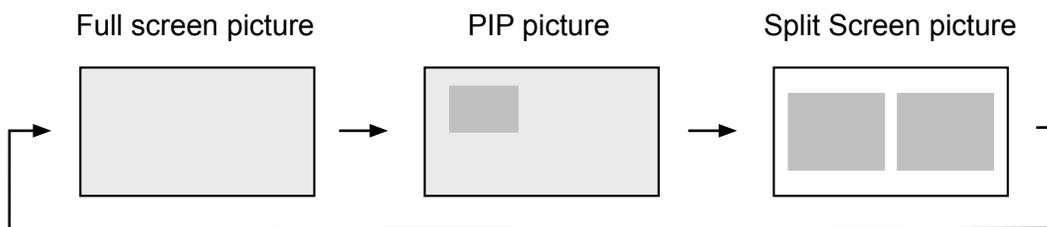

Hot keys:

- Press **Layout** button, then press ◀ or ▶ button to select “Full Screen”, “PIP” or “Split Screen”, press **OK** button to change.

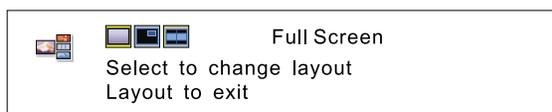

Items	PIP/Split Screen	
	Main	Sub
Signal	AV/S-Video	YPbPr 1/YPbPr 2/VGA/HDMI
	YPbPr 1/YPbPr 2/VGA/HDMI	AV/S-Video

7. Technical Specification

Product Model	PDP4273M
VIDEO System	NTSC / PAL M
Screen Size	42" Wide screen
Display Area	920.1mm (W) x 518.4mm (H)
Aspect Ratio	16:9
Dimension	1039.8mm (W) x 719.9mm (H) x 109.5mm (D) (w/o stand and handles)
	1039.8mm (W) x 757mm (H) x 286mm (D) (with stand and handles)
Net Weight	41 kg (with stand, speaker and handles)
Display Resolution	1024(H) x 1024(V) Pixels (Each pixel has R/G/B 3 color cells)
Pixel Dot Pitch	0.900 (H) x 0.510 (V) mm
Color	16.7 millions of colors (R/G/B each 256 scales)
Gray Scale	256 (R/G/B each 8-bit)
Brightness(Peak Value)	Typical 1400cd/m ² (Panel Only)
Contrast Ratio	Typical 3000:1, In a dark room (Panel only)
Sound Effect	BBE System
Power Supply	AC 100~120V, 60 Hz
Power Consumption	330W Typical
Input Terminal	VGA (D-Sub 15 Pin Type) x 1
	RS-232 (D-Sub 9 Pin Type) x 1
	HDMI (Ver. 1.1) connector x 1
	S-Video (Mini Din 4 Pin) x 1
	Video (RCA Type) x 1
	YPbPr 1 x 1
	YPbPr 2 x 1
	Stereo, Audio x 6
Output Terminal	Audio (L + R) x 1, Video (RCA Type) x 1, SPDIF (Optical) x1
Agent System	UL/cUL/FCC

NOTE:

The specifications shown above may be changed without notice for quality improvement.

8. Support the Signal Mode

A. VGA Mode, HDMI Mode or HDTV Mode (YPbPr 1 or YPbPr 2)

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Dot Clock Frequency (MHz)
VGA Mode	640 x 480	31.50	60.00	25.18
	800 x 600	37.90	60.32	40.00
	1024 x 768	48.40	60.00	65.00
HDMI Mode	480p	31.468	59.94	27.00
	720p	45.00	60.00	74.25
	1080i	33.75	60.00	74.25
HDTV Mode (YPbPr1/YPbPr2)	480i	15.734	59.94	13.50
	480p	31.468	59.94	27.00
	720p	45.00	60.00	74.25
	1080i	33.75	60.00	74.25

B.PIP/PBP Screen Mode

Items		VGA	HDMI/YPbPr1/YPbPr2			
			480p	720p	1080i	
PIP	Main	1024 x 768	OK	OK	OK	
	Sub	Large	1024 x 768	OK	OK	OK
		Middle	1024 x 768	OK	OK	X
		Small	1024 x 768	OK	OK	X
PBP	Main	1024 x 768	OK	OK	OK	
	Sub	1024 x 768	OK	OK	OK	

Note:

- "X" means out of range (can not show).
- When the signal received by the Display exceeds the allowed range, a warning message shall appear on the screen.
- You can confirm the input signal format from the on-screen.

9. Cleaning and Simple Troubleshooting

1 Important:

- Make sure that the power cable is removed from the AC outlet before cleaning the product.
- Do not use volatile solvent (such as toluene, rosin and alcohol) to clean the Display. Such chemicals may damage the housing, screen glass and remote control, and cause the paint to peel.

2 Cleaning of Housing and Remote Control:

- Use a soft cotton cloth for cleaning.
- If the housing or remote control are seriously contaminated, use a soft cloth moistened with diluted neutral clean the Display. Wring water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the Display with a dry cloth after cleaning.

3 Cleaning of Screen:

- Use a soft cotton cloth to clean the screen gently.
- The screen glass is very fragile; so do not scrape it with any sharp object. Do not press or tap the screen to avoid cracking. When the screen is seriously contaminated, use a soft cloth moistened with diluted neutral cleaner to clean the Display. Wring water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the display with a dry cloth after cleaning.

4 Simple Troubleshooting:

If the display fails or the performance changes dramatically, check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure. If the Display still fails to perform as expected, contact the dealer for assistance.

(Continued on next page)

The trouble status	The way of shooting
Power cannot be turned on. (Power indicator does not light)	<ul style="list-style-type: none"> - Check that both ends of the power cable are plugged into the socket appropriately.
No Input Signal message appears.	<ul style="list-style-type: none"> - Check that the signal line is connected properly. - Check that the power of the relevant peripherals is turned on. - Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	<ul style="list-style-type: none"> - Check that the polarity of the batteries are correct. - Check that the batteries are not drained. (Use new batteries.) - Check that the Remote Control is within the operating range. - Check that the Remote Control is pointed to the Remote Control Window on the Display. - Check that there are no obstacles between the Remote Control and the Remote Control Window. - For more information about the Remote Control, refer to Chapter 6.
Flashing spots or stripes appear on the screen.	<ul style="list-style-type: none"> - Check that there is no emitter sources (Car, HV cable or Neon lamp) or other possible interference sources.
Image color or quality deteriorates.	<ul style="list-style-type: none"> - Check that all the video settings are adjusted appropriately, such as brightness, contrast, color etc. - For more information about video settings, refer to OSD Functions in Chapter 6.
Screen position and size are incorrect.	<ul style="list-style-type: none"> - Check that the screen position and size is adjusted appropriately.
Image or color is incorrect.	<ul style="list-style-type: none"> - Check that the signal line is connected properly. - When connecting to PC, you can change the resolution of PC to acquire correct image. The discrepancy of the PC output signal may affect the display of the image.
The external speaker has no sound.	<ul style="list-style-type: none"> - Check that the speaker (audio) cables are connected appropriately. - Check that the Display is not in the Mute mode. - Check that the audio signal lines from the peripherals are connected properly.
Check that the input signal line is properly fixed, or display warning message.	<ul style="list-style-type: none"> - Select the correct input signal. - For more information, refer to Support the Signal Mode in Chapter 8.